

Features & Functions Guide



NIRO

Hybrid / Plug-In Hybrid

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with your QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODES

Getting Started with Your New Kia Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

GETTING STARTED

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1 Smart Key / Remote Start*	60
2 Front Seat Headrest Adjustment / Power Adjustable Driver's Seat*	54, 56
3 Seat Warmers*	53
4 Folding Rear Seats	57
5 Windshield Wipers & Washers	38
6 Navigation-based Smart Cruise Control (NSCC)*	26
7 Normal Maintenance Schedule	Back Cover
8 User Settings* - Instrument Cluster	10
9 Vehicle Settings* - Infotainment System	11
10 Bluetooth® Wireless Technology	40-41
11 Kia Connect Activation* / Kia Connect Assistance*	44
12 Standard Audio System - Value*	43
13 Kia Connect with Navigation*	46
14 Android Auto™ / Apple CarPlay® Setup	42

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

www.kia.com
Consumer Affairs -
Roadside Assistance¹¹⁰;
1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

QR CODES

Getting Started With Your New Kia Video



Your New Kia Important Care Tips Video



Vehicle Cameras Important Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

VIDEOS & QR CODES Inside Front Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Hybrid / Plug-In Hybrid Indicators at Startup	06
EV Button / Plug-In Hybrid Modes	06
Drive Mode Integrated Control System*	07
Green Zone Drive Mode*	07
Fuel Economy / Tips for Economical Driving	08

VEHICLE SETTINGS

Trip Modes / Trip Computer	09
Instrument Cluster LCD Modes	09
User Settings - Instrument Cluster	10
Vehicle Settings* - Infotainment System	11
Service Interval Mode	12

HYBRID / PLUG-IN HYBRID SYSTEM

Plug-In Hybrid Display* - Infotainment System	13
Instrument Cluster - Energy Flow	14
Emergency Starting* (Hybrid only)	15
Charging the Plug-In Hybrid Vehicle	16
Charging Connector Auto/Lock Mode	18
Scheduled Charging* (Plug-In Hybrid only)	18
Regenerative Braking with Paddle Switches*	19

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Forward Collision-Avoidance Assist (FCA)	20
Lane Keeping Assist (LKA)*	21
Blind-Spot Collision Warning (BCW)*	22
Blind-spot Collision-Avoidance Assist (BCA)	23
Driver Attention Warning (DAW)*	24
Leading Vehicle Departure Alert (LVDA)*	25
Cruise Control	25
Navigation-based Smart Cruise Control (NSCC)*	26
Intelligent Speed Limit Assist (ISLA)*	28
Lane Following Assist (LFA)*	29

ADAS CONTINUED

Highway Driving Assist (HDA)*	29
Rear View Monitor (RVM)	30
Safe Exit Warning (SEW)	30
Forward/Reverse Parking Distance Warning (PDW)*	31
Rear Cross-traffic Collision Avoidance Assist (RCCA)	32

DRIVER'S PANEL

Instrument Cluster Control	33
Electronic Stability Control (ESC)	33
Hill-Start Assist Control (HAC)	33
Reverse Parking Aid Function*	34
Engine Start/Stop Button	34
Power Windows, Window Lock & Central Door Lock	35
Manual Folding Mirrors*	35
Automatic Door Lock/Unlock	35
Power/Heated Outside Mirrors	35
Power Folding Outside Mirrors*	35

STEERING WHEEL CONTROLS

Headlights & High Beams	36
High Beam Assist (HBA)	36
Turn Signals & Fog Lights*	37
Heated Steering Wheel Button*	38
Windshield/Rear Wipers & Washers	38
Tilt/Telescoping Steering Wheel	39

INFOTAINMENT SYSTEM

Bluetooth® Wireless Technology	40
Audio Controls	41
Android Auto™ / Apple CarPlay® Setup*	42
Standard Audio System - Value*	43
Kia Connect Activation* / Kia Connect Assistance*	44
Kia Access App Download	45
Kia Access App Features Guide	45
Kia Connect with Navigation*	46

CENTER PANEL

Digital Clock (Infotainment System)	47
Multimedia USB Port, Charger Ports / AC Inverter*	47
Wireless Smartphone Charging System*	48
Automatic Climate Control	49
Automatic Gear Shift with Sportmatic® Shifting*	50
Dual Clutch Transmission	50
Rotary Dial Shifter* (Plug-In Hybrids only)	51
Paddle Shifters*	51
Auto Hold / Electronic Parking Brake (EPB)	52
Seat Warmers* / Ventilated Seats*	53

SEATING

Driver Position Memory System*	54
Front Seat Headrest Adjustment	54
Rear Occupant Alert (ROA) with Door Monitoring	55
Power Adjustable Driver's Seat*	56
6-Way Manual Adjustable Driver's Seat*	56
Folding Rear Seats	57

OTHER KEY FEATURES

Remote Keyless Entry (Folding Key)*	57
Digital Key 2 Touch*	58
Smart Key / Remote Start*	60
Map/Room Lamps / Sunroof Operation*	61
Hood Release Lever and Latch / Sunvisor	62
Fuel Cap / Malfunction Indicator	62
Fuel Filler Lid	62
Power Liftgate*	63
Liftgate Release Button*	64
Hybrid Battery Cooling Duct (Hybrids only)	64
Child-Protector Rear Door Locks (Manual)	65
Tire Mobility Kit	65

 
SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	66
Seat Belts	66

LEGAL DISCLAIMERS Inside Back Cover

MAINTENANCE CHART Back Cover

Instrument Cluster Overview

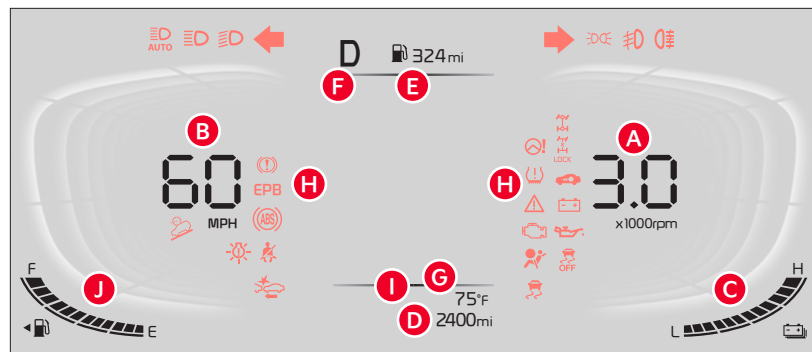

(Type A)

- A** Tachometer/Power gauge
- B** Speedometer
- C** Hybrid battery SOC gauge
- D** Odometer
- E** Distance to empty
- F** Transmission shift indicator
- G** Outside temperature gauge
- H** Warning and indicator lights
- I** Plug-in hybrid mode indicator
- J** Fuel gauge

 Arrow direction indicates the side of the vehicle the fuel door is located

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

 
QR CODE

Plug-In Hybrid Instrument Cluster Overview Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Indicators & Warning Lights

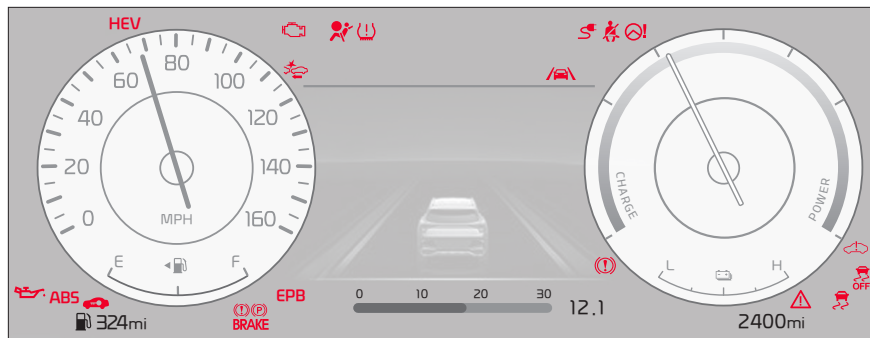

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD Warning Messages and the function of all indicator and warning lights, please refer to section 5 of the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

(LCD Type B Cluster)

	High Beam Indicator		Hybrid System Warning Indicator		Anti-lock Braking System (ABS) Warning Indicator
	Light ON Indicator		Engine Coolant Temperature Warning		Low Fuel Level Warning Indicator
	Front Fog Light Indicator*		Engine Oil Pressure Warning Indicator		Cruise Indicator*
	Master Warning Indicator		Charging System Warning Indicator		Trunk Open Warning Indicator
	Forward Safety Warning Indicator*		Seat Belt Warning Indicator		Door Ajar Warning Indicator
	Lane Safety Indicator		Malfunction Indicator		Regenerative Brake Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)
	Electronic Brake Force (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)		Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator		Icy Road Warning Indicator
	Immobilizer Indicator*		Electronic Stability Control (ESC) Indicator / ESC Malfunction Indicator		LED Headlamp Warning Indicator*
	READY Indicator		Electronic Stability Control (ESC) OFF Indicator		Charging Cable Connection Indicator (Plug-In Hybrid)*
	EV Mode Indicator		Parking Brake & Brake Fluid Warning Indicator		Exhaust System (GPF) Warning Indicator (Gasoline Engine)
	ECO Indicator		Motor Driven Power Steering (MDPS) Warning Indicator		Green Zone Drive Mode Indicator
	SPORT Mode Indicator		Airbag Warning Indicator		
			Parking Brake Indicator		

Tire Pressure Monitoring System (TPMS)^{†18}



The TPMS indicator (🚫) functions as both Low Tire Pressure Light and TPMS Malfunction Indicator. The indicator (🚫) will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator (A) showing which tires are underinflated. Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Light (🚫). See front driver's door jamb for PSI specification.

When there is a problem with the TPMS, the TPMS Malfunction Indicator (🚫) will blink for approximately one minute then illuminate - See dealer for service.

 
QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is open
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)

Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate.

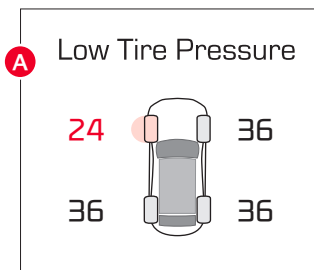

QR CODE

Tire Pressure Monitoring System Video



 
 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information, refer to section 7 of the Owner's Manual.

Hybrid / Plug-In Hybrid Indicators at Startup

- A Hybrid System Gauge** - Indicates how economically the vehicle is being driven
 - **CHARGE (Blue zone):** High-efficiency range
 - **ECO (Green zone):** Normal-efficiency range
 - **POWER (Grey zone):** Low-efficiency range
- B EV/HEV Mode** - Displays the EV/HEV/AUTO/EV+* mode
- C Ready** - Illuminates when the hybrid system is operational. Even if the engine is off, the vehicle can be driven
- D State of Charge (SOC)** - Displays the hybrid battery charge status

REMINDER: Avoid starting or driving the vehicle when the fuel tank is empty. As the engine will be incapable of charging the high-voltage hybrid battery, the battery will lose its charge and may be damaged.

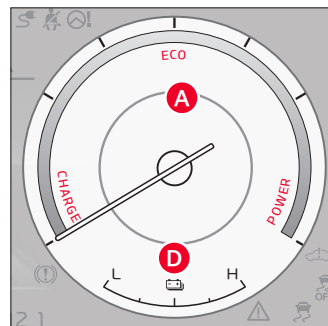


For more information on the Hybrid system overview, please refer to section 1 of the Owner's Manual.

EV Button / Plug-In Hybrid Modes (Plug-In Hybrid only)

To change the Plug-In Hybrid Mode, press the EV button **E**; switch between Automatic (AUTO), Electric (EV) mode and Hybrid (HEV) mode each time the button is pressed. The indicator will display on the Instrument Cluster LCD **F**.

- **Automatic Mode** - AUTO will be displayed on the instrument cluster and the vehicle will operate in Hybrid or Electric vehicle mode as needed
- **Electric Mode** - EV will display on the instrument cluster and the vehicle operates on the EV battery until the power is low, then it switches to HYBRID mode
- **EV+ Mode** - Press and hold the EV button to change to EV+ mode, where the vehicle runs on the EV battery except when the accelerator pedal is pressed all the way down. Then the gasoline engine turns on to provide extra power
- **Hybrid Mode** - HEV will display on the instrument cluster and the high-voltage hybrid battery and the gasoline engine are both used to drive the vehicle

 For more information on Plug-in Hybrid modes, please refer to section 1 of the Owner's Manual.

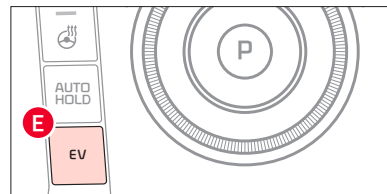

(Center console
next to shift dial)

QR CODES

Plug-In Hybrid Instrument Cluster Overview Video



 
Plug-In Hybrid Modes - Automatic, EV and HEV Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Drive Mode Integrated Control System*

The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes, press the Drive Mode button **A**. When a drive mode is selected (ECO or SPORT), the drive mode indicator will illuminate in the Instrument Cluster.

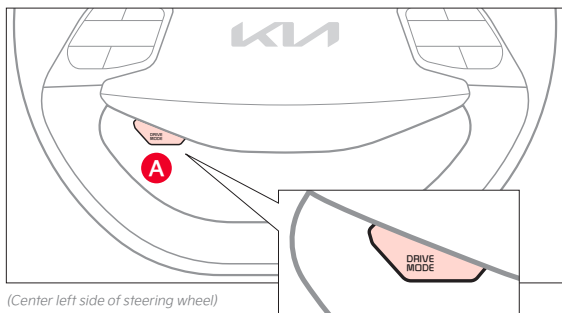

REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may decrease
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- The system defaults to ECO mode when ignition is in the ON position
- Steering effort may be slightly increased in SPORT mode

Refer to section 5 in the Owner's Manual for more information.



 
Green Zone Drive Mode*

When Green Zone Drive Mode is enabled, the vehicle switches to EV mode when entering "green zone" registration points, like schools, hospitals, parks, etc, based on navigation information provided and driving history.


To enable, go to User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System. Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position.

- To access User settings* in the Instrument Cluster** - Press the Mode button **B** on the Steering Wheel to toggle to User Settings **E**. Press the OK button **C** up/down to toggle to ECO Vehicle and then Green Zone EV Drive
- To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select ECO Vehicle and then Green Zone EV Drive

REMINDER: The engine may start in certain situations.

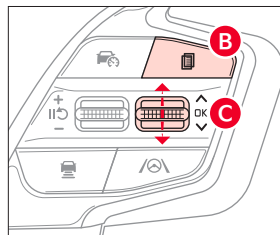

 (Buttons located on Steering Wheel-Type B)

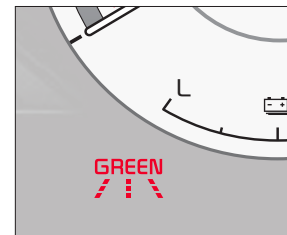

Refer to section 6 in the Owner's Manual for more information.

Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

 
When the Instrument Cluster LCD screen is in the Trip Computer mode, the screen displays fuel economy information related to the driving range and average fuel economy.

To change modes, go to User Settings in the LCD Instrument Cluster modes.

Average Fuel Consumption - Calculates average fuel consumption from the distance driven and amount of fuel injected into the engine / total fuel used.

QUICK TIPS

- Distance to Empty displayed on the Instrument Cluster after a recharge may vary depending on previous driving patterns, high voltage battery charge amount, weather, temperature, durability of the battery and geographical features
- Energy consumption is increased in cold or hot weather. When using the heater, more energy will be consumed, which reduces the Distance to Empty

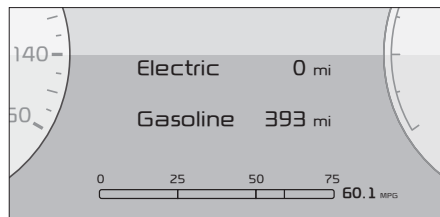

QR CODE

Tips for Economical Driving Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to Section 5 in the Owner's Manual for more information.

Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the Engine Start/Stop button is in the ON position.

To cycle through the Trip modes **A**, press the Mode button **B**.

When in the Trip Computer mode , press the Select/Reset (OK) button **C** to cycle through the screens. When displaying ACCUMULATED INFO, DRIVE INFO, DRIVING STYLE or FUEL ECONOMY screens, press and hold the OK button **C** to reset to zero.

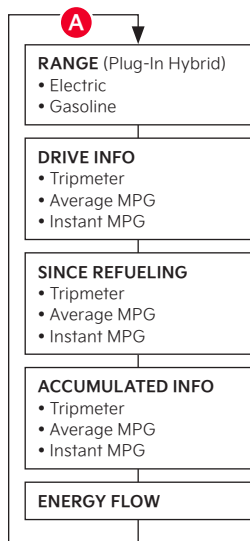

(Type A)

REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

For more information, refer to section 5 of the Owner's Manual.

Instrument Cluster LCD Modes

Press Mode button **B** to scroll through different Instrument Cluster LCD Modes.



Driving Assist: Displays information on the Advanced Driving Assist System (ADAS)



Trip Computer Mode: Displays driving information for range, drive info, energy flow, etc.



 
Turn-by-Turn Mode*: Displays route guidance and destination info



User Settings* Mode: Change settings of Driver Assistance, ECO Vehicle, Doors, Lights, Sound, Convenience, Units and others



Information/Master Warning*: Displays information on TPMS, engine temperature and warning messages related to the vehicle when one or more systems is not operating normally

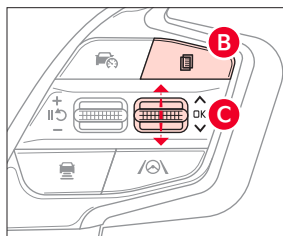

(Buttons located on Steering Wheel - Type B)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

For more information, refer to section 5 of the Owner's Manual.

QR CODES

Instrument Cluster's LCD Display Video



Plug-In Hybrid Instrument Cluster Overview Video



Steering Wheel Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

User Settings* - Instrument Cluster

To enter the User Settings mode in the LCD Instrument Cluster Modes, ensure that the vehicle is at a standstill, put the shift lever in Park, and place the Engine Start/Stop button or Key in the ON position. Then press the Mode button **A** and select User Settings .

You can navigate the selections on the display by pressing the OK button **B** up/down and then select the item by pressing the OK button **B** again.

Driving Assistance*:

- Driving Convenience
- Speed Limit*
- Warning Timing
- Warning Volume
- Driver Attention Warning (DAW)
- Forward Safety
- Lane Safety
- Blind-spot Safety
- Parking Safety*

ECO Vehicle:

- Green Zone EV Drive*
- Coasting Guidance*
- Start Coasting*
- Locking Charging Cable
- Charge Guidance Sound

Cluster:

- Theme Selection
- Wiper/Lights Display
- Traffic Signs
- Icy Road Warning
- Cluster Voice Guidance Volume
- Welcome Sound

Lights:

 
- Illumination
- One-Touch Turn Signal
- Ambient Light Brightness
- Ambient Light Color
- Headlamp Delay
- High Beam Assist

Door:

- Automatically Lock/Unlock
- Two-press Unlock
- Horn Feedback
- Power Liftgate
- Power Liftgate Opening Speed/Height
- Smart Liftgate
- Remote Window Control*

Convenience:

- Seat Easy Access*
- Rear Occupant Alert
- Service Interval
- Welcome Mirror/Light*
- Wireless Charging System
- Auto Rear Wiper

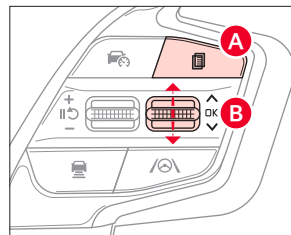

(Buttons located on Steering Wheel - Type B)

Units:

- Speedometer Unit*
- Fuel Economy Unit*
- Temperature Unit*
- Tire Pressure Unit*

Language

- Language: Set the language

Reset

- Choosing reset will restore defaults for all User Settings menus

QR CODES

Vehicle & User Settings Video



Ambient, Mood & Theme Lighting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to Section 5 in the Owner's Manual for more information.

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

Vehicle Settings* - Infotainment System

To enter the Vehicle Settings mode in the Infotainment System **A**, press the **SETUP** key or the **SETUP** button on the screen. Then press **VEHICLE** , which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

Driver Assistance:

- Driving Convenience
- Speed Limit
- Warning Timing
- Warning Volume
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-spot Safety
- Parking Safety

Climate*:

- Recirculate Air*
- Automatic Ventilation*
- Defog/Defrost Options*
- Climate Features*

Lights*:

- Ambient Light*
- One Touch Turn Signal*
- Headlight Display*
- High Beam Assist*

Door*:

- Auto Lock*
- Auto Unlock*
- Walk-Away Lock*
- Two-Press Unlock*
- Smart Trunk*

Cluster*:

- Service Interval*
- Energy Consumption Reset*
- Content Selection*
- Cluster Voice Guidance Volume*
- Welcome Sound*
- Theme Selection*

Convenience*:

 
- Rear Occupant Alert*
- Welcome Mirror Light*
- Wireless Charging System*
- Vehicle Auto-Shut Off*

Seat*:

- Seat Position Change Alert*
- Smart Posture Care*
- Heated/Ventilated Features*
- Seat Easy Access*
- Rear Seat Heating Control*

Reset:

- Reset Vehicle Settings to Factory Defaults

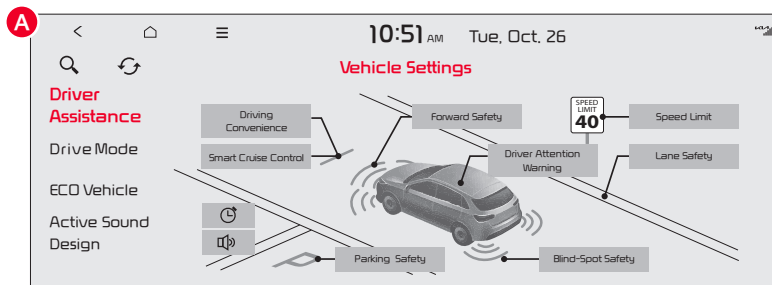

QR CODES

Vehicle & User Settings Video



Vehicle Settings - Infotainment System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to Section 5 in the Owner's Manual for more information.

Service Interval Mode

To enter Service Interval mode, press the Mode button **A**, User Settings , then scroll to Service Mode  and press the OK button **B**. System will display the number of miles remaining until next service is due, as well as the type of service.

When service is required, the following will be displayed: **Service Required**.

To reset the Service Interval mode system, press and hold the OK button **B** for more than 1 second. To turn Service Interval OFF, go to User Settings.

 
Service Interval Setting

To set the Service Interval when in User Settings mode:


- Press the OK button **B** up/down and scroll to Service Interval. Press the OK button **B** to enter
- Press the OK button **B** up/down and toggle to ON, then press the OK button **B** again. Then press the OK button **B** to scroll and select the desired miles or months for your next service
- Press the OK button **B** again

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder in User Settings*. Go to Convenience, then Oil Change

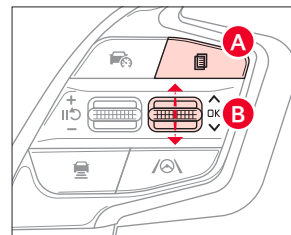

 (Buttons located on Steering Wheel - Type B)

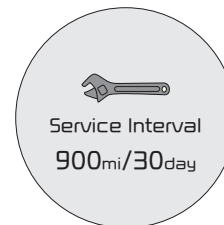

(Message on Cluster Display)

QR CODE

Vehicle & User Settings
Video



Kia Full Synthetic Oil
Video

 


Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to Section 5 in the Owner's
Manual for more information.

Plug-In Hybrid Display (Infotainment System)*

The Infotainment System screen provides information on economical operation and system modes. To enter the Plug-In Hybrid display mode, press the PHEV button on the home screen. Then select one of the menus **A** - EV Range, Energy Information, Charge Management, ECO Driving, Energy Flow.

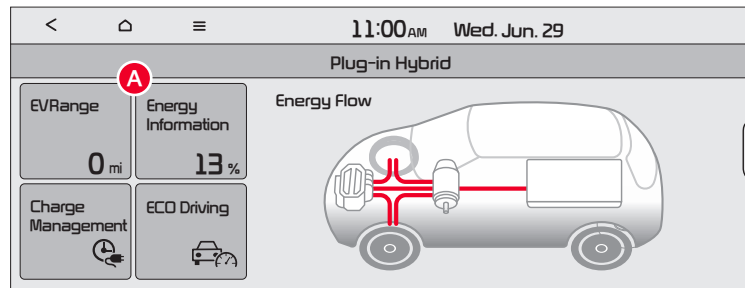


The image shown is for illustration purposes only. Not all available displays are shown. Screens may vary.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide.


Instrument Cluster - Energy Flow

The instrument cluster LCD screen displays plug-in hybrid system modes to inform the driver of its status. To change modes, go to User Settings in the Instrument Cluster LCD menu.

 
EV Propulsion - The electric motor is moving the vehicle.

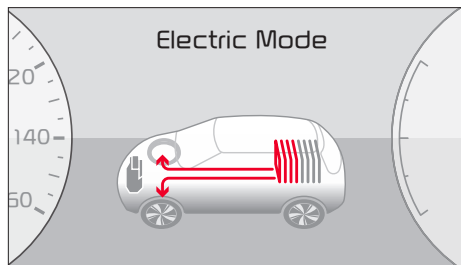

 
Power Assist - Both the electric motor AND the engine are moving the vehicle.

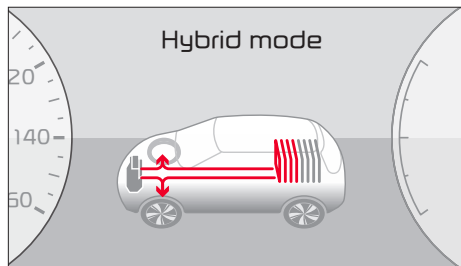

 Engine-Only Propulsion - The engine is moving your vehicle.

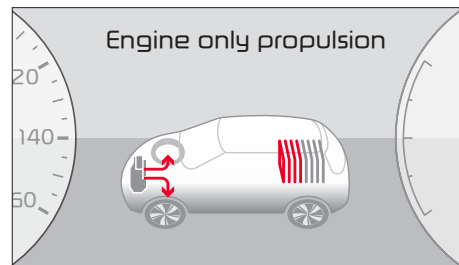

 Engine Generation - While the vehicle is stopped, the engine is charging the hybrid battery.

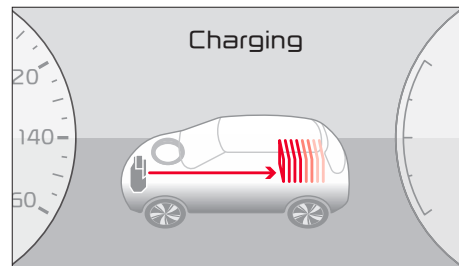

QR CODE

Plug-In Hybrid Instrument Cluster Overview Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Plug-In Hybrid displays shown. The images shown are for illustration purposes only. Not all available displays are shown. Screens may vary.

For more information about energy flow, refer to sections 1 and 5 of the Owner's Manual.

Emergency Starting* (Hybrid only)

Before Jump-Starting:

1. If the vehicle appears to have a dead battery, first press the 12V Battery Reset button **A**. Then immediately start the vehicle by pressing the brake and turning the ignition on or pressing the Engine Start/Stop button
2. If the vehicle does not start after completing the above steps, then jump-start the vehicle (as described below)

REMINDERS:

 
- After starting, idle or drive the vehicle for more than 30 minutes to help charge the 12V battery
- If the vehicle does not start immediately after pressing the 12V Battery Reset button **A**, then the power of the 12V battery is automatically disconnected to save any additional discharge
- Repeated use of the 12V Battery Reset button may cause over discharge which will prevent the vehicle from starting

Jump-Starting:


1. Remove the fusebox cover **B** under the front hood
2. The {+} jump start terminal **C** is located in the fuse box; the suitable ground point **D** is located in the engine compartment (See Owner's Manual for detailed description)
3. Connect cables coming from the battery booster source in the following order and disconnect in reverse order
 - Connect the {+} clamp of your jumper cable to the {+} jump start terminal **C**
 - Connect the {-} clamp of your jumper cable to the suitable ground point **D**
4. Press the 12V Battery Reset button **A** then immediately start the vehicle by pressing the brake and turning the ignition on or pressing the Engine Start/Stop button

REMINDER: Jump-starting your vehicle can be dangerous if done incorrectly. Follow the above jump-starting procedures to avoid harm to yourself or damage to your vehicle and any of its components. You should also consult your Owner's Manual for further detailed instructions for jump-starting your vehicle. If in doubt, we strongly recommend that you have a competent technician or towing service jump-start your vehicle.

For more information on Emergency Starting, please refer to section 7 of the Owner's Manual.

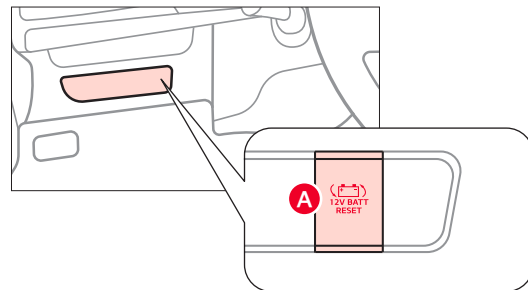

 (Located in Driver's Panel to the left of Steering Wheel)

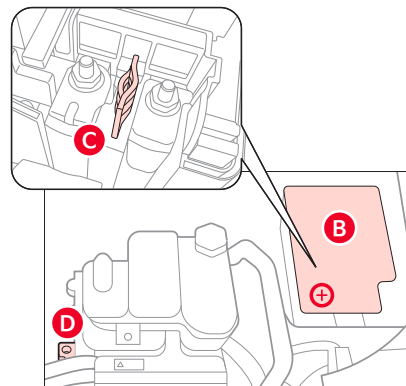

(Niro engine compartment shown)

Charging the Plug-In Hybrid Vehicle (Plug-In Hybrid Only)

AC Charger Level 1 Charging - "Trickle" Charge

An AC Charger Level 1 or "trickle" charger is the most common type of charging system for a Plug-In Hybrid. This type of charger uses 110 volts of household electricity and takes up to 9 hours for a full charge.

Indicators:

- A** ICCB plug
- B** **Power** - When the charger and AC plug is plugged in and functioning normally, the indicator will turn green. Indicator is red if plug temperature sensor warning is present
- C** **Charge** - Indicates that the vehicle is charging
- D** **Fault** - Indicates charge failure
- E** **Charge Level** - Indicates the level of charge: 6A, 8A, 10A, 12A
- F** ICCB - In-Cable Control Box

REMINDER: Do not use an extension cord. Plug trickle charger directly into wall socket. Do not charge to a receptacle that is old, damaged, corroded or cracked. When using outdoors, be careful not to expose it to external environments such as rain, snow, and high temperatures.

AC Charger Level 2 Charging - "Normal" Charge

An AC Charger Level 2 or "normal" 240-volt charger is the recommended charging system for the Plug-In Hybrid. This type of charger uses 240 volts of electricity and takes approximately 2.5-3 hours for a full charge (Based on Kia Corporation testing with SAE J1772 charger performed at 3.3kW). This charger may be able to be installed at your home by a qualified electrician or found at a public charging station.

QUICK TIP

A Level 2 or "normal" 240-volt charger is recommended for regular charging of the vehicle.

REMINDEES:

 
- Shape of charger and how to use the charger may be different for each manufacturer. Please see Owner's Manual for more information
- For more detail and/or subsequent steps in charging your vehicle, please see the Owner's Manual
- Distance to empty may depend on many factors such as the charge amount of the high voltage battery, weather, temperature, durability of the battery, geographical features, and driving style
- Operating the air conditioner or heater excessively may reduce the distance to empty

QR CODE

Plug-In Hybrid Charging Video





Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

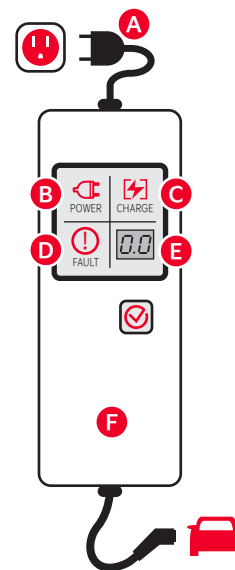

Charging the Plug-In Hybrid Vehicle (Continued)

To charge the Plug-In Hybrid vehicle using a normal/trickle charger:

  1. Connect the ICCB **A** plug to an electrical outlet
2. Check if the power light (green) **B** on the ICCB turns on
3. Press the brake pedal and engage the parking brake
4. Turn off all switches, put the shift lever in P (Park), and turn off the vehicle
5. Open the charging door **E** by pressing the charging door (Ensure doors are unlocked)
6. Remove any dust or water on the charging connector and charging inlet **F**
7. Hold the charging connector handle **G** and connect it to the vehicle's charging inlet **F** by pushing the connector until you hear a clicking sound
8. Charging begins automatically (Ensure the charge indicator light **S** is illuminated on your instrument cluster, indicating the vehicle is charging)

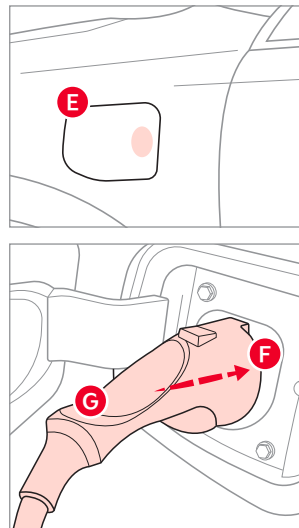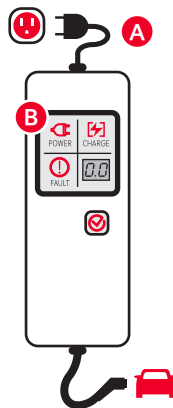


Checking the Charging Status

The charging status can be checked by viewing the charging status indicator on the dash panel. The lights will progressively become lit as the vehicle approaches a full charge.

After charging has started, the light turns green and the estimated charging time is displayed on the Instrument Cluster LCD **H** for about 1 minute. It is also displayed when the driver's door is opened with charging in progress. When fully charged, the light turns off.

 REMINDER: For more detail and/or subsequent steps in charging your vehicle, please see section 1 in the Owner's Manual.

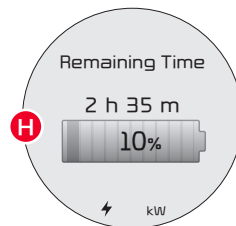

(Message on Cluster Display)

QR CODE

Plug-In Hybrid Charging Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Charging Connector Auto/Lock/Unlock Mode (Plug-In Hybrid Only)

The Charging Connector can be set to be locked or unlocked while in the charging inlet. Go to the Vehicle Settings* in the Infotainment System to set the connector to lock while charging and unlock automatically when charging is complete. Press SETUP, ECO Vehicle and then Charging Connector Locking Mode. Select the preference.

QUICK TIPS

- If the auto/lock mode is set to lock and the vehicle is unlocked but charging cable is not disconnected within 10 seconds, the connector will be automatically locked again
- If charging connector is unlocked but all doors are locked again, immediately, the connector will be automatically locked again
- If charging does not work, disconnect the connector and try charging again

REMANDER: To prevent charging cable theft, the charging connector cannot be disconnected from the inlet when the doors are locked or the charging connector is in the LOCK mode. Unlock all doors to disconnect the charging connector from the inlet. If the release button does not work even after the all doors are unlocked, pull the emergency lift cable in the engine compartment or refer to section in the Owner's Manual on how to unlock the connector in an emergency.

Scheduled Charging* (Plug-In Hybrid Only)

 
Charging time can be set in the Infotainment System, under charge management, or using the Kia Access app.

Charging with the Kia Access Smartphone App:

The Kia Access app can help you find the nearest charging station and displays charging-status and the Scheduled Charging information. On your Smartphone, go to an app store or marketplace to download the Kia Access app.

REMANDER: When Scheduled Charging is set and the charger is plugged in, charging will not begin until the set time & date are met to complete the charging. The green charge indicator on top of the dash will temporary flash ON/OFF to show that scheduled/reserve charging is set.

Deactivate Scheduled Charging - Depress the Deactivate Scheduled Charging button ^A to disable the scheduled charging feature when immediate charging is required.

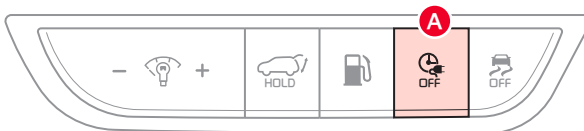

(Buttons are located left of the Steering Wheel)

QUICK TIP

When you press the Deactivate Scheduled Charging button the reserved charging setting will temporarily disable, and start immediate charging mode. If you need to completely deactivate the scheduled charge setting, change the setting from the audio control unit.

REMINDERS:

- For more detail and/or subsequent steps in charging your vehicle, please see the Owner's Manual
- Reserved charging may not be available at public chargers
- Selecting "Charge only during off-peak" option, charging will only occur within off-peak time. The vehicle may not charge to 100%

QR CODE

Plug-In Hybrid Charging Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Regenerative Braking with Paddle Switches*

The regenerative braking system charges the battery when coasting or when you use the brakes to stop the vehicle. When the Drive Mode is in ECO mode, use the paddle switches to adjust the regenerative braking level from 1 to 3, MAX and AUTO. The level will be displayed on the instrument cluster **A**.

- Pull the left paddle switch **B** to increase regenerative braking and deceleration. Pull and hold to reach the MAX level
- Pull the right paddle switch **C** to decrease regenerative braking and deceleration. Pull and hold to reach Smart Regeneration System (AUTO)

The paddle shifters do not operate when:

 
 
- Both paddle switches are pulled at the same time
- The vehicle is decelerating by depressing the brake pedal
- Smart Cruise Control (SCC) is active
- When the SOC gauge shows a high level
- If there is a restriction by the vehicle system
- When the drive mode is switched from sport to ECO

Smart Regeneration System*

Smart Regeneration automatically adjusts the regenerative braking level based on a vehicle being detected in front, and road conditions.

To activate Smart Regeneration, pull and hold the right paddle switch or go to Vehicle Settings* on the Infotainment System. Press the **SETUP** button or **SETUP** on the screen, **VEHICLE** and ECO VEHICLE. Then SMART REGENERATION.

AUTO **D** will be displayed on the instrument cluster above the Regenerative Braking indicator.

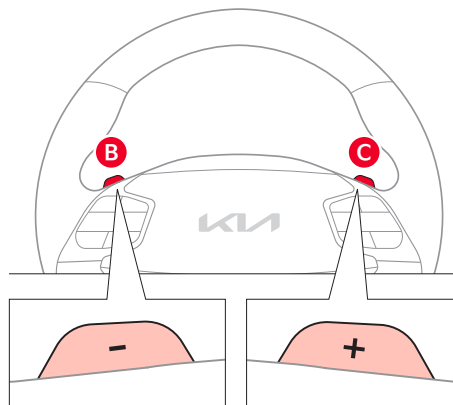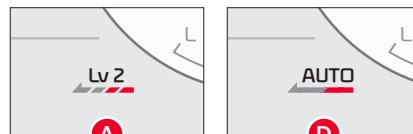

QR CODE

Plug-In Hybrid Paddle Switches / Paddle Shifters Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information on regenerative braking or the Smart Regeneration System, please refer to section 6 in the Owner's Manual.

QUICK TIP

Each of the different Drive Modes allows the regenerative braking level to be set at the driver's preference.

Smart Regeneration is a supplemental system for the driver's convenience. Do not solely rely on this system to stop the vehicle or avoid collisions. Always cautiously look ahead to prevent unexpected or sudden situations.

Steering wheel illustration is for illustrative purposes only. Your actual steering wheel/buttons and/or features may differ.

Always use pedal braking when necessary. Pay attention to the road condition ahead and apply the brake if necessary.

Forward Collision-Avoidance Assist (FCA)^{†3}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent and, if necessary, temporarily apply emergency braking. Initially, FCA provides Collision Warning when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster.

If FCA detects that the collision risk has increased, Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

With the turn signal on, if it detects a potential collision, **Junction Turning** **A** may help to avoid the collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.



FCA Settings:

 
 
 
- FCA is on by default in most Kia models. FCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* in the Instrument Cluster** - Press the Mode button **B** on the Steering Wheel to toggle to User Settings. Press the OK button **C** up/down to toggle to Driver Assistance and Forward Safety
- To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety and Forward Safety
- To adjust the FCA initial warning activation time, go to User Settings **G**, Driver Assistance, Warning Timing, then select Standard or Late, depending on your Kia model:
 - Standard:** This setting allows for a nominal amount of distance between the vehicles before the initial warning occurs
 - Late:** Reduces the amount of distance between the vehicles before the initial warning occurs

FCA/FCW will become active when the:


- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

Actual User Settings steps may vary by model. Refer to section 6 in the Owner's Manual for more information.

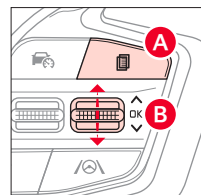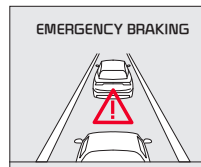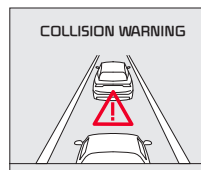

 (Buttons located on Steering Wheel - Type B)

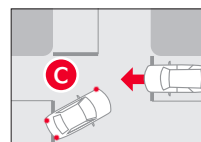

(Junction Turning)

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Warning Volume can be adjusted in the User Settings **G** in the Instrument Cluster or the Vehicle Settings* on the infotainment system. Go to Driver Assistance, Warning Method, then Warning Volume.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster **G**

Lane Keeping Assist (LKA)*†‡

Lane Keeping Assist (LKA) is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, without using the turn signal, LKA may give an audible warning and display Lane Departure Warning on the instrument cluster or LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. And if hands on the Steering Wheel is not detected continually, LKA will be turned off with additional emergency warning.

LKA Settings:

 
- Press and hold the Lane Driving Assist button **A** to turn LKA on or off, when it is first enabled in the User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* in the Instrument Cluster** - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings . Press the OK button **C** up/down to toggle to Driver Assistance and then Lane Safety
- To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety and then Lane Safety

LKA will operate under the following conditions:


- The vehicle speed exceeds approximately 40 mph
- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers





When LKA detects the lane markers, both lanes are displayed white

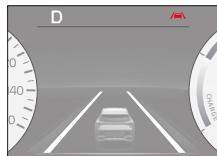

 When LKA does not detect the lane markers, the lanes are displayed gray

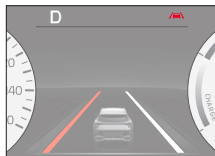

  When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)

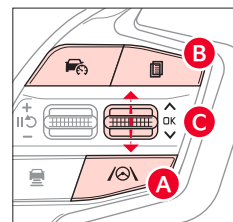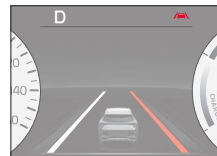

(Buttons are located left of the Steering Wheel)

QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the infotainment system. Go to Driver Assistance, Warning Method, then Warning Volume

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

Actual User Settings steps may vary by model. Refer to section 6 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Blind-spot Collision Warning (BCW)*†3

BCW uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area, before changing lanes and before exiting a parallel parking space. BCW provides Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. On select Kia models, when exiting a parallel parking space and BCW detects that the collision risk has increased, BCW can help avoid a collision by applying the brakes.

Vehicle detection: When another vehicle is detected within BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

 
 
 
Collision-Avoidance Assist*: On select Kia models, when collision warning has already occurred, and the collision risk has increased, BCW can help avoid a collision by applying the brakes. Your vehicle needs to be traveling less than 2 mph, and the approaching vehicle is traveling less than 3 mph.

BCW Settings:

- BCW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* in the Instrument Cluster** - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings . Press the OK **D** up/down to toggle to Driver Assistance, Driving Safety, then Blind-Spot Safety
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Blind-spot Safety

QUICK TIPS

- The Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume
- BCW will activate when:
 - BCW is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Collision Warning: Vehicle speed is above approximately 12 mph and the speed of the vehicle in the blind spot is above 7 mph

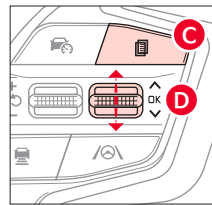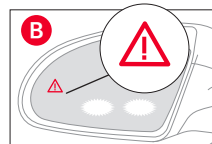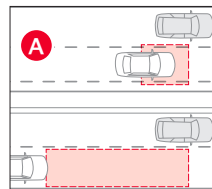

(Buttons are located left of the Steering Wheel)

QR CODE

Blind-Spot Collision Warning Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, BCW is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 6 in the Owner's Manual for more information.

REMINDERS:

- When BCA is ON and the ignition is cycled, BCW returns to its previous state
- If the turn signal is turned on to make a left turn at an intersection, BCW may warn the driver regardless of driver's intentions. Maintain a proper distance from oncoming vehicles

Blind-spot Collision-Avoidance Assist (BCA)*†‡

BCA uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area, before changing lanes and before exiting a parallel parking space. Initially, BCA provides Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, BCA can help avoid a collision by applying the brakes.

Vehicle detection: When another vehicle is detected within BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

 
 
 
Collision-Avoidance Assist: When collision warning has already occurred, and the collision risk has increased, BCA can help avoid a collision by applying the brakes.

BCA Settings:

- BCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* in the Instrument Cluster** - Press the Mode button **C** on the Steering Wheel to toggle to User Settings. Press the OK **D** up/down to toggle to Driver Assistance, Driving Safety, then Blind-Spot Safety
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Blind-spot Safety

QUICK TIPS

- The Warning Volume can be adjusted in the User Settings* in the Instrument Cluster or the Vehicle Settings* on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume
- BCA will activate when:
 - BCA is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Vehicle speed is above approximately 12 mph and the speed of the vehicle in the blind spot is above 7 mph

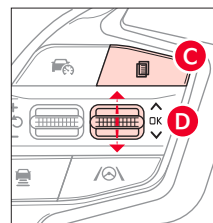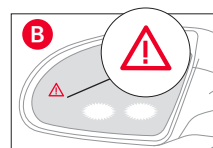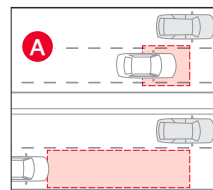

(Buttons are located left of the Steering Wheel)

QR CODE

Blind-spot Collision-Avoidance Assist (BCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 6 in the Owner's Manual for more information.

REMINDERS:

 
 
- BCA will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCA is ON and the ignition is cycled, BCA returns to its previous state
- If the turn signal is turned on to make a left turn at an intersection, BCA may warn the driver regardless of driver's intentions. Maintain a proper distance from oncoming vehicles

Driver Attention Warning (DAW)*†4


Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving. A message, "Consider taking a break," **A** appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low.

DAW Settings:

- DAW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* **A** in the Instrument Cluster - Press the Mode button **B** on the Steering Wheel to toggle to User Settings **A**. Press the OK **C** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- To access Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Inattentive Driving

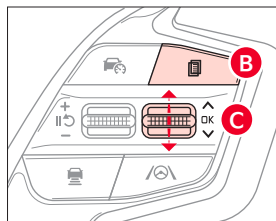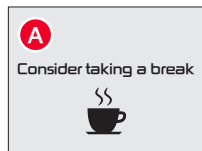

(Steering Wheel buttons on left side)

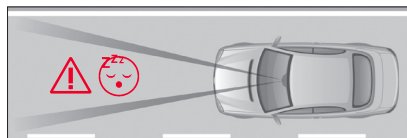 

QR CODE

Driver Attention Warning (DAW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 6 in the Owner's Manual for more information.

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Leading Vehicle Departure Alert (LVDA)*†‡

Leading Vehicle Departure Alert is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped, and LVDA detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.

 
 
LVDA User Settings:

- To turn LVDA on, press the Mode **B** button on the Steering Wheel, and go to User Settings in the Instrument Cluster. Press the OK button **C** up/down and select Drive Assistance, then press the OK button **C** to select. Go to Driver Attention Warning and then Leading Vehicle Departure Alert
- Some models access settings through the Vehicle Settings in the infotainment system. Press the Setup hard key on the infotainment system, then press **VEHICLE** on the screen to enter Vehicle Settings

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

The Leading Vehicle Departure Alert system is not a substitute for safe and proper driving. Always drive safely and use caution.

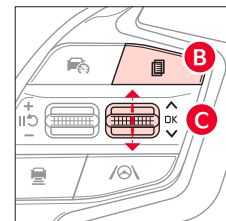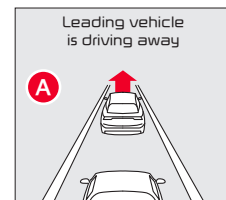

(Buttons located on Steering Wheel)

QR CODE

Leading Vehicle Departure Alert (LVDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

Cruise Control†‡,15

D Driving Assist button: Press to turn the Cruise Control ON/OFF


E +||- Pause/Resume button: Push + button up to increase the set speed
Push - button down to decrease the set speed
Press || button to temporarily pause or resume Cruise Control

QUICK TIPS

- Cruise Control is designed to function above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

REMINDER: Cruise Control will be paused when:

 - Depressing the brake pedal
- Pressing the (Pause/Resume) switch
- Shifting the gear to N (Neutral)
- Decreasing vehicle speed to less than approximately 20 mph
- ESC (Electronic Stability Control) is operating
- Downshifting to 2nd gear when in Manual Shift mode

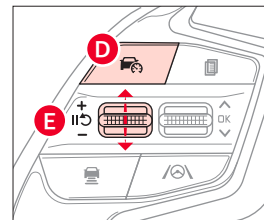

Refer to section 6 in the Owner's Manual for more information.

Cruise Control is a supplemental system and is not a substitute for safe driving. The driver remains responsible for maintaining a proper and safe speed for the vehicle.

Navigation-based Smart Cruise Control (NSCC)*†3,8

Navigation-based Smart Cruise Control will help automatically adjust vehicle speed when driving on highways with posted speed limits by using road information from the navigation system, while Smart Cruise Control is operating.

Smart Cruise Control (SCC) is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.


Highway Curve Zone Auto Slowdown: NSCC can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system. When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, and the NAV icon changes to AUTO and turns green **A** in the instrument cluster. When the vehicle passes the curved road, the vehicle may return to its previously set speed.

Highway Auto Speed Change: If the set speed is set to the current posted speed limit on the highway during NSCC operation, the set speed is changed automatically whenever the posted speed limit changes and when it receives information from the navigation system.


SCC Operation: With SCC turned on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the **+||- button B** must be pressed to start moving the vehicle. SCC will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

NSCC Settings:

 - NSCC can be turned on/off by going to the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance > Driving Convenience > Highway Auto Speed Change

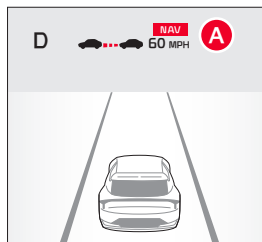

(Displays on LCD screen)

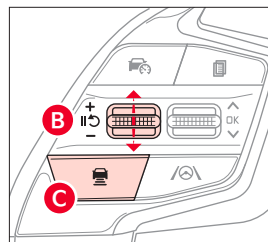 

NSCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 6 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODES

Navigation-based Smart Cruise Control (NSCC) Video



Smart Cruise Control with Overtaking Acceleration Assist Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Navigation-based Smart Cruise Control (NSCC)^{*†3,8} (continued)

NSCC Settings (continued):

To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. Each time you press the button, the vehicle distance will change **D**, indicated by the number of bars that appear on the display **A**.

To pause/resume NSCC operation: Depress the brake pedal or press the Pause/Resume button **+||⏮- B**.

 The cruise indicator on the instrument cluster will change.

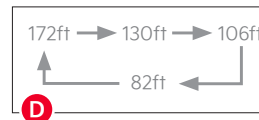

(Distances are approximate and vary depending on vehicle speed)

QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn NSCC on, the set speed will be set to 20 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the +/- switch up/down to start the vehicle
- NSCC will not activate until the brake pedal has been depressed at least once after ignition ON or engine start
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system

REMINDERS:

- CRUISE indicator must be ON in order to operate SCC
- The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed. See the owner's manual for more information
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), Electronic Parking Brake (EPB) is activated and various other conditions. See owner's manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The navigation part of NSCC does not function when a destination is not set on the infotainment navigation system.
- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways

 
Intelligent Speed Limit Assist (ISLA)*†3

Intelligent Speed Limit Assist is designed to use the information from the posted speed limit and the navigation system to inform the driver of the speed limit.

When ISLA is on and active, LFA will display an alert on the Instrument Cluster LCD of the detected speed limit **A**. If the vehicle's current speed exceeds the detected speed limit, a warning will sound and the vehicle's current speed will blink on the LCD.

ISLA Settings:

- To enable ISLA on, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, then SPEED LIMIT.
- Select one of the three modes:
 - Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message to change the speed to help the driver stay within the posted speed limit, and informs the driver to change set speed of Manual Speed Limit Assist or Smart Cruise Control to help the driver stay within the speed limit
 - Speed Limit Warning:** Informs the driver of the posted speed limit **A** and warns the driver when the vehicle is traveling faster than the posted speed limit
 - Off:** ISLA is disabled

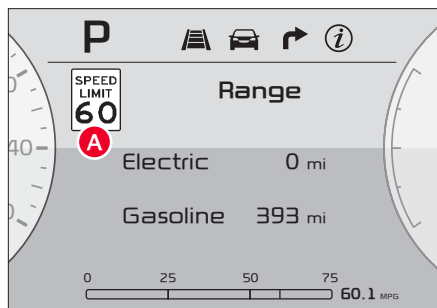

QUICK TIP

You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on

REMINDERS:

- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected

See section 6 in the Owner's Manual for more detailed information, limitations and conditions.

QR CODE

Intelligent Speed Limit Assist (ISLA) Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Lane Following Assist (LFA)*†3

Lane Following Assist (LFA) is designed to help ensure that the vehicle stays centered in its lane **(A)** by monitoring the detected lane markings ahead and adjusting the steering. The instrument cluster indicator will initially illuminate white **(A)** when turned ON. It will remain white when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the Lane Following Assist icon will illuminate green **(B)**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. And if hands on the Steering Wheel is not detected continually, LFA will be turned off with additional emergency warning.

- Press the Lane Driving Assist button **(C)** to turn LFA on or off, when it is first enabled in the User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- LFA will operate only when these conditions are met:
 - LFA recognizes both sides of the lane markers the vehicle is traveling in
 - The vehicle is traveling slower than 90 mph

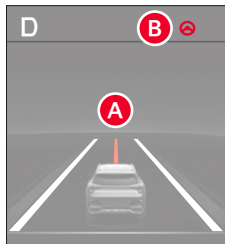

QUICK TIP

The Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the infotainment system. Go to Driver Assistance, Warning Method, then Warning Volume.

REMINDER: LFA is not a substitute for safe and proper driving. Always drive safely and use caution.

LFA is supplemental. Do not solely rely on LFA and always pay attention to the road and its conditions.

Actual User Settings steps may vary by model. See section 6 in the Owner's Manual for more detailed information, limitations and conditions.

Highway Driving Assist (HDA)*†3

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.

 
 
When HDA is activated **(C)** and the conditions are met, the HDA indicator **(F)** will illuminate green. If proper conditions are not met, HDA will be in standby mode and the indicator light **(F)** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **(F)**.

HDA User Settings:

To enable HDA, access settings through the Vehicle Settings in the Infotainment System. Press the **SETUP** key, then press **VEHICLE** **(E)** on the screen to enter Vehicle Settings. Select Driver Assistance, Driving Convenience and then Highway Driving Assist.

HDA will operate only when these conditions are met:

- The vehicle is traveling slower than 110 mph or the highway speed limit
- When driving on limited/controlled access highways/freeways
- When the SCC is on and operating
- When the SCC speed is set to current posted highway speed or slower

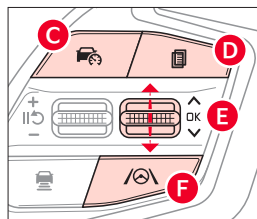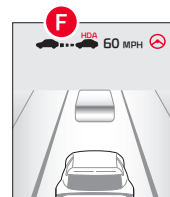

REMINDER: When the ignition is cycled, the system returns to its previous state, on or off.

(Buttons located on steering wheel)

QR CODE

Lane Following Assist (LFA) Video



Highway Driving Assist (HDA) Video

on QR codes.

www.youtube.com/KiaFeatureVideos



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

See section 6 in the Owner's Manual for more detailed information, limitations and conditions.


Images are for illustrative purposes only and may not reflect actual feature or operation.

Rear View Monitor (RVM)^{†3}

Rear View Monitor is a supplemental system that displays the view behind the vehicle while the vehicle is in Reverse.

Rear View Monitor activates when the:

 - Engine Start/Stop button is in the ON/READY position
- Gear Shift Lever is in the R (Reverse) position

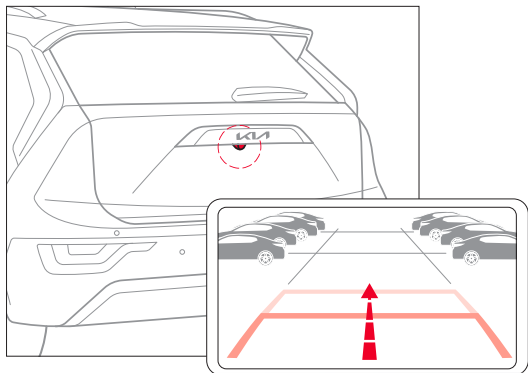

REMINDER: RVM may not display every object behind the vehicle.

Rear View Monitor is not a substitute for proper and safe backing-up procedures.

Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

 
Refer to section 6 in the Owner's Manual for more information.

Safe Exit Warning (SEW)^{†3}


Safe Exit Warning (SEW) can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped.

SEW Settings:

- SEW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* is in the on position
- **To access User settings* in the Instrument Cluster** - Press the Mode button **A** on the Steering Wheel to toggle to User Settings **⚙️**. Press the OK button **B** up/down to toggle to Driver Assistance, then Exit Safety
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Exit Safety.

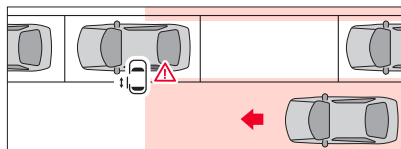

 REMINDER: The setup of SEW will be maintained, as selected, when the ignition is cycled.

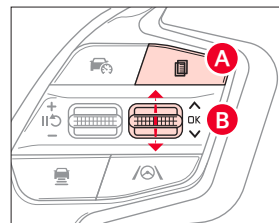




(Buttons located on steering wheel)

When engaged, SEW is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle. Refer to section 4 in the Owner's Manual for more information.

Forward/Reverse Parking Distance Warning (PDW)*†3

Forward/Reverse Parking Distance Warning (PDW)* is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area in the rear and rear side of the vehicle when backing up.

   - To turn PDW on, press the Parking Safety button **A** (LED illuminated). To turn PDW off, press again **A** (LED not illuminated)
- PDW will activate when the ignition is on/ready and the vehicle is in D (Drive) or R (Reverse)
- **Parking Distance Warning Auto On** - To set the parking distance warning to be on at low speeds, enable it in the User Settings* in the Instrument Cluster or the Vehicle Settings in the infotainment system
- **To enable in User settings* in the Instrument Cluster** - Press the Mode button **B** on the Steering Wheel to toggle to User Settings. Press the OK button **C** up/down to toggle to Driver Assistance, then Parking Safety, and select Parking Distance Warning Auto On
- **To enable in Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Parking Distance Warning Auto On

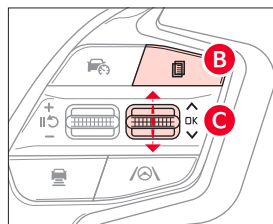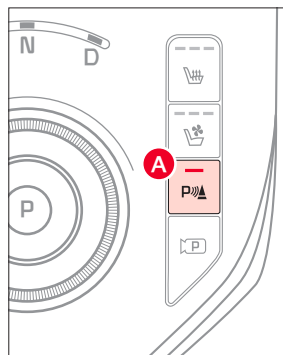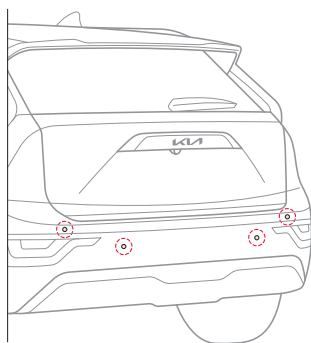

(Buttons located on steering wheel)

QUICK TIP

The Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume.

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, PDW may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first
- Images are for illustration purposes only and may not reflect actual operation

QR CODE

Forward/Reverse Parking Distance Warning (PDW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Parking Distance Warning (PDW) is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.

Refer to section 6 in the Owner's Manual for more information.

Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†‡}

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver under certain conditions. It may temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.

 
 
 
When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

RCCA Settings:

- RCCA can be turned on/off by going to the User Settings* ⚙️ in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* ⚙️ in the Instrument Cluster** - Press the Mode button **C** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **D** up/down to toggle to Driver Assistance, then Parking Safety. Select Rear Cross-traffic Safety and press the OK button **D**
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross-traffic Safety

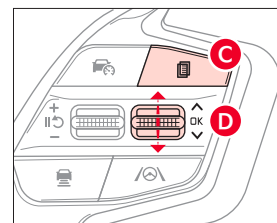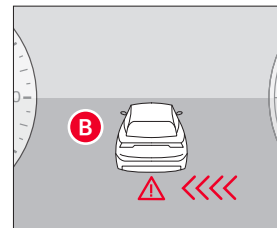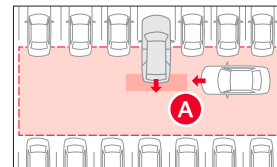

(Buttons located on steering wheel)

QUICK TIP

The Warning Volume can be adjusted in the User Settings ⚙️ in the Instrument Cluster or the Vehicle Settings on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume.

QR CODE

Rear Cross-traffic Collision-Avoidance Assist (RCCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 6 in the Owner's Manual for more information.

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

 
When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Instrument Cluster Control

Press switch **A** up or down to adjust display brightness of the instrument panel illumination.

REMINDERS:

- The dimmer does not change brightness when lights are turned off
- The dimmer does not adjust brightness on the audio system screens; use the system's setup menu to adjust brightness on the screens

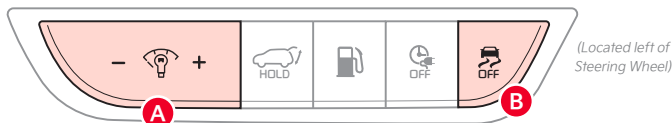

Electronic Stability Control (ESC)^{†5}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON whenever possible.

Press ESC OFF button **B** to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both Traction Control and Stability Control off, press and hold ESC OFF button **B** (ESC OFF indicator will illuminate, and an alert sounds).

REMINDERS:

- ESC is active by default at vehicle startup
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

Refer to section 6 in the Owner's Manual for more information.

Hill-Start Assist Control (HAC)^{†5}

HAC is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDERS:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- In the event of HAC system malfunction, see Authorized Kia Dealer for service

QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator. This is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backward

HAC does not replace the need to apply brakes while the vehicle is stopped on an incline.

Refer to section 6 in the Owner's Manual for more information.

Reverse Parking Aid Function*

 
When the gear shift lever is moved into R (Reverse) and the vehicle is driven backwards, the outside rearview mirrors **A** will rotate downward to aid in reverse parking.

To turn ON the Reverse Parking Aid Function, move switch to either the L or R mirror buttons **B**. Both mirrors will move.

To turn OFF, move switch to center.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)

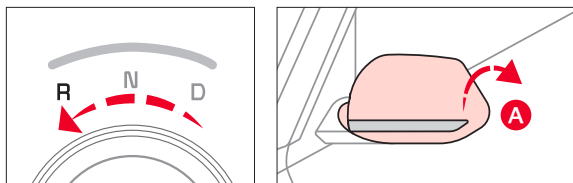

(Buttons panel located on Driver's Door)

 
REMINDERS: When the outside rearview mirror buttons are not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Refer to section 5 in the Owner's Manual for more information.

Engine Start/Stop Button†6

To start the engine:

- Depress the brake pedal
- Press the ENGINE START/STOP button while gear shift is in P (Park)
- To turn the vehicle OFF, press the ENGINE START/STOP button.

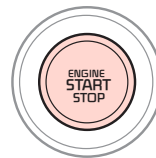

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person.

QUICK TIPS

- To use electrical accessories:
 - ACC position**
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once
 - ON position**
 - When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice
 - Keeping the vehicle in ACC or ON position without turning the engine on may discharge the vehicle's battery.

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the ENGINE START/STOP button (Lock button side closest) and press the button to start the engine
- With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

QR CODES

Start/Stop Button Video



Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 6 in the Owner's Manual for more information.

Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto-Up/Down*

QUICK TIP

 
Press the button again to stop Auto Up/Down function.

- B** Press to Unlock/Lock All Doors
C Press to disable Rear Passenger Windows

REMINDERS:

- When pressed **C**, controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

Refer to section 5 in the Owner's Manual for more information.

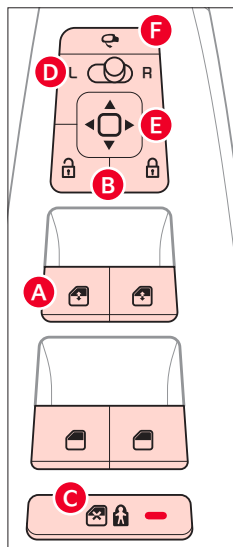


Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

 Refer to section 5 in the Owner's Manual for more information.

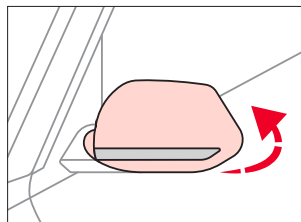

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Power/Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button* is located on the climate control system panel.

Power Folding Outside Mirrors*

Move the switch **D** to the left or right to select mirrors. Then press arrows **E** to adjust mirror position.

To both fold and unfold the outside rearview mirrors, press the folding mirror button **F** as pictured.

QUICK TIP

To automatically fold mirrors when exiting vehicle, press the LOCK button once on the Smart Key.

 
REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

Refer to section 5 in the Owner's Manual for more information.

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

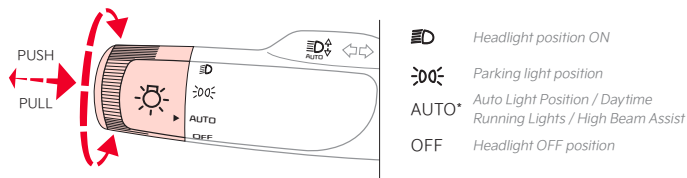

AUTO Light position - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button* is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Engine is turned off

REMINDERS:

- DRL only operates during the daytime
- The DRL system turns off when the headlights are ON, parking brake is applied or the front fog lights are turned on

High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from oncoming vehicles and road conditions.

When switch is in the AUTO position and the vehicle's ignition or the Engine Start/Stop button* is on, the High Beam Assist will operate. To turn HBA off, change the switch setting.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle while using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously

QR CODE

High Beam Assist (HBA) Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Fog Lights - Rotate switch to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation.

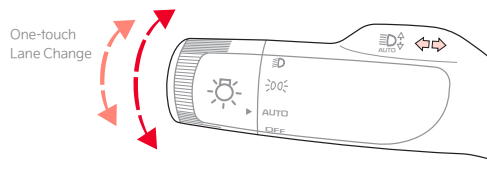

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

 
To change how many times (3/5/7) the Lane Change Signal blinks, go to User Settings Mode in the LCD Instrument Cluster modes.

Refer to section 5 in the Owner's Manual for more information.

Heated Steering Wheel Button*

Press button **A** to turn ON/OFF steering wheel heater while the ignition or Engine Start/Stop button is in the ON position.

Steering wheel heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate. Steering wheel heater will turn ON or OFF automatically depending on the steering wheel temperature.

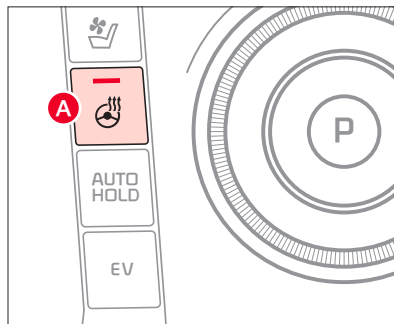

(Located beside gear shift dial)

QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON.

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Refer to section 5 in the Owner's Manual for more information.

Windshield/Rear Wipers & Washers

To operate Windshield Wipers and Washers:

 
- Move lever Up/Down to change Wiper modes
- Press switch **B** Up/Down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

Rain Sensing (Auto Control Wipe):

The rain sensor located on the upper end of the windshield glass senses the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To vary the speed setting, press the Wiper Switch **C** up/down.

If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system.

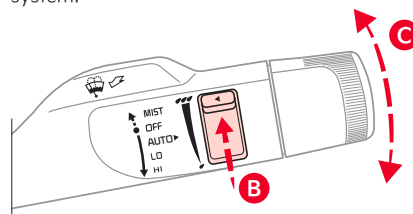

WINDSHIELD
MIST: Single wipe
OFF: Wiper off
INT/AUTO: Auto control wipe (rain sensing)
LO: Slow wipe
HI: Fast wipe

QUICK TIPS

- Pressing lever up increases Intermittent wipe frequency and wipe speed. Pressing lever down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use
- LO and HI sets wiper speed. No intermittent wipe function on Rear Wipers

To operate Rear Wiper & Washer:

- Rotate Rear Wiper switch to change Wiper modes
- Push to spray and wipe

QR CODE

Wipers and Wipers Stalk Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

Tilt/Telescoping Steering Wheel†17

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

 
QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance.

Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

For more information, refer to section 5 of the Owner's Manual.

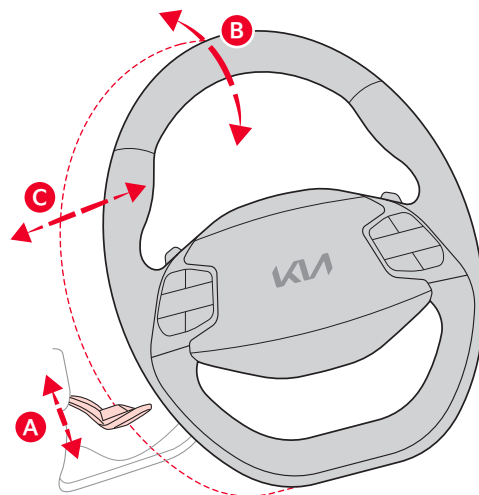

QR CODE

Tilt/Telescoping/Heated Steering Wheel Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Bluetooth® Wireless Technology†2,15

- A Volume button:** Press up/down to raise/lower speaker volume
Mute button: Press to mute the microphone during a call
- B Talk/Voice Recognition button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition; press and hold to start voice recognition of a connected smartphone via phone projection (Button operation may vary depending on smartphone specifications)

Kia Connect with Navigation system* - When enrolled with a Kia Connect subscription, press this button to activate the Kia Connect Voice Assist to use navigation guidance and search destinations

- C Receive/Place Call button:** Press to receive/place/end calls. In vehicles with navigation, if no phone is paired, press button to pair a phone.

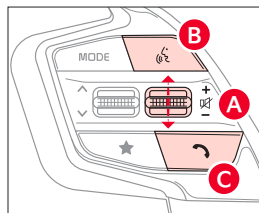

(Type B shown)

QUICK TIPS

- Phone book transfer upload time varies by phone model and with the number of phone book entries
- When using the voice command feature, wait for the system BEEP before speaking the command
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple Bluetooth® devices. See the Car Multimedia System User's Manual for more information on setup and limitations

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Multimedia System User's Manual or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for contacts download and to allow acceptance of all future Bluetooth® connection requests

How to Place a Call

- **Option 1:** Press the Receive/Place Call button **C** (displays the phone screen with call history)
- **Option 2:** Press the Talk button **B**. Then say the command "Call {name}" or "Dial {number}" followed by contact name or number

QUICK TIP

When using the voice command feature, wait for the system BEEP before speaking the command.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

QR CODE

Steering Wheel Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Bluetooth® Wireless Technology^{†2,15} (continued)

 
Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts. To help optimize the *Bluetooth*® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names (e.g., "John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (e.g., @, &, #, /, -, *, +, etc.)
- Avoid using acronyms (e.g., "In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations (e.g., "Doctor Smith" vs. "Dr. Smith")

Audio Controls^{†15}

- A Audio MODE button:** Press to cycle through FM/AM/ SiriusXM®/Media modes
- Audio System ON/OFF:** Press to turn power on. Press and hold to turn power off (Standard Audio System - Value only)
- B Seek/Presets button:** FM/AM/SiriusXM® Modes: Press up/down to advance through Preset Stations. Press and hold to auto seek
- Media Mode:** Press up/down to move Track Up/Down. Press & hold up/down to fast forward/rewind (except for *Bluetooth*® Audio)
- C Volume button:** Press up/down to raise/lower volume
- Mute button:** Press to mute all audio
- D Custom button ☆** - Press to access user-selected feature. Press and hold the button to select one of the features available

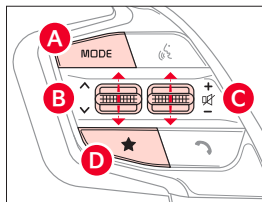

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For further audio system operation, refer to pages 40-46.

Your vehicle's steering wheel buttons may differ from those in the illustration. See your Owner's Manual for more details.

QUICK TIPS

- **Bluetooth® Music Streaming:** If the *Bluetooth*® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and turn off A/C - Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands

QR CODES

Voice Recognition Tips Video



Steering Wheel Controls Video



Star, Favorite & Radio Presets Buttons Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Android Auto™ +2 / Apple CarPlay® +2 Setup

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store^{1,2}. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System-Value):

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System-Value & Kia Connect with Navigation):

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION, select PHONE PROJECTION SETTINGS, then ANDROID AUTO. Review all terms, conditions and requests on the infotainment system and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the Infotainment System home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple Carplay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Cable Connection setup for Apple CarPlay® (Kia Connect with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION on the screen, select PHONE PROJECTION SETTINGS, then select Apple CarPlay®
3. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the infotainment system and phone, and, if you agree, accept them in order to use Apple CarPlay®
4. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

Refer to the Car Infotainment System Quick Reference Guide for more information. For further audio system operation, refer to pages 40-46. iPhone is a registered trademark of Apple Inc.

 
QR CODE

Wireless Apple CarPlay® & Android Auto™ Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Standard Audio System - Value* - FM/AM/SiriusXM®⁺¹⁴/Media (USB, *Bluetooth*®⁺² Audio)*

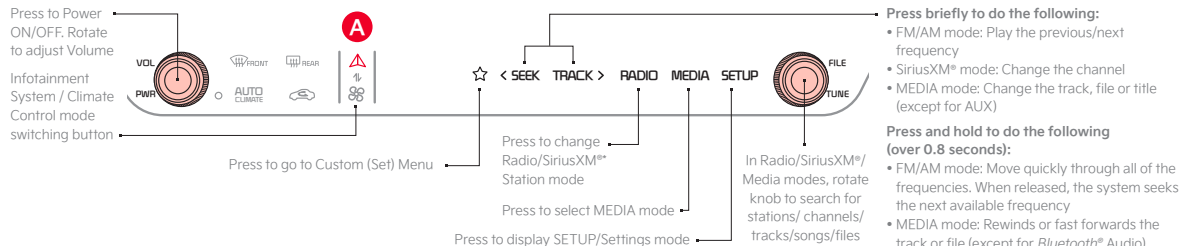

Press the Infotainment/climate control mode switching button **A** to toggle between Infotainment System and Climate Control Modes. Press and hold the Infotainment/climate control mode switching button **A** to set the default button display mode.

Sound Settings: To adjust the sound settings, press the SETUP key on the infotainment system or the onscreen MENU button, when in MEDIA mode. Select the onscreen SOUND button, or SOUND SETTINGS, then the menu item. Use the onscreen buttons to adjust settings. Press the return button **↵** to save settings

Presets: Press the STAR button next to or below the Radio Station display. This saves the current station as a preset

SiriusXM® Smart Favorites: In Radio mode, choose SiriusXM®, then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast

Custom Key ☆: To Program the Custom Key, press and hold the Custom key. Select one of the available features you would like the Custom key to open

Map/software updates - To keep your map and software up to date, free of charge, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. **Note**, visiting a dealer for software update may include an additional charge.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- Voice Recognition function is available when connected to Android Auto™ and Apply CarPlay®
- At any time, you can interrupt Command Feedback by pressing the TALK button; when using the voice command feature, wait for the system to BEEP before speaking the command
- A warning screen may appear periodically to remind users that the system should be operated when the engine is running to prevent battery discharge

QR CODES

Standard Audio System - Value Videos



Standard Audio System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 40-46.

Kia Connect Activation*†1 (Systems equipped with Kia Connect only):

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your Infotainment System:
 - a. Press SETUP key
 - b. Press Kia Connect icon
 - c. Press Activate
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone text message or email:
 - a. Check your phone text message or email for verification code
 - b. Open the link in your text or email

 
Note: If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code.

Kia Connect may be unavailable for model year 2022 or later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the infotainment system and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my verification code." A link will be provided to download the Kia Access app from your app store. After installing the app, log in and enjoy

REMINDER: This vehicle is not equipped with over-the-air system updates.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

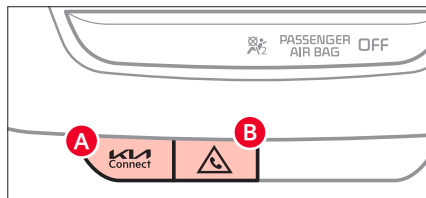

(Buttons on overhead console*)

Kia Connect Assistance*†1

Kia Connect **A** - Connect to the Kia Connect Call Center

Roadside Assist **B** - Press to connect to a Roadside Assistant where you can request vehicle towing services

For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

QR CODES

Kia Access app Video



Kia Connect Activation Video



Kia Connect Assistance Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Kia Access App Download

Go to an app marketplace to download the Kia Access App. Once you download the app, make sure you register your vehicle and start an account (refer to Kia Connect Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect. If these conditions are not met, remote command may not execute or takes long time. It will also effect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- When Remote Start is activated, if the driver does not enter the vehicle within 10 minutes, the Remote Start will turn the engine off
- When using Remote Start with Climate Control, turn on for at least a few minutes before getting into the vehicle, allowing the vehicle interior to reach your desired temperature
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect again



Kia Access App Features Guide

The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary. For further Kia Connect link operations, refer to the Car Infotainment System Quick Reference Guide.

QR CODES

Download the Kia Access App by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.

 


Kia Access App Features

Guide. Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Connect w/ Navigation^{†1,8} - FM/AM/SiriusXM^{®†14}/Media (USB, Bluetooth^{®†2} Audio)

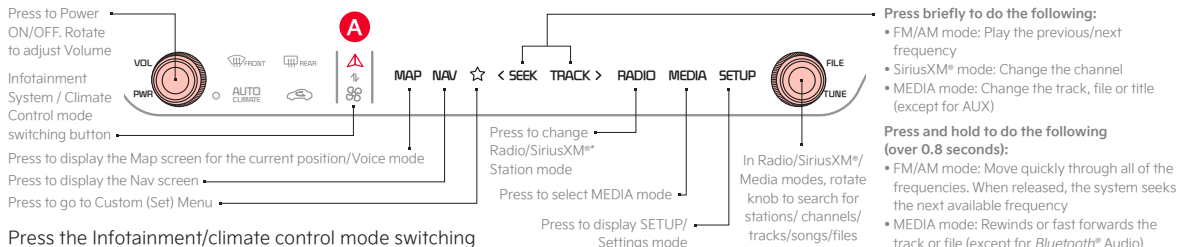

Press the Infotainment/climate control mode switching button **A** to toggle between Infotainment System and Climate Control Modes. Press and hold the Infotainment/climate control mode switching button **A** to set the default button display mode.

Sound Settings: To adjust the sound settings, Press the **SETUP** key on the infotainment system. Select the onscreen SOUND button, then select the menu item. Use the onscreen buttons to adjust settings. Press the return button **↵** to save settings.

Radio Presets: To save a Preset, press and hold the desired slot or the star button **☆** next to or below the radio station display. This saves the current station in the selected slot.

SiriusXM[®] Smart Favorites: In Radio mode, choose SiriusXM[®], then select any of the first six favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key **☆: To program,** press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

Map/software updates: To keep your map and software up to date, free of charge, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. **Note,** visiting a dealer for software update may include an additional charge.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only) and Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- At any time, you can interrupt Command Feedback by pressing the TALK button
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio system in ACC mode may drain the vehicle's battery

Kia Connect is currently unavailable for model year 2022 or later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information. For further operational information, refer to the Car Infotainment System Quick Reference Guide.

QR CODES

Kia Connect with Navigation Video



Navigation System Important Tips Video



Navigation System Updates Video



Refer to the inside front cover for more information on QR codes. www.youtube.com/KiaFeatureVideos

Multimedia USB Port, Charger Ports

Multimedia USB Port A - Use the Multimedia USB Port to connect USB audio devices and smartphone devices.

Power Outlets B - Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

 
 
QUICK TIP

The power outlets are inactive when ignition is in the OFF position.

USB Charger Ports C - Devices can be recharged using a USB cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger Ports. They are located in the Center Panel and the rear sides of the seats.

REMINDERS:

- Using the power outlets (accessory plugs) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- The Multimedia USB data port A is located between the Power Outlet and USB Charger Port. The USB Charger Port does not support data transfer

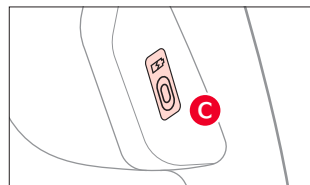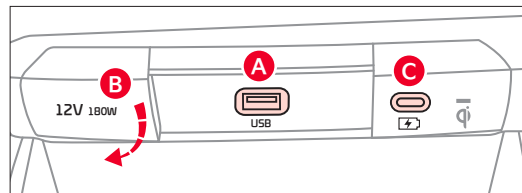

(Located on rear sides of front seats)

QR CODE

Multimedia USB Port, Power Outlets & USB Charger Port Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

 
AC Inverter*

The AC inverter supplies 115V/150W electric power to operate accessories or devices.

To use the AC inverter, open the AC inverter cover and connect a plug to it.

The AC inverter is ON when the vehicle is on.

Refer to section 5 in the Owner's Manual for more information.

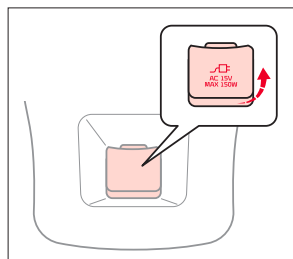

Digital Clock (Infotainment System)

Press **SETUP**, then select General, and select Date/Time from the menu to adjust.

QUICK TIP

- Press the Return button on the infotainment system to ensure changes are saved
- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time settings, turn GPS time OFF in the Clock Settings (Kia Connect with Navigation*)

Wireless Smartphone Charging System*†20

Charge a compatible Qi Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

- Enable Wireless Charging in the User Settings in the Instrument Cluster LCD or the Vehicle Settings* in the infotainment system, select Convenience, then Wireless Charging System
- Place a compatible smartphone on the center of the charging pad
- Indicator light **B** may change to amber once the wireless charging begins
- Once charging is complete, the orange light may change to green

 
QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- Wireless charging must be enabled in user settings
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber. Avoid placing other metal items in the bin while charging as to not impede the charging area
- For wireless charging to occur, all doors (excluding rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle

REMINDERS:

- The smartphone must be a compatible Qi certified phone with Qi function available. Some smartphone models are not Qi certified, which may affect the availability, speed or performance of the wireless charging
- Wireless charging technology allows for a device to be charged using inductive charging. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- **Charging Performance** - Device position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled
- Avoid placing other metal items in the bin while charging as to not impede the charging area

Requires Qi enabled device or Qi enabled case

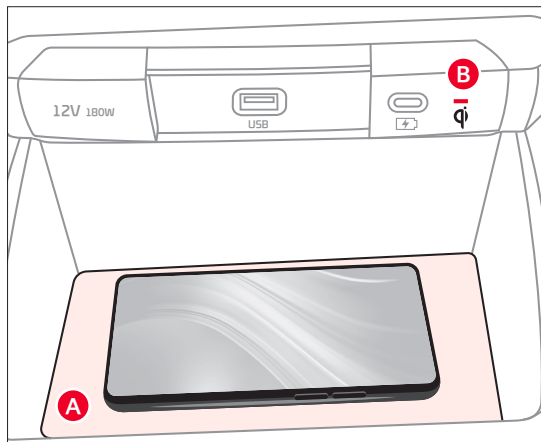

(Located in front of Gear Shift)

QR CODE

Wireless Smartphone Charging Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Automatic Climate Control

 
- A** Driver Temperature Control knob
- B** Front Windshield Defroster
- C** Rear Windshield Defroster
- D** AUTO Climate
- E** Recirculated Air button
- F** Toggle between Climate and Infotainment Controls; Press and hold to set the default mode displayed
- G** Driver Only Climate display
- H** Fan Speed Control knob
- I** Mode Display
- J** A/C On-Off
- K** SYNC (Dual Zone)
- L** Passenger Climate display
- M** Passenger Climate Control knob

Air Flow Modes **I**:

To select Air Flow Modes, press the Mode selection button:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

Refer to section 5 in the Owner's Manual for more information.

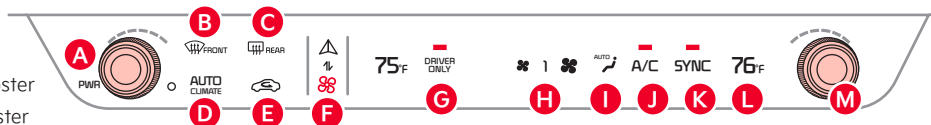

Climate Control Auto Function

Press AUTO to select Full Auto Operation. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected. Turn temperature control knob **A** to the desired temperature.

Auto Defogging System: Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press and hold the Front Defrost button  for three seconds when the vehicle power is on (the defrost button light will flash three times and the ADS OFF icon will illuminate). To turn Auto Defogging on again, press and hold the Front Defrost button  again for three seconds and the defrost button light will flash 6 times and ADS OFF icon will turn off.

Driver Only Ventilation: Driver Only Ventilation restricts air flow to the driver's side vents only. This can help to optimize driving range by limiting the power drawn from the battery. Press DRIVER ONLY button **G** to enable air flow through the driver's side vents only.

Defrost Outside and/or Inside Windshield:

1. Set Front Fan Speed **H** to the highest position
2. Set **Temperature** to **Hot A**
3. Press the **Front Defrost** button  **B**

QUICK TIPS

- Defrost mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve defog performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

QR CODES

Automatic Climate Control - Touch-Sensitive Control Panel Video



Auto Defogging System (ADS) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
 
REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the A/C and heater may allow the Energy Consumption to increase, especially excessive use of the heater

Automatic Gear Shift with Sportmatic® Shifting* (Hybrids only)

- P:** Park
- R:** Reverse
- N:** Neutral
- D:** Drive
- D:** Drive, left gate (Manual Mode)
- [+]:** Manual Mode Upshift
- [-]:** Manual Mode Downshift

Manual Mode: To enter Manual Mode, move shift lever from D to left gate. When in Manual Mode, if the shift lever is not moved up or down, then the vehicle will automatically shift gears. To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

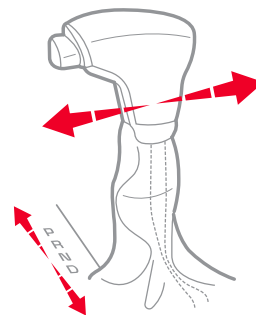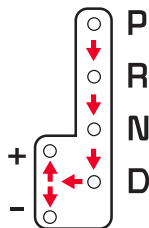

Dual Clutch Transmission (DCT)

The Dual Clutch Transmission (DCT) gives the driving feel of a manual transmission, yet provides the ease of a fully automatic transmission.

The following are unique driving tips for the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake **MUST** be used or the gear shift **MUST** be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/ transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers
- If the clutch is overheating, the first warning, an amber-colored warning light , will be displayed in the instrument cluster. **When indicator turns red, reduce speed, pull over and place the vehicle in Park until it cools**

Refer to the Owner's Manual section 6 for additional information on DCT operation or call Kia Consumer Affairs for additional information.

QR CODES

Automatic Transmission - Sportmatic Shifting with Gear Shift Video



Dual Clutch Transmission (DCT) Driving Experience Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Rotary Dial Shifter* (Plug-In Hybrids only)

Rotate dial for the following:

P: Park - Press to place in Park. To release the Parking Brake, rotate dial to R, D or N

 
R: Reverse

N: Neutral

D: Drive

REMINDER: The vehicle is equipped with a shift-by-wire system and a shift-lock system that prevents you from shifting gears without depressing the brake pedal.

Refer to section 6 in the Owner's Manual for more information.

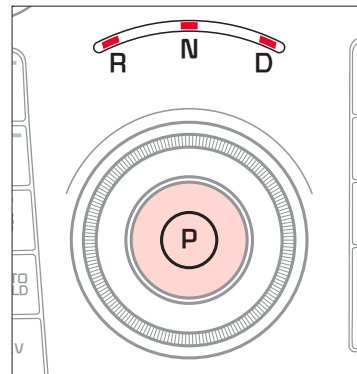

(Located on center console below Power button)

Paddle Shifters*

 
Plug-In Hybrids (Rotary Dial Shifter) - When the Drive Mode is in Sport mode, use the paddle shifters to shift gears. The gear will be displayed on the instrument cluster.

Hybrids (Shift Lever) - Move the shift lever to (D) Drive position, and then to the left gate (+/-) (Manual Mode / Sportmatic Shifting).

- Pull the left paddle shifter (-) to shift down one gear
- Pull the right paddle shifter (+) to shift up one gear

The paddle shifters do not operate when:

- Both paddle shifters are pulled at the same time
- The vehicle speed is below 2 mph
- The accelerator pedal is slowly pressed for more than 6 seconds
- The drive mode is switched from Sport to ECO

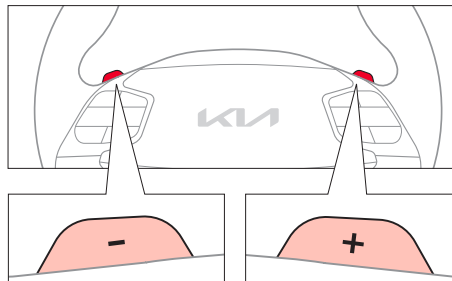

Refer to section 6 in the Owner's Manual for more information.

QR CODE

Rotary Dial Shifter
Video



Plug-In Hybrid Paddle
Switches / Paddle Shifters
Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed, and the driver's seat belt must be fastened.

The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - When vehicle is in Park and at a standstill, and AUTO HOLD button **A** is pressed On, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.


Off (not illuminated) - The indicator will turn Off when the AUTO HOLD button **A** is manually pressed Off or when the EPB is manually turned On.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive, Reverse or Neutral
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

 Image is for illustrative purposes only and may not reflect actual feature or operation.

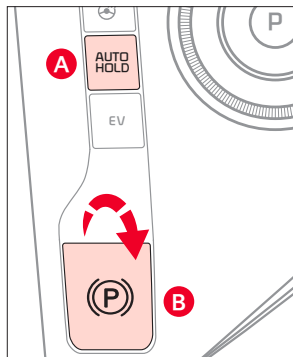

(Located on Center Panel)

Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **B**. Ensure that the indicator light **(P) BRAKE** is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

To release EPB manually, depress the brake pedal, then press the EPB switch **B** down, with the ignition switch in the ON position. Ensure that the indicator light **(P) BRAKE** is OFF.

QR CODE

Electronic Parking Brake (EPB) / Auto Hold Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Refer to section 5 in the Owner's Manual for more information.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Seat Warmers^{*†13} / Ventilated Seats^{*}

A Seat Warmers

- Press the button once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

 
B Ventilated Seats

- Press the button once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System is OFF by default

REMINDER: Use extreme caution when using the seat warmers to avoid burns.

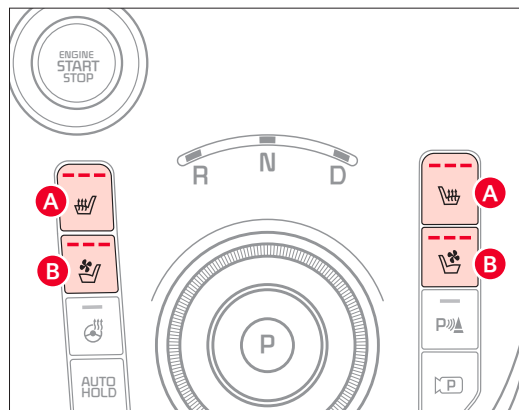

QR CODE

Seat Warmers/Ventilated Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to section 5 in the Owner's Manual for more information.

Driver Position Memory System^{*†1}

To store a seating position into memory, first place the shifter into P (Park) while the ignition switch is ON. Then:

1. Adjust the driver's seat
2. Press one of the memory buttons **A** within 5 seconds. The system will beep twice when memory has been stored
3. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen

Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in a loss of control of the vehicle.



QR CODES

Power Adjustable Driver's Seat with Memory Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Front Seat Headrest Adjustment^{†1}

- **To raise headrest:** Pull headrest up.
- **To lower headrest:** Press lock **B**, then press the headrest down.

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident.

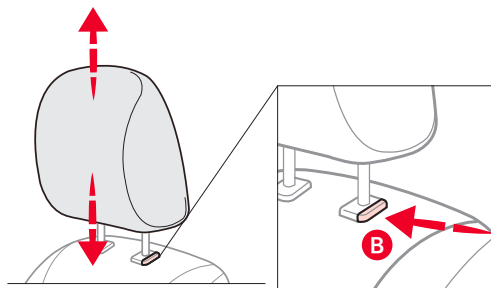

Rear Occupant Alert (ROA) with Door Monitoring

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to "Check rear seats"  and a chime will sound.


The factory default is set to OFF. To turn the system ON or OFF, go to User Settings in the Instrument cluster or Vehicle Settings*, on the infotainment system select Convenience, then Rear Occupant Alert and check/uncheck the box.

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.

Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle interior when exiting the vehicle.

See section 5 in the Owner's Manual for more information.

 Image is for illustrative purposes only and may not reflect actual feature or operation.

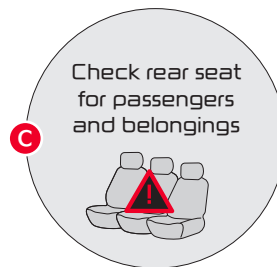

(Message on Cluster Display)

QR CODES

 
 
Rear Occupant Alert (ROA) with Door Monitoring Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Power Adjustable Driver's Seat^{*†11}

Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward or Lumbar forward/backward.

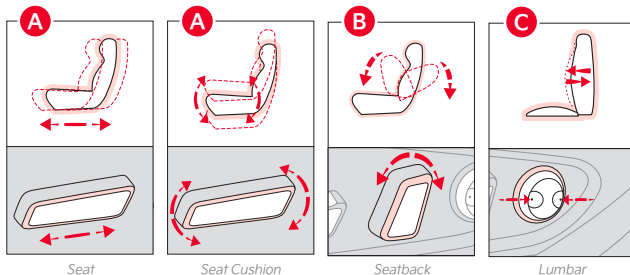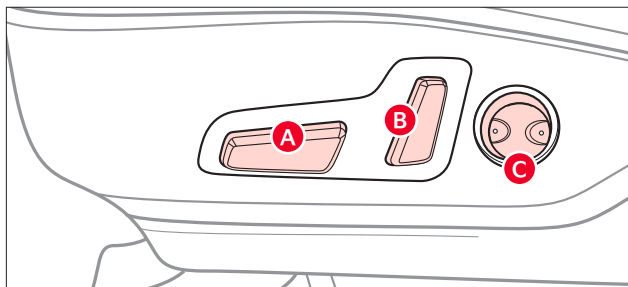

REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

6-Way Manual Adjustable Driver's Seat^{*†11}

 
Pull lever **D** to slide Seat forward/backward.

Pull/press lever **E** up/down one or more times to adjust Seat height*.

Pull lever **F** to adjust Seatback recline.

QUICK TIP

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

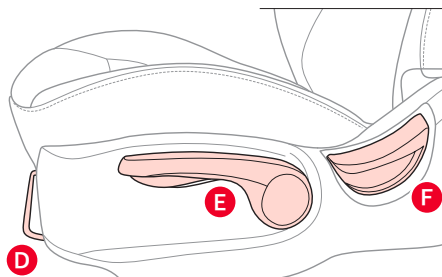

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 4 in the Owner's Manual for more information.

QR CODES

Manual Adjustable Driver's Seat Video



Power Adjustable Driver's Seat with Memory Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Folding Rear Seats

To Fold:

1. Ensure the belt strap is out of way of the Seatback folding **A**.
Insert the metal seat belt tab into the holder **B**
2. Adjust the Front Seatback to the upright position and lower the rear headrest to the lowest position
3. Pull on the Rear Seatback lock release lever **C**, then fold the seat toward the front

To Unfold:

1. Pull the lock release lever **C** and pull and lift the Seatback backward until it clicks firmly in place
2. Return the rear seat belt to the proper position

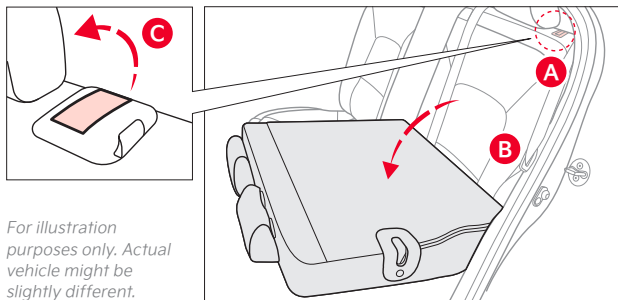

For illustration purposes only. Actual vehicle might be slightly different.

QUICK TIPS

- It may be necessary to adjust the front seatbacks to fully lower rear seats
- Ensure the seat is locked by pressing down on Seatback and ensuring red line is NOT visible on bottom of Folder Lever

REMINDERS:

 
- Before unfolding Seatback, ensure the metal seat belt tab is placed into the holder
- Always make sure the seatback is locked in place when unfolded

Refer to section 4 in the Owner's Manual for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

Remote Keyless Entry (Folding Key)*

- D** Press the release button to unfold the key
- E** Press to lock All doors; Press twice within two seconds to sound the horn
- F** Press to unlock Driver's Door; Press twice in 4 seconds to unlock All Doors and Liftgate
- G** Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate
- H** Press and hold more than a half second for Panic Alarm. To turn off Alarm, press any button

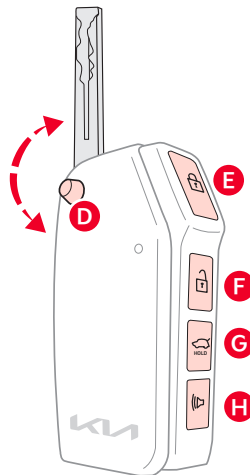

QR CODE

Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Remote button configuration may vary depending on vehicle options. To turn OFF Alarm, press any button.

Refer to section 5 in the Owner's Manual for more information.

Digital Key 2 Touch*

Digital Key 2 Touch, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Touch Setup:

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App and activate Kia Connect in your vehicle's Infotainment System (see page 44)
3. Register your smartphone by going to the Vehicle Settings* on the Infotainment System:
 - Press SETUP, VEHICLE, DIGITAL KEY **C**, SMARTPHONE KEY and then MY SMARTPHONE KEY
4. On your smartphone, press CONTINUE, then CONTINUE again, which will open the Wallet or Pass app. Follow the prompts to complete the registration/pairing of your smartphone
5. Place your smartphone in the authentication pad (wireless charging pad) to complete registration. Click **Save** on the Infotainment System screen and a message will appear showing the process is in place
6. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the **Digital Key** in your iPhone® Wallet or Samsung™ Pass
7. When in the Wallet or Pass app, click on the **Digital Key** **A** and select the menu icon to adjust other settings or use other features

Using your Digital Key 2 Touch:

1. To lock or unlock your vehicle with Digital Key, touch phone on door handle (sensor) for more than two seconds. If two-press unlock is set up, when unlocking, touch phone on door handle (sensor) briefly, then pull away and then touch door handle again within four seconds
2. To start your vehicle with Digital Key 2 Touch, place registered smart phone on the authentication pad **B** (wireless charging pad; see next page)

Sharing your Digital Key 2 Touch:

1. Open the Wallet or Pass app, click on the Kia Digital Key and select the menu icon to enter settings
2. Under People, click on **Invite** and follow the prompts to share your Digital Key with one of your contacts - the shared device must be the same smartphone operating system - Apple iPhone/iWatch or Samsung phone/smartwatch

Revoking shared Digital Key access:

 
1. Go to the Vehicle Settings* on the Infotainment System. Press SETUP, VEHICLE, DIGITAL KEY, SMARTPHONE KEY and MY SMARTPHONE KEY. Then delete the Digital Key
2. You can also delete a key using the Kia Access App on your smartphone. Open the Wallet or Pass app, click on the **Kia Digital Key** and select the menu icon to enter settings. Under People, click on the contact to revoke. Then click on **Revoke Access**

QR CODE



Digital Key 2 Touch Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

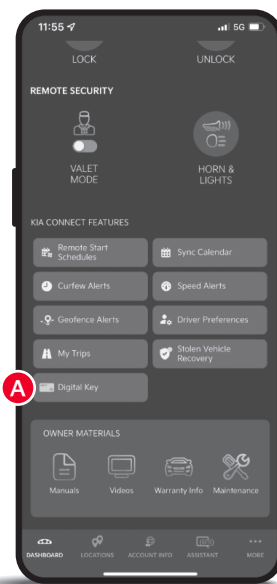


Digital Key 2 Touch* (continued)

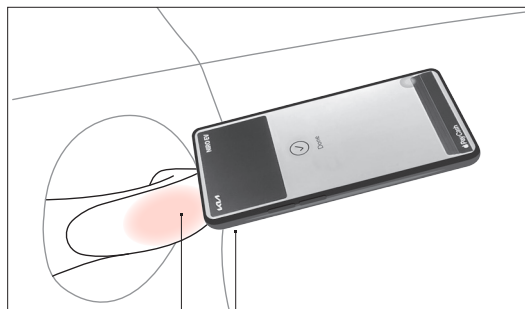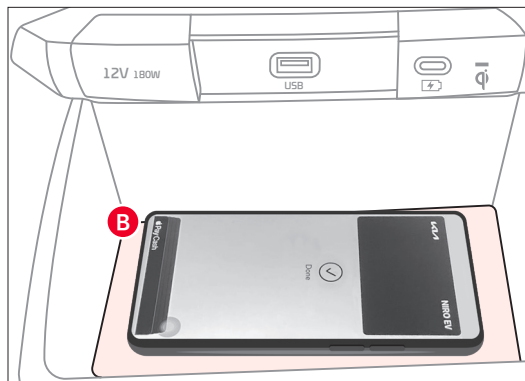  

Door handle
authentication pad

NFC antenna (backside of smartphone)
Antenna position differs depending
on models

 Refer to section 5 in the Owner's Manual for more information.

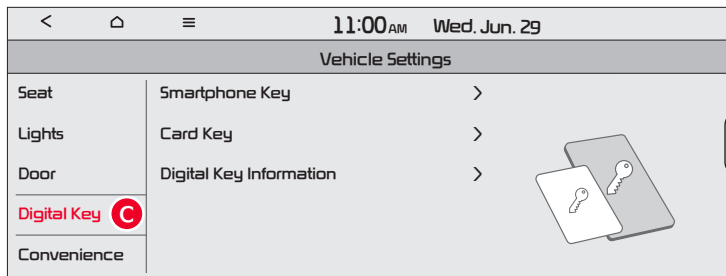

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact, or click on the contact when in the settings page to change access
- When sharing the Digital Key, the receiver of the share invitation must have the same type of smartphone device - Apple iPhone or Samsung
- If the smart phone digital key does not operate, move the smart phone more than 4 inches (10 cm) from the door handle authentication pad and try it again

REMINDERS:

- Digital Key 2 Touch is currently only compatible with Apple iPhone & iWatch and Samsung phone and smartwatch. Future expansion to other Google phones
- Your iPhone Wallet or Samsung Pass app content may vary as the apps are updated. The actual steps for Digital Key 2 Touch setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)

• Currently compatible devices:

- For **Apple iPhone** (Ensure the device has the latest version of iOS):
 - iPhone XS or later.
 - iPhone 11 Pro or later (for passive entry or remote features on compatible cars)
- For **Apple Watch** (Ensure the device has the latest version of watchOS):
 - Apple Watch Series 5 or later
 - Apple Watch Series 6 or later (for passive entry or remote features on compatible cars)
- For **Samsung Phones**: Ensure the device has the latest version of Android OS and latest application version of Samsung Pass)
 - Galaxy S20 or later
 - Galaxy Note2 5G or later
 - Galaxy Z Flip 5G (not yet released) or later
 - Galaxy Fold 2 or later

Smart Key / Remote Start*†6

Smart Key Fob:

- A** Press to lock All Doors; Press twice within 2 seconds to sound the horn
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold for more than 1 second to unlock Liftgate. Then lift by the handle to manually open Liftgate

REMINDER: The Liftgate unlocks when the Smart Key fob is within close proximity of the vehicle's Liftgate.

- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key

 
 
Driver's Door Lock/Unlock button **F**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

Mechanical Key **G**: Use to unlock/lock Driver's Door:

- Pull out door handle
- Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **I**
- Insert Mechanical Key **J** and turn right to Unlock Driver's Door
- Turn twice within 4 seconds to Unlock All Doors
- Insert Mechanical Key and turn left to Lock All Doors
- Return keyhole cover to its original position

Remote Start* **H:** Lock the doors by pressing the door lock button **A** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **H** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver does not enter vehicle within ten minutes of starting the vehicle, the engine will automatically turn off.

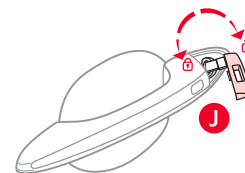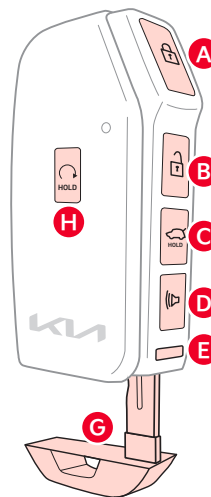

QR CODES

Smart Key with Remote Start Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

REMINDEES:

- Remote button configuration may vary depending on vehicle options
- When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound

 
Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map Lamp/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/ Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

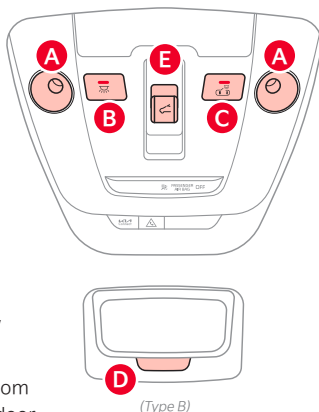

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunroof Operation*

The sunroof glass and sunshade operation is controlled by a multidirectional switch **E**, and the ignition needs to be in the ON position to operate the sunroof glass and sunshade.

To slide the sunroof glass and sunshade:

- Auto Open:** Slide switch **E** backward to the farthest position and release
- Auto Close (Sunroof only):** Slide the switch **E** forward to the farthest position and release

Tilt the Sunroof:

- Tilt open:** Press switch **E** upward
- Tilt close:** Press switch **E** forward

QUICK TIPS

- To stop the Sunroof at any position, push or pull the Sunroof control lever in any direction.
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- Sunshade needs to remain OPEN while Sunroof is open
- When closing, be mindful of any objects or persons
- If the sunroof is not fully closed, a warning will sound and display on the instrument cluster when the following occur:
 - The vehicle is powered off
 - The Smart Key is removed from the vehicle
 - The driver's door is opened

Do not adjust the Sunroof or Sunshade while driving. This could result in loss of control of the vehicle.

QR CODE

Sunroof Video



 
*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Refer to section 4 in the Owner's Manual for more information.

Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, pull the secondary Latch **B** inside of the Hood's center and lift the Hood

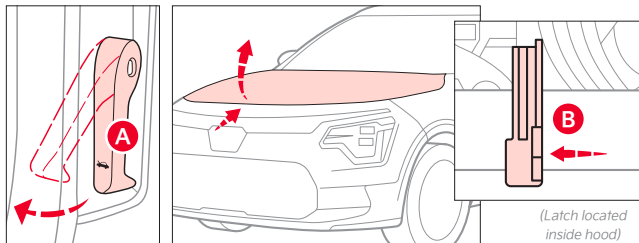

(Located on Driver side kick panel)

(Latch located inside hood)

Closing the Hood: Lower the Hood about halfway and then press down to securely lock in place.

 
Refer to section 5 in the Owner's Manual for more information.

Sunvisor^{†16}

Use the Sunvisor to shield direct light through the front or side windows. Move the Sunvisor out and adjust as needed.

REMINDERS:


- Sunvisor may not shield all direct light
- Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of your seating position when adjusting or swinging Sunvisor around from the front or side windows

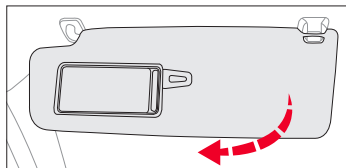

Refer to section 5 in the Owner's Manual for more information.

Fuel Cap / Malfunction Indicator (Check Engine Light)

 Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

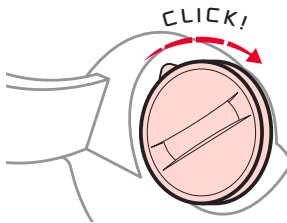


Refer to section 8 in the Owner's Manual for more information.

REMINDERS:

- The Fuel Filler Door Release button is located on the left side of the Steering Wheel on the lower button panel
- It is normal to hear one click when tightening and for the Fuel Cap to click back when released

Fuel Filler Lid

 1. Stop the engine
2. Press the Fuel Filler Lid button **C** to open the Fuel Filler Lid. The LCD may display this message: Wait until fuel door opens (Plug-In Hybrid Only). Once the Fuel Filler Lid is open, the LCD may display this message: Fuel door open.
3. Pull open the Fuel Filler Lid
4. Remove cap by turning counterclockwise



(Buttons located on Driver's Panel to the left of the Steering Wheel)

QUICK TIP

There may be a delay in Fuel Filler Lid opening for about 20 seconds due to depressurization.

Refer to section 8 in the Owner's Manual for more information.

QR CODES

Kia Fuel Cap Video



Fuel Filler Lid Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Power Liftgate*†19

Opening from Inside the Vehicle:

Press and hold the Power Liftgate Open/Close button **A** to automatically open/close the Liftgate.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **B** until the Liftgate begins to open. Press and hold again to automatically close.

REMINDER: Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Opening from Outside the Vehicle:

To open the Power Liftgate automatically, press the Rear Hatch Release button **C** on the exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **D**.

Power Liftgate Opening Height Adjustment

 
The height setting of a fully opened liftgate (tailgate) can be adjusted by the following steps:

1. Position the liftgate manually to the preferred height
2. Press the Power Liftgate Close button **D** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.

REMINDER: When closing, be mindful of any objects or persons.


See section 5 in the Owner's Manual for more information.



(Button located on Driver's Panel)



 Remote button configuration may vary depending on vehicle options.

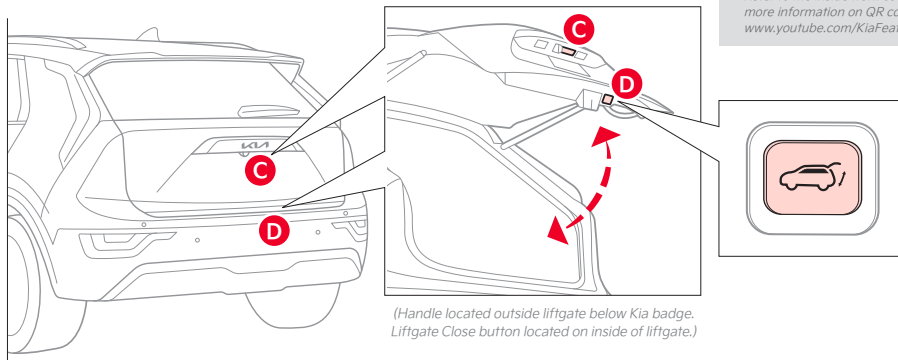

(Handle located outside liftgate below Kia badge. Liftgate Close button located on inside of liftgate.)

QR CODES

Power Liftgate, Key Fob & Opening Height/Speed Adjustment Video



Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Liftgate Release Button*†19

Button is located on the bottom of the Liftgate lid. With doors unlocked, press the Liftgate Release button **A** and pull the Liftgate up by the handle to open.

QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The Liftgate unlocks automatically and then can be opened manually when the Smart Key* is within close proximity to the vehicle's hatch

Refer to section 5 in the Owner's Manual for more information.

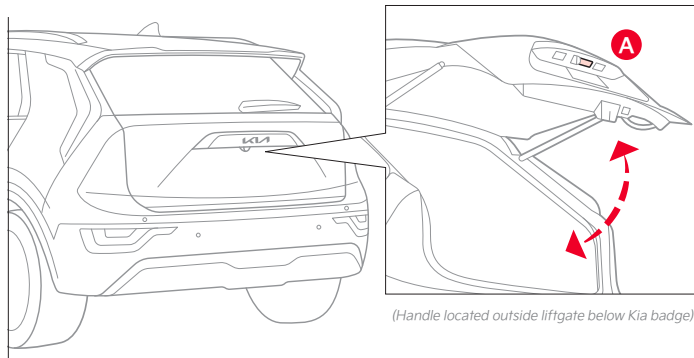

QR CODES

Liftgate Button and Operation Video



Manual Liftgate & Key Fob Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Hybrid Battery Cooling Duct (Hybrids only)

The Hybrid Battery Cooling Duct, located under the center of the rear seat, is used to cool down the hybrid battery. For safety reasons, this vent should never be blocked. Doing so may cause the battery to overheat.

QUICK TIP

Clean the air intake for the hybrid battery regularly with a dry cloth.

REMINDER: Never clean the battery vent with a WET cloth or spill liquid over the air intake. This could cause an electric shock, which could cause serious damage, injury or death.

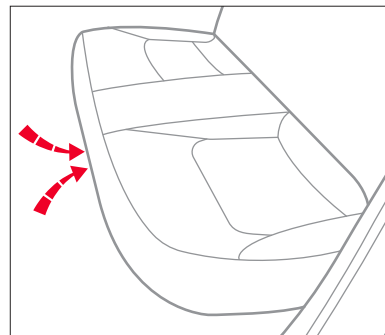


Child-Protector Rear Door Locks (Manual)

Locate these locks on the rear edge of the rear passenger doors. Move the Child-Protector Rear Door Lock, with the mechanical ignition key, to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Lock is located on rear passenger's door jamb.

 Refer to section 5 in the Owner's Manual for more information.

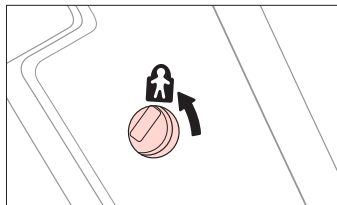


Tire Mobility Kit

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.

A Sealant Bottle

 B Compressor

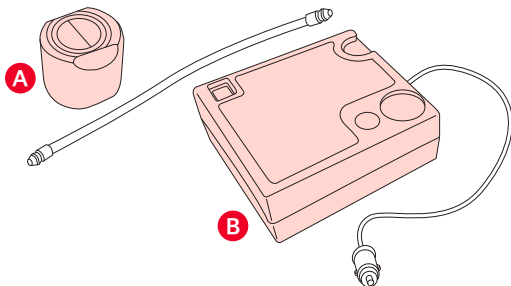

QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

REMINDERS:

- The above images are for illustration purposes only and may not reflect actual operation
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for a maximum distance of up to 120 miles

Refer to section 7 in the Owner's Manual for more information.

QR CODES

Latch Anchors for the Child Restraint System Video



Tire Mobility Kit Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Occupant Detection System (ODS)^{†9} / Passenger Airbag Off Indicator ^{†9,12}

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off passenger airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" light will illuminate.

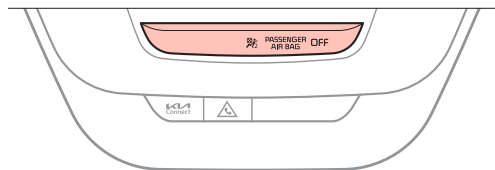

REMINDERS:

 
- Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat or move to another seat in the vehicle
- For more information on the Occupant Detection System/ Passenger Airbag Off Indicator, please refer to the Owner's Manual

Refer to section 4 in the Owner's Manual for more information.

Seat Belts^{†12}

To properly fasten your safety belts:


- Insert the belt tongue plate **A** into the buckle **B** until it clicks
- Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

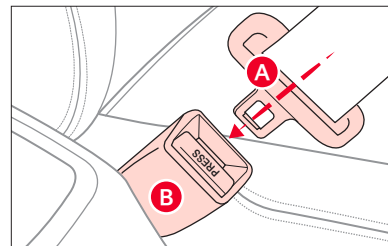

Seat belt retractor locks:

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

 During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

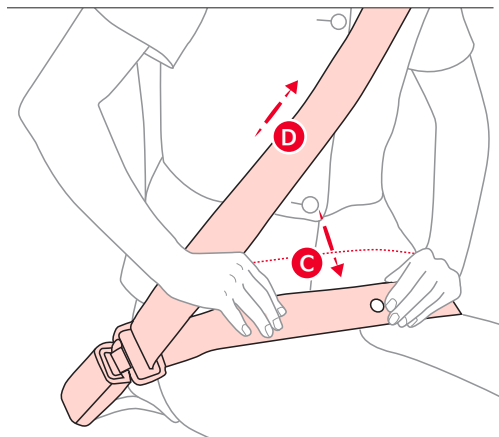

QUICK TIP

The Seat Belt warning chime operates for driver's seat only.

REMINDER: For maximum protection, always wear your Seat Belt.

Refer to section 4 in the Owner's Manual for more information.

LEGAL DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

- 1. Kia Connect:** Purchase/lease of certain 2022 and newer Kia vehicles with Kia Connect includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- 2. Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
- 3. Driver Assistance Features - Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Blind-Spot Collision Warning (BCW), Blind-Spot Collision-Avoidance Assist (BCA), Add Intelligent Speed Limit Assist (ISLA), Safe Exit Warning (SEW), Rear Cross-traffic Collision-Avoidance Assist (RCCA), Leading Vehicle Departure Alert (LVDA), Cruise Control (CC), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control (NSCC), Lane Following Assist (LFA), Highway Driving Assist (HDA), Rear View Monitor (RVM), Rear Occupant Alert (ROA) with Ultrasonic and Forward/Reverse Parking Distance Warning (PDW):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- 4. Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- 5. Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-Start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- 6. Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
- 7. Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- 8. Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- 9. Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
- 10. Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
- 11. Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- 12. Seat belts:** For maximum protection, always wear your seatbelt.
- 13. Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- 14. SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2021 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
- 15. Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- 16. Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
- 17. Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
- 18. Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
- 19. Power Liftgate / Smart Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for improved ventilation.
- 20. The myQ logo** is a registered trademark of The Chamberlain Group, Inc.



NIRO HYBRID / PLUG-IN HYBRID NORMAL MAINTENANCE SCHEDULE

(up to 64,000 miles)^A

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Add fuel additive ^C	P	P	P	P	P	P	P	P
Rotate tires	P	P	P	P	P	P	P	P
Engine oil and filter (Full Synthetic Oil)	R	R	R	R	R	R	R	R
Climate control air filter	I	R	I	R	I	R	I	R
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner refrigerant / compressor	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Air cleaner filter (engine)	I	I	R	I	I	R	I	I
Hybrid Starter & Generator (HSG) belt ^D	I	I	I	I	I	I	I	R
Brake fluid	I	I	I	I	I	R	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Engine clutch actuator hose and line	I	I	I	I	I	I	I	I
Battery Condition (Plug-In Hybrid)	I	I	I	I	I	I	I	
Cooling System	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Fuel tank air filter ^E		I		I		I		I
Fuel tank and fuel cap		I		I		I		I
Fuel lines, fuel hoses and connections		I		I		I		I
Engine clutch actuator fluid			R			R		

P=Perform R=Replace I=Inspect^B

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect account by logging into Kia Connect App or your account on <https://owners.kia.com> (See page 44 for setup information)

- See the Owner's Manual for complete maintenance schedule.
- And, if necessary, adjust, correct, clean or replace.
- If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- Inspect HSG belt for evidence of cuts, cracks, excessive wear or oil saturation and replace if necessary.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

- Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

‡ If equipped † LEGAL DISCLAIMERS ON BACK INSIDE COVER

QR CODES

Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

© 2022 Kia America, Inc.
All rights reserved.

Consumer - Roadside Assistance¹¹⁰:
1-800-333-4KIA (4542)

Part Number: SG230-PS-004