



QUICK REFERENCE GUIDE

2023 **MAXIMA**

COCKPIT OVERVIEW



COCKPIT OVERVIEW

- 1** Headlight and Turn Signal Switch
- 2** Vehicle Information Display
- 3** Instrument Brightness Control
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio/Vehicle Information Display/Navigation
- 6** Intelligent Cruise Control (ICC)/Bluetooth® and Voice Recognition Switches
- 7** Trunk Lid Release Switch 
- 8** Dynamic Driver Assistance Switch (if so equipped) 
- 9** Heated Steering Wheel Switch (if so equipped) 
- 10** Rear Power Sunshade Switch (if so equipped)
- 11** Tilt/Telescopic Steering Column

INSTRUMENT PANEL



1

2

3

4

6

7

5

INSTRUMENT PANEL

- 1** Hood Release 
- 2** Control Panel Display
- 3** Front Passenger Air Bag Status Light
- 4** Heater and Air Conditioner Controls (automatic)
- 5** Display Commander
- 6** Vehicle Dynamic Control (VDC) OFF Switch 
- 7** SPORT mode button

TABLE OF CONTENTS

GETTING STARTED

NISSAN Intelligent Key® Settings	3
Seat Adjustments	5
Memory Seat (if so equipped)	6
Rear Seat Belt Warning	7
Rear Door Alert	7
Starting/Stopping the Engine	8
Outside Mirror Control Switch	8
HomeLink® Universal Transceiver (if so equipped)	9
Emergency Call (SOS) Button	10
Heater and Air Conditioner (automatic)	10
Heated Steering Wheel (if so equipped)	12
Headlight Control Switch	12
Wiper and Washer Switch	13
Vehicle Information Display	14
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	15
Loose Fuel Cap	16
Fuel-filler Door	16
Trunk Lid Release	16
Moonroof/Rear Sunshade Switch (if so equipped)	17
Front Armrest/Center Console Storage Box	17

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

System Updates	18
How to Use Your Maxima's Touch-screen Display	20
Display Commander	21
Clock Set/Adjustment	21
USB Connection Port Interface	21
Bluetooth® Hands-free Phone System	22
• System Operating Tips	22
FM/AM/SiriusXM® Radio with CD Player	24
Apple CarPlay®	25
Android Auto™	26
Navigation System	27
NissanConnect® Services Powered by SiriusXM®	29
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)	30
Wi-Fi	31
Hands-free Text Messaging Assistant	31
Bluetooth® Streaming Audio	32



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual, and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

TABLE OF CONTENTS

DRIVING FEATURES

Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA)	33
Forward Driving Aid Sensors (if so equipped)	33
Intelligent Cruise Control (ICC)	34
Automatic Emergency Braking (AEB) with Pedestrian Detection System	35
Intelligent Around View® Monitor (if so equipped)	36
Rear Automatic Braking (RAB)	38
Intelligent Forward Collision Warning (I-FCW)	39
Front and Rear Sonar System (if so equipped)	39
Vehicle Dynamic Control (VDC)	40
Traffic Sign Recognition (TSR)	40
Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI) (if so equipped)	41



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual, and at www.NissanUSA.com.



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
 - Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
 - Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SETTINGS

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk lid and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

KEY-LINKED SETTINGS (if so equipped)

- The vehicle information display has added features, allowing the Key-Linked Settings to remember some of the vehicle information display settings.
- The Key-Linked Settings states which Intelligent Key is being recognized **1**, and enabling/disabling of the system's function can be easily accessed through notifications on the vehicle information display.
- The Key-Linked Settings can be turned on or off through the vehicle information display in the "Key-Linked Settings" screen **2**.
- You can set a maximum of four Intelligent Keys to the Key-Linked Settings.
- When the system is enabled, the recognized Intelligent Key is displayed at engine start-up (Engine ON) as well as within the "Key-Linked Settings" screen **2**.
- When the system is active, the vehicle information display setting items are memorized for each key that has been enabled in the Key-Linked Settings.
- If two keys are in the vehicle, the Key-Linked Settings will recognize the key that was used most recently; this usually means the last key to unlock/lock the door from the Intelligent Key.
- If there is a desire to change to another key that is in the vehicle, turn off the engine and initiate communication from the desired key.
 1. Turn the engine to OFF.
 2. Press the **i** button **3** from the desired Intelligent Key.
 3. Start the engine.
 4. The desired key number recognized should appear on the vehicle information display.
- The vehicle information display displays a pop-up notification at Engine ON for the recognition of the system with a shortcut function to the setup menu.
- From the shortcut setup menu, you can select to enable or disable the Key-Linked Settings or select "Later" to keep the factory state.
- When enabled, the Key-Linked Settings will remember the state of the items memorized automatically from the last ignition cycle.



REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL (if so equipped)*

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls, strong radio wave sources near the operating location or other obstructions between the key and the vehicle.
- For the Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **4** to lock all of the doors.
 2. Within 5 seconds, press and hold the Remote Engine Start  button **5** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control system will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and the last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 through 2 to extend the time for an additional 10-minute period. Remote Engine Start can only be activated for a maximum of 20 minutes.
 - After two remote starts, the ignition switch must be cycled before the Remote Engine Start can be used again.
 - To cancel Remote Engine Start, press the remote start  button **5**.
- To start driving, depress the brake pedal and push the ignition switch.

LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, either push the door handle request switch **6** once or press the  button **4** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push the driver's door handle request switch **6** to unlock the driver's door. Push the driver's door handle request switch **6** again within 1 minute to unlock all doors, or
 - Press the  button **3** on the key fob to unlock the driver's side door. Press the  button **3** again within 1 minute to unlock all doors.



PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **7** for longer than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or push the door request switch if the key fob is in range.

GETTING STARTED

AUTO UNLOCK

In the "Vehicle Settings" menu in the vehicle information display, select "Auto Door Unlock". There are three options to choose from for the auto unlock function:

- OFF - Auto Unlock is disabled.
- Ignition OFF - All doors unlock when the ignition is turned off.
- Shift into Park - All doors unlock when the shift lever is moved to the **P (Park)** position.

NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

 
- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, **Key Battery Low** **8** will display in the vehicle information display and the engine will need to be started according to the following procedure:

1. Move the shift lever to the **P (Park)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key. A chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Pre-driving checks and adjustments (section 3)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

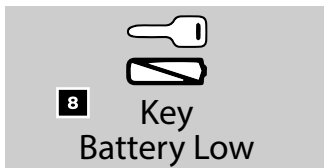


SEAT ADJUSTMENTS

SEAT FABRIC

- If so equipped, your vehicle's seats may be made from a material known as Alcantara®. In the case of most localized stains, using lukewarm water and soap will restore Alcantara® to its factory condition. For more details on proper cleaning, please refer to your Owner's Manual.

POWER SEATS

 - To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.

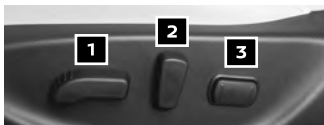

POWER SEAT LIFTER (if so equipped)

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the switch **1** up or down.

POWER LUMBAR SUPPORT (driver's seat)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

 
THIGH SUPPORT (if so equipped for driver's seat)

- Pull up and hold the lever **4** to extend the front portion of the seat to the desired position.



FOLDING DOWN THE REAR SEAT


- The pull straps **5** located in the trunk will release the rear seatbacks to allow them to fold forward.
- To raise the seatback, lift up each seatback and push it to the upright position until it is latched.

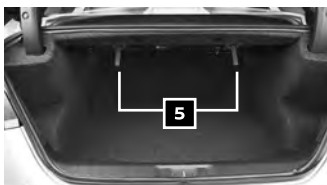

CLIMATE CONTROLLED SEATS (if so equipped)

The climate-controlled seat warms up or cools down the front seat by a built-in heater or ventilates air into the seat. To adjust the temperature of the climate controlled seat:

 - Turn the knobs **6** to the left to cool the seat or to the right to heat the seat.

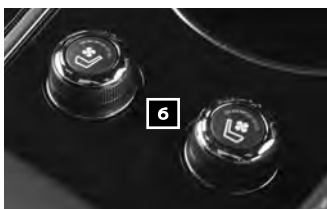

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" and the "Instruments and controls (section 2)" of your Owner's Manual.

MEMORY SEAT (if so equipped)

- Two positions for the driver's seat, automatic steering wheel and outside mirrors can be stored in the memory seat system.
- Follow this procedure to set the memory positions:
 - Place the ignition switch in the ON or ACC position. (The vehicle should be stopped while setting the memory.)
 - Adjust the driver's seat, automatic steering wheel and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch **1**, and within 5 seconds, push the memory switch (1 or 2).
 - The indicator light for the memory switch you select will illuminate for approximately 5 seconds, and a chime will sound when the memory is stored.
 - The driver's seat, automatic steering wheel and outside mirror positions are now set to your preferences.
- These memorized positions can also be linked to your NISSAN Intelligent Key®.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED

REAR SEAT BELT WARNING

- This warning includes display of the seat belts for rear positions only. Rear seat belts that are unfastened will appear red **1**.
- If any rear seat belts are unfastened when the ignition switch is pushed to the ON position, this warning will display for about one minute, or until dismissed.
- When a rear seat belt is changed from fastened to unfastened, this warning will display **1** for about one minute, or until dismissed.
- If the vehicle is driven above 9 MPH (15km/h) during or after the status change, this warning will display **1** and the chime will sound for over one minute. During this time, the warning and chime cannot be dismissed unless the rear seat belt is fastened again.



NOTE: Opening and closing a rear door while stopped will reset this warning, similar to pushing the ignition switch to ON again.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being driven.

REAR DOOR ALERT (ACTIVE)

- When the system is active, and "Horn & Alert" is selected in the vehicle information display, the horn will sound three times and a **Check Rear Seat For All Articles** warning **1** will appear on the display.
- To activate Rear Door Alert in your vehicle information display:
 - Press the ◀▶ buttons on the steering wheel until the "Settings" menu screen appears and press the **OK** button.
 - Using the ▲▼ buttons, select "Vehicle Settings", "Rear Door Alert" and press the **OK** button.
 - Choose from the following options: "OFF", "Horn & Alert" or "Alert Only", and then press the **OK** button.
 - To dismiss the warning, use the ▲▼ buttons on the steering wheel to select "Dismiss Message" **2** and press the **OK** button. If no selection is made, this message will disappear after a period of time.



- To temporarily disable Rear Door Alert for the remainder of the current trip, use the ▲ ▼ buttons on the steering wheel to select "Disable Alert" **3** and press the **OK** button.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position.
- Push the ignition switch to turn the engine off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- The outside mirror remote control will operate only when the ignition switch is in the ACC or ON position.
- To select the right or left side mirror, slide the mirror control switch **1** right or left.
- To adjust the mirror angle, move the control switch up, down, right or left.
- To prevent accidentally moving the mirror, slide the mirror control switch **1** to the center (neutral) position.



REVERSE TILT-DOWN FEATURE (if so equipped)

The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.

1. Apply the brake.
2. Place the ignition switch in the ON position.
3. Move the shift lever to the **R (Reverse)** position.
4. Both outside mirror surfaces will turn downward. (The mirror control switch **1** must be out of the center [neutral] position.)

The outside mirror surfaces will return to their original positions when one of the following conditions occurs:

- The shift lever is moved to any position other than **R (Reverse)**.
- The outside mirror control switch **1** is set to the center (neutral) position.
- The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, gates, home and office lighting, entry door locks and security systems.
- Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink®.
- To program the HomeLink® Universal Transceiver:
 - Press and release the HomeLink® button that you would like to program. The HomeLink® indicator light **1** will flash slowly.
 - Position the hand-held transmitter 1-3 in (2-8 cm) away from the HomeLink® button.
 - While the HomeLink® indicator light **1** is flashing, press and hold the hand-held transmitter button. Continue pressing the hand-held transmitter button until the HomeLink® indicator light **1** changes. You may now release the hand-held transmitter button.
- To verify the programming is complete, press the HomeLink® button and observe the indicator light **1**:
 - If the HomeLink® indicator light **1** remains constant, your device should operate when the HomeLink® button is pressed. At this point, if your device operates, programming is complete.
 - If the HomeLink® indicator light **1** rapidly flashes, firmly press, **hold for 2 seconds** and release the HomeLink® button up to three times to complete the programming process. **Do not press the HomeLink® button rapidly.** At this point if your device operates, programming is complete. If the device does not operate, additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink® button, press and release the "Learn" or "Set" button. (The name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit.) You have approximately 30 seconds to initiate the following step.
 - Firmly press and hold the programmed HomeLink® button for 2 seconds and release the HomeLink® button up to three times. **Do not press the HomeLink® button rapidly.** At this point programming is complete and your device should operate when the HomeLink® button is pressed and released.
- To view a detailed instructional video, go to www.nissanquickguide.com/2023/maxima or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door".

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

EMERGENCY CALL (SOS) BUTTON

- The Emergency call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the **SOS** button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call **1-855-426-6628**.

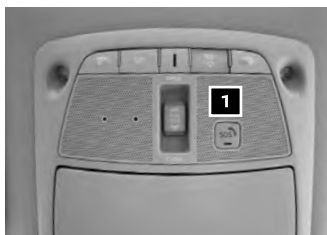

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



HEATER AND AIR CONDITIONER (automatic)

1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

2 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

3 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

GETTING STARTED

4 FAN SPEED CONTROL BUTTONS

- Press either the  or the  button to decrease or increase fan speed.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot outlets.
-  Air flows mainly from the foot vents and partly from defroster.
-  Air flows from the front defroster and outlets.

6 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

7 FRESH AIR INTAKE BUTTON

- Press the fresh air intake  button **7** to draw outside air into the passenger compartment.

8 AIR RECIRCULATION BUTTON

- Press the air recirculation control  button **8** to recirculate interior air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .

9 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster  button to turn on the system. This feature removes humidity from the air.
- Turn the temperature control dial **1** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.

10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- To defog/defrost the rear window glass and outside mirrors, push the rear window defroster  switch **10**. Push the switch again to turn the defroster off. This function automatically turns off after approximately 15 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEATED STEERING WHEEL (if so equipped)

- Push the  switch **1** to turn on the heated steering wheel.
- The heated steering wheel automatically turns off and on to maintain a temperature above 68°F (20°C).
- Push the  switch **1** to turn the heated steering off.
- If the temperature of the steering wheel is above 122°F (50°C), the system will not heat the steering wheel.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Rotate the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Rotate the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF** position (if so equipped),  position **1** or  position **2**.

HEADLIGHT BEAM SELECT

- With the headlights ON (in the  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



HIGH BEAM ASSIST

 
- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light  in the meter will illuminate while the headlights are turned on.

GETTING STARTED

- When the vehicle speed lowers to less than approximately 25 mph (40 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **2** or select the low beam position by placing the lever in the neutral position.

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position **6** to turn on the fog lights.
- Turn the switch (inside collar) to the **OFF** position to turn off the fog lights.

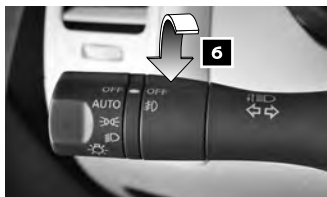

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.
- Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual

WIPER AND WASHER SWITCH

 
- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) - One sweep operation of the front wipers.
- 2** Intermittent (**INT**) or (**AUTO**) - Operates the rain-sensing auto wiper system wipers (if so equipped) intermittently. The intermittent speed can be adjusted by rotating the time control ring **3** to increase or decrease wiper sensitivity. Also, the intermittent operation speed varies in accordance with vehicle speed (if so equipped).

- 4** Low (**LO**) - Front wipers operate at a continuous low speed.

- 5** High (**HI**) - Front wipers operate at a continuous high speed.

- 6** Pull the lever toward you to activate the front washer. The wipers will operate several times.

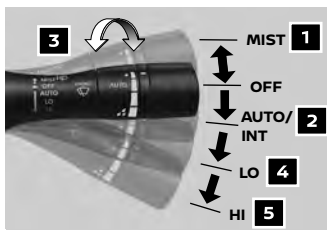

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.



VEHICLE INFORMATION DISPLAY

- When the ◀▶ buttons **1** on the steering wheel are pressed, the following modes will appear on the vehicle information display **2**:

Home – Displays the current speed, the compass and the additional media that is available.

Audio – Displays the current playing media.

Navigation (if so equipped) – Displays the vehicle's current heading.

Drive Computer – Displays Average Fuel Economy, Average Speed, Trip Computer and Time of the Trip. Each can be reset individually.

- To reset the driving and average trip information, use the ▲▼ arrow buttons **3** on the steering wheel to select Reset All.

- Select "YES" and press the OK button to reset information history.

Fuel Economy – Displays Average Fuel Economy. Press and hold the OK button **4** on the steering wheel to reset.

Driving Aids – Displays the Driving Aids that are equipped on your vehicle.

Use the OK button **4** on the steering wheel to turn each system on or off.

Speed Limit Sign (if so equipped) – Provides the driver with information regarding the most recently detected speed limit.

Tire Pressure – Displays the individual tire's pressure while driving.

SPORT – Displays the oil pressure, transmission gear oil temperature, digital speedometer and horsepower percentage.

Warning Review – Displays the current warnings.

Settings – Displays the available settings that can be changed.

- Press the OK button **4** on the steering wheel to choose the selected menu.

- Press the ▲▼ arrow buttons **3** on the steering wheel to cycle through the various setting modes.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

GETTING STARTED



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low – Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **3** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a Nissan dealer for this service.

EASY-FILL ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.

To use the Easy-Fill Tire Alert:

1. Move the shift lever to the **P (Park)** position and apply the parking brake.
2. Place the ignition switch in the ON position. Do not start the engine.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FUEL-FILLER DOOR

- To open the fuel-filler door, push the right side of the fuel-filler door to release.
- The fuel-filler door is located on the driver's side of the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



TRUNK LID RELEASE

Use one of the following methods to open the trunk lid:

- Press the  button **1** on the NISSAN Intelligent Key® for 1 second.
- Push the trunk opener request switch **2** while carrying the Intelligent Key with you (that is, in your pocket or purse).
- From inside the vehicle, push the  trunk opener switch **3**, located on the instrument panel to the left of the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

 


GETTING STARTED

MOONROOF/REAR SUNSHADE SWITCH (if so equipped)

OPENING/CLOSING THE MOONROOF AND SUNSHADE

- To open just the sunshade (moonroof will remain closed), push the switch to the first detent toward the **OPEN** position **1**.
- To fully open the moonroof and sunshade, push the switch toward the **OPEN** position **1** until it reaches the second detent.
- To close just the moonroof (sunshade will remain open), push the switch to the first detent toward the **CLOSE** position **2**.
- To fully close the moonroof and sunshade, push the switch toward the **CLOSE** position **2** until it reaches the second detent.

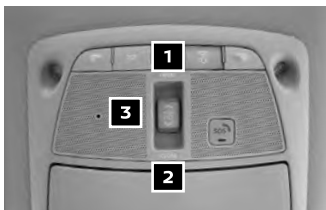

OPENING THE SUNSHADE/TILTING THE MOONROOF

- Push the tilt switch **3** once to open the sunshade and tilt the moonroof.
- Push the tilt switch **3** again to close the moonroof. Push the tilt switch **3** to the second detent toward the **CLOSE** position **2** to close the sunshade.

REAR POWER SUNSHADE (if so equipped)

- The rear sunshade switch **4** is located in the lower instrument panel to the left of the steering wheel.
- To raise the sunshade, push the upper side of the switch.
- To lower the sunshade, push the lower side of the switch.
- The switch does not need to be held down.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

FRONT ARMREST/CENTER CONSOLE STORAGE BOX

- To open the console box, press up on the lever **1** and raise the lid.
- To close, push the lid down until the lock latches.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

- Yes - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- Later - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.
- No (display may vary) - Skips the software update, the pop-up message is hidden and will not be shown again for the current software update.

You can trigger the software update manually in the event that "Later" or "No" was unintentionally pressed.

- To manually update the software to the latest version:

 
1. Press the  **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information"
3. Touch "Software Update"
4. Touch "Start Software Update" and then "Download"

- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.

Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.



- To connect to your Wi-Fi network:

1. Press the  **MENU** button on the control panel.
2. Touch "Connections" and then touch "Wi-Fi"
3. Touch the  icon and then touch "Wi-Fi" to turn it on.
4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

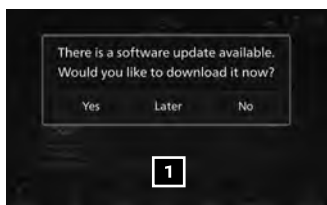

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

  - To manually update your software using Wi-Fi:
 1. Press the  **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information"
 3. Touch "Software Update", "Start Software Update" and then touch "Download"
- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.
- To turn on automatic updates of map software:
 1. Press the  **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information"
 3. Touch "Map Update" and then touch "Map Update Settings"
 4. Select an area to be updated and touch "Start"
- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.
- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.
- To manually update the map software via Wi-Fi:
 1. Connect the vehicle to an available Wi-Fi network
 2. Press the  **MENU** button on the control panel.
 3. Touch "Info" and then touch "System Information"
 4. Touch "Map Update" and then touch "Update via Wi-Fi"
 5. Select an area to be updated and touch "Start"

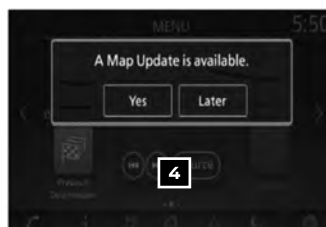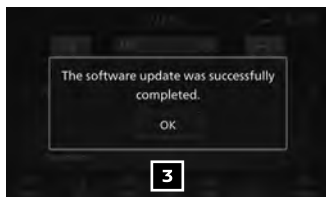

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.



HOW TO USE YOUR MAXIMA'S TOUCH-SCREEN DISPLAY

- 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** Widgets - These items can be interchanged, moved, or deleted from the menu pages.
- 3** Touch either arrow to navigate to the next or previous page of the "MENU" screen.
- 4** These dots indicate the page you are currently on, in white, out of the number of pages available, in gray.
- 5** Shortcuts - Shortcuts, once touched, will bring up the system they correspond to for quick, one-touch convenience for commonly used features.
- Shortcuts and Widgets can be set up through the "Customize Home Menu" screen, which can be accessed by touching the **Settings** key **6** followed by the "Customize Home Menu" key **7**. This will display the "Customize Home Menu" screen **8**, which allows Shortcuts and Widgets to be moved and rearranged.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

DISPLAY COMMANDER

- 1** **MENU** - Press to display the "MENU" screen.
- 2** **BACK** - Press to go back to the previous screen.
- 3** **MAP/VOICE** - Press to display the vehicle's current location on the map. Press and hold to hear the current voice guidance for a programmed route.
- 4** **OK** - Press to enter the selected item. If this button is pressed while a map is displayed, the map menu is shown on the display.
- 5** Center dial/Slide switch - Turn the dial to scroll the highlighted item or to adjust a setting (treble, brightness, etc.). While the map screen is displayed, adjust the map scale by turning the dial. Depending on the screen, sliding the slide switch can select areas on the screen or scroll the pages. While the map screen is displayed, scroll the map screen by sliding the switch.

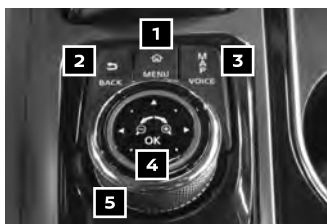

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the **MENU** button on the control panel.
 2. Touch the Settings key on the Launch Bar.
 3. Touch the "Clock" key.
 4. Touch "Select Clock Manually" to manually adjust the time displayed on the clock.
- Touch the key **1** to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

 
USB CONNECTION PORT INTERFACE

- The USB connection ports and AUX input jack **1** (USB Type-C/USB Type-A) are located on the lower part of the instrument panel.
- When a compatible USB memory device, or auxiliary device is plugged into the USB connection ports/AUX input jack, audio contents from the compatible device can play through the in vehicle audio system.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- There are also USB charging ports **2** (USB Type-C/USB Type-A) located in the second row on the back of the center console. These ports will charge compatible devices.

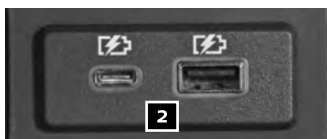

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
 
For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the "Getting started (section 2)" and the "Audio System (section 3)" of your NissanConnect® Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  on the steering wheel, or press the  **BACK** on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **-** or **+** on the steering wheel or turn the **VOLUME** control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.

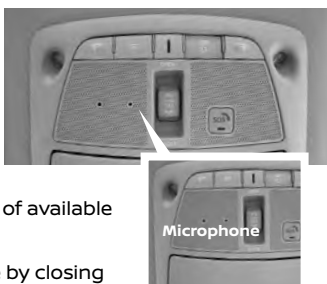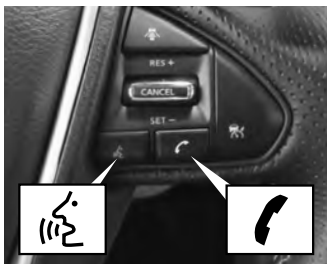


AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

CONNECTING PROCEDURE

 1. Select the  Settings key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

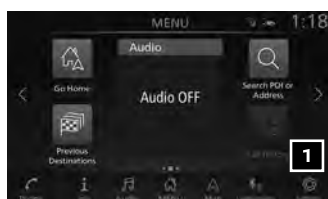

VEHICLE PHONEBOOK

 
To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



MAKING A CALL

1. Press the  button on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the options to make a call.

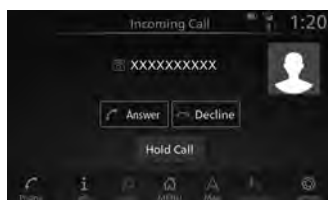

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.

SWITCH TO HANDSET

- Start the call using your Bluetooth® hands-free phone and touch the "Use Handset" key on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" and the "Voice recognition (section 7)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.



FM/AM/SiriusXM® RADIO WITH CD PLAYER

Touch the Audio key on the Launch Bar to display the current audio source, and then touch the "Source" key to access the source selection screen.

1 (ON-OFF) BUTTON/VOLUME CONTROL KNOB

- Press the (ON-OFF) button to turn the audio system on or off.
- Turn the **VOLUME** control knob right or left to increase or decrease the volume.

2 ENTER SOUND BUTTON/TUNE-SCROLL KNOB

- Press the **ENTER SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the Settings key on the Launch Bar and then touch the "Sound" key to view all audio settings.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 AUDIO (SOURCE) BUTTON

- Pressing this button will give access to the "AM", "FM", "SiriusXM", "CD", "USB1", "USB2", "Bluetooth Audio", "AUX", "Apple CarPlay", or "Android Auto" audio source keys.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key, "FM" key, or "SiriusXM" key, then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Audio system (section 3)"** of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone® to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay®.
 - After the iPhone® is connected, the Apple CarPlay® home screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- There are two ways to start a Siri® session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay® screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay® screen to end the Siri® session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available during driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the  **MENU** button on the control panel.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  “Apple CarPlay” key **2**, or
 - Touch the  Info key **3** on the Launch Bar, touch the “Smartphone Connection” key, and then select the “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.

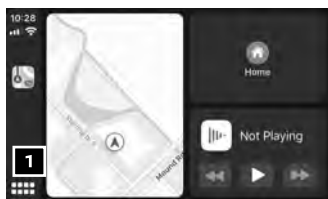

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the exit key.
- To return to the Android Auto home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the “Smartphone Connection” key, and then touch the “Android Auto” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS



NAVIGATION SYSTEM

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle is not in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your NissanConnect® Owner's Manual.

- 1** Touch-screen
- 2** Map Menu - Touch to access different navigation options such as "Save Location", "Points of Interest", "Map Icons" and "Cancel Route".
- 3** "Add Home" - Use to set home location. After location is set, this icon will display "Go Home".
- 4** "POI" - Searches for a Points of Interest to set as a destination.
- 5** "Destination" - Displays the destination menu.
- 6** **MAP** - Press to display the map.
- 7** Settings - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

■ Touch-screen Display

- Touch the "Destination" key on the Launch Bar and touch "Enter POI / Street Address". Enter a nearby location name or the street address of the desired location.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Touch the "Points of Interest" key and then select one of the displayed options for choosing your destination.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". Next, say "Nearby" or "POI by category". The system will give you the options available for setting a POI.

 
DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
 - Transfer the destination from the smartphone to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch screen display.
 - Touch "Save" to register the destination in the address book.
 - Touch "Ignore" to cancel the transfer of the destination.
5. Touch "Start" to start route guidance.

- With a secure Wi-Fi connection, features such as Premium Traffic can give detailed traffic information. To access Premium Traffic:

1. Touch  Settings on the launch bar, and then touch "Navigation".
2. Touch "Traffic Info Settings" and then touch "Use Premium Traffic" to turn the system ON and OFF.

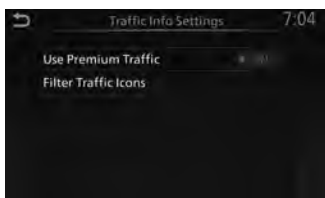

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

NISSANCONNECT® SERVICES POWERED by SiriusXM®

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it..

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the NissanConnect® Services app on your compatible iPhone® or Android smartphone and log into it using your Nissan Owner Portal ID and password.
- For additional information about your NissanConnect® features and services:
 - Consult your vehicle's NissanConnect® Owner's Manual at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>.
 - Visit <https://www.nissanusa.com/connect/support-faq> for frequently asked questions.
 - Visit www.NissanUSA.com/connect, scan the QR code on the back of this book, or call **1-855-426-6628**.
- Some of the available NissanConnect® Services may include:
 - Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident severe enough to deploy the air bags.
 - Connection to Roadside Assistance - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance in non-emergency situations. Connection to Roadside Assistance can be access by touching the  headset icon **1** on the map screen.
 - Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
 - Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect® Services companion app or website or contact a NissanConnect® Services Response Specialist.
 - Remote Engine Start - Start your engine remotely using the NissanConnect® Services companion app or website.
 - Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
 - Maintenance Alert - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
 - Connected Search - Select "Connected Search" from the Destination menu on the vehicle's Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle's location.



 
- Valet Alert - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect® Services companion app or website.
- Curfew Alert - Specify curfew limits via the NissanConnect® Services companion app or website and will be notified via a selected method if curfew is violated.
- Journey Planner - A feature that allows you to send a route with a destination and up to five way points directly to the vehicle.
- Boundary Alert - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect® Services web portal or companion app.

To access these features in your vehicle:

- Press the  **MENU** button on the control panel.
- Touch the **i** Info key **2**.
- Touch the "NissanConnect Services" key **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

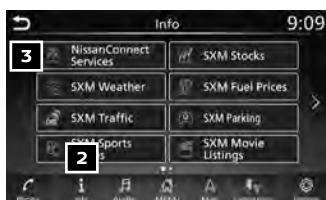

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- Touch the **i** Info key to access SiriusXM® Travel Link and SiriusXM® Traffic.
- SiriusXM® Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM® Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch the  Settings key on the Launch Bar.
 2. Touch the "Connections" key.
 3. Touch the "Wi-Fi" tab **1**.
 4. Touch the name of the device you wish to connect.
 5. Enter a password and touch the "OK" key.
The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.
- To change the Wi-Fi settings, touch the  Settings key **2** and then the preferred item.



TO DELETE A WI-FI DEVICE:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" tab **1**.
4. Touch the  key by the name of the device you wish to delete.
5. Touch the "Delete" key and then touch "Yes" key when a message appears.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.

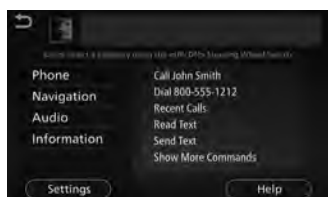

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

 
* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-Free Phone (section 4)" of your NissanConnect® Owner's Manual.

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
- If the device needs to be connected, refer to the connecting procedure within this guide.
- To use Bluetooth® streaming audio:
 - Touch the  Audio key **1**, then touch the "BT Audio" key.

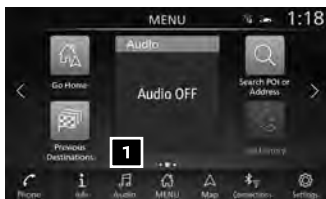

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system (section 3)" and the "Hands-Free Phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- If the turn signal is turned on with a vehicle in the detection zone, there will be an audible alert and the indicator light will flash.
- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The BSW with RCTA system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Intelligent Cruise Control (ICC)
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.



Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual

- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.



 
 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and Driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set vehicle-to-vehicle mode, quickly push and release the ICC  switch **1** on the steering wheel. The ICC indicators will illuminate.
- Accelerate to the desired speed.
- Push the **SET-** switch **2** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Push the distance  switch **3** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection indicator will illuminate **4**.
- When a vehicle is not detected ahead of you in the lane, the vehicle ahead detection indicator will turn off **5**.
- To reset at a faster cruising speed, push and hold the **RES+** switch **6** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **7** on the steering wheel or tap the brake pedal. The set vehicle speed indicator will turn off **5**.
- To turn off Intelligent Cruise Control, push the ICC  switch **1** on the steering wheel. The ICC indicators in the instrument panel will turn off.

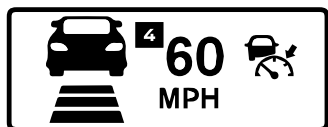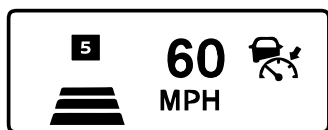

DRIVING FEATURES

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push and hold the ICC  switch **1** for longer than approximately 3 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red and white) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.
- The AEB with Pedestrian Detection system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)


- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.

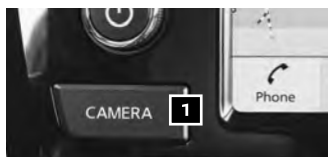

 - When the shift lever is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

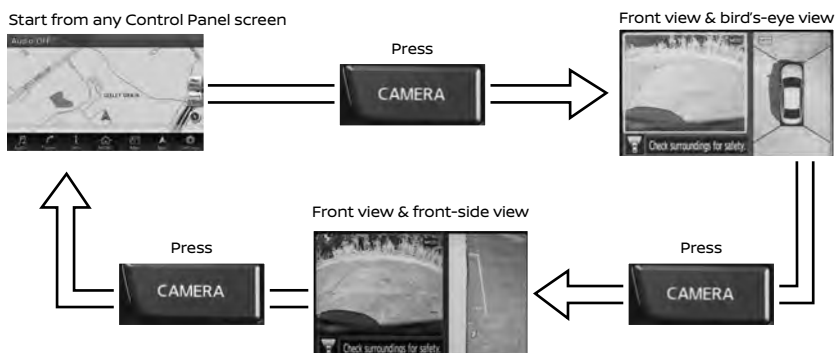

 - When the shift lever is in the **R (Reverse)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

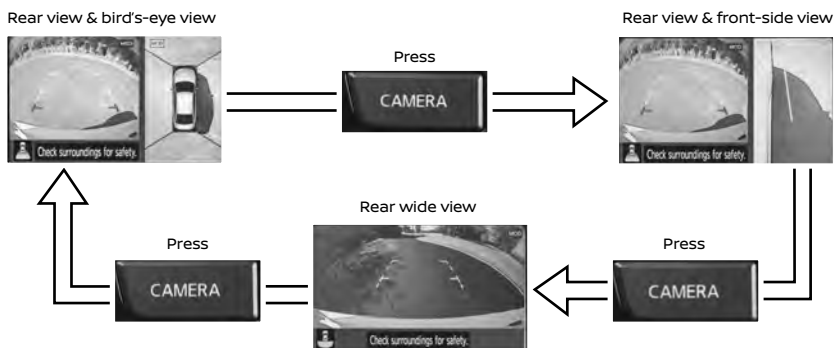


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.

- Red 1.5 ft (0.5 m)
- Yellow 3 ft (1 m)
- Green 7 ft (2 m)
- Green 10 ft (3 m) (if so equipped)

DRIVING FEATURES

 - For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.

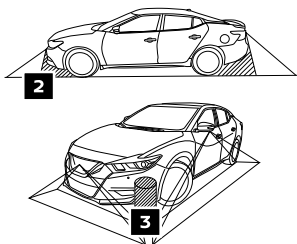

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off.
- The MOD system will not operate if the trunk is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning light **1** will flash in the meter.
- A red frame will appear in the center display **2** (for vehicles equipped with the Around View® Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.
- The RAB system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.



When the RAB system is turned off, the RAB system warning light **1** illuminates.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator light **1** and an audible warning tone will be heard.
- The I-FCW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display

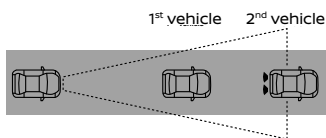

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FRONT AND REAR SONAR SYSTEM (if so equipped)

- The system informs with a visual and audible alert of front obstacles when the shift lever is in the **D (Drive)** position and both front and rear obstacles when the shift lever is in the **R (Reverse)** position.
- The sonar (parking sensor) system sounds a tone to inform the driver of obstacles near the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- VDC should remain on when driving, except when freeing the vehicle from mud or snow.
- When the VDC OFF switch **1** is pushed, an indicator light will illuminate. If the system is turned off, it will turn back on when the switch is pushed a second time. Also, if the system is turned off and the vehicle is restarted, the system will automatically turn on again.

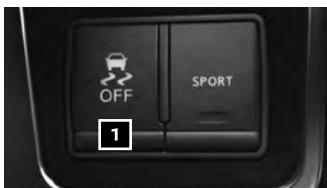

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

TRAFFIC SIGN RECOGNITION (TSR)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror and displays the detected signs in the vehicle information display **1**.

- The Traffic Sign Recognition system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



DRIVING FEATURES

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will alert the driver through the steering wheel (haptic feedback) and the LDW indicator **1** on the instrument panel will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW and I-LI system can be turned on and off through the "Driving Aids" screen in the vehicle information display. The I-LI can be turned off by pushing the dynamic driver assistance switch **2** on the instrument panel.
- When the system is off, the indicator light on the switch **3** is off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory.
From the home page, select Accessory Instructions.



To view detailed instructional videos,
go to www.nissanquickguide.com/2023/maxima
or snap this QR code with an appropriate
QR code reader.



For vehicles equipped with remote
connectivity, including an SOS button,
scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

