



QUICK REFERENCE GUIDE

2023 **VERSA**

COCKPIT OVERVIEW



1

2

3

4

5

6

7

8

COCKPIT OVERVIEW

- 1** Vehicle Information Display
- 2** Low Tire Pressure Warning Light (!)
- 3** Instrument Brightness Control / Trip Reset
- 4** Headlight and Turn Signal Switch
- 5** Wiper and Washer Switch
- 6** Steering Wheel Switches for Audio Control / Vehicle Information Display
- 7** Cruise Control / Intelligent Cruise Control / Bluetooth® Hands-Free Phone
- 8** Steering Wheel Tilt Adjustment

INSTRUMENT PANEL



2



5

6

10

7

11

9

8

INSTRUMENT PANEL

- 1** Vehicle Dynamic Control (VDC) OFF Switch  (if so equipped)
- 2** Outside Mirror Control Switch
- 3** Fuel-filler Door Release 
- 4** Hood Release 
- 5** Front Passenger Air Bag Status Light
- 6** Audio System
- 7** Heater and Air Conditioner (automatic) (if so equipped)
- 8** USB Connection Port Interface
- 9** 12V Power Outlet
- 10** Heated Seat Switches (if so equipped)
- 11** Wireless Charging (if so equipped)

TABLE OF CONTENTS

GETTING STARTED

Nissan Intelligent Key® System (if so equipped)	2
Seat Adjustments	3
Rear Door Alert (if so equipped)	3
Starting/Stopping the Engine	4
Power Outside Mirror Control Switch	5
Heater and Air Conditioner (automatic) (if so equipped)	5
Heated Seats (if so equipped)	6
Headlight Control Switch	7
Wiper and Washer Switch	8
Vehicle Information Display (if so equipped)	9
Tire Pressure Monitoring System (TPMS) with Easy-fill Tire Alert	10
Loose Fuel Cap (if so equipped)	11

AUDIO AND BLUETOOTH® SYSTEMS

System Updates (if so equipped)	12
Clock Set/Adjustment (if so equipped)	13
USB Connection Port Interface	13
Bluetooth® Hands-free Phone System	14
• System Operating Tips	14
FM/AM/SiriusXM® Radio (if so equipped)	16
Apple CarPlay® (if so equipped)	17
Android Auto™ (if so equipped)	18
Wireless Charging (if so equipped)	19
NissanConnect® Services Powered by SiriusXM® (if so equipped)	20
Wi-Fi (if so equipped)	21
Hands-free Text Messaging Assistant	22
Bluetooth® Streaming Audio	23
Siri® Eyes Free (if so equipped)	23

DRIVING FEATURES

Forward-Driving Aid Sensors (if so equipped)	24
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) (if so equipped)	24
Intelligent Cruise Control (ICC) (if so equipped)	25
Cruise Control (if so equipped)	26
Automatic Emergency Braking (AEB) with Pedestrian Detection System	27
RearView Monitor	27
Rear Automatic Braking (RAB)	28
Lane Departure Warning (LDW) (if so equipped)	28
Intelligent Driver Alertness (I-DA) (if so equipped)	29
Intelligent Forward Collision Warning (I-FCW)	29
Rear Sonar System (RSS)	30



Additional information about your vehicle is also available in your Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

The Nissan Intelligent Key® system allows you to lock or unlock the vehicle, open the trunk and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off, and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the **i** button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
 - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two Remote Engine Starts, the ignition switch must be cycled before Remote Engine Start can be used again.
- To start driving, depress the brake pedal and push the ignition switch.



LOCKING AND UNLOCKING THE VEHICLE

- To lock the vehicle, push either door handle request switch (if so equipped) **3** once or press the **i** button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch (if so equipped) **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 5 seconds; all other doors will unlock, or
 - Press the **i** button **4** on the key fob to unlock the driver's side door. Press the **i** button **4** again within 60 seconds; all other doors will unlock.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- To release the trunk lid, press the  button **5** for more than 0.5 second. Lift the trunk lid to access the trunk.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
 - Press any button on the key fob to turn the panic alarm off, or press the door request switch (if so equipped) if the key fob is in range.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up and hold the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up and hold the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver's seat)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety-Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

REAR DOOR ALERT (if so equipped)

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes before driving.

REAR DOOR ALERT (ACTIVE)

- When the system is active and "Horn & Alert" is selected, the horn will sound and a **Check Back Seat For All Articles** warning will appear on the display.



GETTING STARTED

- To activate Rear Door Alert, in your vehicle information display:
 - Press the ◀▶ buttons on the steering wheel until the “Settings” menu screen appears.
 - Using the ⬆ switch, select “Vehicle Settings”, “Rear Door Alert” and press the **OK** button.
 - Choose from the following options: “Horn & Alert”, “Alert Only” or “No horn, No Alert”, and then press the **OK** button.
- To Dismiss Rear Door Alert:
 - To dismiss the warning, use the ⬆ switch **OK** button on the steering wheel to select “Dismiss Message” **1**. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the ⬆ switch on the steering wheel to select “Disable Alert” **2** and press the **OK** button.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Safety-Seats, seat belts and supplemental restraint system (section 1)**” and the “**Instruments and controls (section 2)**” of your Owner's Manual.

STARTING/STOPPING THE ENGINE

CONTINUOUSLY VARIABLE TRANSMISSION (Nissan Intelligent Key® models only - if so equipped)

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once it enters the ON position.
 - If the ignition switch is pushed a second time, the vehicle will change to OFF.
- Move the shift lever to the **P (Park)** position.
- Push the ignition switch to start the engine.



MANUAL TRANSMISSION (if so equipped)

- Depress the brake pedal.
- Depress the clutch pedal to the floor.
- Move the shift lever to the **N (Neutral)** position.
- Place the ignition switch in the ON position.

TURNING THE ENGINE OFF

- For a manual transmission (if so equipped), apply the brake pedal, depress the clutch pedal, place the vehicle in 1 (First) gear, apply the parking brake and turn the ignition off.
- For a Continuously Variable Transmission (CVT models) (if so equipped), apply the brake pedal, move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

POWER OUTSIDE MIRROR CONTROL SWITCH

- Push the switch **1** right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch **2**.
- Push the switch **1** to the center (neutral) position to prevent accidentally moving the mirrors.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 TEMPERATURE CONTROL DIAL/AUTO BUTTON

- The temperature control dial allows you to adjust the temperature of the outlet air. Turn the temperature control dial to the left for cooler air or right for warmer air.

2 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate controls on or off. The system will turn on in the mode which it was used immediately before the system was turned off.

GETTING STARTED

3 FRONT DEFROSTER BUTTON

- When the  front defroster button is pressed, the air conditioner will automatically turn on.
- To quickly remove ice from the outside of the windows, use the  fan speed **7** control dial to set the fan speed to maximum.
- As soon as possible after the windshield is clean, press the **AUTO** button to automatic mode.

4 MODE (manual air flow control) BUTTON

- Turn the dial to select one of the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot outlets.
-  Air flows mainly from the outlets.
-  Air flows from the front defroster and foot outlets.

5 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

6 AIR RECIRCULATION BUTTON

- Press the  air recirculation button to recirculate the interior air inside the vehicle.

7 FAN SPEED CONTROL DIAL/A/C (air conditioner) BUTTON

- Turn the  fan speed control dial to manually control the fan speed.
- Press the **AUTO** button to return to automatic control of the fan speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEATED SEATS (if so equipped)

- Push the  or  switch **1** to turn the heated seats on and off.
- When pushing the LO or HI position of the switch, the indicator light will illuminate. When no lights are visible the system is off.
- The heated seats turn on and off to maintain a temperature above 68°F (20°C).



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

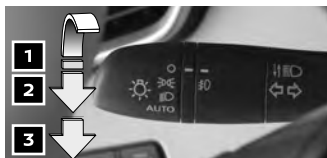

AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch ON. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 12 mph (20 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **6** or select the low beam position by placing the lever in the neutral position.
- When activated, the High Beam Assist will automatically change to low beams when red taillights ahead or oncoming headlights are detected.
- The High Beam Indicator light (blue) comes on when the headlight high beams are on and goes out when the low beams are selected. The High Beam Indicator light (blue) also comes on when the passing signal is activated.



GETTING STARTED

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist  — One sweep operation of the front wipers.
- 2** Intermittent  — Front wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low  — Front wipers operate at a continuous low-speed.
- 5** High  — Front wipers operate at a continuous high-speed.
- 6** Front Washer  — Pull the lever toward you to activate the front washer. The front wipers will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

VEHICLE INFORMATION DISPLAY (if so equipped)

The vehicle information display **1** displays items such as:

- Audio Information
- Drive Computer Information
- Fuel Economy Information
- Indicators and Warnings
- Vehicle and Meter Display Settings
- Odometer/Twin Trip Odometer
- Gear Position Indicator (P, R, N, D, L)
- Distance To Empty and Fuel Indicator
- Tire Pressures



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2** and the **↶** or **↷** buttons **3** located on the steering wheel.

- Press the **OK** button **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.

ODOMETER/TWIN TRIP A & B

1. Push the **TRIP RESET** switch **5** until the desired trip odometer (either TRIP A or TRIP B) is displayed.
2. When TRIP A or B is displayed, pushing the **TRIP RESET** switch **5** for more than 1 second will reset the currently displayed trip odometer to zero.



SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- | | | |
|--------------------|---------------------|---------------------|
| ■ VDC Settings | ■ Driver Assistance | ■ Customize Display |
| ■ Vehicle Settings | ■ TPMS Settings | ■ Maintenance |
| ■ Unit/Language | ■ Factory Reset | ■ Clock |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

GETTING STARTED



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **2** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Move the shift lever to the **P (Park)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

LOOSE FUEL CAP (if so equipped)

- A **LOOSE FUEL CAP** warning message will display in the trip computer when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will turn off when the vehicle detects the fuel-filler cap is properly tightened and the **TRIP RESET** switch **1** is pushed for more than 1 second.
- If the cap is not fully tightened, the  Malfunction Indicator Light may also illuminate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES (if so equipped)

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

- **Yes** - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- **Later** - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.

You can trigger the software update manually in the event that “Later” was unintentionally pressed.

- To manually update the software to the latest version:

1. Press the **MENU** button on the control panel.
2. Touch “Info” and then touch “System Information”.
3. Touch “Software Update”.
4. Touch “Start Software Update” and then “Download”.

- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.

 
Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:

1. Press the **MENU** button on the control panel.
2. Touch “Connections” and then touch “Wi-Fi”.
3. Touch the  icon and then touch “Wi-Fi” to turn it on.
4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.


- To manually update your software using Wi-Fi:

1. Press the **MENU** button on the control panel.
2. Touch “Info” and then touch “System Information”.
3. Touch “Software Update”, “Start Software Update” and then touch “Download”.

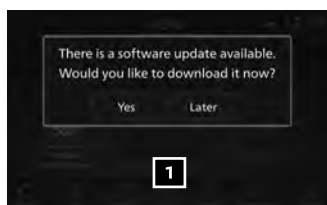

- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

 Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

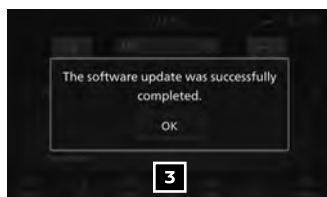

CLOCK SET/ADJUSTMENT (if so equipped)

1. Press the MENU button on the control panel.
2. Touch the "Settings" key.
3. Touch the "Clock" key.
4. Select "Set Clock Manually" **1** to manually adjust the time displayed on the clock.



Touch the key to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.



USB CONNECTION PORT INTERFACE

The USB ports **1** (USB Type-C/USB Type-A) are located on the center instrument panel. When a compatible USB memory device is plugged into the USB port:

- A confirmation message appears.

Select "Yes" if you prefer to use the device with Voice Recognition in which song titles and artist names are registered in the system.

- Compatible audio files stored on the device can be played through the vehicle's audio system and front display.

If two USB devices are plugged in at the same time, the device that was plugged in first can play music in the vehicle while the second device will only charge. To play music on the second device, unplug both and plug the second device in first.



AUDIO AND BLUETOOTH® SYSTEMS

CHARGE ONLY PORTS (if so equipped)

The USB charging ports are located in the rear seat area on the back of the center console

2 (USB Type-C/USB Type-A). These ports will charge compatible devices.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
 
For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the appropriate "Bluetooth® System" section within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- Reduce background noise as much as possible by closing windows and pointing heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- If you experience difficulty with the Voice Recognition System recognizing a contact name, please try saying both the first and last name of the contact as this improves recognition accuracy.
- To cancel a Voice Recognition session, say "Cancel" or "Quit".
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.

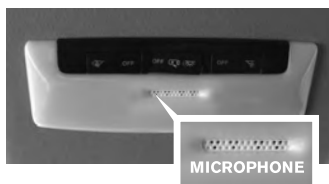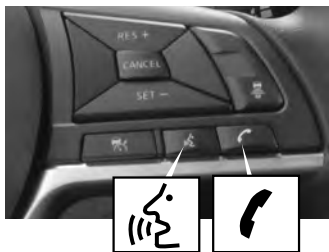


CONNECTING PROCEDURE

- The vehicle must be stationary when connecting the cellular phone. Press the  button on the steering wheel for more than 1.5 seconds. The system announces the available commands.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

 1. Say: "Select Phone". The system acknowledges the command and asks you to initiate connecting from the smartphone.
2. Initiate connecting from the cellular phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit **www.NissanUSA.com/bluetooth**.
 - When prompted, confirm the PIN on the display with the PIN shown on the handset. If your device does not support Secure Simple Pairing and requests you to input a PIN, enter "1234" from the handset.
 - Some cellular phones may incorrectly state that the connection was unsuccessful. Please verify that the display screen shows that the connection is successful, or press the  **MENU** button on the control panel or "Connections" key and confirm that your cellular phone is listed.
3. When connecting is complete, the screen will return to the Phone menu display.

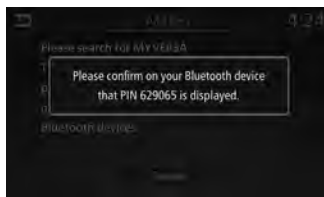


VEHICLE PHONEBOOK

- Press the  **MENU** button on the control panel.
- Touch the "Phone" key and then touch the "Phonebook" key.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth® system.
- The Quick Dial phonebook can also be set for up to twenty entries that can be used with your cellular phone.
 - Touch the "Phone" key and then touch the "Quick Dial" key.

MAKING A CALL

 1. Touch the  Phone key on the Launch Bar. The "Phone" screen **1** will appear on the display.
2. Select one of the options to make a call.

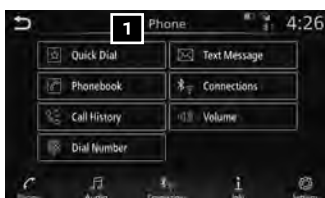

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the touch-screen display.
- To reject an incoming call:
 - Press the  button on the steering wheel, or
 - Touch the  Decline key on the touch-screen display.



AUDIO AND BLUETOOTH® SYSTEMS

- To hang up:
 - Press the  button on the steering wheel, or
 - Touch the  Hang up key on the touch-screen display.

 
SWITCH TO HANDSET

- Start the call using your Bluetooth® hands-free phone and touch the “Use Handset” key on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems (section 4)” of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

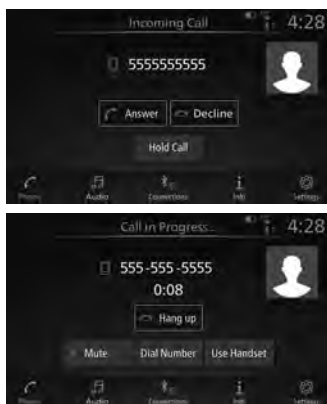

FM/AM/SiriusXM® RADIO (if so equipped)

1 POWER BUTTON/VOL (volume) CONTROL KNOB

- Press the POWER button to turn the system on or off.
- Turn the VOL (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON

- Press the **AUDIO** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .
- For radio to switch to the first channel of the previous or next category, press the seek buttons  or .

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

4 STATION MEMORY KEYS

 
- 36 stations can be set for the FM band, AM band and SiriusXM radio.
- To store a station in a preset, first select a radio band by pressing the **AM** button **5**, **FM** button **6** or **SiriusXM** button **7** then tune to the desired FM, AM or radio station.
- Now touch and hold the desired station memory key (**1-12**) until the preset number is updated on the display and a beep is heard. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (**1-12**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.


APPLE CARPLAY® (if so equipped)

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.

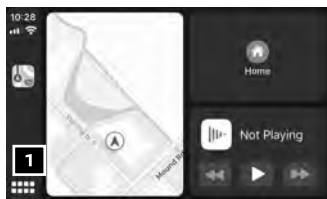

AUDIO AND BLUETOOTH® SYSTEMS

 - To return to the Apple CarPlay home screen after operation, touch the  key **1** on the lower left corner of the Apple CarPlay screen.
- To exit the Apple CarPlay screen, press the  **MENU** button on the control panel.
- To return to the Apple CarPlay screen from the main menu:
 - Touch the  Apple CarPlay key **2**, or
 - Touch the  Info key on the Launch Bar, touch the "Smartphone Connection" key, and then select the "Apple CarPlay" key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

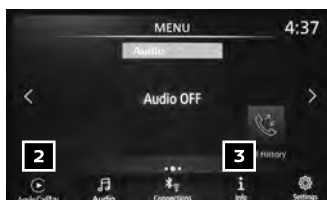

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" and the "**Information (section 5)**" of your NissanConnect® Owner's Manual.

ANDROID AUTO™ (if so equipped)

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

 
USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the exit key.
- To return to the Android Auto home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the "Smartphone Connection" key, and then touch the "Android Auto" key.

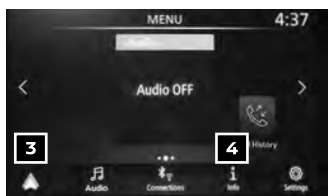

- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

WIRELESS CHARGING (if so equipped)

The wireless charger is located in front of the center console. Ensure the smartphone is positioned vertically and fully seated on the center of the charging pad over the "Qi" logo **1**. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.



- The  indicator **2** will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange for 8 seconds and will then turn off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

 
- To enroll in NissanConnect® Services, create an account or log into your NISSAN Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the NissanConnect® Services app on your compatible iPhone® or Android smartphone and log into it using your NISSAN Owner Portal ID and password.
- For full details on NissanConnect® Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.
- Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Bluetooth® and more. For frequently asked questions, please visit **www.nissanusa.com/connect/support-faqs**.
- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the NissanConnect® Service Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect® Services Response Specialist.
- Remote Engine Start - Start your engine remotely using the NissanConnect Services companion app or website.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Curfew Alert - Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.

To access these features in your vehicle:

- Press the  **MENU** button **1** on the control panel.
- Touch the  Info key.
- Touch the “NissanConnect Services” key **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

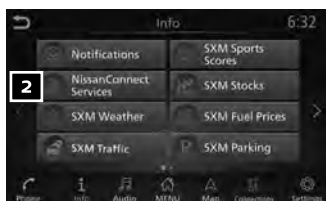

Wi-Fi (if so equipped)

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.

 
1. Touch  Settings key on the Launch Bar.
2. Touch the “Connections” key.
3. Touch the “Wi-Fi” key **1**.
4. Touch the name of the device you wish to connect.
5. Enter a password and touch the “OK” key.
The device will be connected.



- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the “Connections” key.
3. Touch the “Wi-Fi” key **1**.
4. Touch the  key **2**.
5. Touch a preferred item.

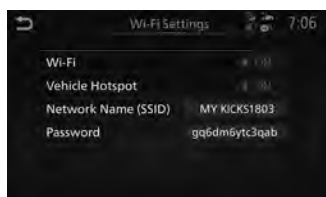


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” of your NissanConnect® Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

HANDS-FREE TEXT MESSAGING ASSISTANT*

 - This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender, date and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see **www.NissanUSA.com/bluetooth** for compatibility information as well as your device's Owner's Manual.

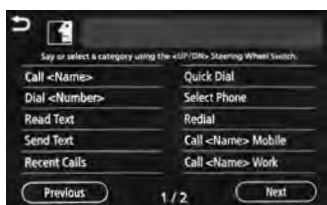

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
- Touch the  Audio key and select the "BT Audio" key.
 - If the device is already paired:
 - a. Touch the "Connections" key **1**.
 - b. Select an already paired device.
 - If the device needs to be connected:
 - a. Touch the "Connections" key **1** on the screen.
 - b. Select "Add new" key to connect a phone.
- Touch "BT Menu" to view track listing, artist, songs or albums.
- Touch "Source" to change which device is playing audio.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-Free Phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SIRI® EYES FREE (if so equipped)

- If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri will be activated in Eyes Free mode.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and visit www.NissanUSA.com/bluetooth.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection (if so equipped)
 - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, move the shift lever to the **P** (Park) position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.

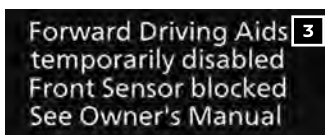

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and Driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) (if so equipped)

- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- If the turn signal is turned on with a vehicle in the detection zone, there will be an audible alert and the indicator light will flash.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- The indicator **1** will illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).

 
 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE


- To set vehicle-to-vehicle distance control mode, push the  ICC switch **1** on the steering wheel. The ICC indicators will illuminate in the vehicle information display.
- Accelerate to the desired speed.
- Push the **SET-** switch **2** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  distance switch **3** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is detected in the lane ahead, the vehicle ahead detection indicator **4** will illuminate.
- When a vehicle is not detected in the lane ahead of you, the vehicle ahead detection indicator **4** will turn off.
- To reset at a faster cruising speed, push and hold the **RES+** switch **5** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **6** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **7** will turn off.
- To turn off ICC, push the  ICC switch **1** on the steering wheel. The ICC system indicator **8** in the instrument panel will turn off.

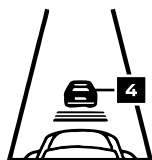

DRIVING FEATURES

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

 - This mode allows driving at a fixed speed between 25 to 90 mph (40 to 144 km/h). The system will not respond to vehicles ahead in your lane.
- To choose the conventional (fixed speed) cruise control mode, push and hold the  ICC switch **1** for longer than 1.5 seconds.
- The conventional (fixed speed) cruise control mode display and indicators **9** are displayed in the vehicle information display and you can now set your desired cruising speed by pushing the **RES+** switch **5** or **SET-** switch **2**.
- To use the ICC system again, push and release the  ICC switch **1** (vehicle to vehicle distance control mode) or push and hold (conventional cruise control mode) for longer than 1.5 seconds again to turn it on.

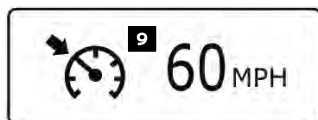

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the  switch **1** on the steering wheel. The **CRUISE** indicator light in the vehicle information display will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the  switch **1** on the steering wheel. The **CRUISE** indicator light in the instrument panel will turn off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red and white) **1** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

REARVIEW MONITOR

- When the shift lever is moved to the **R (Reverse)** position, the front display shows the view to the rear of the vehicle.
- The colored lines on the display screen (if so equipped) indicate approximate distances to objects:
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

DRIVING FEATURES

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator **1** will flash in the vehicle information display. The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING the RAB SYSTEM ON/OFF

- The RAB system can be turned on and off through the "Driver Assistance" section in the vehicle information display.

When the RAB system is turned off, the RAB system warning light **1** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

LANE DEPARTURE WARNING (LDW) (if so equipped)

The Lane Departure Warning (LDW) system is used to warn the driver when the vehicle is beginning to leave the driving lane.

- The LDW system will operate when the vehicle is driving at speeds of approximately 37 mph (60 km/h) and above, and only when the lane markings are clearly visible on the road.
- The LDW system will alert the driver with the Lane Departure Warning (LDW) indicator light (if so equipped) **1** and a steering wheel vibration if the vehicle leaves the driving lane.



TURNING the LDW SYSTEM ON/OFF

- The LDW system can be turned on and off through the "Driver Assistance" section in the vehicle information display.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

INTELLIGENT DRIVER ALERTNESS (I-DA) (if so equipped)

- When Driver Attention Alert **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break:

- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

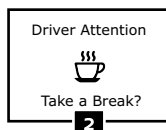


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

 - The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator light **1** and an audible warning tone will be issued.

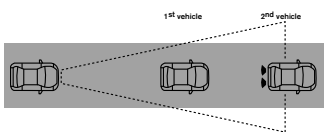

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

REAR SONAR SYSTEM (RSS)

The Rear Sonar System (RSS) sounds a tone to inform the driver of obstacles near the bumper.

- The system will inform the driver with a visual and audible alert of rear obstacles when the shift lever is in the **R (Reverse)** position.
- When the object is detected, the indicator (green) appears and blinks and the tone sounds intermittently. When the vehicle moves closer to the object, the color of the indicator will turn yellow.



TURNING THE RSS SYSTEM ON OR OFF:

- The RSS system can be turned on and off through the "Driver Assistance" section in the vehicle information display **1**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" and the "**Instruments and Controls (section 2)**" of your Owner's Manual.

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory.
From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2023/versa or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

