

Features & Functions Guide



SORENTO

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODES

Getting Started With Your New Kia Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

1	Smart Key with Remote Start	57
2	Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment . .	51-52
3	Seat Warmers* / Ventilated Seats*	50
4	Folding Rear Seats	53-54
5	Windshield Wipers & Washer / Lifting Wipers (Wiper Service Mode) . .	32
6	Navigation-based Smart Cruise Control (NSCC)*	18
7	Normal Maintenance Schedules	Back Cover
8	User Settings* - Instrument Cluster	08
9	Vehicle Settings* - Infotainment System.	08
10	Bluetooth® Wireless Technology	34-35
11	Kia Connect Activation* / Kia Connect Assistance*	38
12	Standard Audio System* - Value	37
13	Kia Connect with Navigation*	40-41
14	Android Auto™ †22 / Apple CarPlay® Setup	36

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

www.kia.com
Consumer Affairs - Roadside Assistance^{†12}:
1-800-333-4KIA (800-333-4542)

QR CODES

Getting Started With Your
New Kia Video



Your New Kia Important
Care Tips Video



Vehicle Cameras
Important Tips Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Always check the Owner's
Manual for complete operating
information and safety warnings.

VIDEOS & QR CODES Inside Front Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights	04
Tire Pressure Monitoring System (TPMS)	05
Fuel Economy / Tips for Economical Driving	05
Drive Mode Integrated Control System	06

VEHICLE SETTINGS

Instrument Cluster LCD Modes	07
Trip Modes / Trip Computer	07
User Settings* - Instrument Cluster	08
Vehicle Settings* - Infotainment System	08
Vehicle Auto-Shut Off*	09
Service Interval Mode	09

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Forward Collision-Avoidance Assist (FCA)*	10
Blind-spot Collision-Avoidance Assist (BCA)*	11
Lane Keeping Assist (LKA)	12
Blind-spot View Monitor (BVM)*	13
Driver Attention Warning (DAW)	14
Leading Vehicle Departure Alert (LVDA)	15
Safe Exit Assist (SEA)*	16
Lane Following Assist (LFA)	17
Navigation-based Smart Cruise Control - (NSCC)*	18
Cruise Control (CC)	19
Highway Driving Assist (HDA)*	20
Rear View Monitor (RVM)	21
Surround View Monitor (SVM)*	22
Rear Cross-Traffic Collision-Avoidance Assist (RCCA)*	23
Reverse Parking Collision-Avoidance Assist (PCA)*	24
Forward/Reverse Parking Distance Warning (PDW)*	25
Intelligent Speed Limit Assist (ISLA)*	26

DRIVER'S PANEL

Instrument Cluster Illumination Control	27
Hill-start Assist Control (HAC)	27
Electronic Stability Control (ESC)	27
Reverse Parking Aid Function*	28
Engine Start/Stop Button*	28

DRIVER'S PANEL (CONTINUED)

Power Windows, Window Lock & Central Door Lock	29
Automatic Door Lock/Unlock	29
Electronic Child Safety Lock System	29
Rear Door Locks - Double Pull to Open	29
Power Folding Outside Mirrors*	30
Power/Heated Outside Mirrors*	30
Manual Folding Mirrors	30

STEERING WHEEL CONTROLS

Turn Signals & Fog Lights*	30
Headlights & High Beams / Daytime Running Lights (DRL)	31
High Beam Assist (HBA)	31
Windshield Wipers & Washers	32
Rear Wiper & Washer*	32
Lifting Wipers (Wiper Service Mode)	32
Tilt/Telescoping Steering Wheel	33

INFOTAINMENT SYSTEM

Audio Controls	33
Bluetooth® Wireless Technology	34
Android Auto™ / Apple CarPlay® Setup	36
Standard Audio System - Value*	37
Kia Connect Activation* / Kia Connect Assistance*	38
Kia Access App Download	39
Kia Access App Features Guide	39
Kia Connect with Navigation*	40

CENTER PANEL

Multimedia USB Port, Power Outlets & USB Charger Ports	42
AC Inverter*	42
Digital Clock - Infotainment System	42
Wireless Smartphone Charging System*	43
Automatic Climate Control*	44
Paddle Shifters*	45
Manual Climate Control*	46
Automatic Gear Shift with Sportmatic® Shifting	47
Dual Clutch Transmission (DCT)*	47
AWD (All-Wheel Drive) Lock*	48
Idle, Stop & Go (ISG) System	48

CENTER PANEL (CONTINUED)

Electronic Parking Brake (EPB)*	49
Auto Hold*	49
Heated Steering Wheel*	50
Seat Warmers / Ventilated Seats*	50

SEATING

Front Seat Headrest Adjustment*	51
Driver Position Memory System*	51
Power Adjustable Driver's Seat* / Power Lumbar*	52
6-Way Manual Adjustable Driver's Seat*	52
2nd-Row Folding Seat	53
2nd-Row Auto-Folding Seat	53
Unfastening Center Seatbelt	53
3rd-Row Folding Seat / One-Touch Slide & Fold	54
Rear Occupant Alert with Ultrasonic Sensors	55

OTHER KEY FEATURES

Sun Visor	56
Remote Keyless Entry (Folding Key)*	56
Double-Turn Lock/Unlock All	56
Smart Key with Remote Start*	57
Smart Power Liftgate*	58
Smart Power Liftgate with Auto Open*	59
Manual Liftgate / Liftgate Release Button*	59
Map/Room Lamps	60
Panoramic Sunroof with Power Sunshade*	60
HomeLink® with Auto-Dimming Rearview Mirror*	61
Hood Release Lever and Latch	62
Fuel Cap / Malfunction Indicator (Check Engine Light) ...	62
Fuel Filler Lid Release	62

SAFETY FEATURES

Occupant Detection System (ODS) / Passenger Airbag Off Indicator	63
Child-Protector Rear Door Locks*	63
Seat Belts	64

 
LEGAL DISCLAIMERS Inside Back Cover

MAINTENANCE CHART Back Cover

Instrument Cluster Overview

- A** Speedometer
- B** Tachometer
- C** Engine Coolant Temperature Gauge
- D** Indicators & Warning Lights
- E** LCD Display (including Trip Computer)
- F** Fuel Gauge

 Arrow direction indicates the side of the vehicle the fuel door is located

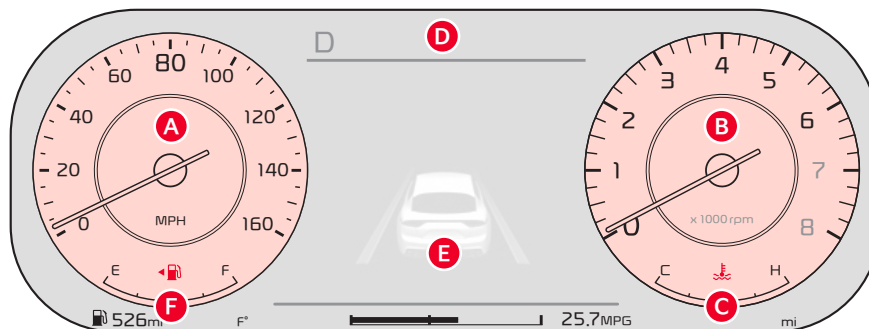

Full LCD cluster (Type B)

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

Refer to Section 4 in the Owner's Manual for more information.

 
QR CODE

Instrument Cluster's LCD Display Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Indicators & Warning Lights

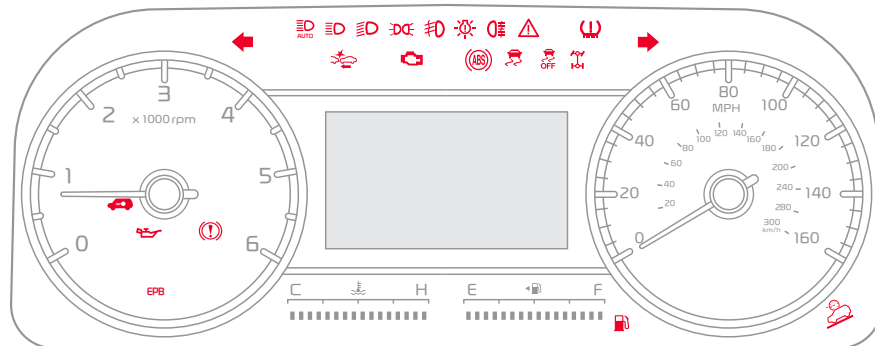Conventional cluster
(Type A)

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in the illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

Refer to Section 4 in the Owner's Manual for more information.

Engine Oil Pressure Warning Light

Malfunction Indicator Light

EPB Electric Parking Brake (EPB) Warning Light*

Seat Belt Warning Light

Light ON Indicator Light

High Beam Indicator Light

Low Beam Indicator Light*

Front Fog Light Indicator Light

High Beam Assist Indicator Light*

Parking Brake & Brake Fluid Warning Light

Forward Safety Warning Light*

All-Wheel Drive (AWD) Warning Light*

All-Wheel Drive (AWD) Lock Indicator Light*

Electronic Power Steering (EPS) Warning Light

Charging System Warning Light*

Airbag Warning Light

Low Fuel Level Warning Light

Immobilizer Indicator Light*

Engine Coolant Temperature Warning Light*

Icy Road Warning Indicator Light*

Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator Light

(ABS) Anti-Lock Braking System (ABS) Warning Light

OFF Electronic Stability Control (ESC) OFF Indicator Light

Electronic Stability Control (ESC) Indicator Light

AUTO HOLD Indicator*

Cruise Control Indicator Light*

SET/CRUISE Cruise Control ON/SET Indicator Light*

Washer Fluid Warning Light*

Master Warning Light

(ABS) Electronic Brake Force Distribution (EBD) System Warning Light (two separate indicators on Instrument Cluster lit at same time)

Lane Safety Assist Indicator Light

LED Headlamp Warning Indicator*

Downhill Brake Assist (DBC) Indicator*

(A) Auto Stop Indicator Light*

(SPORT) SPORT Mode Indicator Light

 
(ECO) ECO Mode Indicator Light

Tire Pressure Monitoring System (TPMS)^{†20}



The TPMS indicator  functions as both the Low Tire Pressure Light and the TPMS Malfunction Indicator.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the tire pressure drops due to the outside temperature becoming significantly lower.

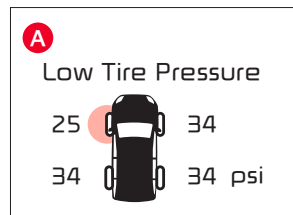

The Low Tire Pressure Position Indicator **A** is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated. Inflate the tire(s) to specifications using an accurate tire pressure gauge to turn off the Low Tire Pressure Indicator . See the front driver's door jamb for PSI specifications.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See the dealer for service.

For illustrative purposes only. Your actual display, buttons and/or features may vary. For more information refer to section 6 in the Owner's Manual.

Fuel Economy / Tips for Economical Driving

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain the recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- A significant drop in temperature can cause tire inflation pressures to drop, which may activate the TPMS light. Manually confirm tire pressures after significant changes in temperature or altitude

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

QR CODES

Tire Pressure Monitoring System Video



Tips for Economical Driving Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

For more information refer to section 6 in the Owner's Manual.

Drive Mode Integrated Control System*

The drive modes may be changed according to the driver's preferences or road conditions. To cycle through the drive modes **A** or deactivate a drive mode, rotate the Drive Mode knob **B**.

When a drive mode is selected, the drive mode indicator will illuminate in the Instrument Cluster and illuminate next to the Drive Mode knob. The system's default mode is COMFORT mode and when selected, the indicator will not be illuminated.

 
 
- COMFORT Mode
- SPORT Mode
- ECO Mode
- SNOW Mode* (All Wheel Drive)
- SMART Mode* - When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style.

QUICK TIP

When vehicle is shut down while in SPORT Mode, the system will default to NORMAL mode when the engine is turned off. SPORT mode would need to be selected again once the vehicle is restarted.

REMINDERS:

- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- The system defaults to COMFORT mode when the ignition is turned on
- Steering effort may be slightly increased in Sport mode
- When vehicle is shut down while in SPORT Mode, the system will default to NORMAL mode when the engine is turned off. SPORT mode would need to be selected again once the vehicle is restarted

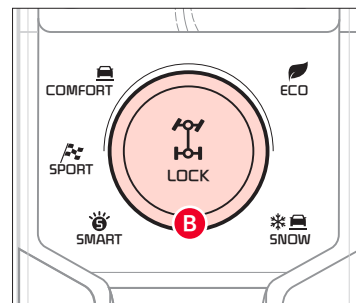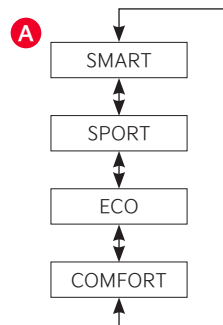

(Located on Center Panel below Gear Shift)*

For illustrative purposes only. Actual displays, buttons and/or features may vary.

QR CODE

Drive Mode Integrated Control Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

Instrument Cluster LCD Modes

Press the Mode button **A** to cycle through the different Instrument Cluster LCD:

-  **Trip Computer Mode:** Displays driving information for range, fuel economy, accumulated info, drive info, driving style*
-  **Driving Assist Mode:** Displays information on Lane Keeping Assist*/Lane Following Assist*/Highway Driving Assist, Driver Attention Warning*
-  **Turn-by-Turn Mode*:** Displays the route guidance and destination information
-  **User Settings Mode:** Change settings of the Driver Assistance, doors, lights, sound, ECO vehicle, convenience and other features
-  **Information/Master Warning Mode:** Displays information on Intelligent Speed Limit Assist*, TPMS, drive force distribution*, and warning messages related to the vehicle when one or more systems is not operating normally

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Your vehicle's LCD modes may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.

 
Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A**.

To select and enter the Trip Computer mode , press the OK button **B** up/down and then press the OK button **B** to enter. To cycle through and select the different screens (Fuel Economy, Accumulated Info, Drive Info), press the OK button **B** up/down again and then press the OK button **B**. When displaying the Tripmeter screens, press and hold the OK button **B** to reset the Tripmeter to zero.

Press the OK button **B** to go back to the previous mode/item.

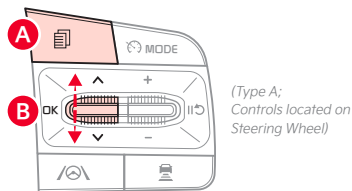


REMINDERS:

- Appearance of the Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

Your vehicle's steering wheel buttons may differ from those in the illustrations.

 For illustrative purposes only. Your actual display, buttons and/ or features may vary.

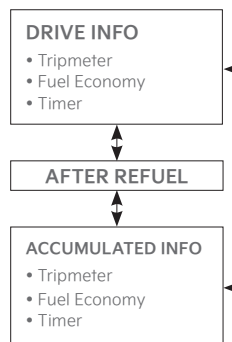

QR CODES

Instrument Cluster's LCD Display Video



Steering Wheel Controls Video



 
*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Refer to section 4 in the Owner's Manual for more information.

User Settings* - Instrument Cluster

To enter the User Settings mode in the LCD Instrument Cluster Modes, press the Mode button **A** (Instrument Cluster Type A) when the vehicle is at a standstill, shift lever is in Park, and with the Engine/Start Stop button in the ON position, select User Settings **B** by pressing the OK button **B** up/down.

You can navigate the selections on the display by pressing the OK button **B** up/down, and then selecting the item by pressing the OK button **B**. Press the OK button **B** up/down to go back to the previous mode/item.

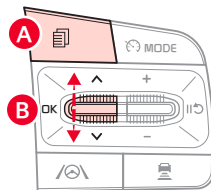

Driver Assistance:

Driver Convenience

- Speed Limit Warning
- Warning Timing
- Warning Volume
- Haptic Warning
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-spot Safety
- Parking Safety

Lights

- Illumination*
- One-Touch Turn Signal
- Headlamp Delay
- High Beam Assist

Sound

- Welcome Sound

Door/Liftgate

- Automatically Lock/Unlock
- Two Press Unlock
- Power Liftgate^{†10}
- Power Liftgate^{†10} Opening Height/Speed
- Smart Liftgate*

Reset

- Reset the User Settings menus (except language and service interval)

Convenience

- Seat-Easy Access
- Rear Occupant Alert
- Welcome Mirror/Light
- Auto Rear Wiper (when in Reverse)
- Wipers/Lights Display
- Vehicle Auto-Shut Off

Other Features

- Fuel Economy Auto Reset
- Speedometer Unit
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit

Vehicle Settings* - Infotainment System

To enter the Vehicle Settings mode in the audio head unit **C**, press the SETUP key on the audio head unit or the onscreen SETUP icon. Then press **VEHICLE** **C**, which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

Vehicle Settings:

Driver Assistance:

Driving Convenience*, Warning Time*, Warning Volume*, Driver Attention Warning*, Forward Safety*, Lane Safety*, Blind-spot Safety*, Parking Safety*

Drive Mode: Drive Mode Alert*

Climate*: Recirculate Air*, Automatic Ventilation*, Defog/Defrost Options*, Climate Features*

 
Lights*: Ambient Light*, One Touch Turn Signal*, Headlight Display*, High Beam Assist*

Door*: Auto Lock*, Auto Unlock*, Walk-Away Lock*, Two-Press Unlock*, Smart Liftgate*

Cluster*: Service Interval*, Energy Consumption Reset*, Content Selection*, Cluster Voice Guidance Volume*, Welcome Sound*, Theme Selection*

Convenience*: Rear Occupant Alert*, Welcome Mirror Light*, Wireless Charging System*, Vehicle Auto-Shut Off*

Seat*: Seat Position Change Alert*, Smart Posture Care*, Heated/Ventilated Features*, Seat Easy Access*, Rear Seat Heating Control*

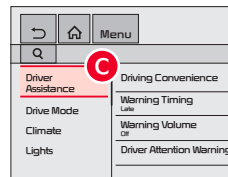

QR CODES

Vehicle & User Settings Video



Ambient, Mood & Theme Lighting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.

Vehicle Auto-Shut Off*

The Vehicle Auto-Shut Off, when certain conditions are met, will turn the vehicle off automatically after a pre-set time (30 or 60 minutes).

QUICK TIP

The timer that appears on the Instrument Cluster's LCD can be reset using the OK button on the right side of the Steering Wheel.

A warning on the Instrument Cluster LCD will appear stating the "Vehicle will be turned off automatically in..." and a chime will sound when the timer starts **A**.

When timer ends, a continuous beep sounds for one minute before the vehicle shuts off.

 
Auto-Shut Off Settings - The system is on by default and timer is pre-set to 30 minutes. To change the pre-set time settings, go to User Settings  in the Instrument Cluster LCD by pressing the Mode button  **B** on right side of the Steering Wheel. Select Convenience, then Vehicle Auto-Shut Off. Move through the selections by pressing the OK button  up/down on the Steering Wheel. Select 30 minutes, 60 minutes or Disable for off **D**.

REMINDERS:

- When the vehicle is turned off then on again, the system defaults to on (30-minute pre-set time)
- The system will activate when the vehicle is on and these conditions are met:
 - The vehicle is in (P) Park
 - The driver's seat belt is unfastened
 - The driver's door is opened
 - The passenger seat is not occupied

Refer to section 5 in the Owner's Manual for more information. Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

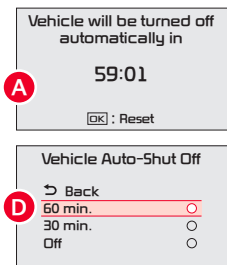

Service Interval Mode

To enter Service Interval Mode in the Instrument Cluster LCD, press the Mode button **B**, go to User Settings  and enter by pressing the OK button **C**. Go to Service Interval by pressing the OK button **C** up/down, then press the OK button **C** to enter. System will display the number of miles remaining until the next service is due, as well as the type of service due.

When service is required, the following will be displayed:

Service Required E

To reset the Service Interval Mode system, press and hold the OK button **C** for more than 1 second.

 
Press the OK button **C** up/down to go back to the previous mode/item.

To turn **Service Interval** OFF, go to User Settings .

Service Interval Setting E

To set the service interval in User Settings .

- Press the Mode button **B** to go to User Settings and press the OK button **C** to enter
- If Service Interval is OFF, press the OK button **C** to turn ON
- Press the OK button **C** up/down to select/change the interval setting
- Press the OK button **C** to select the interval

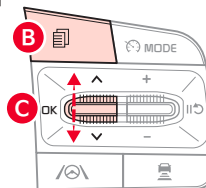

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder. Go to User Settings*, Convenience, then Oil Change, or go to Vehicle Settings* in the Infotainment System, Cluster, then Oil Change Reminder

QR CODES

 
Vehicle Auto-Shut Off Video



Kia Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

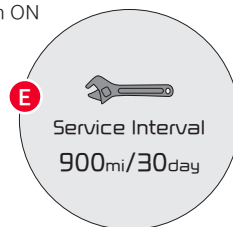

(Images are for illustration purposes only and may vary)

Forward Collision-Avoidance Assist (FCA)^{†3}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway, in certain circumstances, through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and in certain cases, temporarily apply emergency braking. Initially, FCA provides Collision Warning **A** when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster.

If FCA detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision **B**.

With the turn signal on, if it detects a potential collision, Junction Turning **C** may help to avoid the collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.

FCA Settings:

- FCA is on by default. FCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* in the Instrument Cluster** - Press the Mode button **D** on the Steering Wheel to toggle to User Settings. Press the **OK** **E** up/down to toggle to DRIVER ASSISTANCE and select an FCA mode
- To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. In DRIVER ASSISTANCE, press FORWARD SAFETY, then select an FCA mode
- FCA Modes** - Select one of the following:
 - Active Assist:** Vehicle will provide a warning (audible & visual) and apply the brakes if needed
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings or braking provided
- Warning Timing** - When in the DRIVER ASSISTANCE menu, select WARNING TIMING. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'

FCA will become active when the:

- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON

When engaged, Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle or alert the driver when the vehicle is approaching another vehicle. Always drive safely and use caution.

 
Actual User Settings steps may vary by model. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 6 in the Owner's Manual for more information.



A




B

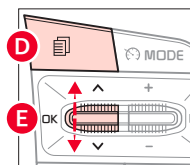

D

 E



(Junction Turning)

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Warning Volume can be adjusted in the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the Forward Safety warning indicator is on in the Instrument Cluster

Blind-spot Collision-Avoidance Assist (BCA)^{†3}

BCA uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area, when exiting parallel parking, and before changing lanes. Initially, BCA provides Blind-spot Collision Warning (BCW) when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, BCA automatically applies the opposite side front brake to try and mitigate a potential collision.

Vehicle detection: When another vehicle is detected within the BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

 
Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

Collision-Avoidance Assist: If BCA detects there's a risk of collision, BCA may apply the brakes.

BCA Settings:

- BCA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access User settings* in the Instrument Cluster** - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings . Press the OK **D** up/down to toggle to Driver Assistance, then Blind-spot Safety and select a BCA mode
- To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. In DRIVER ASSISTANCE, select BLIND-SPOT SAFETY and then a BCA mode
- BCA Modes** - Select one of the following:
 - Active Assist:** BCA will provide a warning (audible & visual) and may activate Electronic Stability Control (ESC) and temporarily apply braking power
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings provided
- Warning Timing** - When in the DRIVE ASSISTANCE menu, select WARNING TIMING. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'

Refer to section 5 in the Owner's Manual for more information. The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

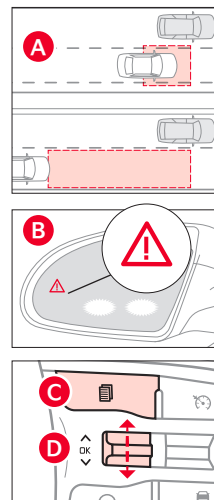

(Buttons located on right side of steering wheel)

QUICK TIPS

- The Warning Volume can be adjusted in the User Settings*  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Collision Warning is above approximately 12 mph, Collision-Avoidance Assist is above approximately 40~120 mph

QR CODE

Blind-spot Collision-Avoidance Assist (BCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

REMINDERS:

- BCA will not warn if the vehicle speed in the blind spot is above 7 mph
- BCA will not assist if both lane markings are not detected (while driving) or the vehicle speed in blind spot is below 3 mph (while departing)
- When BCA is ON and the ignition is cycled, BCW returns to its previous state
- BCA may sound when turn signal is turned on and making a left turn. Maintain a proper distance from oncoming vehicles

Lane Keeping Assist (LKA)^{†3}

Lane Keeping Assist is designed to detect the lane markers (or road edges) on the road with a front view camera on the windshield, depending on road conditions. LKA may assist the driver's steering to help prevent the vehicle from moving out of its driving lane. When turned on, the instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the LKA icon will illuminate green.

 
If LKA detects that you are moving outside of your lane, the system may give an audible warning and display a Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane. When LKA is enabled, LKA will turn on when the Lane Safety/LKA button* **A** is depressed to ON.

LKA Settings:


- Press and hold the Lane Safety button **A** to turn LKA on or off. You can also enable LKA in the User Settings*  in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings*  in the Instrument Cluster** - Press the Mode button  **B** on the Steering Wheel to toggle to User Settings . Press the OK  up/down to DRIVER ASSISTANCE and then LANE SAFETY
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. In DRIVER ASSISTANCE, select LANE SAFETY and one of the LKA modes:
 - **Assist:** LKA will automatically assist the driver's steering when lane departure is detected to help prevent the vehicle from moving out of its lane
 - **Warning Only:** LKA will warn the driver with an audible warning when lane departure is detected. This mode does NOT provide any steering assist
 - **Off:** LKA will turn off. The indicator light **D** will turn off on the cluster

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

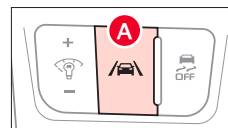

 (Located to the left of the steering wheel)

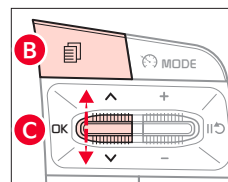

QUICK TIP

The Warning Volume can be adjusted in the User Settings*  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

For illustrative purposes only. Your actual display, buttons and/or features may vary. Actual User Settings steps may vary by model.

QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

Refer to section 5 in the Owner's Manual for more information.



When the front-view camera does **not** detect the lane traveled in, the lanes are gray.



When the front-view camera detects the lane traveled in, both lanes are white.



When the front-view camera detects the vehicle moving outside of the lane it is traveled in, the vehicle crossing lane will blink, either on the left or right lane (as shown in both images above)



Blind-spot View Monitor (BVM)*†3

 
Blind-spot View Monitor (BVM) displays the rear blind spot area of the vehicle in the cluster when the turn signal is turned on to help change lanes.

BVM Settings:

- Enable BVM in the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, BLIND-SPOT SAFETY and then BLIND-SPOT VIEW

BVM will operate when the Engine Start/Stop button is on and the turn signal is activated.

BVM will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

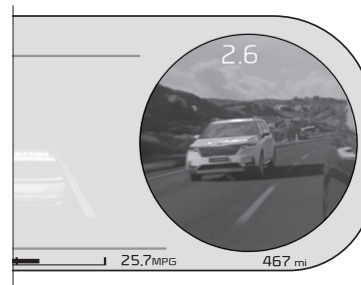

(Display showing left side of vehicle)

QR CODE

Blind-spot View Monitor (BVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 6 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
Driver Attention Warning (DAW)^{†4}

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.



If DAW is activated, the DAW information **A** will appear on the Instrument Cluster LCD when you select the Assist mode in the Instrument Cluster User Settings **⚙️**. A message, "Consider taking a break," **B** appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low.

DAW Settings:

- DAW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* ⚙️ in the Instrument Cluster** - Press the Mode button **C** on the Steering Wheel to toggle to User Settings **⚙️**. Press the OK **D** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Inattentive Driving
- **Warning Timing** - When in the Driver Assistance menu, select WARNING TIMING. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'

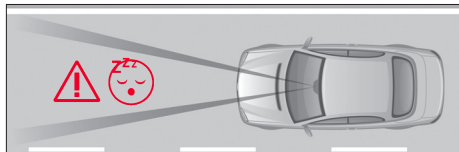

Images are for illustrative purposes only and may not reflect actual feature or operation.

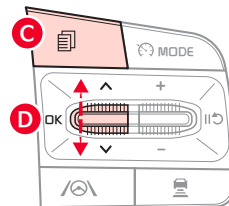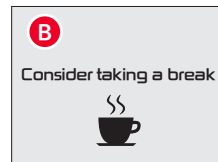  

(Buttons located on right side of the steering wheel)

QR CODE

Driver Attention Warning (DAW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Leading Vehicle Departure Alert (LVDA)*†3

Leading Vehicle Departure Alert is designed to alert the driver if the LVDA system detects the vehicle directly in front start to move or depart from a stop. When LVDA is on, your vehicle is stopped, and it detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.

LVDA Settings:

 
 
- LVDA can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings* ⚙️ in the Instrument Cluster** - Press the Mode button **B** on the Steering Wheel to toggle to User Settings ⚙️. Press the OK **C** up/down to toggle to Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select Leading Vehicle Departure Alert
- **Warning Timing** - When in Driver Assistance menu, select WARNING TIMING. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'

QUICK TIP

The Warning Volume can be adjusted in the User Settings* in the Instrument Cluster or the Vehicle Settings* on the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDERS:

- When the ignition is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

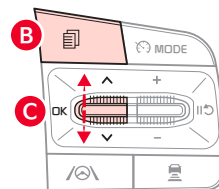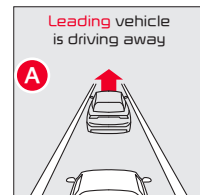

(Buttons located on right side of the steering wheel)

QR CODE

Leading Vehicle Departure Alert (LVDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, LVDA is not a substitute for safe and proper driving. Always drive safely and use caution. See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Safe Exit Assist (SEA)*†3

Safe Exit Assist (SEA) can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster LCD and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped.

 
In addition, when the electronic child safety lock button is in the LOCK position and an approaching vehicle from the rear area is detected, the electronic child safety lock button will not unlock even if the driver presses the button to prevent the rear doors from opening.

To turn on SEA, go to User Settings* in the Instrument cluster or the Vehicle Settings* in the infotainment system. Select DRIVER ASSISTANCE, then BLIND-SPOT SAFETY, and select SAFE EXIT ASSIST.

QUICK TIP

The Warning Volume can be adjusted in the User Settings* ⚙️ in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDER: SEA may not detect all objects and the occupants should always be mindful of their surroundings.

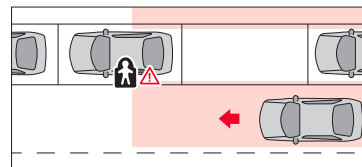

Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Safe Exit Assist (SEA) Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

When engaged, SEA is not a substitute for one's attention and may not detect all objects surrounding the vehicle. Always pay attention to traffic and to the area around your vehicle when exiting the vehicle.

See section 4 in the Owner's Manual for more information.

Lane Following Assist (LFA)^{†3}

Lane Following Assist is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. When driving, LFA can be switched on and off by pressing the LFA button **B**. When turned on, the instrument cluster indicator will initially illuminate white **C**. It will remain white when the system does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the LFA icon **C** will illuminate green **C**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. If LFA detects that the driver continues to have their hands off of the steering wheel, LFA will turn off and give an additional emergency warning.

LFA will operate only when these conditions are met:

 
- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 120 mph

QUICK TIP

The Warning Volume can be adjusted in the User Settings*  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDERS:

- LFA is not a substitute for safe and proper driving. Always drive safely and use caution
- If the ignition is cycled, LFA returns to its previous state, on or off, if activated in the User Settings* menu and when combined with SCC. If using the Steering Wheel LKA button, then LKA defaults to off

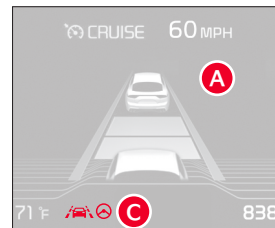

QR CODE

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, LFA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Navigation-based Smart Cruise Control (NSCC)*†3,8

Navigation-based Smart Cruise Control will help automatically adjust vehicle speed when driving on highways with posted speed limits by using road information from the navigation system, while Smart Cruise Control (SCC) is operating.

Smart Cruise Control (SCC) is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

Highway Curve Zone Auto Slowdown: NSCC can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system. When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, and the NAV icon changes to AUTO and turns green **A** in the NSCC indicator. When the vehicle passes the curved road, the vehicle may return to its previously set speed.

Highway Auto Speed Change: If the set speed is set to the current posted speed limit on the highway during NSCC operation, the set speed is changed automatically whenever the system receives information from the navigation system indicating the posted speed limit has changed.


SCC Operation: With SCC turned on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the **+||-** button **B** must be pressed to start moving the vehicle.

SCC will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

NSCC/SCC Settings:

- NSCC can be turned on/off by going to the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle settings* in the Infotainment System** - Press the SETUP key or the onscreen SETUP button. Press VEHICLE to enter Vehicle Settings. Select Driver Assistance > Driving Convenience > Highway Auto Speed Change
- **To turn on/set/adjust the SCC speed** - Press the Driving Assist button **C** on the Steering Wheel to activate SCC and the speed will be set to the current vehicle speed. SCC may decrease the speed to maintain the distance with the vehicle in front. The CRUISE indicator will illuminate on the instrument cluster. Press the **+||-** button **B** up/down to accelerate/decelerate to the desired speed. Press the button **B** to set the speed

 To set the vehicle distance: Press the Vehicle Distance button **D** on the steering wheel. Each time you press the button, the vehicle distance will change **E**, indicated by the number of bars that appear on the display **A**.




(Distances are approximate and vary depending on vehicle speed)

QR CODE


Navigation-based Smart Cruise Control (NSCC) Video



 Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

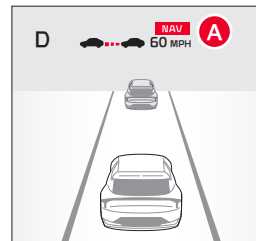

(Displays on LCD screen)

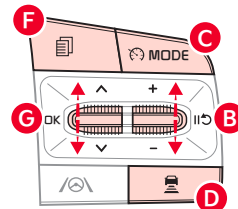 

Navigation-based Smart Cruise Control (NSCC)*^{3,8} (continued)

NSCC/SCC Settings (continued):

To pause/resume SCC operation: Depress the brake pedal or press the Pause/Resume button **+II↔-** **B**. The cruise indicator on the instrument cluster will change.

To turn SCC OFF: Press the Driving Assist button **⚡** **C**. The CRUISE indicator on the instrument cluster will turn OFF.

To adjust the sensitivity of SCC: Press the mode button **⏮** **F** on the Steering Wheel. With the **OK** button **⏵** **G**, select DRIVE ASSISTANCE, then SCC RESPONSE. Then select FAST, NORMAL or SLOW.

QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn NSCC on, the set speed will be set to 20 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It can even bring the vehicle to a complete stop in certain conditions. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the +/- switch up/down to start the vehicle
- NSCC is designed to function above approximately 20 mph only
- NSCC will not activate until the brake pedal has been depressed at least once after ignition ON or engine start
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system

REMINDERS:

- CRUISE indicator must be ON in order to operate SCC
- The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed. See the owner's manual for more information
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), Electronic Parking Brake (EPB) is activated and various other conditions. See owner's manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The navigation part of NSCC does not function when a destination is not set on the infotainment navigation system.
- NSCC is only available on certain controlled access roads and highways

NSCC is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

See section 6 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

SCC may decelerate if a surrounding vehicle intervenes in front of your vehicle. Smart Cruise Control may not recognize unexpected and sudden situations or complex driving situations, so always pay attention to driving conditions and control your vehicle speed.

Cruise Control (CC)^{†3}

- H Driving Assist **⚡** MODE button:** Press to turn the Cruise Control ON/OFF. The indicator will illuminate on the instrument cluster and the set speed will automatically activate at the vehicle's current speed
- I Press up to resume or increase cruising speed**
Press down to set or decrease cruising speed
- J Pause/Resume button:** Press to pause Cruise Control. Press again to resume Cruise Control

QUICK TIPS

- Cruise Control is designed to function at above 20 mph
- The Cruise Control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine start

 
REMINDER: Cruise Control is a part of Smart Cruise Control with Stop & Go* and can be set as the operating mode. To switch from SCC to Cruise Control, press and hold the Driving Assist **⚡** MODE button. Repeat to switch back to SCC mode.

QR CODE

Smart Cruise Control (SCC) with Overtaking Acceleration Assist Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

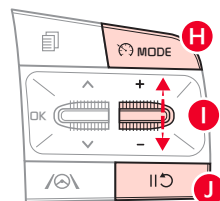

When engaged, NSCC and Cruise Control are supplemental systems and are not substitutes for safe driving.

Refer to section 5 in the Owner's Manual for more information.

Highway Driving Assist (HDA)*†3

Highway Driving Assist (HDA) is designed to help detect vehicles and lanes detected ahead, and help maintain distance from the vehicle ahead, maintain the set speed, and keep the vehicle between detected lane markers while driving on the highway or motorway.

When HDA is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If the conditions are not met, HDA will be in standby mode and the indicator light **A** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **A**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands on the Steering Wheel are not detected, HDA will cancel.

HDA settings:

- HDA can be turned on/off by going to the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then DRIVER CONVENIENCE. Select HIGHWAY DRIVING ASSIST to activate

QUICK TIP

The Warning Volume can be adjusted in the User Settings*  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDERS:

- Current highway speeds and controlled or limited access roads information may vary. Future navigation updates may change this information. See owner's manual for more information
- When the ignition is cycled, HDA returns to its previous state, on or off

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution. Refer to section 6 in the Owner's Manual for more detailed information, limitations and conditions.


Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Highway Driving Assist (HDA) Video



 Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

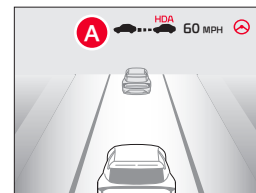

Rear View Monitor (RVM)^{†3}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the infotainment system screen while the vehicle is in Reverse.

RVM activates when the:

- Ignition or the Engine Start/Stop button* is in the ON position
- Gear Shift Lever is in the R (Reverse) position


To change RVM settings, touch the settings icon  while RVM is operating or go to VEHICLE SETTINGS on the Infotainment System*. Press SETUP, VEHICLE. In DRIVER ASSISTANCE, select PARKING SAFETY, then CAMERA SETTINGS.

REMINDERS:

- RVM is ON by default when the ignition is cycled
- While the Rear View Monitor is active the volume will be lowered on all audio modes
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens

When engaged, Rear View Monitor is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 4 in the Owner's Manual for more information.

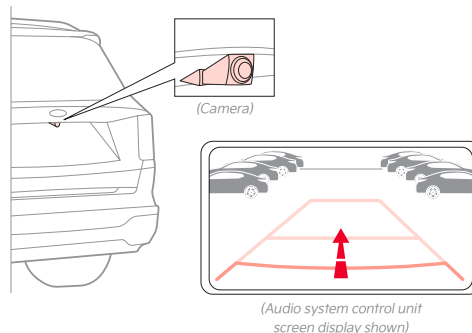 

Surround View Monitor (SVM)*†3

Surround View Monitor is a parking support system that is designed to show the areas around the front, rear, left and right sides of the vehicle via four wide-view cameras displayed onto the infotainment system screen.

Press **A** to turn SVM ON/OFF.

SVM will operate when:

- The Parking/View button **A** is pressed with the gear in D (Drive) or N (Neutral) when vehicle speed is below 9 mph
- Parking/View button **A** is pressed with the gear in P (Park)
- The gear shift is in R (Reverse). When the gear is in R (Reverse), Surround View Monitor will turn ON regardless of vehicle speed or button status
- The gear shift is changed from R (Reverse) to N (Neutral) or D (Drive) when vehicle speed is below 9 mph

 
Off Conditions:

- Parking/View button **A** is depressed
- When vehicle speed is above 9 mph, SVM will turn off and the screen will change back to the previous infotainment system screen
- One of the infotainment system buttons is pressed without the gear in R (Reverse). The screen will change back to the previous infotainment system screen


QUICK TIP

The Front wide-view camera will turn off when the gear shift is moved into Park or Reverse or the Parking View button is pressed.

To change the SVM settings, press the onscreen settings icon **B**, while SVM is operating.

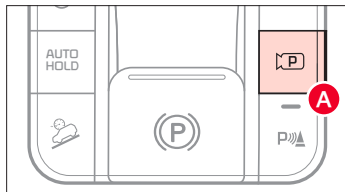

(Located below gear shift knob)

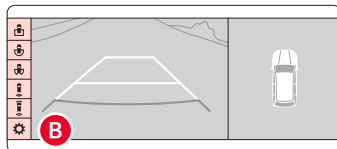 

Surround View Monitoring is only a supplemental system. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

QR CODE

Surround View Monitor (SVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

- The wide-view camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- While the SVM is active the volume will be lowered on all audio modes if you select Driver Assistance > Warning Method > Parking Safety Priority of Vehicle settings in the Infotainment System
- Through normal use and after washing or inclement weather, the rear camera may need cleaning. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens

Rear Cross-traffic Collision-Avoidance Assist (RCCA)^{†3}

Rear Cross-traffic Collision-Avoidance Assist is designed to warn the driver under certain conditions. It may temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.

When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

RCCA Settings:

 
 
 
- RCCA can be turned on/off by going to the User Settings*  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access User settings*  in the Instrument Cluster** - Press the Mode button  **C** on the Steering Wheel to toggle to User Settings . Press the OK **D** up/down to toggle to Driver Assistance, then Parking Safety. Select Rear Cross Traffic Safety and press the OK button **D**
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross Traffic Safety
- **Warning Timing** - When in the Driver Assistance menu, select WARNING TIMING. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'

QUICK TIP

The Warning Volume can be adjusted in the User Settings*  in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

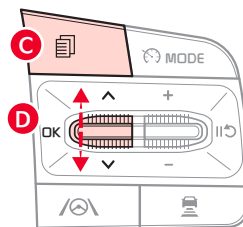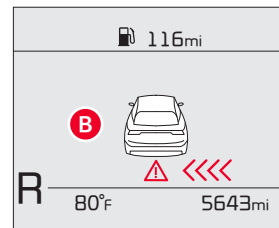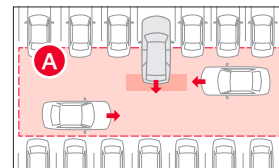

(Buttons located on right side of the steering wheel)

QR CODE

Rear Cross-traffic Collision Avoidance Assist (RCCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 4 in the Owner's Manual for more information.

Reverse Parking Collision-Avoidance Assist (PCA)*†‡

 
Reverse Parking Collision-Avoidance Assist is a supplemental system that is designed to assist the driver when the vehicle is in reverse by sounding a warning and temporarily braking if a pedestrian or any object is detected within the sensing area of the rear of the vehicle, or to help reduce the possibility of a collision.

PCA Settings:

- PCA can be turned on/off by going to the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY
- There are three modes:
 - **Rear Active Assist** - PCA will provide an audible alert and may apply temporary braking
 - **Rear Warning Only** - PCA will provide an audible alert
 - **Off** - PCA is disabled
- To set the initial warning activation time, go to Vehicle Settings* in the Infotainment System, then go to DRIVER ASSISTANCE, WARNING TIMING. Use 'Standard' in normal driving conditions. If the Warning Timing seems sensitive, change it to 'Late'

QUICK TIP

The Warning Volume can be adjusted in the User Settings* ⚙️ in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.

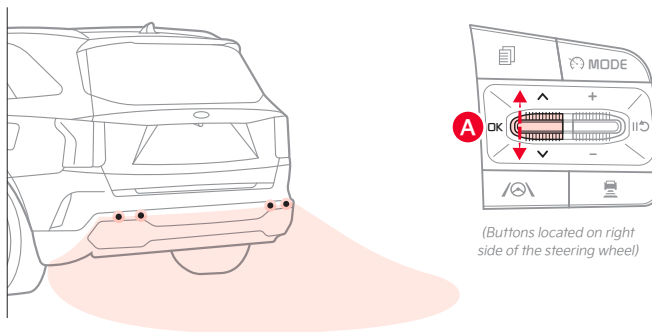

QR CODE

Reverse Parking Collision-Avoidance Assist (PCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Reverse Parking Collision-Avoidance Assist (PCA)* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Reverse Parking Collision-Avoidance Assist (PCA) may not detect every object around the vehicle. See section 6 in the Owner's Manual for more information.

Forward/Reverse Parking Distance Warning (PDW)^{†3}

Forward/Reverse Parking Distance Warning is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area to the front, rear and side of the vehicle when backing up.

To turn PDW on, press the Parking Safety button **A** (LED illuminated). To turn PDW off, press again **A** (LED not illuminated).

PDW will activate when the ignition is on/ready and the vehicle is in D (Drive) or R (Reverse).

Parking Distance Warning Auto On - To set the parking distance warning to be on at low speeds, enable it in the User Settings* in the Instrument Cluster or the Vehicle Settings* in the infotainment system.

To enable in User settings* in the Instrument Cluster - Press the Mode button **B** on the Steering Wheel to toggle to User Settings. Press the **OK** button **C** up/down to toggle to DRIVER ASSISTANCE, then PARKING SAFETY, and select PARKING DISTANCE WARNING AUTO ON

To enable in Vehicle settings* in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press VEHICLE to enter Vehicle Settings. Select DRIVER ASSISTANCE, then PARKING SAFETY and select PARKING DISTANCE WARNING AUTO ON

QUICK TIP

The Warning Volume can be adjusted in the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Go to SETUP, VEHICLE, DRIVER ASSISTANCE, WARNING SOUND AND HAPTIC, and WARNING VOLUME.


REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first


Forward/Reverse Parking Distance Warning is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. Forward/Reverse Parking Distance Warning may not detect every object around the vehicle.

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

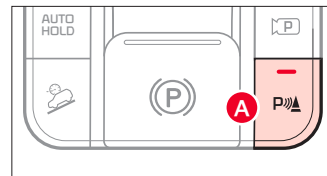 

(Located below gear shift knob)

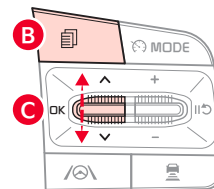 

(Buttons located on right side of the steering wheel)

QR CODE

Forward/Reverse Parking Distance Warning (PDW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Intelligent Speed Limit Assist (ISLA)*†3

Intelligent Speed Limit Assist is designed to use the information from speed limit information from the navigation system to inform the driver of the detected speed limit.

When ISLA is on and active, the system will display an alert on the Instrument Cluster LCD **A** of the detected speed limit. If the vehicle's current speed exceeds the detected speed limit, a warning will sound and the speed limit icon will blink on the LCD.

ISLA User Settings:

To turn ISLA on, press the Mode button **B** on the Steering Wheel and go to User Settings **C** on the Instrument Cluster LCD. Press the Move (OK) button **C** up/down and select Driver Assistance by pressing the OK button **C**, then Intelligent Speed Limit Assist.

 
 
To enable ISLA, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, then SPEED LIMIT.

Select one of the three modes:

- **Speed Limit Assist:** Informs the driver of the detected speed limit, display a message change the set speed of the MSLA or SCC to help the driver stay within the posted speed limit
- **Speed Limit Warning:** Informs the driver of the detected speed limit and warn the driver when the vehicle is traveling faster than the posted speed limit
- **Off:** ISLA is disabled

QUICK TIP

You can set a speed limit offset to the posted speed limit by going to User Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the detected speed limit, when ISLA is on

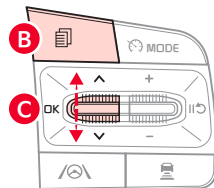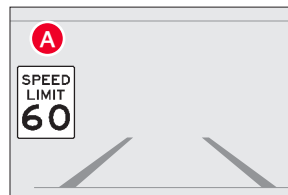

(Buttons located on right side of the steering wheel)

QR CODE

Intelligent Speed Limit Assist (ISLA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
REMINDER: Additional information may be displayed if additional road sign information is detected

When engaged, ISLA is a supplemental system. It is not a substitute for safe driving. Obey all speed limits and always pay attention to the road and its conditions

Instrument Cluster Illumination Control

With the parking lights/headlights ON, press the button **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

REMINDER: The Instrument Cluster illumination Control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

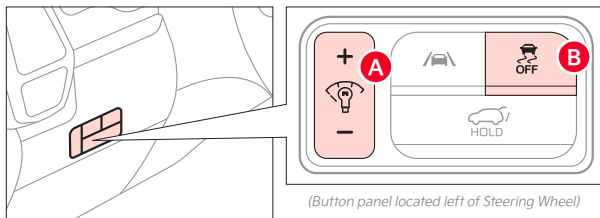

(Button panel located left of Steering Wheel)

See section 5 in the Owner's Manual for more information.

Hill-start Assist Control (HAC)^{†5}

HAC helps prevent the vehicle from rolling backwards, for two seconds, when accelerating from a stop while on a steep incline. The HAC automatically activates whether the ESC is OFF or ON.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator - this is normal HAC operation
- HAC provides a two-second delay before the vehicle may start rolling backwards
- HAC does not activate if ESC has malfunctioned

REMINDEES:

- HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline

Electronic Stability Control (ESC)^{†5}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned on for daily driving whenever possible.

Press the ESC OFF button **B** to turn Traction Control OFF/ON (ESC OFF indicator will illuminate).

To turn OFF both the Traction Control and Stability Control, press and hold for more than 3 seconds (ESC OFF indicator will illuminate, and an alert sounds). Press it again to turn ON.

REMINDEES:

- ESC is active by default at vehicle startup. When the ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation

QR CODE

Electronic Stability Control Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 5 in the Owner's Manual for more information.

 
Reverse Parking Aid Function*

When the gear shift lever is moved into R (Reverse) and while the vehicle is moving backward, the outside rearview mirrors **A** will rotate downward to aid in reverse parking.

When the button **B** is depressed, the Reverse Parking Aid Function will operate (LED lit).

To turn OFF the function, press the button again.

- The outside rearview mirrors will automatically return to their original positions when:
- The Engine Start/Stop Button is in the OFF position
- The gear shift lever is moved to any position except R (Reverse)
- Outside rearview mirror buttons are not depressed

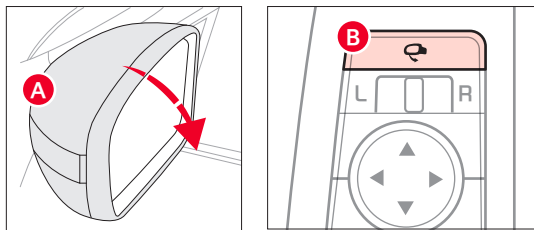

(Button/switch panel located on Driver's Door)

REMINDER: When the button **B** is not depressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.

 
Engine Start/Stop Button*†6

To start the engine:

- Depress the brake pedal
- Press the Engine Start/Stop button while gear shift is in P (Park) or N (Neutral)

To turn the engine OFF: Press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob inside the vehicle.

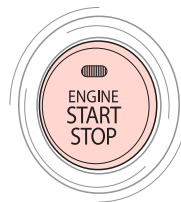

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once (amber light)

On position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the Engine Start/Stop button again (red light)
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (reddish-orange light)

Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine

See section 5 in the Owner's Manual for more information.

QR CODES

Start/Stop Button Video



Kia Smart & Folding Key Fobs Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Power Windows, Window Lock & Central Door Lock

A Pull/Press to operate Front Windows Auto Up/Down*

QUICK TIP

Press button again to stop Auto Up/Down function.

B Press to Unlock/Lock All Doors

C Press to disable Rear Passenger Windows / activate Electronic Child Safety Lock System disabling rear door handle operation

QUICK TIPS

While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

 
- When pressed **C**, window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Button configuration may vary depending on vehicle model.

Refer to section 4 in the Owner's Manual for more information.

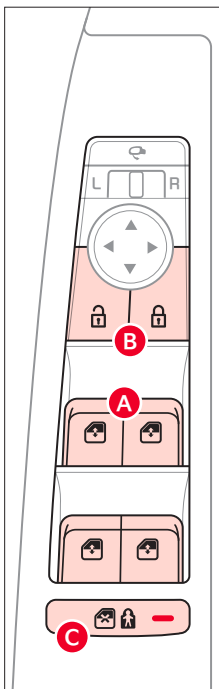

(Button/switch panel located on Driver's Door)

Electronic Child Safety Lock System

Press button **C** to lock the rear passenger doors. An indicator will illuminate showing the system is active.

This system is on by default, and then activated once the button **C** is pressed. To deactivate, press the button again.

See section 4 in the Owner's Manual for more information.

Rear Door Locks - Double Pull to Open

If the inner door handle is pulled once when the door is locked, the door will unlock. If the inner door handle is pulled once more, the door will open.

QUICK TIP

To open the Rear Doors, pull the inner door handles two times.

See section 4 in the Owner's Manual for more information.

QR CODES

Electronic Child Safety Lock System Video



Rear Door Locks - Double Pull to Open Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Power Folding Outside Mirrors*

 
- A** Press the L or R buttons to select the mirror to adjust
- B** Press button arrows left/right or up/down to adjust mirror position
- C** Press to unfold/fold the outside rearview mirrors
- A** Toggle button to center to automatically fold/unfold mirrors when:
 - The Smart Key* Lock/Unlock buttons are pressed
 - The door outside handle button* is pressed

QUICK TIP

The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle.

REMINDERS:

- When the mirror button **A** is in the center, press the Lock button on the Smart Key to automatically fold the mirrors when exiting vehicle
- To lock the position of mirrors, toggle switch to the neutral (center) position

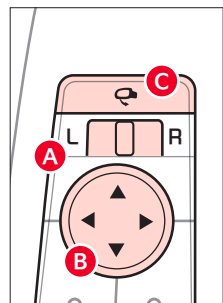


(Button/switch panel located on Driver's Door)

Power/Heated Outside Mirrors*

Mirror heaters are activated when the Rear Defroster is turned on **D**. Use mirror to defog/defice side mirrors.

 Refer to section 4 in the Owner's Manual for more information.

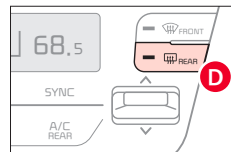

(Button located on Climate Control panel)

Manual Folding Mirrors*


To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

Refer to section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

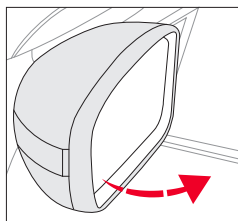 


Turn Signals & Fog Lights*

To operate:

- Slightly move lever up/down to activate One-Touch Lane Change Signal **E**
- **Turn Signals** - Move lever Up/Down for Right/Left Turn Signal **F**
- **Fog Lights** - Press toggle switch **G** to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for Fog Light operation

 One-Touch
Lane Change
Signal

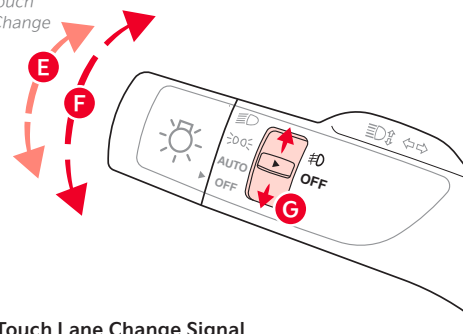

One-Touch Lane Change Signal

is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing **E**. The lane change signal will blink 3 times. To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster modes.

 
Refer to section 4 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Headlights & High Beams

To operate:

- Rotate the switch to change the Headlight function **A**
- Push the lever to turn the High Beams ON **B**
- Pull the lever to flash the Headlights/High Beams **C**

AUTO Light position* - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

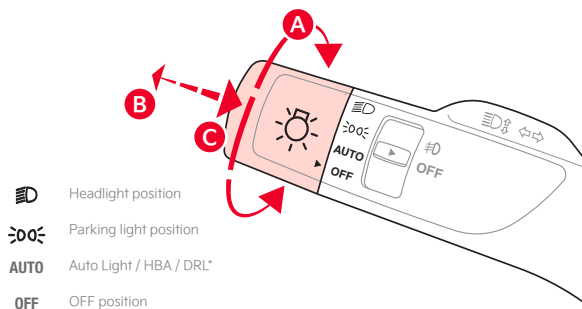

Daytime Running Lights (DRL)* - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Headlight switch is in the OFF position

High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, go the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System. Select Lights and High Beam Assist. To activate HBA, toggle the light switch to the AUTO Light position and push the lever away from you. The High Beam Assist indicator will illuminate .

REMINDERS:

- HBA does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you when the high beam is off, the high beam will turn on without High Beam Assist canceled. If the lever is pulled towards you when the high beam is on by High Beam Assist, low beam will be on and the High Beam Assist will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When HBA is not working properly, the 'Check High Beam Assist system' warning message will appear and warning light will appear on the cluster. See an authorized Kia dealer for service

See section 5 in the Owner's Manual for more information.

QR CODE

High Beam Assist (HBA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Windshield Wipers & Washers

To operate:

 
- Move lever Up/Down **A** to change Wiper modes
- Push switch **B** to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe **C**

Rain Sensing* (Auto Control Wipe):

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and controls the wiping cycle for the interval selected. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To vary the speed setting, press the Wiper Switch **B** up/down.

If the wiper lever is set in AUTO mode when the Power button is ON, the wiper will operate once to perform a self-check of the system.

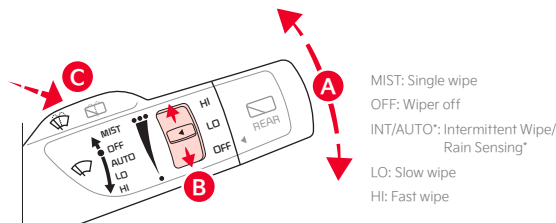


QUICK TIPS

- Moving switch **B** up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes
- Set the wiper to the OFF position when the wiper is not in use

Rear Wiper & Washer*

To operate:

 - Rotate Rear Wiper switch to change Wiper modes **D**
- Push to spray and wipe **E**

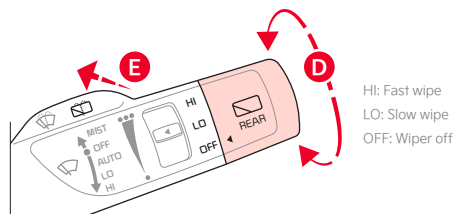

QUICK TIP

 
On Rear Wipers, the intermittent wipe function is not adjustable. LO and HI sets wiper speed.

Lifting Wipers (Wiper Service Mode)

To lift the windshield wipers to clean windshield, inspect or replace wiper blades or raise wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the service position **F** to prevent damaging the hood.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch **B** to the MIST position and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to normal position, turn the ignition ON, then activate MIST.

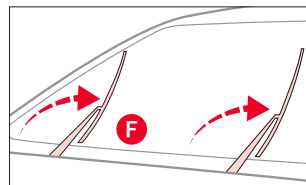

These illustrations are for demonstration purposes only. Actual feature on vehicle may vary. Refer to section 4 in the Owner's Manual for more information.

QR CODES

Wipers and Wipers Stalk Video



Lifting Wipers (Wiper Service Mode) Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Tilt/Telescoping Steering Wheel^{†19}

To adjust the Steering Wheel, press the Lock-Release Lever **A** down and adjust the desired angle **B** and distance **C**.

 
When finished, pull the Lock-Release Lever **A** up to lock the Steering Wheel in place.

QUICK TIP

Prior to adjusting the angle, it may be helpful to first adjust the steering wheel's distance from the driver.


Do not attempt to adjust steering wheel position when vehicle is in motion as this may cause you to lose control of the vehicle.

For illustrative purposes only. Your steering wheel may vary. See section 5 in the Owner's Manual for more information.

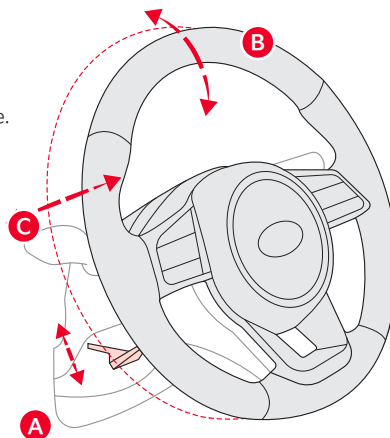

Audio Controls^{†17}

 - D Audio MODE button:** Press to cycle through FM/AM/SiriusXM*/Media modes
 - E Seek/Preset buttons:** FM/AM/SiriusXM** Modes: Press to advance through Preset Stations. Press and hold to auto seek
Media Modes: Press up/down to move track up/down. Press and hold to fast forward/rewind (except for *Bluetooth®* Audio)
 - F Volume button:** Press up/down to raise/lower volume
- Mute button:** Press to mute all audio (Media pauses in some Media modes when pressed)

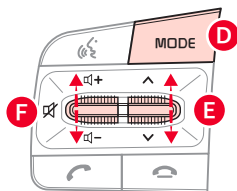

(Controls on left side of Steering Wheel)

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

For other audio system information, refer to pages 34-41.

For more information, refer to the Owner's Manual or the Car Infotainment System Quick Reference Guide.

QR CODES

Tilt/Telescoping/Heated Steering Wheel Video



Steering Wheel Controls Video



Star, Favorite & Radio Presets Buttons Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Bluetooth® Wireless Technology†2,17

- A Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition

Kia Connect with Navigation* - When enrolled with a Kia Connect subscription, press this button to activate the Kia Connect Voice Assist to use navigation guidance and search destinations

- B Volume button:** Press up/down to raise/lower speaker volume

Mute button: Press to mute the microphone during a call

- C Receive/Place Call button:** Press to place/answer calls. If no phone is paired, press the button to pair a phone

- D End Call button:** Press to end a call, reject an incoming call or cancel a function

 
QUICK TIPS

- When using the voice command feature, wait for the system beep before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another
- The system may register or pair multiple Bluetooth® devices

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

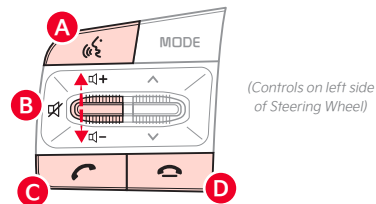

Pairing a Phone

For instructions on how to pair a phone, refer to the Car Infotainment System Quick Reference Guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call Using Steering Wheel Controls

When using the voice command feature, wait for the system beep before speaking the command.

There are two options for placing a call:

- **Option 1:** Press the Receive/Place Call button **C** (displays the phone screen with call history)
- **Option 2:** Press the Talk button* **A**. Then say the command "Call {name}" or "Dial {number}", followed by contact name or number

REMINDER: Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device

Bluetooth® Wireless Technology^{†2,17} (continued)

Voice Recognition* and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- **Bluetooth® Music Streaming** - If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C - Open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands
- The system may register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations.

QR CODE

Voice Recognition Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual.

Android Auto™ †2,22 / Apple CarPlay® †2 Setup

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store†2. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System-Value only):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Kia Connect with Navigation):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION, select PHONE PROJECTION SETTINGS, then select Android Auto™. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the Infotainment System home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, with disposable compressed air
 - The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Cable Connection setup for Apple CarPlay® (Kia Connect with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®†2 with the vehicle's USB port using the manufacturer's cable provided with your iPhone®
2. Press the SETUP key on the Infotainment System
3. Press DEVICE CONNECTION on the screen, select PHONE PROJECTION SETTINGS, and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY®. Review all terms, conditions and requests on the Infotainment System and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- **Android Auto™ compatibility requirements for connection:**
 - Kia Connect with Navigation (USB cable connection only): OS Android™ 8.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Standard Audio System - Value (USB cable & wireless connection):
 - **USB cable connection** - OS Android™ 8.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - **Wireless connection** - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- **Apple CarPlay® compatibility requirements for connection:**
 - Kia Connect with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available
- Android Auto™ and Apple CarPlay® requires smartphone cellular data service. Normal data rates will apply

 
QR CODE

Wireless Apple CarPlay® & Android™ Auto Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Standard Audio System-Value* — FM/AM/Media (USB, Bluetooth[®]†2,17 Audio, My Music)

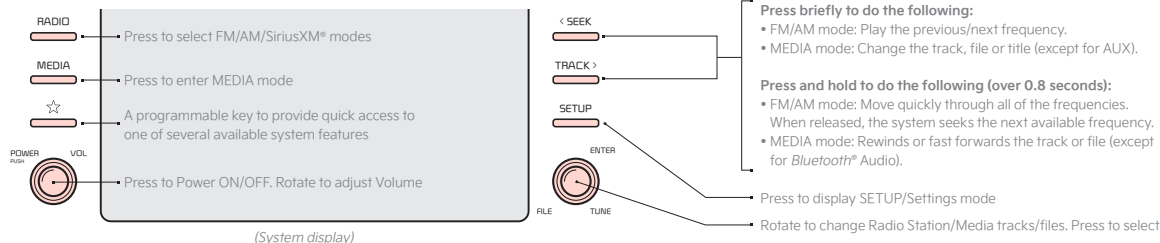

Sound Settings - To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio head unit or the onscreen MENU button, when in MEDIA mode
2. Select the onscreen SOUND button or SOUND SETTINGS
3. Select the menu item
4. Using the touchscreen, press arrows to adjust the settings

SiriusXM[®] Smart Favorites: In Radio mode, choose SiriusXM[®]†16, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Presets: Press the favorite (star) button near the station information. To Save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

Custom Button ☆: To Program the Custom Key, press the **SETUP** key, then press the Custom button. Select one of the available features you would like the Custom button to open.

Software updates - To keep your software up to date, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. **Note:** Visiting a dealer for software update may include an additional charge.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge

REMINDERS:

- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.
- Prolonged use of the Infotainment System in ACC mode may drain the vehicle's battery

QR CODES

Standard Audio System-Value Video



Standard Audio System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Your vehicle's audio system may differ from that in the illustration. For further audio system operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 29-36.

Kia Connect Activation*^{†1} (Systems equipped with Kia Connect only):

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press Kia Connect icon
 - c. Press Activate
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter phone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone text message or email:
 - a. Check your phone text message or email for verification code
 - b. Open the link in your text or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code

REMINDER: This vehicle is not equipped with over-the-air system updates. You can also download map updates for the navigation system by going to update.kia.com. Check for updates that are generally available twice a year.

Kia Connect Assistance*^{†1}

Virtual Assistant ⓘ ⓘ - Press to connect to a virtual assistant to hear information about the Kia Connect features

Kia Connect Local Search ⓘ (systems with navigation) - Press to connect to the search function to find points of interest or other locations, like "cafe"

Kia Connect ⓘ (non-navigation systems) - Connect to the Kia Connect Call Center

Roadside Assist ⓘ ⓘ - Press to connect to a Roadside Assistant where you can request vehicle towing services

 
REMINDER: These buttons may be located in the rearview mirror or the overhead console.

For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, Kia Connect Assistance buttons are located on the Rearview Mirror.

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
- e. Go back to the page with your verification code and press "I have entered my verification code." A link will be provided to download the Kia Access app from your app store. After installing the app, log in and enjoy

Kia Connect is currently unavailable for model year 2023 vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

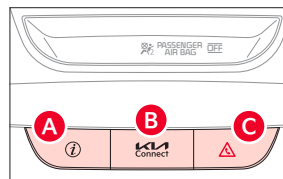

(Buttons on overhead console; in some models, the buttons are located in the Rear View Mirror)

QR CODES

Kia Connect Activation Video



Kia Access app Video



Kia Connect Assistance Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Access App Download^{†1}

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and start an account (refer to Kia Connect Activation page). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use Kia Connect. If these conditions are not met, remote commands may not execute or may take longer to execute. It will also effect voice commands such as navigation POI or address search
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. When Remote Start is activated, if the driver does not enter the vehicle within 10 minutes, the Remote Start will turn the engine off
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect again



Kia Access App Features Guide^{†1}

The Kia Access App Features Guide is a step-by-step guide that helps you utilize the app to its full potential by detailing how to use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

Do not use remote climate control or remote start if vehicle is in an enclosed area (e.g., closed garage) or a partially enclosed area without ventilation. Close all doors leading from adjacent living areas to the vehicle area before executing a remote climate control or remote start command.

QR CODES

Download the Kia Access App by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.

 


Kia Access App Features

Guide. Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Connect^{†1} w/ Navigation^{†8} - FM/AM/SiriusXM^{®†16}/ Media (USB, *Bluetooth*^{®†2} Audio)

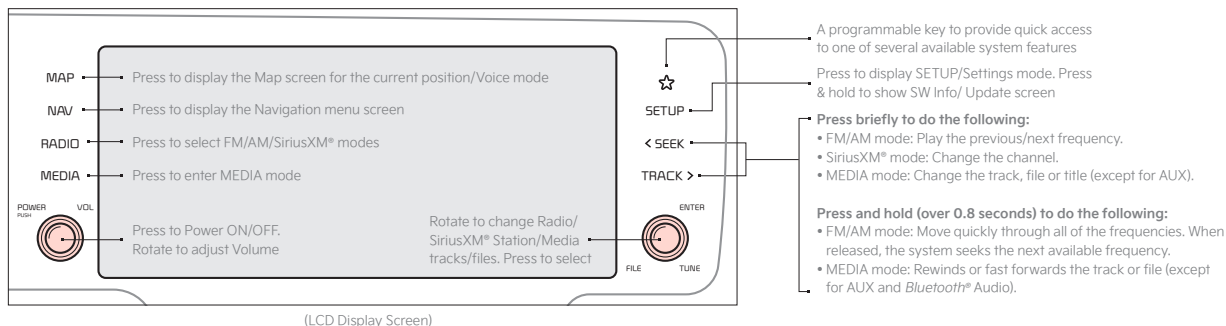

Sound Settings: To adjust the sound settings from any audio mode, press the SETUP button on the infotainment system, then select the onscreen SOUND button. Select the menu item to change settings, and use the onscreen buttons to adjust settings.

Radio Presets: To save a preset, press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

SiriusXM[®] Smart Favorites: In Radio mode, choose SiriusXM[®], then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program the Custom Key, press and hold to select an available feature you would like the Custom Key to open.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to *Bluetooth*[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto[™] or Apple CarPlay[®] on your smartphone, the smartphone's navigation system may also be available
- This system supports Android Auto[™] and Apple CarPlay[®] (USB connection only)
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge
- At any time, you can interrupt Kia Connect Command Feedback by pressing the TALK button on the steering wheel

Kia Connect^{†1} w/ Navigation^{†8} - FM/AM/SiriusXM^{®†16}/ Media (USB, Bluetooth^{®†2} Audio) (continued)

REMINDERS:

- To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.
- Prolonged use of the infotainment system in ACC mode may drain the vehicle's battery
- **Map/software updates:** To keep your map and software up to date, visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. Note, visiting a dealer for software update may include an additional charge.

Kia Connect may be currently unavailable for model year 2023 or later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

For further Kia Connect with Navigation operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, see pages 33-40. Your vehicle's audio system may differ from that in the illustration.

QR CODES

Kia Connect with Navigation Video



Navigation System Important Tips Video



Navigation System Updates Video



Wifi Hotspot Video



Infotainment System Drive Profile Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Multimedia USB Ports, Power Outlets, & USB Charger Ports*

Multimedia USB Port*

A Use the Multimedia USB port to connect USB audio devices and smartphones

USB Charger Ports*

B USB charger ports* are located in the Center Panel, inside and on the back of the Center Console

Power Outlets

 
C Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet

QUICK TIP

The power outlets are inactive when the Engine Start/Stop button is OFF.

REMINDERS:

- Using the Power Outlet (accessory plug) and USB charger for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) and AC Inverter for prolonged periods of time with the Engine Start/Stop button in the IGN Position (Engine OFF)
- Use only the charging cables that your device manufacturer supplied. Third party cables may cause damage to device
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer

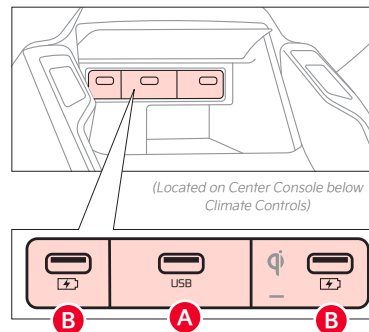

QR CODE

Multimedia USB Port, Power Outlets & USB Charger Port Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

AC Inverter*

The AC inverter supplies 115V/150W electric power to operate accessories or devices.

To use the AC inverter, open the AC inverter cover and connect a plug to it.

The AC inverter is ON when the vehicle is on.

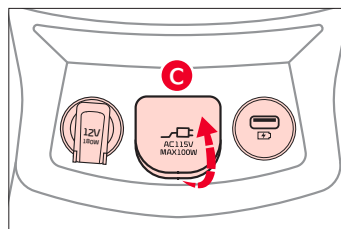

(Located on Back of Center Console)

Refer to section 5 in the Owner's Manual for more information.

Digital Clock - Infotainment System

Press SETUP, then select General, scroll down and select Date/Time from the menu to adjust. Then use the onscreen buttons to navigate through setup and return to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect with Navigation*)

Refer to the Car Infotainment System Quick Reference Guide for more information.

Wireless Smartphone Charging System*†21

Charge a compatible Qi Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

 
1. Enable Wireless Charging in the User Settings mode in the Instrument Cluster* or Vehicle Settings* in the Infotainment System, select CONVENIENCE then WIRELESS CHARGING SYSTEM
2. Slide open cover **B**. Place the compatible smartphone on the center of the charging pad **A**
3. Indicator light **C** may change to amber once wireless charging begins
4. Once charging is complete, the amber light may change to green

QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- Wireless charging must be enabled in user settings
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber
- For wireless charging to occur, all doors (excluding the rear hatch) must be closed & the Smart Key Fob must be detected inside the vehicle

REMINDERS:

- Some smartphone models are not Qi certified, which may affect the availability, speed or performance of the wireless charging
- If the driver door is opened, charging will be disabled
- Wireless charging technology allows for a device to be charged using inductive charging, however, device compatibility varies. See your Owner's Manual for more detailed information and the back page for legal disclaimers
- The wireless charger uses inductive charging, which is less efficient than conventional charging through a cable
- **Charging Performance** - Device position on the wireless charging system can affect charging performance. Other factor that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness
- Avoid placing other metal items in the bin while charging as to not impede the charging area

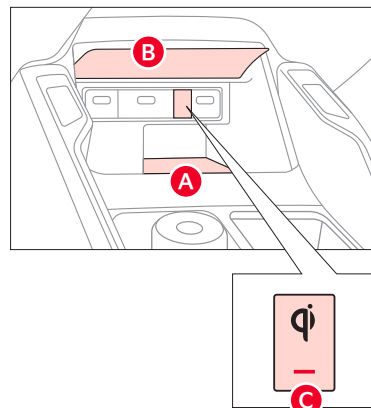

QR CODE

Wireless Smartphone Charging Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Charging system only works with select devices. Refer to the section 4 in the Owner's Manual for warnings and instructions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Automatic Climate Control*

 - A** Driver's temperature control switch
- B** AUTO (automatic control) button (High, Medium, Low)
- C** A/C (Air Conditioning) On/Off button
- D** Turn the Auto Climate Control system OFF button
- E** FRONT windshield defroster button
- F** REAR window defroster button
- G** Fan speed control button
- H** MODE Selection button
- I** CLIMATE information screen
- J** A/C Rear Control ON/OFF button
- K** Recirculation mode button/indicator
- L** Passenger's temperature control switch
- M** SYNC temperature control selection button*
- N** Driver's Only temperature setting

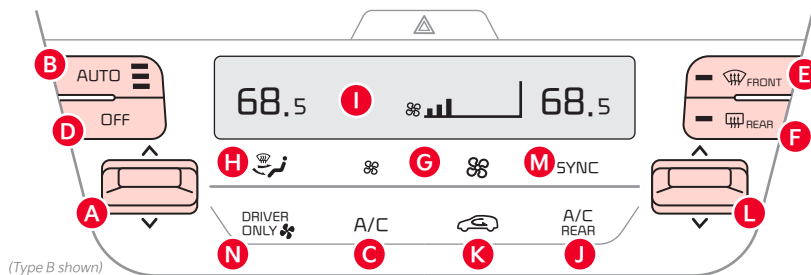

Climate Control Auto Function

1. Press AUTO **B** to select Full Auto Operation. Press once for the air flow high setting, twice for medium setting and once more for the lower setting. The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Press up/down to set desired driver's temperature **A**
3. Press SYNC* **M** to select Sync Temperature Control Operation*, which synchronizes the passenger's temperature to the driver's setting

Defrost/Defog Outside and/or Inside Windshield:

1. Set Front Fan Speed **G** to the highest position
2. Set Temperature **A** to Hot
3. Press the Front Defrost button  **E**

REMINDERS:

- A/C button indicator **C** will not illuminate if the desired adjusted temperature is greater than that of the ambient temperature.
- Recirculation mode **K**: vehicle will automatically switch to recirculation mode when Max A/C is turned on

The Automatic Climate Control system may differ from those in the illustrations. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Air Flow Modes

To select Air Flow Modes, press the mode button **H** to cycle through to the desired mode:



Automatic Climate Control* (continued)

Auto Defogging System (ADS)

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

QUICK TIPS

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Warm air may flow in through the vents if the Recirculated Air button is not pressed ON (LED lit)
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility and/or cause smell/odor

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Paddle Shifters

 
Paddle Shifters are operable when the shift lever is moved into the Drive (D) position.

Paddle Shifting: The system changes from automatic mode to manual mode when you pull the [+] or [-] paddle shifter  once to shift up or down one gear.

For illustrative purposes only. Your actual steering wheel and/or paddle shifters may vary.

Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.

Refer to section 5 in the Owner's Manual for more information.

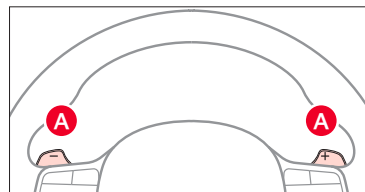

(Paddles on rear side of steering wheel)

QR CODES

Automatic Climate Control Operation Video



Auto Defogging System (ADS) Video

 


Automatic Transmission Sportmatic Shifting with Paddle Shifters Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Manual Climate Control*

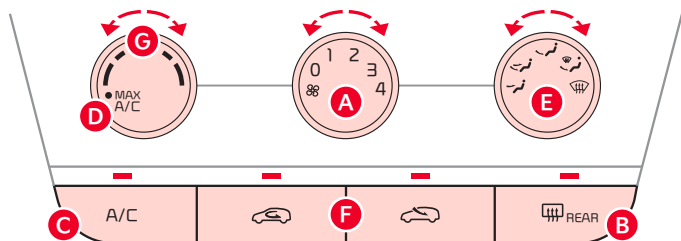

- A** Front fan speed control knob
- B** Rear window defroster button
- C** Air conditioning button
- D** Max A/C position
- E** Mode selection knob
- F** Air intake control buttons
- G** Temperature control knob

Defrost Outside and/or Inside Windshield:

Set front fan speed **A** to the highest position

Turn temperature control **G** to Hot

Press the front defrost button **B**

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

- Face-Level
- Bi-Level
- Floor-Level
- Floor/Defrost-Level

QUICK TIPS

 
- Defrost Mode opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit).
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility

3rd Row Climate Control*

- I** 3rd Row air conditioning ON/OFF button
- J** 3rd Row fan speed control knob

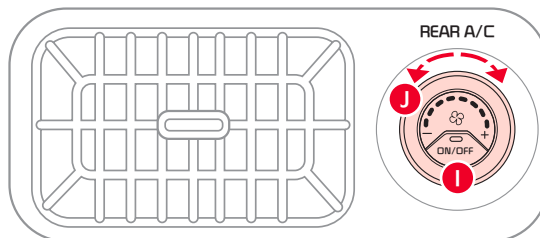

(Rear climate control)

Your Manual Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

Automatic Gear Shift with Sportmatic®†2 Shifting (Manual Mode)

P: Park - To shift into Park from any gear, press the Release button **A** on the gear shift while the vehicle is stationary and the brake pedal is depressed, and shift

R: Reverse - To shift into Reverse, depress the brake pedal, press the Release button **A**, and move the shift lever into Reverse.

N: Neutral

D: Drive

 
[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode: To enter the Manual mode, move shift lever from D to left gate. To shift while in Manual mode, move shift lever up [+] to upshift or down [-] to downshift.

QUICK TIPS

- Press the brake pedal and depress release button to move the gearshift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

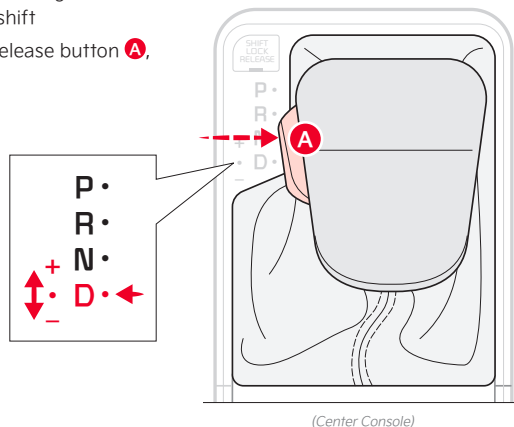

Dual Clutch Transmission (DCT)*

Some Kia vehicles are equipped with Dual Clutch Transmission for automatic transmissions.

The following are unique driving tips for the Dual Clutch Transmission:

- To hold the vehicle stationary on an incline, the service brake or parking brake MUST be used or the gear shift MUST be in the (P) Park position. If the vehicle is held stationary by applying the accelerator pedal on a slope, the clutch/transmission may overheat, resulting in damage
- Avoid aggressive launches on steep grades as this may result in an overheated clutch and transmission
- A slight time lag may be experienced at takeoff from standstill during aggressive acceleration maneuvers

If the clutch is overheating, an amber warning light*  will be displayed in the instrument cluster.

Should this condition occur, pull over and place the vehicle in Park and idle the engine.

QR CODES

Automatic Transmission
Sportmatic Shifting with
Paddle Shifters Video



Dual Clutch Transmission
(DCT) Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the
Owner's Manual for additional
information on Automatic Gear
Shift or DCT operation or call Kia
Consumer Affairs for additional
information.


Images are for illustrative
purposes only and may not
reflect actual feature or
operation.

AWD (All-Wheel Drive) Lock*

When you select AWD Lock mode by pressing the AWD LOCK button **(A)**, the AWD LOCK mode increases the drive power when driving on wet pavement, snow covered roads, and/or off-road.

- This mode is used to improve traction while climbing or descending sharp grades, off-road driving, driving on sandy and muddy roads, etc., to improve traction
- If AWD LOCK is enabled at low speeds, the vehicle will automatically shift to AWD AUTO at speeds greater than 19 mph.
- If the vehicle decelerates to speeds below 25 mph, the transfer mode is shifted back into AWD LOCK.

 When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.

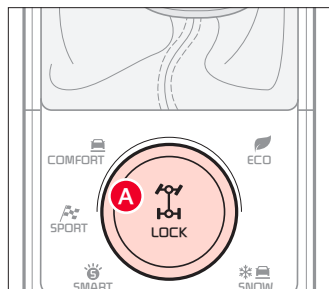

(Button on center console below gear shift)

No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

Idle, Stop & Go (ISG) System

 
The ISG system is designed to reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator **(A)** **(B)** on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG System, press the ISG OFF button **(C)**. If you press again, the system will be activated.

See section 5 in the Owner's Manual for more information.

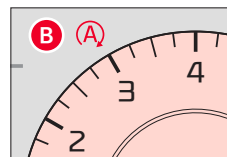

(LCD instrument panel Type B)



(Button on center console below gear shift)

QUICK TIPS

- If the AUTO STOP indicator **(A)** **(A)** is solid yellow, the system is functional, but just has not met all its enabling criteria to activate ISG at that time.
- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

QR CODE

Idle, Stop & Go Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 5 in the Owner's Manual for more information.

REMINDERS:

- ISG is active by default at vehicle startup. When ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator **(A)** is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer

Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated **(P) BRAKE** on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive).

To release the EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application
- Pull up and hold the EPB switch a second time to increase brake pressure if parked on a decline or incline

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood and liftgate (trunk) must be closed, and the driver's seat belt must be fastened.

 
The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - When vehicle is in Park and at a standstill, and AUTO HOLD button **B** is pressed On, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn Off when the AUTO HOLD button **B** is manually pressed Off or when the EPB is manually turned On.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

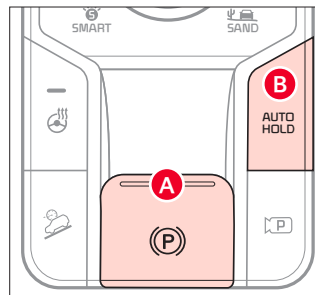

(Button on center console below gear shift)

Image is for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Electric Parking Brake / Auto Hold Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to section 5 in the Owner's Manual for more information. Refer to page 4 for location of Instrument Cluster indicators.

REMINDERS:

- Auto Hold only operates when vehicle is in Drive, Neutral or Reverse. Auto Hold turns off when the ignition is cycled
- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Heated Steering Wheel*

Press the Heated Steering Wheel button **A** to turn the Steering Wheel Heater on/off while the Engine Start/Stop button is in the ON position. The Steering Wheel Heater will turn off automatically in 30 minutes, or when button **A** is pressed again to deactivate.

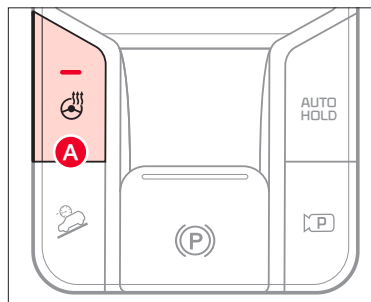

(Located below gear shift knob)


QUICK TIPS

- If ignition is turned OFF, then ON again within 30 minutes of the Steering Wheel Heater being turned ON, the system will return to its previous state
- The system returns to ON when ignition is cycled. To turn OFF system, press the Heated Steering Wheel button **A**
- With the heated steering switch in the ON position, the heating system in the steering wheel turns OFF or ON automatically depending on the steering wheel temperature, if equipped

REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

Images are for illustrative purposes only and may not reflect actual feature or operation.

 Seat Warmers^{*†15} / Ventilated Seats*

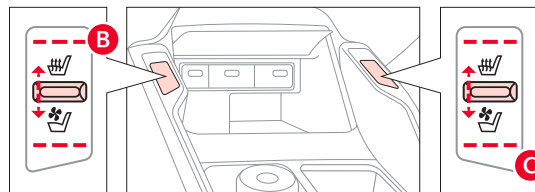

(Buttons located on top sides of center console)

B Seat Warmers

- Press the button up once for high setting (3 LEDs lit)
- Press the button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

C Ventilated Seats

- Press the button down once for high setting (3 LEDs lit)
- Press twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically, if equipped
- System is OFF by default

REMINDER: Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.

Refer to section 4 in the Owner's Manual for more information.

QR CODES

Seat Warmers and Ventilated Seats Video



Tilt/Telescoping/Heated Steering Wheel Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

 
Front Seat Headrest Adjustment†7

Up/down adjustment:

- To raise the headrest, pull the headrest up **A** to the desired position
- To lower the headrest, press the button **B**, then press the headrest down **C**

Forward/backward adjustment*:

- Pull the headrest forward/backward **D** to one of three positions
- When forward, to move the headrest to the furthest backward position, pull it fully forward then release

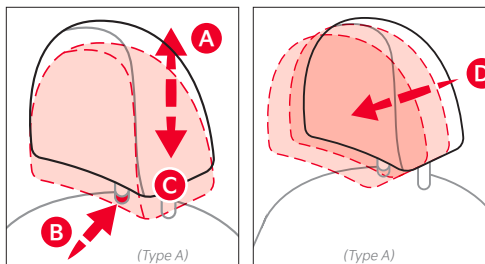

QUICK TIP

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDERS:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

Refer to section 3 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

Driver Position Memory System*

The integrated system stores into memory the position of the Driver's Seat and the Outside Rearview Mirrors.

To store positions into memory, first place the Gear Shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

 - Adjust the Driver's Seat and the Outside Mirrors
- Press the SET button **E** on the control panel. System will beep once
- Press one of the memory buttons **F** within 5 seconds. The system will beep twice when memory has been stored
- "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD screen

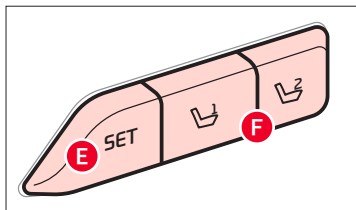

(Buttons located on Driver's Door Panel)

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

QR CODES

Manual Adjustable Driver's Seat Video



 
 
Power Adjustable Driver's Seat with Memory Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Power Adjustable Driver's Seat^{*†13} / Power Lumbar^{*†13}

Move/Press the controls to adjust the Seat forward/backward, the Seat Cushion height, the Seatback recline or the Lumbar up/down/forward/backward.

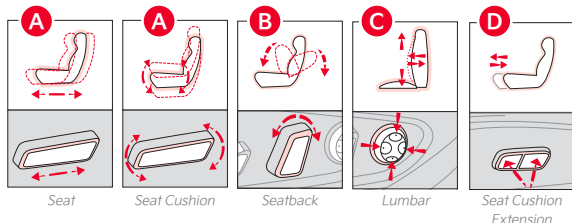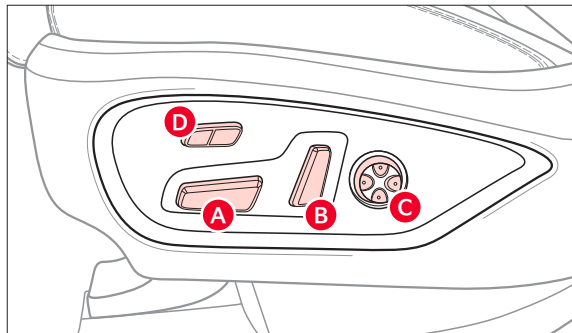


Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

6-Way Manual Adjustable Driver's Seat^{*†13}

 Pull lever **E** up to slide the Seat forward/backward.
Pull lever **F** up several times to raise the Seat Height
Push lever **F** down several times to lower the Seat Height
Pull lever **G** to adjust the Seatback recline.
Press **H** to adjust the Lumbar support.

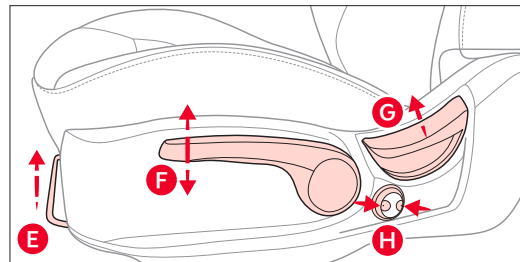

QUICK TIP

When adjusting the seat forward or backwards, ensure the seat clicks or locks into place before driving the vehicle

Images are for illustrative purposes only and may not reflect actual feature or operation. Your seat controls may differ from those in the illustrations.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Refer to section 3 in the Owner's Manual for more information.

QR CODES

Manual Adjustable
Driver's Seat Video



Power Adjustable Driver's
Seat with Memory
Settings Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
2nd-Row Folding Seat^{†13}

Folding 2nd-Row Seat

1. Lower the 2nd-Row Seat Headrest to the lowest position
2. Pull up on the Seatback folding lever **A** or strap* and fold the Seatback down

Unfolding 2nd-Row Seat

1. Lift the folding Seatback lever **A** and move the Seatback backward to the desired position **B**

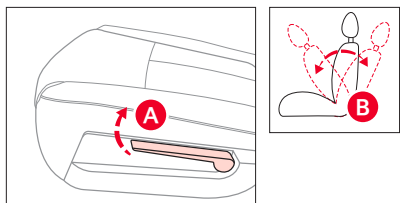

QUICK TIPS

- When you return the Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- Lower Rear Headrests to the lowest position

REMINDER: The lever must return to its original position for the Seatback to lock.


Refer to section 3 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

2nd-Row Auto-Folding Seat^{†13}

Press buttons **C** to release and automatically fold 2nd-Row Seatback down.

 For more information on 2nd-Row Auto Folding Seat operation, refer to the Owner's Manual.

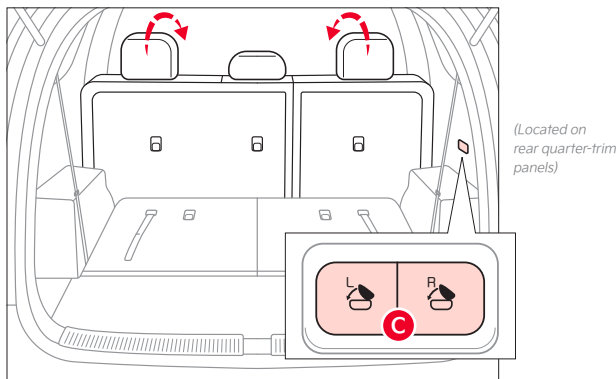


Refer to section 3 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Unfastening Center Seat Belt^{†13}

1. If Seat Belt is buckled, press the release button on the buckle
2. To retract the 2nd-Row Center Seatbelt **D** into the headliner, press the "release button" on the buckle by inserting the seat belt tongue plate **E** in the small slot on the center buckle **F**

 Refer to section 3 in the Owner's Manual for more information.

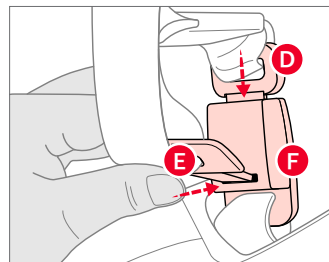

QR CODES

2nd & 3rd Row Folding Seats Video



Unfastening Center Seatbelt Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


3rd-Row Folding Seat*†13

Folding 3rd-Row Seat

1. Fully lower the headrest **A**
2. Pull the Seat folding strap **B** located on the Seatback
3. Fold the Seat down

Refer to section 3 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

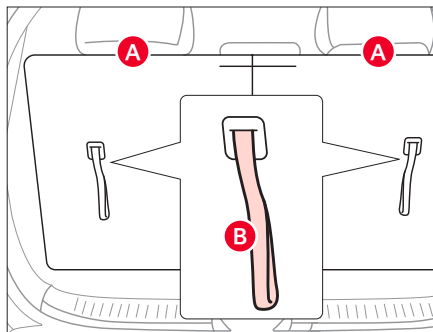 

One-Touch Slide & Fold 2nd Row Seats*†13

To get in and out of the 3rd Row Seat, adjust the 2nd Row Seat by pressing the One-Touch Slide & Fold 2nd Row Seats (located on top **C** and side **D** of the 2nd-row seatback):

 1. Set the front seatback to the most upright position, and slide the seat forward, if needed
2. Lower the 2nd Row Seat Headrest to the lowest position
3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
4. Press the One-Touch Slide & Fold buttons to slide the Seat forward

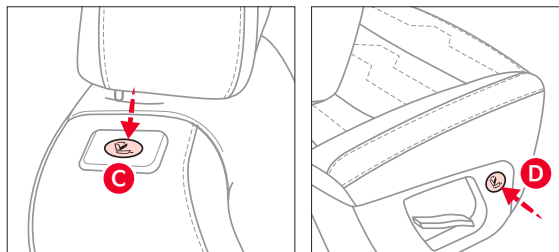

QUICK TIP

The strap can be used in the back of the 2nd Row Seat to slide and fold the 2nd Row Seats.

REMINDER: Do not use the One-Touch Slide & Fold buttons while the 2nd-row passenger seat is occupied.

QR CODES

2nd & 3rd Row Folding Seats Video



One-Touch Slide & Fold 2nd-Row Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 3 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Rear Occupant Alert (ROA) with Ultrasonic Sensors*†11

Rear Occupant Alert (ROA) with Ultrasonic Sensors can help alert the driver when the system detects that rear passenger(s) are left in the rear seats using the ultrasonic sensors and door monitoring.

The system is designed to provide three separate alerts:

- The 1st alert is a message on the Instrument Cluster, "Check Rear Seats" **A**, and a chime will sound
- After the 1st alert, when the doors are locked and there is movement detected in the rear seats, the horn will sound for about 25 seconds. This alert may activate up to eight times within 24 hours, if movement is still detected and system has not been disabled
- If you have installed the Kia Access app on your smartphone, logged in and activated the Rear Occupant Alert notification, a third alert (notification) will be sent to your phone

To turn ROA on or off, in the Instrument Cluster, go to User Settings , select Convenience, and then Rear Occupant Alert and check/uncheck the box. Rear Occupant with Ultrasonic Sensors activates under the following conditions:

- A rear passenger door is opened and closed
- The ignition has been turned off
- The driver's door has been opened, then closed
- The doors are locked with the Smart Key or the door lock button on the door handle

 
QUICK TIPS

- The 1st alert message will not display on Instrument Cluster if the rear doors are never opened. Either rear doors must be opened after unlocking the vehicle before the system will activate.
- To temporarily disable alerts, press the OK button **B** on the Steering Wheel while the message is displayed
- To turn the alert off while sounding, press the unlock button on the Smart Key or press the door lock button on the door handle
- Must be enrolled in Kia Connect services and Kia Access app installed on the phone to receive ROA alert notifications on your smartphone

REMINDERS:

- To avoid false alerts, make sure the vehicle's windows are rolled up
- If objects such as boxes are stacked in front of the ultrasonic sensors, the system may not detect any movement
- The ultrasonic sensors may occasionally detect movement in the vehicle and cause false alerts, when there are no rear occupants present. False alerts can occur due to:
 - The presence of insects near the system sensor
 - Rushing air from a window that is rolled down
 - Movement around the exterior of the vehicle
 - Surrounding noise or vibration
 - Vehicle passing through a car wash
 - Movement in the driver or front passenger seat is detected
- The Rear Occupant Alert with Ultrasonic Sensors system may fail to detect movement and activate an alarm, among other things, if:
 - Movement is subtle or does not continue
 - A small child sits directly in a seat without a car seat
 - A rear passenger is covered with an object such as a blanket, obstructing the sensor's view

Check rear seats

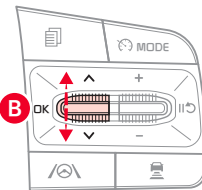

QR CODE

Rear Occupant Alert (ROA) with Ultrasonic Sensors Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, ROA is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.


ROA notifications also require a Kia Connect subscription, a compatible smartphone, and a wireless signal with good coverage to function. Normal cellular service rates may apply.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.

Sun Visor†18

 Use the Sun Visor to shield from direct light through the front or side windows. Slide or swing the Sun Visor out and adjust as needed.

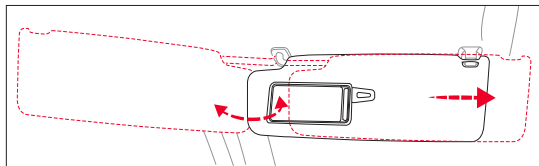

REMINDERS:

- Sun Visor may not shield from all direct light
- The Sun Visor may impair visibility if not adjusted properly
- Do not operate the vehicle if the Sun Visor is impairing your visibility
- Be aware of the seating position when adjusting or swinging Sun Visor around to and from the front or side windows

 
Refer to section 4 in the Owner's Manual for more information.

Remote Keyless Entry (Folding Key)*

- A** Press the release button to unfold the key
- B** Press to lock All Doors; Press twice within two seconds to sound the horn
- C** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch
- D** Press and hold for more than a half second for the Panic Alarm. To turn OFF the Alarm, press any button

Remote button configuration may vary depending on vehicle options.

Refer to section 4 in the Owner's Manual for more information.

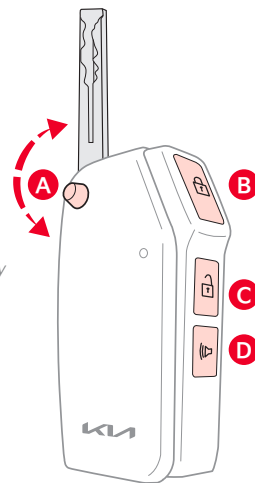

QR CODE

 
Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Double-Turn Lock/Unlock All

- Turn clockwise once to unlock the Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to lock All Doors

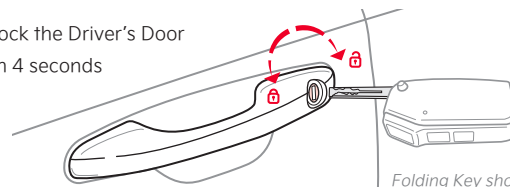

Folding Key shown.

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Smart Key with Remote Start*†6

- A** Press to lock All Doors
- B** Press to unlock the Driver's Door. Press twice within 4 seconds to unlock All Doors and the Liftgate
- C Manual Liftgate†**: Press and hold for more than 1 second to unlock the Liftgate (Trunk). Then lift by the handle to manually open the Liftgate

REMINDERS:

- Liftgate lid will partially open when **C** is pressed. To fully open, lift up manually
- The Liftgate (trunk) unlocks when the Smart Key fob is within close proximity of the vehicle

- C Power Liftgate*†10**: Press and hold for the Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close

Remote Start†: First, lock the doors by pressing the door lock button **A** within approximately 32 feet from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **D** for more than two (2) seconds to start the vehicle. To turn off, press the button again. If driver does not enter vehicle within three minutes of starting the vehicle, the engine will automatically turn off.

 
 
- E** Press and hold for more than a half second for the Panic Alarm. To turn OFF the Alarm, press any button
- F** Press to release Mechanical Key (on reverse side of fob)
- G** Mechanical Key

Driver's Door Lock/Unlock button **H**:

- Press button once to unlock the Driver's Door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

Mechanical Key **G**:

- Pull out door handle. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **I**
- Press the button **F** on the back of the key fob to release the Mechanical Key
- Insert Mechanical Key **G** and turn right to unlock the driver's door
- Insert Mechanical Key and turn left to lock the driver's door
- Return keyhole cover to its original position
- Use to unlock Liftgate, lock glove box* and to turn Child Protector Rear-Door Locks

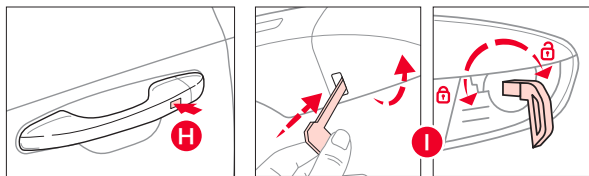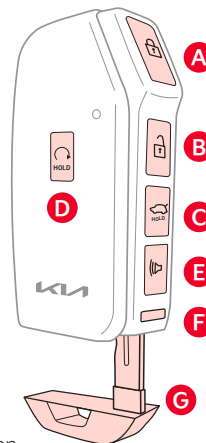

QUICK TIPS

- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start the engine

QR CODES

Kia Smart & Folding Key Fobs Video



Remote Start - Smart Key Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

REMINDERS:

- When reinserting the mechanical key, make sure it is pushed all the way in until there is a click sound
- Remote button configuration may vary depending on vehicle options

Smart Power Liftgate*†10

Opening from Inside the Vehicle:

Press the button **A** to unlock the Liftgate (located to the left of the steering wheel). With the Liftgate unlocked, press the exterior Liftgate Release button **B** (located underneath the Liftgate lid) and pull the Liftgate lid up by the handle to open.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **C** until the Liftgate begins to open. Press and hold again to automatically close.

REMINDER: Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate.

Opening/Closing from Outside the Vehicle:

To open the Power Liftgate automatically, press the Liftgate Release button **B** on the exterior of the Liftgate. Automatically close by pressing the Power Liftgate Close button **D**. Press the Liftgate lock button **E** to close and lock all doors.

Power Liftgate Opening Height Adjustment

The height setting of a fully opened liftgate (tailgate) can be adjusted by the following steps:

1. Position the liftgate manually to the preferred height
2. Press the Power Liftgate Close button **D** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.


QUICK TIPS

- The Liftgate must be unlocked before it can be opened by the Liftgate Release Button
- **Smart Key** - The Liftgate unlocks automatically, can then be opened manually, (tail lights flash two times), and automatically locks when closed (tail lights flash one time), when the Smart Key fob is within close proximity to the vehicle


REMINDER: When closing, be mindful of any objects or persons.

See section 4 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

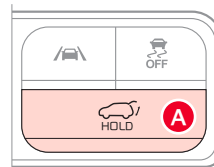 


(Button located on Driver's Panel)

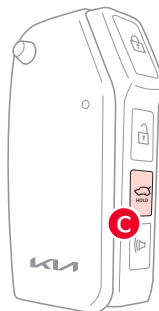 

 Remote button configuration may vary depending on vehicle options.

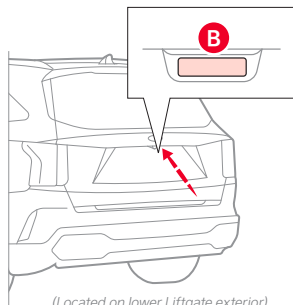

(Located on lower Liftgate exterior)

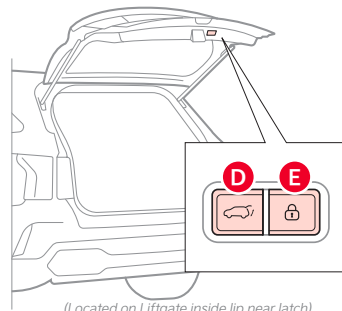 

(Located on Liftgate inside lip near latch)

QR CODES

Smart Liftgate Operation,
Opening Height/Speed
Adjustment



Kia Smart & Folding Key
Fobs Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Smart Power Liftgate with Auto Open*†10

The Smart Liftgate with Auto Open can be operated from several controls to either open, close or lock the Liftgate. The Smart Liftgate with Auto Open will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Liftgate with Auto Open feature is OFF by default. To enable the Smart Liftgate, go to User Settings in the LCD Instrument Cluster modes or Vehicle Settings* in the Infotainment System (vehicles with Navigation).

QUICK TIPS


- During the Smart Liftgate alert, the Power Liftgate with Auto Open can be deactivated with the Smart Key by pressing any button on the key fob
- The open height and speed can be adjusted. For information on how to set the open height and speed, see your owner's manual

REMINDERS:

- All doors are closed and locked after about 15 seconds
- The Smart Liftgate with Auto Open feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage, or move out of the detection area, to deactivate the Smart Power Liftgate function
- When the ignition is on, the Smart Liftgate with Auto Open will only operate with the gear shift in the Park (P) position
- The Smart Key must be outside of the vehicle for the Smart Liftgate with Auto Open to operate
- When closing, be mindful of any objects or persons

Images are for illustrative purposes only and may not reflect actual feature or operation.

 See section 4 in the Owner's Manual for more information.

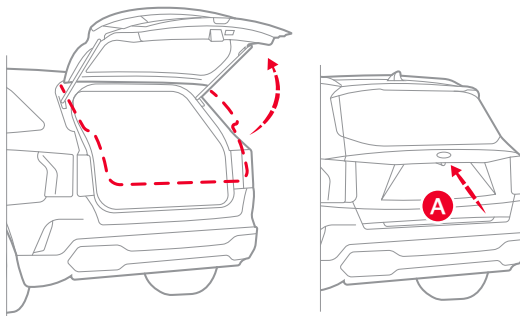

Manual Liftgate* / Liftgate Release Button

Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The liftgate unlocks automatically and can then be opened, when the Smart Key fob* is within close proximity to the vehicle

QR CODES

Smart Liftgate Operation, Opening Height/Speed Adjustment Video



Liftgate Buttons and Operation Video



Manual Liftgate & Key Fob Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Map/Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine Start/Stop button is OFF.

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/ Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.
- Press button **D** to turn the Room Lamp ON/OFF

QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 5 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

See section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Panoramic Sunroof with Power Sunshade*

The Sunroof and Sunshade operation is controlled through multidirectional switch and push button switches **E**. The ignition needs to be ON to operate the sunroof glass/power sunshade.

REMINDER: The sunroof can be operated for approximately 30 seconds after the ignition is turned off. If the front doors are opened, the sunroof cannot be operated even within the 30-second period.

To slide the Sunshade and Sunroof:

- Auto Open: Slide the switch **E** backward to the farthest position and release
- Auto Close (Sunroof only): Slide the switch **E** forward to the farthest position (second detent) and release

To slide the sunshade only:

- Open: Slide the switch **E** partially backward to the first detent and release
- Auto Close: Slide the switch **E** partially forward to the first detent and release

Tilting the Sunroof open/closed:

 
- Open/Raise: Push switch **E** upward
- Close/Lower: Push switch **E** forward
- Auto Close Sunroof and Sunshade: Slide the Sunroof switch **E** forward to the farthest position

To slide the sunroof (with sunshade open):

- Open: Slide the switch **E** backward to the first detent position and release
- Close: Slide the switch **E** forward to the first detent position and release to close sunroof glass only. Slide the switch forward to the farthest position and release to close sunroof glass and sunshade

REMINDEES:

- The Sunshade needs to remain OPEN while Sunroof is open
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle
- When closing, be mindful of any objects or persons

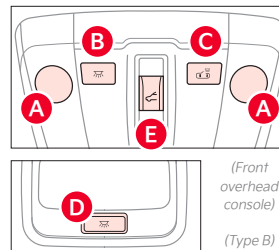

QR CODE

Sunroof Operation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 4 in the Owner's Manual for more information.


QUICK TIPS

- To stop the Sunroof/Sunshade at any position, push or pull the Sunroof control switch in any direction
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately one inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

HomeLink®^{†2} with Auto-Dimming Rearview Mirror*

The HomeLink® / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- | | |
|---|---|
| A HomeLink® Channel 1 | E HomeLink® Operation Indicator |
| B HomeLink® Channel 2 | F Garage Door Opener Status Indicator: Opening or Open |
| C HomeLink® Channel 3 | G HomeLink® User Interface Indicator |
| D Garage Door Opener Status Indicator: Closing or Closed | |

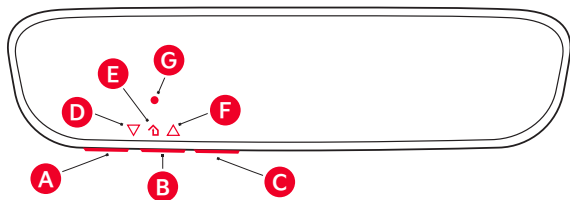 

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters

How to Sync Transmitter with HomeLink®

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the **A** and **C** buttons simultaneously until the indicator light **G** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A** **B** **C** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the **A** and **C** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Homelink® Support Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

 
Hood Release Lever and Latch

Opening the Hood:


- Pull the Hood Release Lever **A** to unlatch the Hood
- In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood
- It will open by itself after it has been raised about half way

REMINDERS:

- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- While lowering and closing, keep hands away from under the Hood

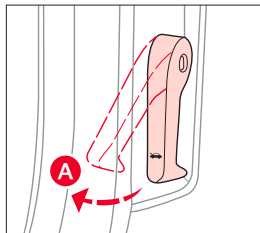

 (Lever located on Driver side kick panel)

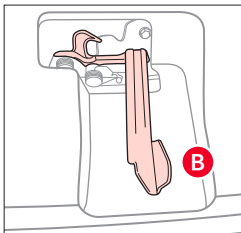

(Located inside of Hood's center)

Closing the Hood:

Lower the Hood about halfway by pressing the front center of the Hood and then press down to securely lock in place.

REMINDERS:

- Make sure the hood is securely closed before driving.
- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in the P (Park) position and setting the parking brake

Images are for illustrative purposes only and may not reflect actual feature or operation.

 
 
See section 4 in the Owner's Manual for more information.

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent the Malfunction Indicator  from illuminating.

It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back.

REMINDER: Vehicle must be unlocked first before attempting to open fuel door/lock central door lock button.

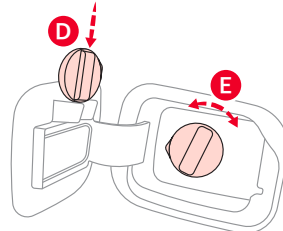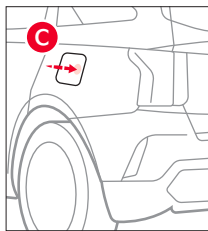

Fuel Filler Lid Release

To open the Fuel Filler lid:

1. Turn off the engine and ensure driver's door is unlocked. Press the right center edge of the Fuel Filler lid **C**
2. Pull the Fuel Filler lid out to fully open **D**
3. To open the Fuel Cap, turn it counterclockwise **E**

QUICK TIP

Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling.

REMINDERS:

- The Fuel Filler Door Release button is located on the driver's button panel, left of the Steering Wheel
- The Fuel Filler Lid lock will unlock/open only when the unlock button on the Smart Key is pressed, central door unlock button is pressed or the driver's side door is unlocked.
- To lock the Fuel Filler Lid, press the lock button on the Smart Key or lock central door lock button
- All doors and Fuel Filler Lid will automatically lock after the vehicle speed exceeds 9 mph

QR CODES

Kia Fuel Cap Video



Fuel Filler Lid Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 4 in the Owner's Manual for more information.

Occupant Detection System (ODS)^{†9} / Passenger Airbag^{†14} Off Indicator

ODS is designed to detect the presence and position of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" light will illuminate.



(ODS light is located on map/room lamp ceiling console)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
See section 3 in the Owner's Manual for more information.

Child-Protector Rear Door Locks (Manual)*

Located on the rear edge of the rear passenger doors, turn the Child-Protector Rear Door Lock to the lock position  to disable the inner door handles from opening the rear doors.

REMINDER: Child-Protector Rear Door Locks are located on the rear passenger's door jamb.

See section 3 in the Owner's Manual for more information.

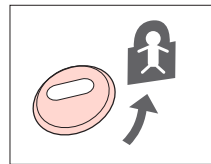

(Lock located on rear passenger inside door jamb)

Seat Belts†14

To properly fasten your seat belts:

- Insert the belt tongue plate **A** into the buckle **B** until it clicks
- Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**.
Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seatbelt retractors will automatically lock the belts to reduce the risk of injury.



QUICK TIP

The seat belt warning chime operates for the driver's seat only.

REMINDER: For maximum protection, always wear your seat belt.

Images are for illustrative purposes only and may not reflect actual feature or operation.

  See section 3 in the Owner's Manual for more information.

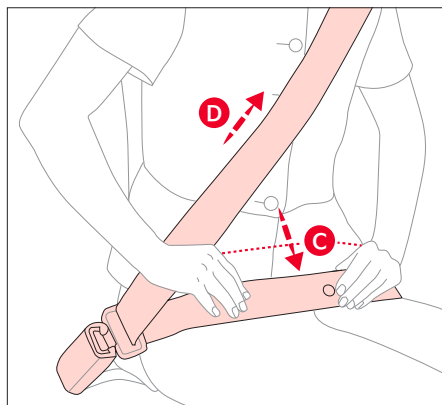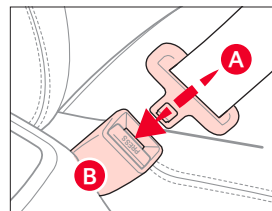

QR CODE

LATCH Anchors for the Child Restraint System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

LEGAL DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury or death. The driver's primary responsibility is in the safe and legal operation of a vehicle. Handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law, should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2023 and newer Kia vehicles with Kia Connect includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2023 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
2. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
3. **Driver Assist Features - Forward Collision-Avoidance Assist (FCA), Lane Keeping Assist (LKA), Blind-spot Collision-Avoidance Assist (BCA), Blind-spot View Monitor (BVM), Safe Exit Assist (SEA), Leading Vehicle Departure Alert (LVDA), Intelligent Speed Limit Assist (ISLA), Cruise Control (CC), Smart Cruise Control (SCC) with Stop & Go, Navigation-based Smart Cruise Control (NSCC), Lane Following Assist (LFA), Highway Driving Assist (HDA), Rear View Monitor (RVM), Surround View Monitor (SVM), Rear Cross-traffic Collision Avoidance Assist (RCCA), Reverse Parking Collision-Avoidance Assist (PCAP), Forward/Reverse Parking Distance Warning (PDW):** When engaged, these features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
4. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
5. **Electronic Stability Control (ESC)/ Traction Control System (TCS)/Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
6. **Engine Start/Stop Button / Smart Key w/ Remote Start:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
8. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
9. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
10. **Smart Power Liftgate / Smart Power Liftgate with Auto Open:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for improved ventilation.
11. **Rear Occupant Alert with Ultrasonic Sensors:** When engaged, ROA with Ultrasonic Sensors is not a substitute for one's attention. Always check the vehicle interior when exiting the vehicle.
12. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
13. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
14. **Seat belts/Airbags:** For maximum protection, always wear your seatbelt. Please refer to your vehicle's Owner's Manual for additional important safety information regarding airbags, including additional cautions and warnings.
15. **Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
16. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. © 2022 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
17. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
18. **Sun Visor:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
19. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
20. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
21. **The myQ logo** is a registered trademark of The Chamberlain Group, Inc.
22. **Android Auto:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto™ app on Google Play™ store and an Android compatible smartphone running Android 5.0 Lollipop or higher. Data plan rates apply.



SORENTO NORMAL MAINTENANCE SCHEDULE

(up to 64,000 miles)^A

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)							
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000
Rotate tires	P	P	P	P	P	P	P	P
Add fuel additive ^C	P	P	P	P	P	P	P	P
Engine Oil & Filter (Full Synthetic Oil) ^D	R	R	R	R	R	R	R	R
Air cleaner filter (Engine)	I	I	R	I	I	R	I	I
Climate control air filter	I	R	I	R	I	R	I	R
Brake fluid	I	I	I	I	I	R	I	I
Battery condition	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I
Brake discs and pads	I	I	I	I	I	I	I	I
Vacuum hoses	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I
Cooling System	I	I	I	I	I	I	I	I
Intercooler, in/out hose, air intake hose (Turbo GDI)	I	I	I	I	I	I	I	I
Drive shafts and boots		I		I		I		I
Propeller shaft (AWD)		I		I		I		I
Fuel tank air filter ^E		I		I		I		I
Parking brake (foot type)		I		I		I		I
Fuel tank and fuel filler cap		I		I		I		I
Fuel lines, fuel hoses and connections		I		I		I		I
Drive belts (First 48,000 miles, then every 8,000 miles) ^F					I	I	I	I
Dual Clutch Transmission (DCT) fluid (Turbo GTI)				I				I
Transfer Case Oil					I			
Rear differential oil (AWD)					I			
Spark plugs (Turbo GDI) (Every 48,000 miles)						R		

P=Perform R=Replace I=Inspect^B

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect account by logging into your Kia Access with Kia Connect App or your account on <https://owners.kia.com/> (Vehicles equipped with Kia Connect only) - See page 38 for setup information

[‡] If equipped

[†] LEGAL DISCLAIMERS ON BACK INSIDE COVER

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule

B. And, if necessary, adjust, correct, clean or replace

C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives

D. Check the engine oil level and leaks when stopping for fuel or before starting a long trip. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions

E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service

F. The drive belt should be replaced when cracks occur or tension is reduced excessively

G. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

QR CODES

Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

© 2022 Kia America, Inc.
All rights reserved.

Consumer - Roadside Assistance^{†12}:
1-800-333-4KIA (4542)

Part Number: MQ230-PS-004