
TELLURIDE

Features & Functions Guide



Welcome to the Kia Family!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using this Features & Functions Guide

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

Videos and QR Codes

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QR CODE

Getting Started With Your New Kia Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle

- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal
- After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

- 1 Smart Key with Remote Start 59
- 2 Fuel Filler Lid Release. 68
- 3 Power Adjustable Driver's Seat* /
Front Seat Headrest Adjustment 54
- 4 Seat Warmers / Ventilated Seats* 53
- 5 2nd & 3rd Row Seat / Folding 57-58
- 6 Lifting Wipers / Winter Mode (Wiper Service Mode) . 37
- 7 Front & Rear Windshield Wipers & Washers 37
- 8 Idle, Stop & Go (ISG) System. 52
- 9 Navigation-based Smart Cruise Control (NSCC) . . . 20
- 10 Highway Driving Assist (HDA) 22
- 11 Rear Occupant Alert (ROA) with Ultrasonic Sensors . 56
- 12 Smart Power Liftgate with Auto Close* 62
- 13 Normal Maintenance Schedule 70
- 14 Vehicle Settings - Infotainment System 12
- 15 Bluetooth® Wireless Technology. 40-41
- 16 Kia Connect Activation / Kia Connect Assistance . . . 43
- 17 Kia Connect with Navigation. 45
- 18 Android Auto™ / Apple CarPlay® Setup 42

QR CODE

Getting Started With
Your New Kia Video



Your New Kia Important
Care Tips Video



Vehicle Cameras
Important Tips Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

VIDEOS & QR CODES Inside Cover**INSTRUMENT CLUSTER**

Instrument Cluster Overview	04
Indicators & Warning Lights	05
Drive Mode Integrated Control System*	06
All Wheel Drive (AWD) System*	07
Fuel Economy / Tips for Economical Driving	08
Tire Pressure Monitoring System (TPMS)	09

VEHICLE SETTINGS

Instrument Cluster LCD Modes*	10
Trip Information / Trip Computer	11
Vehicle Settings - Infotainment System	12
Service Interval Mode	12

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Forward Collision-Avoidance Assist (FCA)	13
Lane Keeping Assist (LKA)	14
Blind-spot Collision Warning (BCW)	15
Blind-spot View Monitor (BVM)*	16
Safe Exit Assist (SEA)	16
Driver Attention Warning (DAW) / Leading Vehicle Departure Alert (LVDA)	17
Intelligent Speed Limit Assist (ISLA)	18
Lane Following Assist (LFA)	19
Navigation-based Smart Cruise Control (NSCC)	20
Highway Driving Assist (HDA) with Lane Change Assist	22
Rear View Monitor (RVM)	23
Surround View Monitor (SVM)*	24
Rear Cross-traffic Collision-Avoidance Assist (RCCA)	25
Reverse Parking Collision-Avoidance Assist (PCA)*	26
Forward*/Reverse Parking Distance Warning (PDW)	27
Head-Up Display (HUD)*	28

DRIVER'S PANEL

Instrument Cluster Control (Instrument Panel Dimmer)	29
Tow Mode*	29
Electronic Stability Control (ESC) / Traction Control System (TCS)	30
Hill-start Assist Control (HAC)	30
Reverse Parking Aid Function*	31
Power Liftgate Open/Close Button	31
Power Folding Outside Mirrors*	32
Heated Outside Mirrors	32
Manual Folding Mirrors*	32
Power Windows, Window Lock & Central Door Lock	33
Auto Door Lock/Unlock	33
Electronic Child Safety Lock System	33
Engine Start/Stop Button	34

STEERING WHEEL CONTROLS

Turn Signals & Fog Lights*	35
Headlights & High Beams / High Beam Assist (HBA)	36
Front & Rear Windshield Wipers & Washers	37
Lifting Wipers / Winter Mode (Wiper Service Mode)	37
Tilt/Telescoping Steering Wheel / Heated Steering Wheel*	38

INFOTAINMENT SYSTEM

Audio Controls	39
Bluetooth® Wireless Technology	40
Android Auto™ / Apple CarPlay® Setup	42
Kia Connect Activation / Kia Connect Assistance	43
Kia Access App Download / Kia Access App Features Guide	44
Kia Connect with Navigation	45

CENTER PANEL

Digital Clock - Infotainment System	46
Multimedia USB Ports, Power Outlets & USB Charger Ports / AC Inverter*	46
Wireless Smartphone Charging System*	47
Automatic Climate Control System	48
Automatic Transmission and Manual Mode	49
Electronic Parking Brake (EPB)	50
Auto Hold	51
Idle, Stop & Go (ISG) System	52
Seat Warmers / Ventilated Seats*	53

SEATING

Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment	54
Driver Position Memory System*	55
Rear Occupant Alert (ROA) with Ultrasonic Sensors	56
2nd Row Seat / One-Touch Slide and Fold	57
3rd Row Seat - Folding	58
Unfastening and Stowing Center Seat Belt	58

OTHER KEY FEATURES

Smart Key with Remote Start	59
Digital Key 2 Touch	60
Smart Power Liftgate with Auto Close*	62
Map/Room Lamps	64
Sunroof Operation*	64
Cargo Cover Storage*	65
Full Display Mirror (FDM)*	65
HomeLink® with Auto-Dimming Rearview Mirror*	66
Sun Visor / Hood Release Lever and Latch	67
Fuel Cap / Malfunction Indicator (Check Engine Light)	68
Fuel Filler Lid Release	68

SAFETY FEATURES

Seat Belts	69
Occupant Detection System (ODS) / Passenger Airbag Off Indicator	69

NORMAL MAINTENANCE SCHEDULE 70

LEGAL DISCLAIMERS Inside Back Cover

Instrument Cluster Overview

- A** Tachometer
- B** Turn Signal Indicators
- C** Temperature Gauge
- D** Speedometer
- E** Indicator & Warning Lights
- F** Gear Shift Position Indicator
- G** Odometer
- H** Trip Computer
- I** Fuel Gauge
 - ← Fuel Arrow direction indicates the side of the vehicle the fuel door is located


Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

QR CODE


Instrument Cluster LCD
Display Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

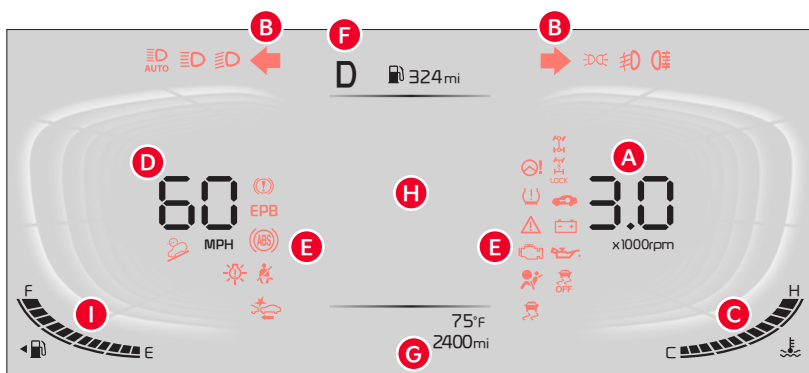

(Type A)

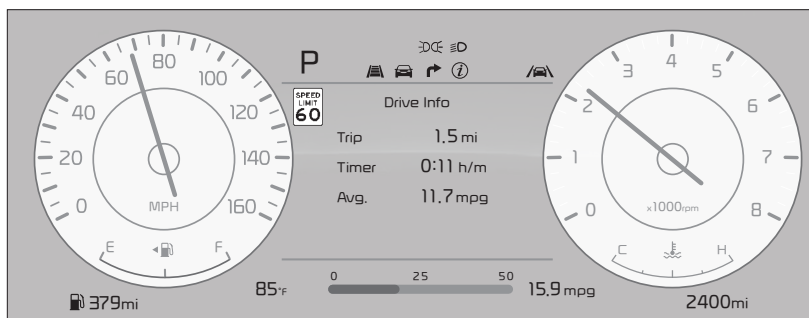

(Type B LCD Cluster)

Illustrations are for demonstration purposes only. Some indicators and warning lights may not appear in illustrations. On the vehicle, they may appear in the LCD.

Indicators & Warning Lights

	Low Beam Indicator		Parking Brake & Brake Fluid Warning Light		Forward Collision-Avoidance Assist (FCA) Warning (or OFF) Indicator
	Light ON Indicator		Door Ajar Warning Light		
	Cruise Indicator		Airbag Warning Light		Electronic Brake Force Distribution (EBD) System
	Lane Keeping Assist (LKA) Indicator*		Low Windshield Washer Fluid		Warning Light - (Two separate indicators on instrument cluster lit at same time)
	Electronic Parking Brake Warning Light		Turn Signal Indicators		
	Immobilizer Indicator		Anti-Lock Braking System (ABS) Warning Light		ECO / SPORT / SMART / SNOW Mode Indicator
	High Beam Indicator		Auto Hold Indicator Light*		Master Warning Light
	LED Headlamp Warning Light*		Charging System Warning Light		High Beam Assist (HBA) Indicator*
	Electronic Stability Control (ESC) Warning Light		Cruise Set Indicator		Front Fog Light Indicator*
	Electronic Stability Control (ESC) OFF Light		Engine Oil Pressure Warning Light		Idle, Stop & Go (ISG)
	Malfunction Indicator Light		Engine Coolant Temperature Warning Light		AWD System Warning Light*
	Low Tire Pressure Indicator /		Low Fuel Level Warning Light		AWD LOCK Indicator Light*
	Tire Pressure Monitoring System (TPMS) Malfunction Light				Downhill Brake Control (DBC) Indicator Light
	Seat Belt Warning Light		Electric Power Steering (EPS) Warning Indicator		AUTO HOLD Indicator Light

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Drive Mode Integrated Control System*

SMART, SPORT, COMFORT, ECO and SNOW drive modes may be changed according to the driver's preference or road conditions. To change the drive mode, rotate the DRIVE MODE knob **A**.


SMART Mode - When SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style. A SMART indicator will illuminate on the instrument cluster. The color of the SMART indicator* (green, white, red) depends on the current driving style. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

SPORT Mode - A red SPORT indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

COMFORT Mode - The system's default mode is COMFORT mode and is not displayed on the instrument cluster nor the audio system's screen.

ECO Mode - A green ECO indicator will illuminate on the instrument cluster. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

SNOW Mode - SNOW mode is designed to distribute the vehicle's traction forces to help reduce or prevent wheel slippage when driving on snowy or slippery roads. To deactivate, rotate the DRIVE MODE knob **A** again to select another setting.

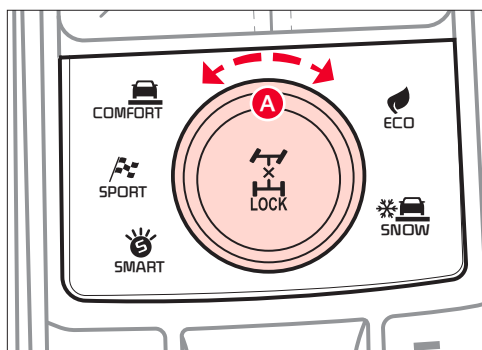

(Center Console below Gear Shift)



(Instrument Cluster LCD shown.
Actual images may vary)

QR CODE

Drive Mode Integrated Control System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

- When the Engine Start/Stop button is cycled off then on again, the system defaults to Comfort mode from Sport mode. When in other modes, it returns to its previous setting.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

REMINDERS:


- When ECO mode is selected, the following may occur to help improve fuel economy:
 - Acceleration may be slightly reduced even when the accelerator is fully depressed
 - Air conditioner performance may be limited
 - Shift pattern of the automatic transmission may change
 - Engine noise may increase
 - System's power will be limited when driving uphill
- When SPORT mode is selected, fuel economy may decrease
- Steering effort may be slightly increased in Sport mode

All Wheel Drive (AWD) System*

The AWD system helps the vehicle's performance by delivering engine power to the front and rear wheels.

AWD Auto - If the system determines AWD is needed, then it will automatically engage and distribute power to all the wheels (AWD Lock button NOT pressed).

AWD Lock - If the AWD Lock button is pressed **A**, then the AWD system will operate until the AWD Lock button is pressed again. When the AWD Lock is engaged, an equal amount of torque is transferred to the front and rear wheels.

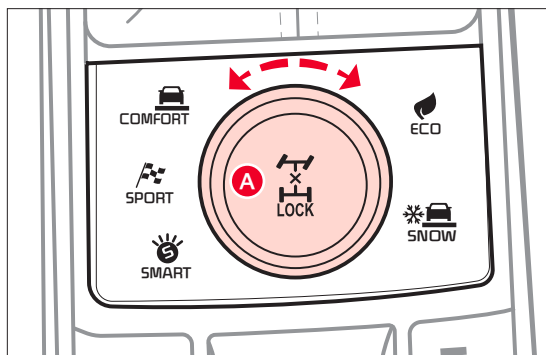

REMINDERS:

- AWD Lock Mode operates when the vehicle is traveling at 25 mph or less
- When the vehicle is traveling faster than 25 mph, the system will switch to AWD Auto mode. When the vehicle is at 20 mph or slower, the system will switch back to AWD Lock

Refer to section 5 in the Owner's Manual for more information.

QR CODE

All-Wheel Drive (AWD)
Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Fuel Economy / Tips for Economical Driving

Several factors contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only* setting as much as possible
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicle
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads
- When the Instrument Cluster LCD screen is in the Trip Computer mode, the screen displays fuel economy information related to the driving range and average fuel economy
- **Average Fuel Consumption** - Calculates average fuel consumption from the distance driven and amount of fuel injected into the engine / total fuel used

For more information on Fuel Economy, snap the QR Code above to view a video or refer to section 5 in the Owner's Manual.

QR CODE

Tips for Economical Driving Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Tire Pressure Monitoring System (TPMS)^{†19}

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The TPMS indicator  is designed to illuminate if it detects one or more tires is significantly underinflated, if a spare tire has been installed that does not have a TPMS device, or when the outside temperature drops considerably.

The LCD screen in the instrument cluster will display the Low Tire Pressure indicator  showing which tire(s) is underinflated.

- Inflate tire(s) to specifications using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute and then illuminate. See dealer for service

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressure and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is open
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.

 
QR CODE

Tire Pressure
Monitoring Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Low Tire Pressure



Instrument Cluster LCD Modes

Press Mode button **A** to scroll through different Instrument Cluster LCD Modes. Press the OK button **B** to select and enter menu item.

-  **Driving Assist:** Displays information on the Advanced Driving Assist System (ADAS)
-  **Trip Computer Mode:** Displays driving information for range, drive info, energy flow, etc.
-  **Turn-by-Turn Mode*:** Displays route guidance and destination info
-  **Information/Master Warning*:** Displays information on TPMS, engine temperature and warning messages related to the vehicle when one or more systems is not operating normally

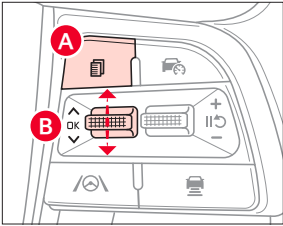

(Button layout on right of steering wheel)

Your vehicle's steering wheel buttons may differ from those in the illustrations.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering wheel mounted controls while driving.

For more information, refer to section 4 of the Owner's Manual.

QR CODE

Instrument Cluster's LCD Display Video



Steering Wheel Controls Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Trip Information / Trip Computer

The Trip Computer is a driver information system that displays information related to driving when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Instrument Cluster modes, press the Mode button **A** on the right side of the steering wheel.

When in the Trip Computer mode , press the Select/Reset (OK) button up/down **B** to cycle through the menu. When displaying TRIP A or TRIP B screens, press in and hold the OK button **B** to reset the Tripmeter to zero.

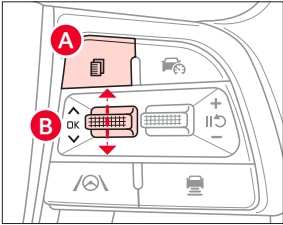

(Button layout on right of steering wheel)


REMINDERS:

- Appearance of Trip Computer display may differ as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

See section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Trip Computer modes*:

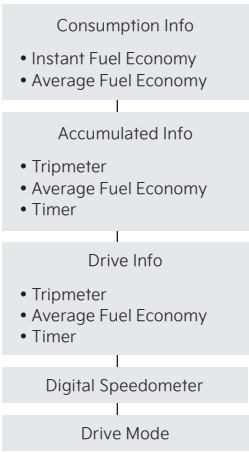


Vehicle Settings - Infotainment System

To enter the Vehicle Settings mode in the infotainment system, press the SETUP key or the onscreen SETUP button. Then press VEHICLE, which will take you to the Vehicle Settings screen. Use the touchscreen to navigate through the menus.

Vehicle Settings menus:

- Driver assistance
- Drive mode
- Active sound design
- Head-up display
- Cluster
- Climate
- Seat
- Lights
- Door
- Convenience

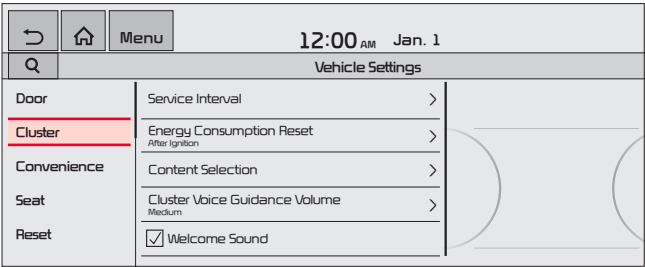

For more information, refer to the Car Infotainment System Quick Reference Guide

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Service Interval Mode

When Service Interval Mode is enabled, set and vehicle service is required, the following message will be displayed on the LCD: **Service Required**, along with the remaining days/miles till service is due.

Service Interval Mode ON and Interval Setting

To enable Service Interval Mode and set the interval, go to Vehicle Settings in the Infotainment System. Press the SETUP key or the onscreen SETUP button, then VEHICLE to enter Vehicle Settings.

Press CLUSTER and select SERVICE INTERVAL to enable, set the driving distance and service cycle.

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder in Vehicle Settings. Go to Convenience, then Oil Change Reminder.

QR CODE

Vehicle & User Settings Video



Ambient, Theme & Mood Lighting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QR CODE

Kia Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 4 in the Owner's Manual for more information.

Forward Collision-Avoidance Assist (FCA)^{† 3}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. Initially, FCA provides Collision Warning **A** when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster.

If FCA detects that the collision risk has increased, FCA automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision **B**.

With the turn signal on, if it detects a potential collision, Junction Turning/Junction Crossing **C** may help to avoid the collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.

FCA Settings:

- FCA is on by default in most Kia models. FCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- To access Vehicle Settings in the Infotainment System - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, DRIVING SAFETY, and select an FCA mode
- Warning Timing** - When in the DRIVING SAFETY menu, select FORWARD SAFETY WARNING TIMING and one of the following:
 - Standard:** Maximizes the amount of distance between the vehicles before the initial warning occurs
 - Late:** Reduces the amount of distance between the vehicles before the initial warning occurs




FCA will become active when the:

- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 6 mph
- Electronic Stability Control (ESC) is ON

QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings on the Infotainment System. Go to Driver Assistance, Warning Sound and Haptic, then adjust Warning Volume and select Driving Safety Priority.

Actual Vehicle Settings steps may vary by model. For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 6 in the Owner's Manual for more information.

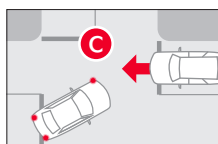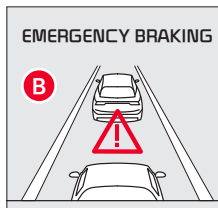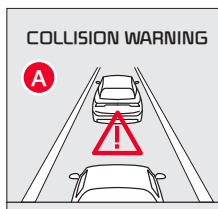

(Junction Turning/
Junction Crossing)

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle or alert the driver when the vehicle is approaching another vehicle. Always drive safely and use caution.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster

Lane Keeping Assist (LKA)^{† 3}

Lane Keeping Assist (LKA) is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator  will initially illuminate white. It will remain white when the vehicle is traveling slower than 40 mph or when LKA does not detect the lane markers. When LKA detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, without using the turn signal, LKA may give an audible warning and display Lane Departure Warning on the instrument cluster or LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.


Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster; if hands on the Steering Wheel is not detected continually, LKA will be turned off with additional emergency warning.

LKA Settings:


- Press and hold the Lane Safety button  to turn LKA on or off, when it is first enabled in the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety and then Lane Safety

LKA will operate under the following conditions:


- The vehicle speed exceeds approximately 40 mph
- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers

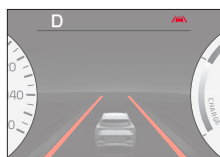


When LKA detects the lane markers, both lanes are displayed white

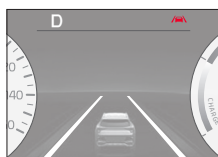

When LKA does not detect the lane markers, the lanes are displayed gray

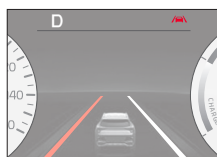

When LKA detects the vehicle moving outside of the lane being traveled in, a yellow lane marker will illuminate either on the left or right lane (shown in both images above)

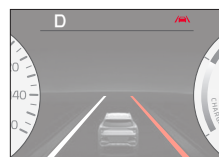

QUICK TIP

The Warning Volume and Priority can be adjusted in the Vehicle Settings on the infotainment system. Go to Driver Assistance, Warning Sound and Haptic, then adjust the Warning Volume and select Driving Safety Priority.

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

Lane Keeping Assist is not a substitute for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

Actual Vehicle Settings steps may vary by model. Refer to section 6 in the Owner's Manual for more information.


For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

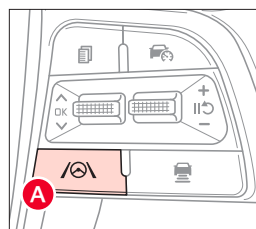

(Button layout on right of steering wheel)

Blind-spot Collision Warning (BCW)*^{1 3}

BCW uses rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area, before changing lanes and before exiting a parallel parking space. BCW provides Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. On select Kia models, when exiting a parallel parking space and BCW detects that the collision risk has increased, BCW can help avoid a collision by applying the brakes.

Vehicle detection: When another vehicle is detected within BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

Collision warning: When vehicle detection warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

Collision-Avoidance Assist*: On select Kia models, when collision warning has already occurred, and the collision risk has increased, BCW can help avoid a collision by applying the brakes. Your vehicle needs to be traveling less than 2 mph, and the approaching vehicle is traveling less than 3 mph.

BCW Settings:

- BCW can be turned on/off by going to the User Settings* in the Instrument Cluster or the Vehicle Settings* in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* is in the on position
- **To access Vehicle settings* in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, Driving Safety, then Blind-spot Safety

QUICK TIPS

- The Warning Volume can be adjusted in the Vehicle Settings on the Infotainment System. Go to Driver Assistance, Sound and Haptic. Adjust the Warning Volume and select Driving Safety Priority
- BCW will activate when:
 - BCW is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Collision Warning: Vehicle speed is above approximately 12 mph and the speed of the vehicle in the blind spot is above 7 mph

REMINDERS:


- When BCW is ON and the ignition is cycled, BCW returns to its previous state
- If the turn signal is turned on to make a left turn at an intersection, BCW may warn the driver regardless of driver's intentions. Maintain a proper distance from oncoming vehicles

QR CODE

Blind-spot Collision-Avoidance Assist (BCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

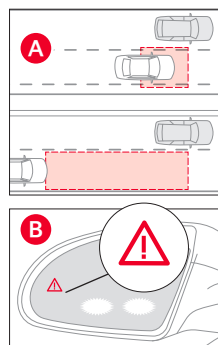

When engaged, BCW is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

Refer to section 6 in the Owner's Manual for more information.

Blind-spot View Monitor (BVM)*^{†3}


Blind-spot View Monitor (BVM) displays the rear blind spot area of the vehicle in the cluster when the turn signal is turned on to help safely change lanes.

BVM Settings:

- Enable BVM in the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle Settings in the Infotainment System -**
Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, BLIND-SPOT SAFETY and then BLIND-SPOT VIEW

BVM will operate when the Engine Start/Stop button is on and the turn signal is activated.

BVM will not operate when the Engine Start/Stop button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

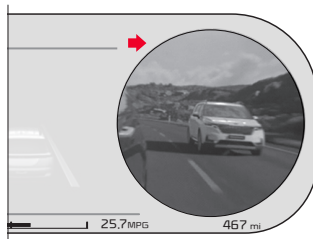

(Display showing left side of vehicle)

QR CODE

Blind-spot View Monitor (BVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 6 in the Owner's Manual for more information.


Images are for illustrative purposes only and may not reflect actual feature or operation.

Safe Exit Assist (SEA)*^{†3}

Safe Exit Assist (SEA) can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster and sounding an audible warning when a vehicle is detected, approaching from behind, and after your vehicle has stopped. In addition, when the electronic child safety lock button is in the LOCK position and an approaching vehicle from the rear area is detected, the electronic child safety lock button will not unlock even if the driver presses the button to prevent the rear doors from opening.

To turn on SEA, go to Vehicle Settings in the Infotainment System, select Driver Assistance, Driving Safety, then Exit Safety.

The Warning Volume can be adjusted in the Vehicle Settings on the infotainment system. Go to Driver Assistance, Warning Sound and Haptic, adjust the Warning Volume and select Driving Safety Priority.

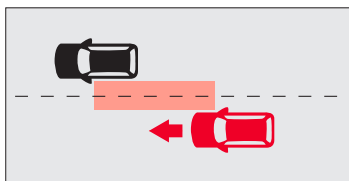

QR CODE

Safe Exit Assist (SEA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

REMINDER: SEA may not detect all objects and the occupants should always be mindful of their surroundings




Driver Attention Warning (DAW)^{†4} / Leading Vehicle Departure Alert (LVDA)^{†3}

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving. A message, "Consider taking a break," **A** appears on the LCD and a warning sounds to suggest the driver take a break when the driver's attention level becomes low.

Leading Vehicle Departure Alert, a part of DAW, is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When LVDA is on, your vehicle is stopped, and it detects that the leading vehicle is driving away, LVDA sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message will appear on the Instrument Cluster LCD.

DAW Settings:

- DAW can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/ Stop button* in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Driver Attention Warning and select one or both of the following:
 - **Inattentive Driving Warning:** DAW will inform the driver of the driver's attention level and will recommend taking a break when it falls below a certain level
 - **Leading Vehicle Departure Alert:** DAW will inform the driver when the front vehicle departs from a stop

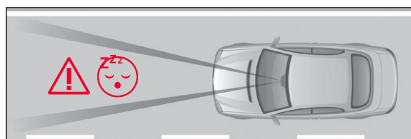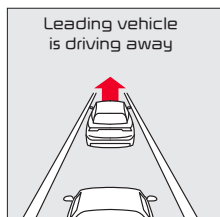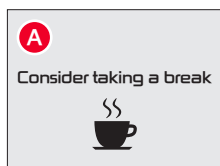

Refer to section 6 in the Owner's Manual for more information.

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Driver Attention Warning (DAW) Video



Leading Vehicle Departure Alert (LVDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Intelligent Speed Limit Assist (ISLA)*†3

Intelligent Speed Limit Assist is designed to use the information from the posted speed limit and the navigation system to inform the driver of the speed limit.

When ISLA is on and active, LFA will display an alert on the Instrument Cluster LCD of the detected speed limit **A**. If the vehicle's current speed exceeds the detected speed limit, a warning will sound and the vehicle's current speed will blink on the LCD.

ISLA Settings:

- To enable ISLA on, press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings. Select DRIVER ASSISTANCE, then SPEED LIMIT.
- Select one of the three modes:
 - **Speed Limit Assist:** Informs the driver of the posted speed limit, displays a message to change the speed to help the driver stay within the posted speed limit, and informs the driver to change set speed of Manual Speed Limit Assist or Smart Cruise Control to help the driver stay within the speed limit
 - **Speed Limit Warning:** Informs the driver of the posted speed limit **A** and warns the driver when the vehicle is traveling faster than the posted speed limit
 - **Off:** ISLA is disabled
- You can set a speed limit offset to the posted speed limit by going to Vehicle Settings, Driver Assistance, Speed Limit, then Speed Limit Offset. Set the offset to "0" if you want the vehicle to travel at the posted speed limit when ISLA is on

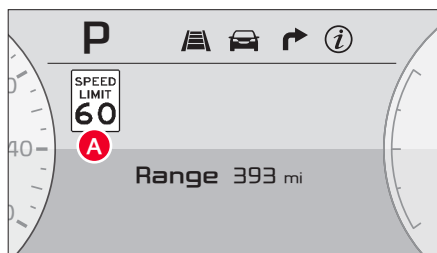

QR CODE

Intelligent Speed Limit Assist (ISLA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings on the Infotainment System Go to Driver Assistance, Warning Sound and Haptic, then adjust the Warning Volume and select Driving Safety Priority.

REMINDERS:

- Vehicle must be parked and in a safe location to change the speed settings
- Additional information may be displayed if additional road sign information is detected


See section 6 in the Owner's Manual for more detailed information, limitations and conditions.

Lane Following Assist (LFA)^{† 3}

Lane Following Assist (LFA) is designed to help ensure that the vehicle stays centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The instrument cluster indicator will initially illuminate white **C** when turned ON. It will remain white when LFA does not detect the lane markers. When LFA detects the lane markers and can assist the steering, the Lane Following Assist icon will illuminate green **B**.

Hands-off Warning - If the driver takes their hands off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster. And if hands on the Steering Wheel is not detected continually, LFA will be turned off with additional emergency warning.

- Press the Lane Driving Assist button **C** to turn LFA on or off, when it is first enabled in the User Settings* in the Instrument Cluster or Vehicle Settings in the Infotainment System
- LFA will operate only when these conditions are met:
 - LFA recognizes both sides of the lane markers the vehicle is traveling in
 - The vehicle is traveling slower than 90 mph

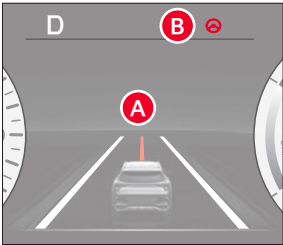

QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings on the infotainment system. Go to Driver Assistance, Warning Sound and Haptic, adjust the Warning Volume and select Driving Safety Priority.


REMINDER: LFA is not a substitute for safe and proper driving. Always drive safely and use caution.

QR CODE

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

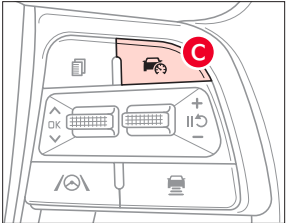

(Button layout on right of steering wheel)

LFA is supplemental. Do not solely rely on LFA and always pay attention to the road and its conditions.

Actual User Settings steps may vary by model. See section 6 in the Owner's Manual for more detailed information, limitations and conditions.

Navigation-based Smart Cruise Control (NSCC)*†3,9

Navigation-based Smart Cruise Control will help automatically adjust vehicle speed when driving on highways with posted speed limits by using road information from the navigation system, while Smart Cruise Control is operating.

Smart Cruise Control (SCC) is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.

Highway Curve Zone Auto Slowdown: NSCC can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system. When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, and the NAV icon changes to AUTO and turns green **A** in the instrument cluster. When the vehicle passes the curved road, the vehicle may return to its previously set speed.

Highway Auto Speed Change: If the set speed is set to the current posted speed limit on the highway during NSCC operation, the set speed is changed automatically whenever the posted speed limit changes and when it receives information from the navigation system.

SCC Operation: With SCC turned on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, the accelerator pedal or the **+||-** button **B** must be pressed to start moving the vehicle.

SCC will adjust acceleration based on the drive mode selected in the Drive Mode Integrated Control system.

NSCC Settings:

- NSCC can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance > Driving Convenience > Highway Auto Speed Change

NSCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead. See section 6 in the Owner's Manual for more information. Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE


Navigation-based Smart Cruise Control (NSCC) Video




Smart Cruise Control with Overtaking Acceleration Assist Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

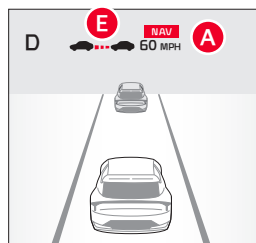

(Displays on LCD screen)

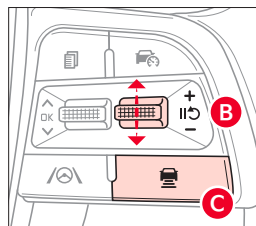

(Button layout on right of steering wheel)

Navigation-based Smart Cruise Control (NSCC)*†3,9 (continued)


NSCC Settings (continued):

To set the vehicle distance: Press the Vehicle Distance button **C** on the steering wheel. Each time you press the button, the vehicle distance will change **D**, indicated by the number of bars that appear on the display **E**.

To pause/resume NSCC operation: Depress the brake pedal or press the Pause/Resume button **+||⏮- B**. The cruise indicator on the instrument cluster will change.

QUICK TIPS

 - If your vehicle speed is between 0-20 mph when you press the Driving Assist button to turn NSCC on, the set speed will be set to 20 mph
- When following a vehicle, the system can automatically adjust your cruise speed based on the vehicle detected in front. It will even bring the vehicle to a complete stop if necessary. If the vehicle remains at a standstill for more than 3 seconds, you must depress the accelerator pedal or press the +/- switch up/down to start the vehicle
- NSCC will not activate until the brake pedal has been depressed at least once after ignition ON or engine start
- The navigation part of Smart Cruise Control does not function when a destination is not set on the infotainment navigation system



(Distances are approximate and vary depending on vehicle speed)

REMINDERS:

- CRUISE indicator must be ON in order to operate SCC
- The speed setting will need to be reset when ignition is cycled
- The distance settings are approximations and may vary depending on vehicle speed. See the owner's manual for more information
- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), Electronic Parking Brake (EPB) is activated and various other conditions. See owner's manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed which the driver is not aware of
- The navigation part of NSCC does not function when a destination is not set on the infotainment navigation system
- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways

Highway Driving Assist (HDA)*+3

Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.


When HDA is activated **A** and the conditions are met, the HDA indicator **B** will illuminate green. If proper conditions are not met, HDA will be in standby mode and the indicator light **B** will illuminate white. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **B**.

HDA User Settings:

To enable HDA, access settings through the Vehicle Settings in the Infotainment System. Press the **SETUP** key, then press **VEHICLE** on the screen to enter Vehicle Settings. Select Driver Assistance, Driving Convenience and then Highway Driving Assist.

HDA will operate only when these conditions are met:

- The vehicle is traveling slower than 110 mph or the highway speed limit
- When driving on limited/controlled access highways/freeways
- When the SCC is on and operating
- When the SCC speed is set to current posted highway speed or slower

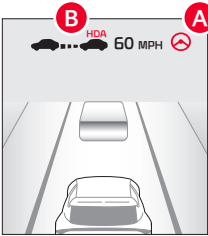

REMINDER: When the ignition is cycled, the system returns to its previous state, on or off.

See section 6 in the Owner's Manual for more detailed information, limitations and conditions. Images are for illustrative purposes only and may not reflect actual feature or operation.

QR CODE

Highway Driving Assist (HDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.

Rear View Monitor (RVM)^{† 3}


Rear View Monitor is a supplemental system that displays the view behind the vehicle through the Navigation screen* while the vehicle is in Reverse.

Press the Parking View button **A** to turn RVM on/off. Rear View Monitor activates when the:

- Engine Start/Stop button is in the ON position
- Gear Shift Lever is in the R (Reverse) position

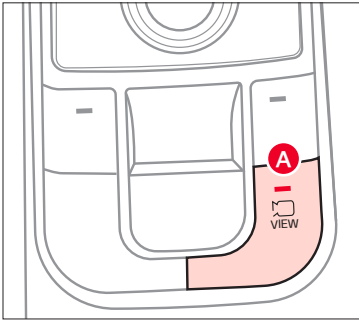

(Button located below gear shift)

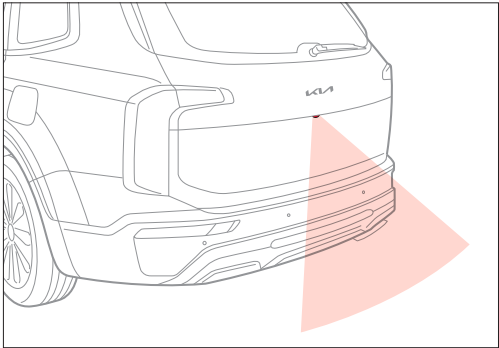

See section 6 in the Owner's Manual for more information. Images/rear view displays are for illustrative purposes only and may not reflect actual feature or operation.

REMINDERS:

- Rear View Monitor is not a substitute for proper and safe backing-up procedures
- Rear View Monitor may not display every object behind the vehicle
- Always drive carefully and use caution when backing up
- Through normal use and after inclement weather or washing, the rear camera may become dirty. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens
- While the Rear View Monitor is active the volume will be lowered on all audio modes

Surround View Monitor (SVM)*† 3

Surround View Monitor (SVM) is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle via four cameras displayed onto the audio head unit screen.

- Press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen
- Surround View Monitor Auto On: With Driver Assistance > Parking Safety > Surround View Monitor Auto On selected from the Vehicle Settings menu, the front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in D (Drive)




To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating.

QR CODE

Surround View Monitor (SVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

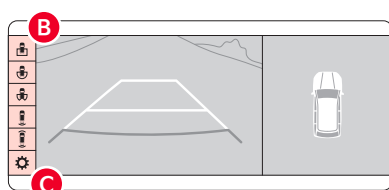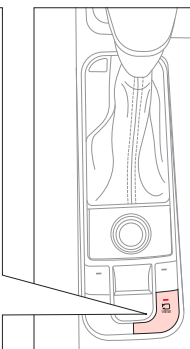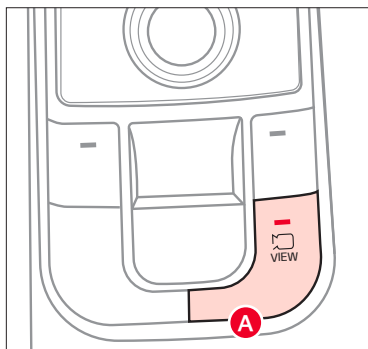

(Button located below gear shift)

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. The Surround View Monitor system is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear
- While SVM is active the volume will be lowered on all audio modes
- Through normal use and after washing or inclement weather, the rear camera may need cleaning. Use a clean, microfiber cloth to remove any dirt, debris or spots that may have accumulated on the lens.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)^{† 3}

Rear Cross-traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver under certain conditions. It may temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.



When the rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.

RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 6 mph

RCCA Settings:

- RCCA can be turned on/off by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Rear Cross-traffic Safety

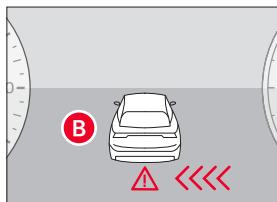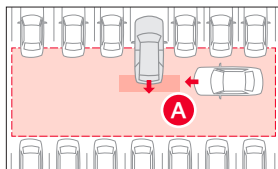

QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings on the Infotainment System. Go to Driver Assistance, Warning Sound and Haptic, then adjust the Warning Volume and select Driving Safety Priority.

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, the RCCA system will show a warning

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 6 in the Owner's Manual for more information.

QR CODE

Rear Cross-Traffic Collision-Avoidance Assist (RCCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Reverse Parking Collision-Avoidance Assist (PCA)*†‡


Reverse Parking Collision-Avoidance Assist is a supplemental system that is designed to assist the driver when the vehicle is in reverse by sounding a warning and temporarily braking, if a pedestrian or any object is detected within the sensing area of the rear of the vehicle, or to help reduce the possibility of a collision.

PCA Settings:

- PCA can be enabled by going to the Vehicle Settings in the Infotainment System
- Only adjust settings when the vehicle is at a standstill, gear shift is in Park and the ignition is on or the Engine Start/Stop button* in the on position
- **To access Vehicle settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select DRIVER ASSISTANCE, PARKING SAFETY, and REAR SAFETY
- There are three modes:
 - **Rear Active Assist** - PCA will warn the driver with an audible alert and may apply temporary braking
 - **Rear Warning Only** - PCA will warn the driver with an audible alert
 - **Off** - PCA is disabled
- To turn PCA off/on, press and hold the Parking Safety button **A** for more than two seconds



(Button located below gear shift knob)

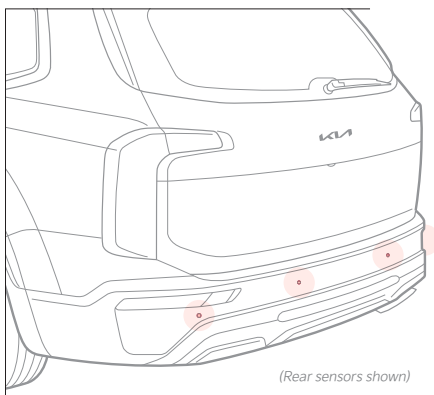

(Rear sensors shown)

QR CODE

Reverse Parking Collision-Avoidance Assist (PCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

The Warning Volume can be adjusted in the Vehicle Settings on the Infotainment System. Go to Driver Assistance, Warning Sound and Haptic, then adjust the Warning Volume and select Driving Safety Priority.

Reverse Parking Collision-Avoidance Assist (PCA)* is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up.

Reverse Parking Collision-Avoidance Assist (PCA) may not detect every object around the vehicle. See section 6 in the Owner's Manual for more information.

Forward/Reverse Parking Distance Warning (PDW)*†3

Forward/Reverse Parking Distance Warning (PDW)* is a supplemental system that is designed to assist the driver by chiming if any object is detected within the sensing area in the rear and rear side of the vehicle when backing up.

- To turn PDW on, press the Parking Safety button **A** (LED illuminated). To turn PDW off, press again **A** (LED not illuminated)
- PDW will activate when the ignition is on/ready and the vehicle is in D (Drive) or R (Reverse)
- **Parking Distance Warning Auto On** - To set the parking distance warning to be on at low speeds, enable it in Vehicle Settings in the infotainment system
- **To enable in Vehicle Settings in the Infotainment System** - Press the **SETUP** key or the onscreen **SETUP** button. Press **VEHICLE** to enter Vehicle Settings. Select Driver Assistance, then Parking Safety and select Parking Distance Warning Auto On

QUICK TIP

The Warning Volume can be adjusted in Vehicle Settings on the Infotainment System. Go to Driver Assistance, Warning Method, then Warning Volume.

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, PDW may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first
- Images are for illustration purposes only and may not reflect actual operation

Parking Distance Warning (PDW) is not a substitute for proper and safe parking and backing-up procedures. Always drive safely and use caution when backing up. Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.


Refer to section 6 in the Owner's Manual for more information.

QR CODE

Forward/Reverse
Parking Distance
Warning (PDW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

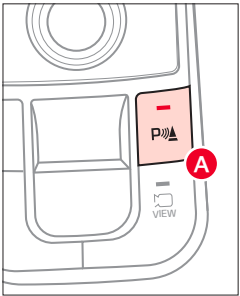

Head-Up Display (HUD)*†8

The Head-Up Display (HUD) is a semi-transparent display that projects a snippet of information from the instrument cluster and navigation system* onto the windshield glass.

To turn the HUD ON or OFF, go to User Settings* in the LCD Modes.

The HUD displays:

- Turn By Turn (TBT) navigation information*
- Road signs*
- Speedometer
- SCC set speed information
- SCC Vehicle Distance information
- Blind-Spot Safety
- Lane Safety
- Highway Driving Assist information*
- Lane Following Assist
- HDA system automatic speed setting information*
- Warning lights (low fuel)
- AV mode information

Head-Up Display (HUD) User Settings

Drivers can adjust the HUD settings from Vehicle Settings in the Infotainment System. Press SETUP, VEHICLE and HEAD UP DISPLAY.

HUD settings include:

- Display Height: Adjust the height of the HUD image on the windshield glass
- Rotation: Adjust the degree of HUD rotation
- Brightness: Adjust the intensity of the HUD brightness
- Contents Selection: Activate or deactivate HUD content
- Speedometer Size: Choose the size of the HUD speedometer
- Speedometer Color: Choose the color of the HUD speedometer

REMINDERS:

- The HUD image on the windshield glass may not be visible in these cases:
 - The driver has poor sitting posture
 - The driver is wearing polarized sunglasses
 - There is an object covering the HUD
 - Driving on a wet road
 - Excessive lighting inside or outside the vehicle
 - Modifications made to the windshield, such as tinting or other aftermarket treatments, could affect the HUD. When replacing the front windshield glass of vehicles equipped with the HUD, owners must replace it with windshield glass designed for HUD operation. Otherwise, duplicated images may be displayed on the windshield glass
 - If Turn By Turn (TBT) navigation information is selected as HUD content, TBT information will not be displayed on the LCD


See section 4 in the Owner's Manual for more information.

QR CODE

Head-Up Display Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

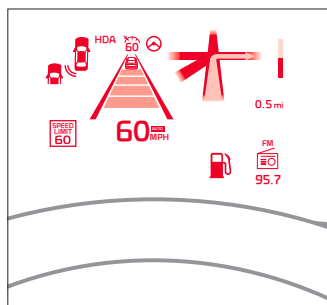

The Head-Up Display is a supplemental system. Do not solely rely on the system, always drive safely, and pay attention to the driving conditions on the road.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Instrument Cluster Control (Instrument Panel Dimmer)

With the Engine Start/Stop button on or the parking lights/headlights on, press **A** (+) or (-) to adjust the brightness of the instrument panel illumination.




See section 4 in the Owner's Manual for more information.

(Button located on driver's panel, left of the steering wheel)

Tow Mode*

Press TOW mode button **B** on the left side of the crashpad to activate TOW mode. The vehicle will adjust the power output, transmission, braking, and ESC to assist towing. TOW mode indicator will be shown on the Instrument Cluster LCD.

The maximum towing capacity can be adjusted in 3 stages: Heavy, medium and light.

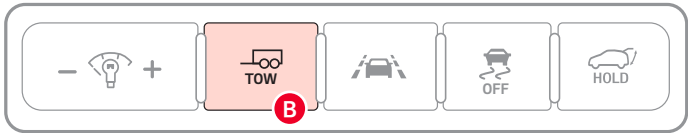

REMINDERS:

- In order to maximize driving comfort, ISG will not be activated
- When accelerating in uphill, the vehicle will adjust the brake pressure to avoid rolling back

Images are for illustrative purposes only and may not reflect actual feature or operation.

Electronic Stability Control (ESC)^{† 5} / Traction Control System (TCS)^{† 5}

Electronic Stability Control (ESC) is designed to help stabilize the vehicle during certain cornering maneuvers. The Traction Control System (TCS) can help improve traction. It is a good idea to keep both ESC and TCS turned on for daily driving whenever possible.

Press the ESC button **A** to turn the Traction Control System OFF/ON.

To turn both Electronic Stability Control and the Traction Control System OFF, press and hold the ESC button for more than 3 seconds. Press again to turn ON.

REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC indicator light in the instrument cluster will be lit momentarily whenever ESC is active



(Button located on driver's panel, left of the steering wheel)

QR CODE

Electronic Stability Control Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

Hill-Start Assist Control (HAC)^{† 5}

Hill-Start Assist Control (HAC) is designed to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

HAC automatically activates whether ESC is OFF or ON but does NOT activate when ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator
- HAC provides a two-second delay before the vehicle may start rolling backwards

REMINDERS:

- HAC does not operate when the gear shift is in P (Park) or N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service

See section 5 in the Owner's Manual for more information.


Reverse Parking Aid Function*† 3

When the gear shift lever is moved into R (Reverse) and the vehicle is moving backwards, the outside rearview mirrors will rotate downward to aid in reverse parking.


To turn Reverse Parking Aid Function ON, move switch **A** to either the right or to the left. To turn OFF, move switch to the center position.

The outside rearview mirrors will automatically return to their original positions when:

- The Engine Start/Stop button is in the OFF position
- The gear shift lever is moved out of R (Reverse)
- The outside rearview mirror switch is in the center position

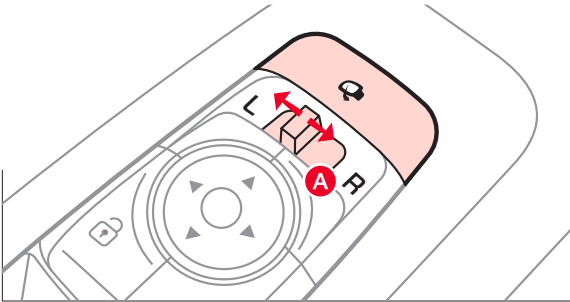

See section 4 in the Owner's Manual for more information.
For illustrative purposes only. Your actual display, buttons and/or features may vary.

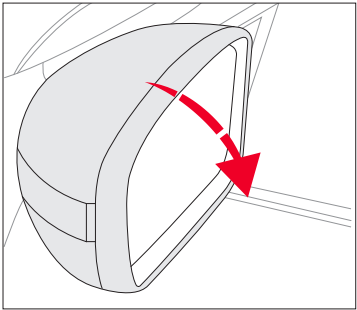


REMINDER: When the buttons are not pressed, the Reverse Parking Aid Function will not operate and the outside rearview mirrors will not rotate downward.

DRIVER'S
PANEL

Power Liftgate Open/Close Button*

Press and hold the Power Liftgate Open/Close button **B** to open or close the Liftgate automatically.

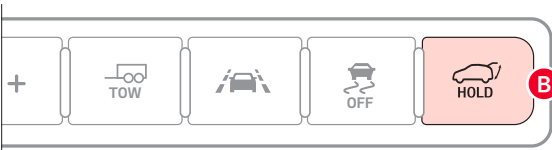

(Button located on driver's panel, left of the steering wheel)

REMINDERS:

- The Engine Start/Stop button needs to be on
- The Gear Shift needs to be in (P) Park

See section 4 in the Owner's Manual for more information.
For illustrative purposes only. Your actual display, buttons and/or features may vary.

QR CODE

Liftgate Button and
Operation Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

Power Folding Outside Mirrors*

- A** Toggle switch to the L or R to select the left or right mirrors
- B** Press button arrows left/right or up/down to adjust mirror position
- C** Toggle button left/right to unfold/fold the outside rearview mirrors
- C** Toggle button to center to automatically fold/unfold mirrors when:
 - Smart Key lock/unlock buttons are pressed
 - Outside door handle button is pressed
 - Driver approaches the vehicle with the Smart Key (if activated in Vehicle Settings)

See section 4 in the Owner's Manual for more information.


QUICK TIP

- The mirrors will automatically unfold when the Smart Key* is within close proximity to the vehicle (if activated in Vehicle Settings)

REMINDERS:

- When the mirror toggle button is in the center, press the lock button twice on the Smart Key to automatically fold mirrors when exiting vehicle
- To lock the mirror position, toggle button to the neutral (center) position

DRIVER'S
PANEL

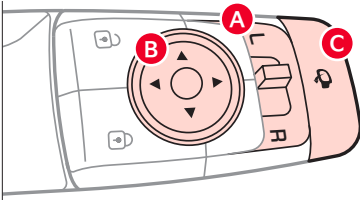

Heated Outside Mirrors

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. Rear Window Defroster button is located on the climate control system panel.

See section 4 in the Owner's Manual for more information.

Manual Folding Mirrors*


To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP


If needed, pull the mirror firmly until it folds.

Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

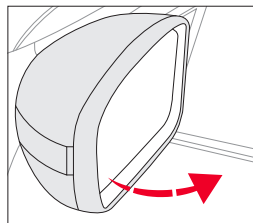

Power Windows, Window Lock & Central Door Lock

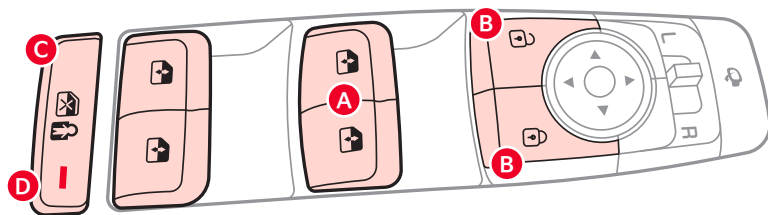

- A** Pull/Press to operate driver and front passenger's window auto up/down
- B** Press to unlock/lock all doors
- C** Press to disable the rear passenger window controls

QUICK TIPS

- Pull/Press button **A** again to stop Auto Up/Down function
- Auto Door Lock/Unlock* will engage when gear shift is moved into or out of the P (Park) position
- To turn Auto Door Lock/Unlock* OFF, go to Vehicle Settings in the Infotainment System
- While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following::
 - If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
 - If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

REMINDERS:

- When pressed **C**, the rear window controls for the Rear Passenger Windows are disabled
- When closing, be mindful of any objects or persons

Button configuration may vary depending on vehicle model.

See section 4 in the Owner's Manual for more information.

Auto Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to Vehicle Settings in the Infotainment System on how to turn Auto Door Lock/Unlock ON/OFF.

See section 4 in the Owner's Manual for more information.

Electronic Child Safety Lock System

Press **C** to lock the rear passenger doors. An indicator will illuminate **D** showing the system is active.

This system is enabled by default, and then activated once the button **C** is pressed. To deactivate, press the button again.

REMINDER: When activated or button is pressed, the rear passenger windows will not operate from the rear controls.

See section 4 in the Owner's Manual for more information.

QR CODE

Electronic Child Safety Lock System Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*


Engine Start/Stop Button^{† 6}

To start the engine:

- 1. Depress the brake pedal
- 2. Press the ENGINE START/STOP button while the gear shift is in P (Park) or N (Neutral)

To turn the engine OFF, press the ENGINE START/STOP button while the gear shift is in P (Park).

To use the ENGINE START/STOP button, you must have the Smart Key on your person or inside the vehicle.

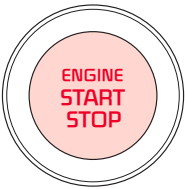

QUICK TIPS

- To use electrical accessories
 - ACC position
 - When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button once
 - ON position
 - When already in the ACC position and without depressing the brake pedal, press the ENGINE START/STOP button again
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice
- Keeping the vehicle in the ACC or ON position for extended periods of time without turning the engine on may discharge the vehicle's battery opening

REMINDERS:

- If the Smart Key fob battery is dead, you can still start the engine by pressing the ENGINE START/STOP button with the Lock-button end of the Smart Key. The Smart Key must contact the ENGINE START/STOP button directly, at a right angle
- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds

QR CODE

Start/Stop Button Video



Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

Turn Signals & Fog Lights*

To operate Turn Signals: Move lever up/down for right/left turn signal.


One-touch lane change signal is activated by briefly pressing the turn signal slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the lane change signal blinks (3/5/7), go to Vehicle Settings in the Infotainment System.

To operate Fog Lights: Press switch **A** up/down to turn on/off the Fog Lights.

REMINDER: Headlights must be on for fog light operation.

See section 4 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

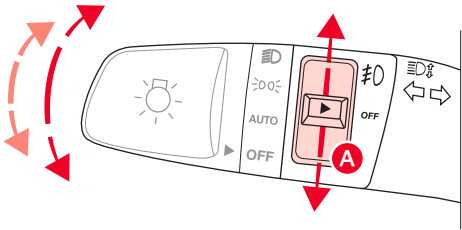

Headlights & High Beams


AUTO Light - When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL) - DRL may help others to see the front of your vehicle during the day. The lights will turn on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Engine is turned off
- Switch is in the DRL OFF position

Headlight / High Beam Lever Operation

- Rotate lever switch to change the headlight function:
- Press lever away from you to turn high beam headlights ON
- Pull lever to flash headlights/high beams or to turn off the high beams

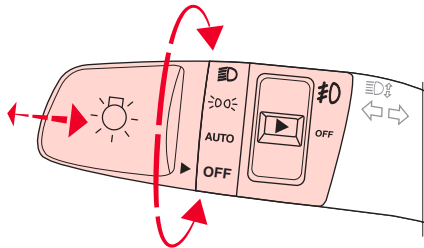

- Headlight position
- Parking Light position
- AUTO** Auto Light /DRL/ High Beam Assist*
- OFF** OFF position

High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When the HBA indicator illuminates on the instrument cluster, the HBA is not working properly. See an authorized Kia dealer for service

QR CODE


High Beam Assist (HBA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 4 in the Owner's Manual for more information.

Front & Rear Windshield Wipers & Washers

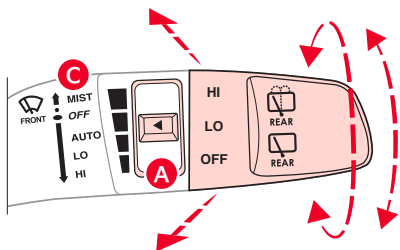

MIST: Single wipe
OFF: Wiper off
LO: Slow wipe
HI: Fast wipe
INT*/AUTO: Intermittent*/Auto/Rain Sensing*

To operate front wipers & washers:

- Move lever up/down to change wiper modes

MIST: Single wipe **LO:** Slow wipe
OFF: Wiper off **HI:** Fast wipe
INT*/AUTO*: Intermittent*/Auto Rain Sensing*

- Pull to spray and wipe

To operate rear wipers & washers:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

Auto Rain Sensing (Auto Control)*

The rain sensor located on the upper end of the windshield glass is designed to sense the amount of rainfall and control the wiping cycle for the proper interval. The more it rains, the faster the wiper operates. When the rain stops, the wiper stops.

To turn ON the auto rain sensing wipers, move lever up/down to AUTO. To adjust the auto rain sensing wiper speed setting, move the speed control switch **A** up/down.

Auto Rear Wiper* - The feature can be enabled in the Vehicle Settings in the Infotainment System. When the lever is in the AUTO position, the gear shift is moved into Reverse (R), Auto Rear Wiper activates and will wipe the rear windshield.

See section 4 in the Owner's Manual for more information.

QUICK TIPS

- When the Engine Start/Stop button is in the ON position and the wiper switch is in AUTO mode, the wiper will automatically operate once to perform a self-check of the system
- Set the wiper to the OFF position when the wiper is not in use
- Moving lever to HI increases intermittent wipe frequency and wipe speed. Moving lever to LO decreases frequency of wipes
- Pressing button **A** up increases Intermittent wipe frequency and wipe speed. Pressing button **A** down decreases frequency of wipes
- On Rear Wipers, intermittent wipe function is not adjustable

QR CODE

Wipers and Wiper Stalk Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Lifting Wipers / Winter Mode (Wiper Service Mode)

To lift the windshield wipers to clean the windshield, inspect or replace wiper blades or raise the wipers in snow/ice conditions without damaging the hood, the blades need to be moved to the middle of the windshield (service position) **B**.

With the ignition ON, turn the ignition OFF, and within 20 seconds move the wiper switch up to the MIST position **C** and hold the switch for more than two seconds until the wiper blade is in the fully up position.

To return wipers to the normal position, turn the ignition ON, then activate MIST.

Image for illustrative purposes only. See section 7 in the Owner's Manual for more information.

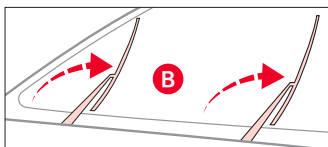

QR CODE

Wiper Service Mode / Lifting Wipers Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Tilt/Telescoping Steering Wheel† 18

To adjust the Steering Wheel, push the lock-release lever **A** down and adjust to the desired angle **B** and distance **C**.

When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

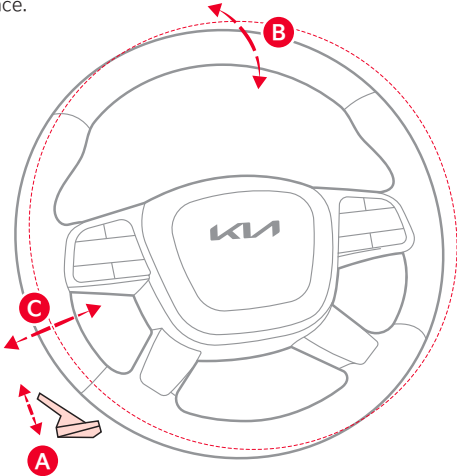

(Lock-release lever located on left side of steering column.)

QR CODE

Tilt/Telescoping/Heated
Steering Wheel Video



Refer to the inside front cover for
more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

- It may be helpful to pull/push the bottom of the Steering Wheel towards/away from you to adjust to the desired distance.


Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

See section 4 in the Owner's Manual for more information.

Heated Steering Wheel*

While the Engine Start/Stop button is in the ON position, press **D** to turn the steering wheel heater ON. The button indicator will illuminate.

The steering wheel heater will turn off automatically in 30 minutes, or when the button is pressed again to deactivate.

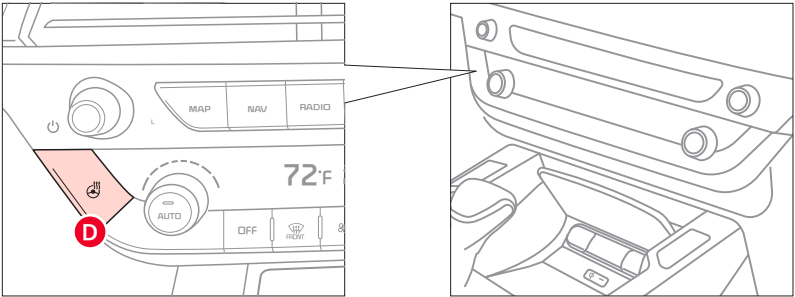


REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

See section 4 in the Owner's Manual for more information.

Audio Controls† 16

- A Audio System MODE button:** Press to cycle through FM/AM/SiriusXM®13/USB Music/Bluetooth® Audio
- Audio System ON/OFF:** Press to turn power on/off. Press and hold to turn power off. Press and hold to go to Advanced Setting / Steering Wheel mode.
- B Seek/Preset button:**
 - Radio Mode (FM/AM/SiriusXM®): Press up/down to advance through preset stations. Press up/down and hold to auto seek
 - Media Modes: Press up/down to move track up/down. Press up/down and hold to fast forward/rewind (except for Bluetooth® Audio)
- C Volume buttons:** Press up/down arrows to raise/lower volume
- Mute button:** Press to mute all audio (Media pauses in some Media modes when pressed)
- D Custom button ★:** Press to access user-selected feature. Press and hold the button to select one of the features available

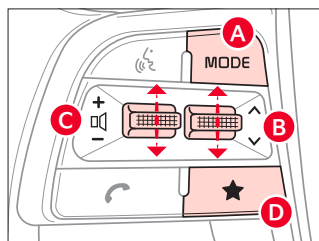

(Button layout on left of steering wheel)

REMINDERS:

- Your vehicle's steering wheel buttons may differ from those in the images. See the Owner's Manual for more details
- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving
- To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

QR CODE

Steering Wheel Controls Video



Star, Favorite & Radio Presets Buttons Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


For more information, refer to the Car Infotainment System Quick Reference Guide.

For other audio system information, refer to pages 40-45.

Bluetooth® Wireless Technology† 2,16

- A Volume button:** Press up/down to raise/lower speaker volume
- Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- B Talk button:** Press to activate voice recognition/bring up menus/place calls with minimal voice command prompts from the system. Press and hold to exit voice recognition (must have a Kia Connect subscription)

When enrolled with a Kia Connect subscription, press this button to activate the Kia Connect Assist to use navigation guidance and search destinations
- C Receive/Place Call button:** Press to receive/place or end a call. Press to pair a phone (if no phone is paired)
- D Custom button ★:** Press to go to the pre-selected menu/feature. Press and hold to select your menu/feature

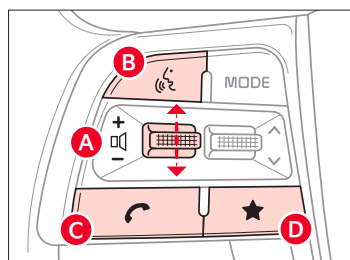

(Button layout on left of steering wheel)

QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® wireless technology chip programming, functionality may differ from one phone to another
- The system can register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations

REMINDER: Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device

Your vehicle's steering wheel buttons may differ from those in the image. See the Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® wireless technology FAQs, go to www.kia.com, Owners section.

Bluetooth® Wireless Technology^{† 2,16} (continued)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

How to Place a Call

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button **C** to place a call using the touchscreen
- Option 2: Press on the Talk button **B**. Then say the command "Call {name}" or "Dial {number}"

When using the voice command feature, wait for the system BEEP before speaking the command.

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names ("John Smith" vs. "Dad," "Smith Residence" vs. "Home")
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms ("In Case of Emergency" vs. "ICE") or words with all capital letters
- Spell words completely, no abbreviations ("Doctor Smith" vs. "Dr. Smith")

QUICK TIPS

- The system can register or pair multiple Bluetooth® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof, and turn off A/C; open windows, sunroof, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say "Help" to get a list of available commands
- Bluetooth® Music Streaming: If the Bluetooth® music is inaudible or too low, turn up the volume on the connected phone

QR CODE

Voice Recognition Tips Video



Steering Wheel Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® wireless technology FAQs, go to www.kia.com, Owners section.

Android Auto™^{†2} / Apple CarPlay® Setup^{†2}

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store^{†2}. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Cable Connection setup for Android Auto™:

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION, select PHONE PROJECTION SETTINGS, then ANDROID AUTO. Review all terms, conditions and requests on the infotainment system and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the Infotainment System home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

Cable Connection setup for Apple CarPlay®:

Connect the Apple CarPlay® compatible iPhone® with the vehicle's USB port using the manufacturer's cable provided with your iPhone®.

1. Press the **SETUP** key on the Infotainment System
2. Press DEVICE CONNECTION on the screen, select PHONE PROJECTION SETTINGS, then select Apple CarPlay®
3. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the infotainment system and phone, and, if you agree, accept them in order to use Apple CarPlay®
4. From the Infotainment System home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
 - The phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple Carplay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Refer to the Car Infotainment System Quick Reference Guide for more information. For further audio system operation, refer to pages 39-45.

iPhone is a registered trademark of Apple Inc.

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - Kia Connect with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

Kia Connect Activation^{†1}

1. Enter the activation screen on your vehicle's infotainment system:
 - a. Press SETUP key
 - b. Press Kia Connect icon
 - c. Press Activate
2. Read and agree to Terms of Service and Privacy Policy then press SUBMIT
3. Enter number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone SMS or email:
 - a. Check your phone SMS or email for verification code
 - b. Open the link in your SMS or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code

 - c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
 - d. Enter the code in the infotainment system and press ACTIVATE
 - e. Go back to the page with your verification code and press "I have entered my verification code." A link will be provided to download the Kia Access app from your app store. After installing the app, log in and enjoy

REMINDERS:

- This vehicle is equipped with over-the-air system updates
- To download map updates for the navigation system, go to update.kia.com. Check for updates that are generally available twice a year

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

For further infotainment system operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 39-45.

Kia Connect is currently unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

QR CODE

Kia Connect Activation Video



Kia Connect & Kia Access app Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Kia Connect Assistance

Kia Connect **A** - Connect to the Kia Connect Call Center

Roadside Assist **B** - Press to connect to a roadside assistant where you can request vehicle towing services.

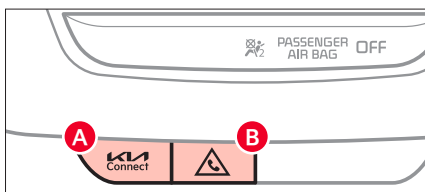

(Buttons located on the overhead room lamp console area)

QR CODE

Kia Connect Assistance Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Kia Access App Download

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and start an account (refer to Kia Connect Activation page). Get to know your new Kia and the available convenient features on the app.



QUICK TIPS

- To keep your map and software up to date, Kia provides over-the-air updates (on select Kia models). You can also visit the official Kia update webpage at <https://update.kia.com/US/EN/Main>. **Note**, visiting a dealer for software update may include an additional charge
- The smartphone and vehicle need to be connected to a cellular network with good wireless signal strength in order to use Kia Connect. If these conditions are not met, remote command may not execute or takes a long time. It will also effect voice commands
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- When Remote Start is activated, if the driver does not enter the vehicle within 10 minutes, the Remote Start will turn the engine off
- When using Remote Start with Climate Control, turn on for at least a few minutes before getting into the vehicle, allowing the vehicle interior to reach your desired temperature
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect again

QR CODES

Download the Kia Access App by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access App Features Guide.

Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access App Features Guide


The Kia Access App Features Guide helps you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Service
- Schedule Remote Command
- Sync Calendar
- Alerts, Trip Information, Manuals
- Stolen Vehicle Recovery

Kia Connect is currently unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect w/ Navigation^{+1,9} - FM/AM/SiriusXM^{®+2}/Media (USB, Bluetooth[®] Audio)

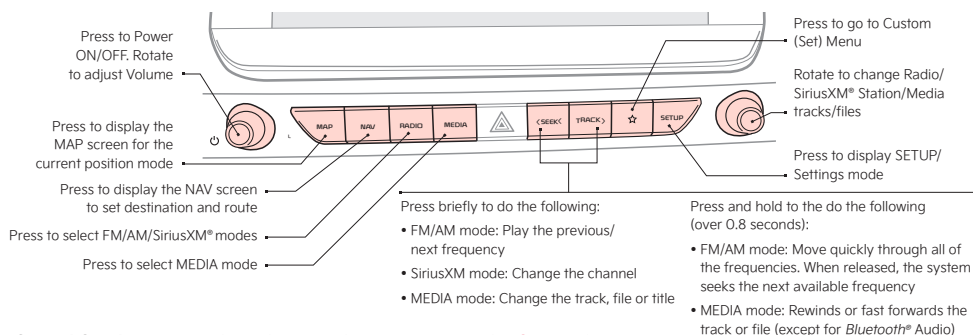

Sound Settings - To adjust the sound settings, Press the **SETUP** key on the infotainment system. Select the onscreen SOUND button, then select the menu item. Use the onscreen buttons to adjust settings.

Radio Presets - To save a Preset, press and hold the desired slot or the star button ☆ next to or below the radio station display. This saves the current station in the selected slot.

SiriusXM[®] Smart Favorites - In Radio mode, choose SiriusXM[®], then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key ☆: To program, press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

Map/software updates: To keep your map and software up-to-date, free of charge, visit the official Kia update page, <https://update.kia.com/US/EN/Main>.

Note, visiting a dealer for software update may include an additional charge.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- The system can register or pair multiple Bluetooth[®] devices
- Prolonged use of the navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the navigation system should be operated with the engine running to prevent battery discharge
- When using the voice command feature, wait for the system BEEP before speaking the command
- Surround Sound can be turned on or off
- At any time, you can interrupt Kia Connect System Command Feedback by pressing the TALK button on the steering wheel

To help reduce driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Kia Connect is currently unavailable for model year 2022 vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

QR CODE

Kia Connect with Navigation Video



Navigation System Important Tips Video



Navigation System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Your vehicle's audio system may differ from that in the illustration. For further Kia Connect link operations, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 39-44.

Digital Clock - Infotainment System

Press the **SETUP** key on the infotainment system, then press the **GENERAL** button then date/time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

REMINDERS:

- Daylight Saving must be enabled or disabled in the Clock Settings screen
- To access manual date and time setting, turn GPS Time OFF in the Clock Settings


Refer to the Car Infotainment System Quick Reference Guide for more information.

Multimedia USB Ports, Power Outlets & USB Charger Ports

Power Outlets **A**: Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

Multimedia USB Port **B**: Use the USB port to connect USB audio devices and smartphone devices.

USB Charger Ports **C**: Devices can be recharged using a USB-C cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB Charger.

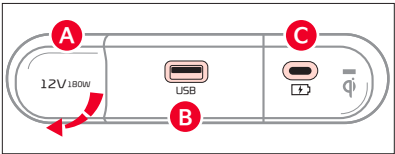

(Located in center panel in front of gearshift)

QUICK TIPS

- The power outlets are inactive when the ignition is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets **A**
- USB Charger does not support data transfer

QR CODE

Multimedia USB Port,
Power Outlets & USB
Charger Port Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:


- Using the power outlets (accessory plugs) for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) may cause the battery to discharge
- Only use manufacturer cables that came with your device as third party cables may cause damage to the device
- The Multimedia USB Port **B** in the center panel charges more slowly than the USB Chargers **C** throughout the vehicle

See section 4 in the Owner's Manual for more information.

AC Inverter*

The AC Inverter supplies 115V/100W electrical power to operate accessories or equipment. Press the AC Inverter button to activate.

See section 4 in the Owner's Manual for more information.

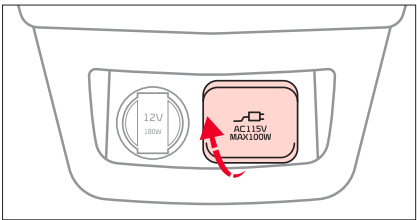

(Located behind center console)

Wireless Smartphone Charging System*†‡

Charge a compatible Qi Certified smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

- 1. Enable Wireless Charging in the Vehicle Settings in the Infotainment System, select Convenience, then Wireless Charging System
- 2. Place a compatible smartphone on the center of the charging pad **A**
- 3. The indicator light **B** may change to amber once wireless charging begins
- 4. Once charging is complete, the amber light **B** may change to green

QUICK TIPS

- The smartphone must be a compatible phone with Qi function available
- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the SmartKey Fob must be detected inside the vehicle
- For best results, place the smartphone on the center of the charging pad
- If wireless charging does not work, move the smartphone around the pad until the charging indicator turns amber
- Avoid placing other metal items in the bin while charging as to not impede the charging area

REMINDERS:


- Some smartphone models are not Qi certified, which may affect the availability, speed or performance of the wireless charging
- If any door is opened, charging will be disabled
- The smartphone must be a compatible phone with Qi function available
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies. See the Owner's Manual for more detailed information and the back page for legal disclaimers
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- Charging Performance - Your device's position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate includes foreign objects, such as coins or pens, and phone case thickness

QR CODE

Wireless Smartphone Charging Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

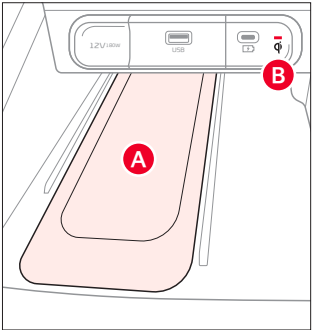

See section 4 in the Owner's Manual for more information.

Automatic Climate Control System

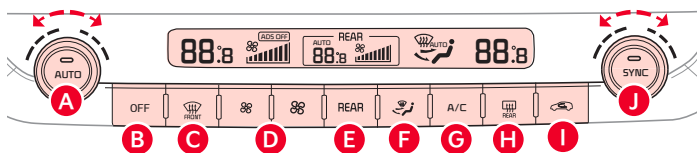

Front Climate Control

- A** AUTO (Automatic) Climate Control button
- B** System OFF button
- C** Front Windshield Defrost button
- D** Fan Speed Control buttons
- E** Rear Control Mode button
- F** Mode Select button
- G** Air Conditioning button
- H** Rear Window Defrost button
- I** Recirculated Air button
- J** SYNC (Synchronize All Zones) Temperature Control button

Auto Defogging System (ADS)

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

The ADS is set ON by default. To cancel ADS, press the Front Defrost button **C** for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn ADS on again, press the Front Defrost button **C** for three seconds.

Climate Control Auto Function

Press AUTO **A** to select full auto operation. In AUTO mode the driver and front passenger have full control of their own temperature zones. The mode, fan speed, air intake and air conditioning will activate and adjust accordingly to achieve the temperature settings for each zone.

To set temperatures:

- Turn **A** to set the driver's zone temperature
- Turn **J** to set the front passenger's zone temperature

Tri-Zone Climate Control

Pressing the SYNC button **J** synchronizes all climate control zones (driver, passenger, and rear) to the driver's temperature control.

Air Flow Modes

To select air flow modes, press the Mode Select button **F**:

- Face-Level
- Floor-Level
- Bi-Level
- Floor/Defrost-Level

For illustrative purposes only. Your actual display, buttons and/or features may vary. See section 4 in the Owner's Manual for more information.

QR CODES

Automatic Climate Control Operation Video



Auto Defogging System (ADS) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Defrost Outside Windshield

1. Set fan speed to the highest position **D**
2. Set temperature to hot **A**
3. Press the front defrost button **C**
4. Defog Inside Windshield
5. Set fan speed to highest position **D**
6. Set temperature to highest position **A**
7. Press the front defrost button **C**

QUICK TIP

- When the Climate Control System's temperature is turned up to high heat or low cool, the Seat Warmers / Ventilated Seats turn on automatically

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Automatic Transmission with Manual Mode

To shift into any gear from Park, depress the brake pedal, then press the Release button **A**, located on the side of the gear shift lever, and shift.

P: Park - To shift into Park from any gear, press the Release button **B** on the gear shift while the vehicle is stationary and the brake pedal is depressed, and shift.

R: Reverse - To shift into Reverse, depress the brake pedal, press the Release button **A**, and move the shift lever into Reverse.

N: Neutral



D: Drive

[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode: To enter the Manual mode, move the shift lever from D to the left gate **B**.

To shift while in Manual mode, move the shift lever up [+] to upshift or down [-] to downshift **B**.

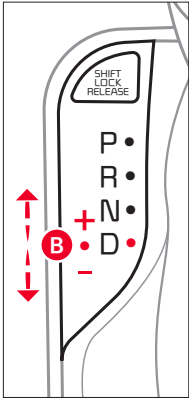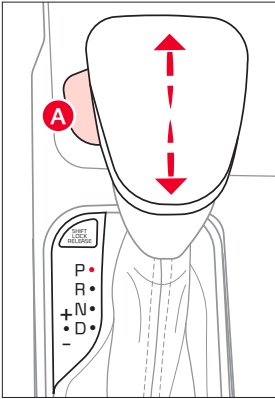

QR CODE

Automatic Transmission - Sportmatic Shifting with Gear Shift Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

QUICK TIPS

- The instrument cluster and the light beside the shift lever identifies the gear the vehicle is currently in
- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

REMINDERS:

- When in P (Park), if the Release button is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

Electronic Parking Brake (EPB)

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake


Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light  **BRAKE** is illuminated on the instrument cluster.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive. To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light  **BRAKE** is OFF.

QUICK TIPS

- Pull up and hold the EPB switch again to increase brake pressure if parked on a decline or incline
- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application vehicle slows down. When the vehicle stops, 1st gear is automatically selected

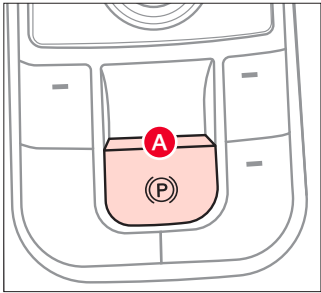

QR CODE

Electric Parking Brake (EPB) / Auto Hold Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily or remains continuously lit, take your vehicle to an authorized Kia dealer and have the system checked
- A click or electric brake motor sound may be heard while operating or releasing the EPB. These conditions are normal and indicate that the EPB is functioning properly

Auto Hold

Auto Hold temporarily maintains the vehicle at a standstill even if the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **A** on the center panel. Before Auto Hold will operate, the driver's door, engine hood and liftgate must be closed and the driver's seat belt must be fastened.

Depress the brake pedal, start the engine and then press the AUTO HOLD button **A**. The white Auto Hold indicator will come on indicating the system is in standby.

The Auto Hold indicator, which is in the instrument cluster, has four states:

White: Standby - When the vehicle is in Park and at a standstill, and the AUTO HOLD button **A** is turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop and depressing the brake pedal, the Auto Hold indicator changes from white to green.

OFF (not illuminated) - The indicator will turn OFF when the AUTO HOLD button **A** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes
- Auto Hold only operates when the vehicle is in Drive or Neutral
- Auto Hold turns off when the ignition is cycled


See section 5 in the Owner's Manual for more information.

QR CODE

Electric Parking Brake (EPB) / Auto Hold Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

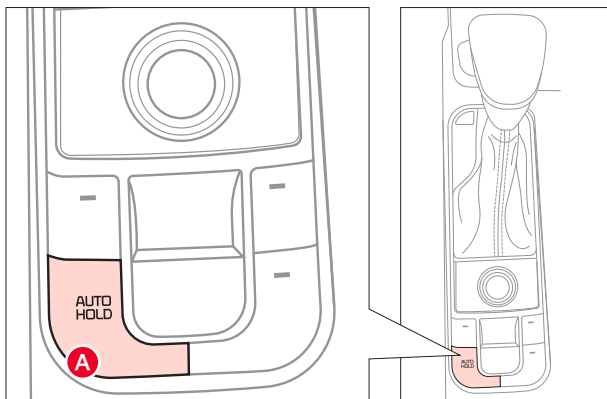


Idle, Stop & Go (ISG) System

The ISG system is designed to help reduce fuel consumption by automatically shutting down the engine when the vehicle is at a standstill.

When the ISG system is ON and the vehicle is at a standstill, the engine will stop, and the green AUTO STOP indicator (A) on the instrument cluster will illuminate.

The engine will restart when the brake pedal is released or the shift lever is moved from D (Drive) to the R (Reverse) position or to Manual Shift mode. When the engine restarts, the green AUTO STOP indicator on the instrument cluster will turn off.

To deactivate the ISG system, press the ISG OFF button (A). If you press it again, the system will be activated.

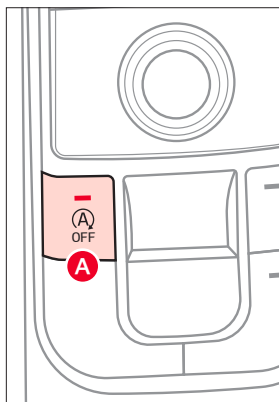

QUICK TIPS

- The ISG system is disabled when:
 - A seat belt is unfastened
 - The hood or a door is opened
 - Battery condition is poor
 - The front or rear defroster is turned on
 - Engine coolant temperature is low
 - The outside ambient temperature is too low/high
 - Emission control devices activate
 - The vehicle is on a steep slope

REMINDERS:

- ISG is active by default at vehicle startup. When the ignition is cycled, ISG will turn ON again
- Under certain conditions, the engine will restart automatically even if the brake pedal is still depressed
- If the AUTO STOP indicator (A) is continuously blinking yellow and the ISG button LED is on, please contact an authorized Kia dealer and indicate that the EPB is functioning properly

QR CODE

Idle, Stop & Go (ISG) System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Seat Warmers^{† 14} / Ventilated Seats*

Front Seats

Seat Warmers:

- Press button up once for high setting (3 LEDs lit)
- Press button up twice for medium setting (2 LEDs lit)
- Press up a third time for low setting (1 LED lit) and again to turn OFF
- Press and hold to turn OFF

Ventilated Seats:


- Press button down once for high setting (3 LEDs lit)
- Press down twice for medium setting (2 LEDs lit)
- Press down a third time for low setting (1 LED lit) and again to turn OFF
- Press and hold to turn OFF

QR CODE

Heated and Ventilated Seats Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

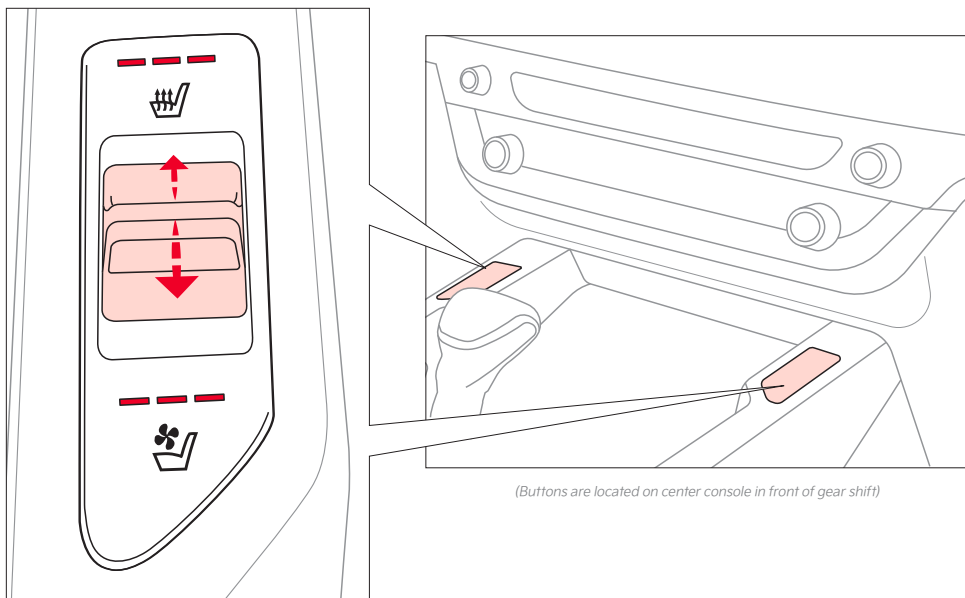

(Buttons are located on center console in front of gear shift)

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

REMINDERS:



- Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information
- If the Auto Climate Control is on, the seat warmers or ventilated seats may turn on automatically based on the set temperature and ambient temperature

See section 4 in the Owner's Manual for more information.

Power Adjustable Driver's Seat†12

Move/Press controls to adjust Seat forward/backward, Seat Cushion tilt up/down, Seatback forward/backward, Lumbar up/down/forward/backward or Seat Cushion Extension forward/backward.

Driver Lumbar Stabilization System* - Lumbar support will automatically adjust through full range of positions. To enable, go to Vehicle Settings on the Infotainment System, select SETUP, VEHICLE, SEAT, then LUMBAR STABILIZATION SYSTEM.

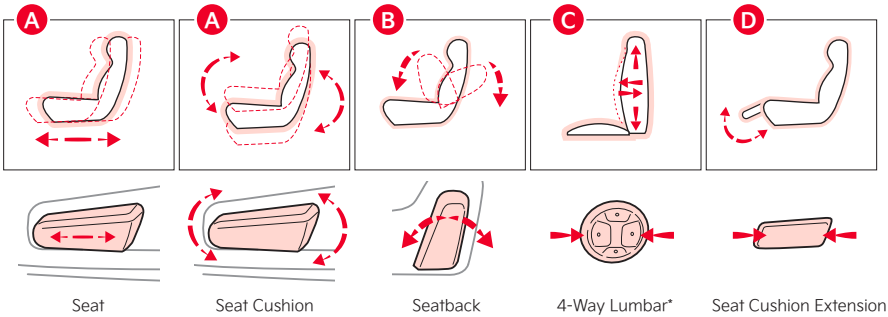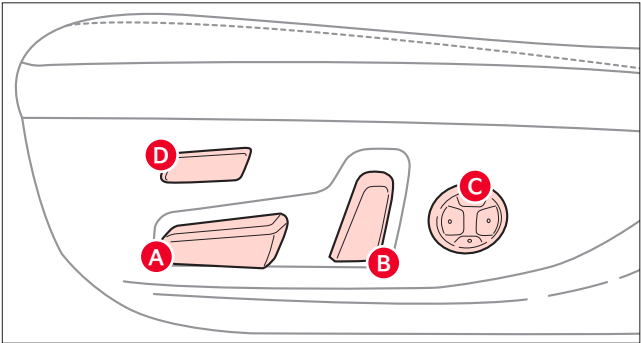

REMINDER: Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

QR CODE

Power Adjustable Driver's Seat with Memory Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 3 in the Owner's Manual for more information.

Front Seat Headrest Adjustment*†7


To raise headrest: Pull headrest up.

To lower headrest: Press lock **E**, then press the headrest down.

REMINDEES:

- Button may be hard to see if headrest is in its lowest position
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- The headrest only moves up and down as described above. It does not adjust forward or backward.


See section 3 in the Owner's Manual for more information.

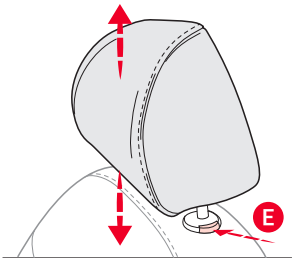

Driver Position Memory System^{*†12}

The integrated system stores into memory the position of the driver’s seat and the outside rearview mirrors. To store positions into memory, first place the gear shift into P (Park) while the Engine Start/Stop button is in the ON position. Then:

- 1. Adjust the driver’s seat, outside rearview mirrors, settings and steering wheel positions
- 2. Press the SET button **A** on the control panel. System will beep once
- 3. Press one of the memory buttons 1 or 2 **B** within 4 seconds.
The system will beep twice when memory has been stored

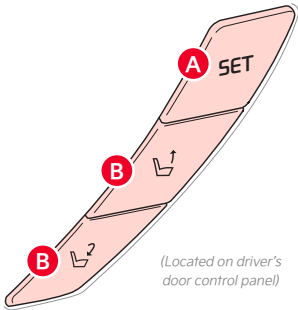

REMINDER: Do not attempt to operate the driver position memory system while the vehicle is moving. This could result in loss of control of the vehicle.

QR CODE

Power Adjustable Driver's Seat with Memory Settings Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 3 in the Owner's Manual for more information.

Rear Occupant Alert (ROA) with Ultrasonic Sensors^{†3}

Rear Occupant Alert (ROA) with Ultrasonic Sensors can help alert the driver when rear passenger(s) are left in the rear seats using the ultrasonic sensors and door monitoring. The system is designed to provide three separate alerts:

- The 1st alert is a message on the Instrument Cluster, "Check Rear Seats" **A**, and a chime will sound


After the 1st alert, when the doors are locked and there is movement detected in the rear seats, the horn will sound for about 25 seconds. This alert may activate up to eight times within 24 hours, if movement is still detected and system has not been disabled



- If you have installed the Kia Access with Kia Connect app on your smartphone, logged in and activated the Rear Occupant Alert notification, a third alert (notification) will be sent to your phone. To turn the system on or off, in the Instrument Cluster, go to Vehicle Settings in the Infotainment System, select Convenience, and then Rear Occupant Alert.

Rear Occupant with Ultrasonic Sensors activates under the following conditions:

- A rear passenger door is opened and closed
- The ignition has been turned off
- The driver's door has been opened, then closed
- The doors are locked with the Smart Key or the door lock button on the door handle

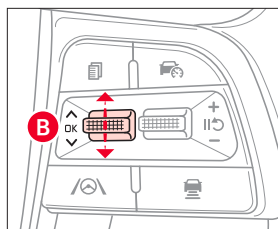

(Button layout on right of steering wheel)

QUICK TIPS

- The 1st alert message will not display on Instrument Cluster if the rear doors are never opened. Either rear doors must be opened after unlocking the vehicle before the system will activate.
- To temporarily disable alerts, press the OK button **B** on the Steering Wheel while the message is displayed
- To turn the alert off while sounding, press the unlock button on the Smart Key or press the door lock button on the door handle
- Must be enrolled in Kia Connect services and Kia Access app installed on the phone to receive ROA alert notifications on your smartphone

QR CODE

Rear Occupant Alert (ROA) with Ultrasonic Sensors Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

This system is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle's interior before exiting.

Images are for illustrative purposes only and may not reflect actual feature or operation.

See section 4 in the Owner's Manual for more information.

REMINDERS:

- To avoid false alerts, make sure the vehicle's windows are rolled up
- If objects such as boxes are stacked in front of the ultrasonic sensors, the system may not detect any movement
- The ultrasonic sensors may occasionally detect movement in the vehicle and cause false alerts, when there are no rear occupants present. False alerts can occur due to:
 - The presence of insects near the system sensor
 - Rushing air from a window that is rolled down
 - Movement around the exterior of the vehicle
 - Surrounding noise or vibration
 - Vehicle passing through a car wash
 - Movement in the driver or front passenger seat is detected
- The Rear Occupant Alert with Ultrasonic Sensors system may fail to detect movement and activate an alarm if:
 - Movement is subtle or does not continue
 - A small child sits directly in a seat without a car seat
 - A rear passenger is covered with an object such as a blanket, obstructing the sensor's view

2nd Row Seat^{†12}

Folding 2nd Row Seat:

- 1. Set the front seatback to the most upright position, and slide the seat forward, if needed
- 2. Lower the 2nd Row Seat Headrest to the lowest position
- 3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
- 4. Pull up on the Seatback folding lever (2nd Row) or strap (3rd Row) and fold the Seatback down


QUICK TIPS

- When you return Seatback to its original position, ensure it locks (clicks) into place
- It may be necessary to slide the front Seat forward and adjust the front Seatbacks to fully lower rear seats
- For specific information on how to use the 2nd and 3rd Row Center Seat Belts, please refer to the Owner's Manual

REMINDERS:

- The lever must return to its original position for the Seatback to lock
- Make sure the heaters are off before folding the seats down for cargo

See section 3 in the Owner's Manual for more information.

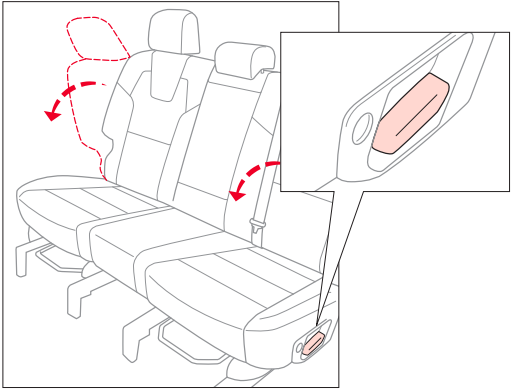

One-Touch Slide and Fold


To get in and out of the 3rd Row Seat, adjust the 2nd Row One-Touch Slide and Fold buttons:

- 1. Set the front seatback to the most upright position, and slide the seat forward, if needed
- 2. Lower the 2nd Row Seat Headrest to the lowest position
- 3. Insert the seatbelt buckle into the pocket between the rear seatback and the cushion
- 4. Press the One-Touch Slide and Fold to slide forward and fold down the 2nd Row Seat

QUICK TIP

- The strap can be used in the back of the 2nd Row Seat to slide and fold the 2nd Row Seats.

See section 3 in the Owner's Manual for more information.

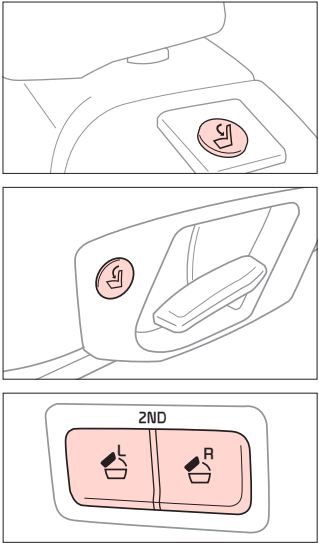

(Buttons located on the side of the cargo area)

QR CODE


One-Touch Slide & Fold
2nd/3rd-Row Seats
Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

3rd Row Seat - Folding

- 1. Fully lower headrest **A**
- 2. Pull Seat folding strap located in the back of the Seatback **B**
- 3. Fold Seats down **C**

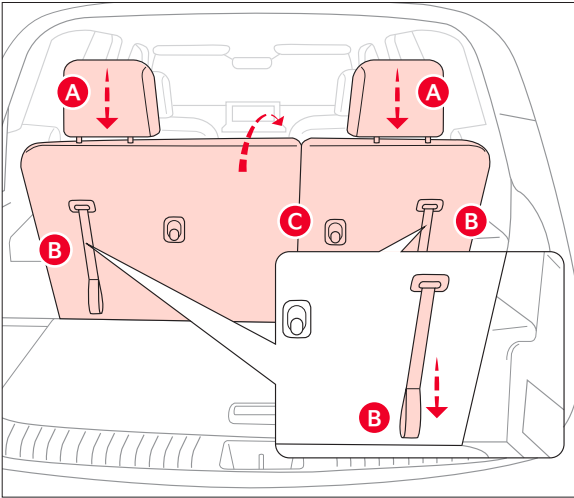


See section 3 in the Owner's Manual for more information.

Unfastening and Stowing Center Seat Belt

If Seat Belt is buckled, press the release button on the buckle.

To retract the 2nd-Row Center Seatbelt **D** into the headliner, press the "release button" on the buckle by inserting the seat belt tongue plate **E** in the small slot on the center buckle **F**.

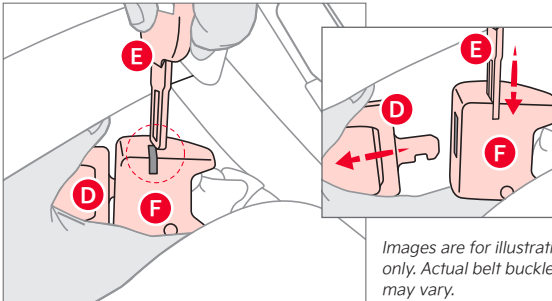

Images are for illustrative purposes only. Actual belt buckle/tongue plate may vary.

See section 3 in the Owner's Manual for more information.

QR CODE

Unfastening and Stowing Center Seat Belt Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Smart Key with Remote Start^{† 6}

- A** Press to lock all doors
- B** Press to unlock driver's door. Press twice within 4 seconds to unlock all doors
- C** Press and hold for more than 1 second to unlock the liftgate and open manually (or automatically if Smart Power Liftgate)
- D** Press and hold more than half a second for panic alarm. To turn off alarm, press any button
- E Remote Start:** Press for more than two (2) seconds within four (4) seconds after locking doors to start the vehicle. Press once to turn off

Driver's Door Lock/Unlock Button **F**:

To unlock door(s):


- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors

To lock all doors:

- Press again to lock all doors

Mechanical Key **G**:

- Use to unlock/lock driver's door:
 1. Remove door handle keyhole cover with mechanical key by pressing up into slot in the bottom of the handle as shown **H**
 2. Insert mechanical key **I** and turn left to unlock driver's door
 3. Insert mechanical key **I** and turn right to lock driver's door
 4. Return mechanical key to its original location
- Use to lock and unlock glove box



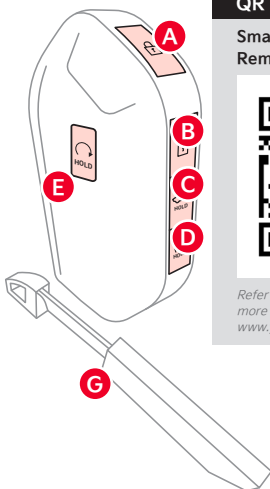


QR CODES

Smart Key with Remote Start Video



 Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

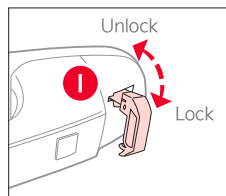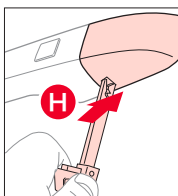

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cellular phone or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

REMINDERS:

- The liftgate unlocks when the Smart Key is within close proximity of the vehicle
- Remote button configuration may vary depending on vehicle options
- Repeated removal could ruin the integrity of the keyhole cover

See section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Digital Key 2 Touch*

Digital Key 2 Touch, through your smartphone, can be used to lock and unlock your vehicle and allow you to start or power off your vehicle, without needing to have a key fob.

Digital Key 2 Touch Setup:

1. First, ensure your Smart Key is inside the vehicle and turn the vehicle on
2. Download the Kia Access App and activate Kia Connect in your vehicle's Infotainment System (see page 44)
3. Register your smartphone by going to the Vehicle Settings on the Infotainment System:
 - Press **SETUP**, **VEHICLE**, **DIGITAL KEY** **A**, **SMARTPHONE KEY** and then **MY SMARTPHONE KEY**
4. On your smartphone, press **DIGITAL KEY** **B**, **CONTINUE TO WALLET APP**, then **CONTINUE** again, which will open the Wallet app. Follow the prompts to complete the registration/pairing of your smartphone (actual steps may vary between apps/smartphones)
5. Place your smartphone in the authentication pad (wireless charging pad) to complete registration. Click **Save** on the Infotainment System screen and a message will appear showing the process is in place
6. When the Infotainment System is done pairing, remove the smartphone and continue the steps to open the **Digital Key** in your iPhone® Wallet or Samsung™ Wallet
7. When in the Wallet app, click on the **Digital Key** and select the menu icon to adjust other settings or use other features

Using your Digital Key 2 Touch:

1. To lock or unlock your vehicle with Digital Key, position smartphone to door handle until smartphone vibrates
2. To start your vehicle with Digital Key 2 Touch, place registered smartphone on the authentication pad **C** (wireless charging pad; see next page), press the brake pedal and the Start/Stop button

Sharing your Digital Key 2 Touch:

1. Open the Wallet app, click on the Kia Digital Key and select the menu icon to enter settings
2. Under **PEOPLE**, click on **Invite** and follow the prompts to share your Digital Key with one of your contacts Apple iPhone/iWatch or Samsung phone (actual steps may vary between apps/smartphones)

When sharing a Digital Key, the receiver of the share invitation must have the same smartphone operating system, e.g., Apple to Apple and Samsung to Samsung

Revoking shared Digital Key access:

You can also delete a key using the Wallet app on your smartphone. Open the Wallet app, click on the **Kia Digital Key** and select the menu icon to enter settings. Under **PEOPLE**, click on the contact to revoke. Then click on **Revoke Access** (actual steps may vary between apps/smartphones).

To delete shared keys and the owner key:


Go to the Vehicle Settings* on the Infotainment System. Press **SETUP**, **VEHICLE**, **DIGITAL KEY** and **SMARTPHONE KEY**. Then press **DELETE**.

QR CODE


Digital Key 2 Touch Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

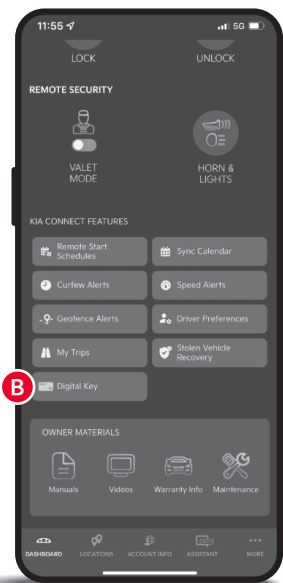



Digital Key 2 Touch* (continued)

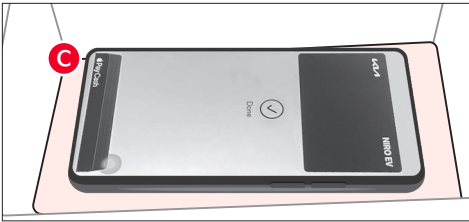

QUICK TIPS

- You can set the Access for the Shared Digital Key before inviting the contact
- If the smart phone digital key does not operate, move the smart phone around the door handle slowly until it vibrates

(Charging pad located in center console)

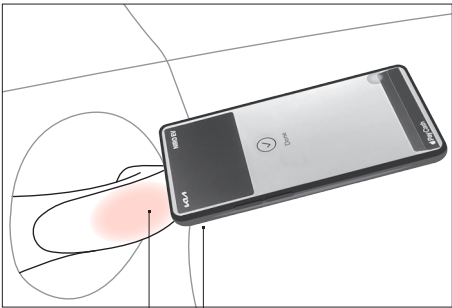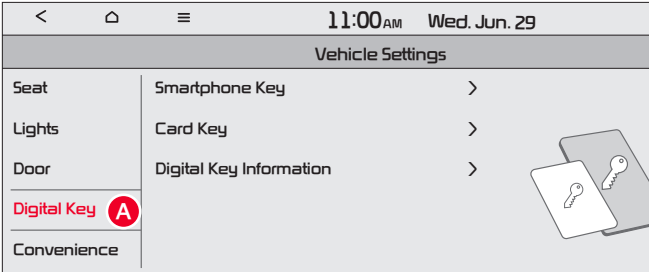

Door handle authentication pad
NFC antenna (backside of smartphone). Antenna position differs depending on models

REMINDERS:

- Digital Key 2 Touch is currently only compatible with Apple iPhone & iWatch and Samsung smartphones
- Your iPhone Wallet or Samsung Wallet app content may vary as the apps are updated. The actual steps for Digital Key 2 Touch setup, usage and sharing may change
- During the Digital Key saving process, the process will cancel when:
 - The smart phone is removed from the in-vehicle authentication pad
 - Changing the infotainment system screen
 - The vehicle is powered off or the gear is shifted
 - There is no smart key (saving process will not begin)
- You may need to set up language for Samsung smartphones
- Currently compatible devices:
 - For **Apple iPhone** (Ensure the device has the latest version of iOS):
 - iPhone XS or later.
 - iPhone 11 Pro or later (for passive entry or remote features on compatible cars)
 - For **Apple Watch** (Ensure the device has the latest version of watchOS):
 - Apple Watch Series 5 or later
 - Apple Watch Series 6 or later (for passive entry or remote features on compatible cars)
 - For **Samsung Phones**: Ensure the device has the latest version of Android OS and latest application version of Samsung Wallet)
 - Galaxy S20 or later
 - Galaxy Note20 5G or later
 - Galaxy Z Flip 5G or later
 - Galaxy Fold 2 or later

Refer to section 5 in the Owner's Manual for more information.

Smart Power Liftgate with Auto Close*⁺¹⁵

The Smart Power Liftgate can be operated from several controls to either open, close or lock the Liftgate.

To turn the Smart Power Liftgate features ON, go to the User Setting mode in the LCD Instrument Cluster Modes, select DOOR and set to ON.

The Smart Power Liftgate will close the Liftgate, lock all doors and Liftgate and then arm the vehicle.

Opening from Inside the Vehicle:

Press and hold the Smart Power Liftgate Open/Close button* **A** to automatically open/close the Liftgate.

Opening from Outside the Vehicle:

To open the Smart Power Liftgate* automatically, press the Liftgate Release button **B** on the exterior of the Liftgate.

Automatically close by pressing the Smart Power Liftgate Close button* **C** located inside the Liftgate lid. Press the AUTO Close Off button **D** to disable Auto Close.

QR CODE

Smart Liftgate Operation,
Opening Height/Speed
Adjustment Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP


- To cancel the Smart Power Liftgate while automatically opening or closing, press any button on the Smart Key fob

REMINDERS:



- When closing, be mindful of any objects or persons
- All doors are closed and locked after about 15 seconds
- The Smart Power Liftgate feature will not operate when the following occurs:
 - Doors are recently closed and locked
 - The Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Pulling the Liftgate upward by the handle or pressing the button a second time will interrupt the automatic opening of the Smart Power Liftgate

See section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

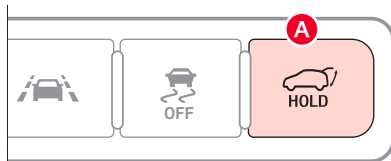

(Button located on driver's panel, left of the steering wheel)

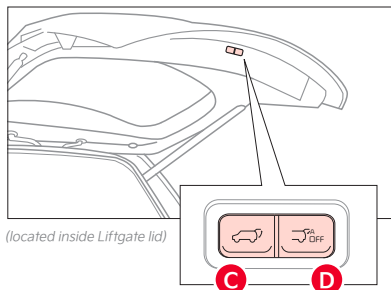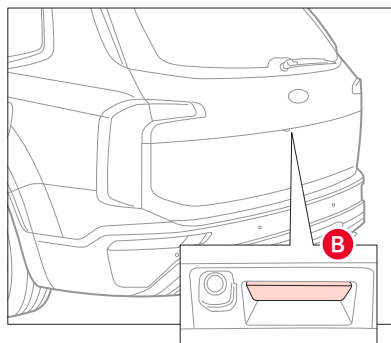

(located inside Liftgate lid)

Smart Power Liftgate*† 15 (continued)

Opening with no-touch activation:

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate* is about to open.

Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate*.

The Smart Power Liftgate* feature is OFF by default. To enable the Smart Power Liftgate*, go to Vehicle Settings in the Infotainment System.

Smart Key:

To open the Smart Power Liftgate*, press and hold the Smart Key Liftgate button **A** until the Liftgate begins opening. Press again and hold to close.

Power Liftgate Height Adjustment:

For your convenience, the liftgate opening height is adjustable. To program the opening height, perform the following:

1. Open liftgate and manually position the liftgate to your preferred opening height
2. Depress and hold the close button on the liftgate for 3 seconds or more
3. Once the system sounds the alert that the programming is complete, manually close the liftgate

Power Liftgate Opening/Closing Speed Setting:

Go to the Vehicle Settings in the Infotainment System. Select Door, then Power Liftgate Speed, and select Fast or Normal.

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the liftgate Release button
- The liftgate unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle

REMINDERS:

- Smart Power Liftgate may be damaged if attempting to open or close manually
- When not in use, keep the Liftgate Lid Control button in the OFF position
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the Smart Power Liftgate lid control using the button inside the glove compartment, turn off the auto rain-sensing wipers and fold in the mirrors
- Ensure all obstacles are out of the way of the liftgate lid when operating the Smart Power Liftgate
- The default liftgate opening/closing speed is set to fast
- The liftgate opening/closing speed setting cannot be changed when the Power Liftgate function is turned off or if the liftgate is not completely closed


See section 4 in the Owner's Manual for more information.

QR CODE

Smart Key with Remote Start Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

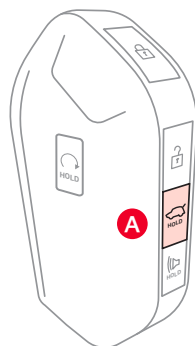

Map/Room Lamps

Automatic Turn Off Function

The interior lights automatically turn off approximately 20 seconds after the Engine Start/Stop button is turned OFF.

Map/Room Lamp Operation


Map Lamps - These lights produce spot beams for convenient use as map lamps or as personal lamps for the driver or the front passenger. Press the buttons **A** to turn the map lamps ON/OFF.

Room button - Press the button **B** to turn the front and rear lamps ON/OFF.

Door button - When the Door button **C** is pressed the front and rear lamps will turn ON as follows:

- When a door is opened or doors are unlocked with the Smart Key, the lamps will turn ON for approximately 30 seconds
- If the Engine Start/Stop button is in the ACC/OFF position and a door is open, the lamps will stay ON for approximately 20 minutes
- If the Engine Start/Stop button is in the ACC/ON position and a door is open, the lamps will stay ON

The lamps will turn OFF immediately if the Engine Start/Stop button is turned ON or all doors are locked.

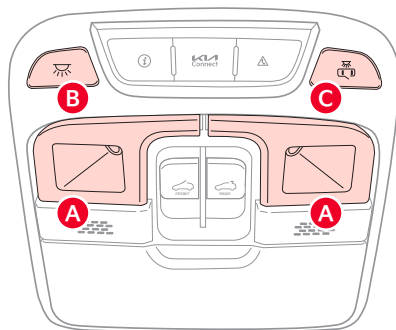

(Overhead lamp console)

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

REMINDER: When room lamp lens is pressed ON it will remain ON, even when the map lamp switch is in the OFF position.

See section 4 in the Owner's Manual for more information.

Sunroof Operation*

The sunroof and sunshade operation is controlled by a multidirectional switch/lever for the front and rear sunroofs. The ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the sunshade and sunroof **D**:


Auto Open - Slide lever backward to the farthest position and release.

Auto Close - Slide the lever forward to the farthest position and release (manually close the Sunshade).

Tilt the sunroof (front only) **D**:

Raise - Press lever upward

Lower - Push lever forward

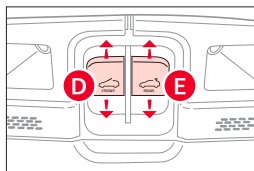

Your vehicle's sunroof controls may differ from that in the illustration.

QUICK TIP

- To stop the sunroof/sunshade at any position, press or pull the sunroof control lever in any direction

REMINDERS:

- When closing, be mindful of any objects or persons
- Sunshade must remain OPEN while sunroof is open
- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds
- Do not adjust the sunroof or sunshade while driving. This could result in loss of control of the vehicle

QR CODE

Sunroof Operation Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Cargo Cover Storage*

To store the Cargo Cover*, close the Cargo Cover and remove it from the slots by pulling the Cargo Cover ends inward **A**. Remove the luggage box cover.

On the left side, remove the small storage cover **B** to expose the Cargo Cover storage slot. Insert the Cargo Cover on the right side first. Compress the left end of the Cargo Cover to slide it into the left slot. Replace the small storage cover and the luggage box cover.

(View from the rear looking in; left end of the cover shown)

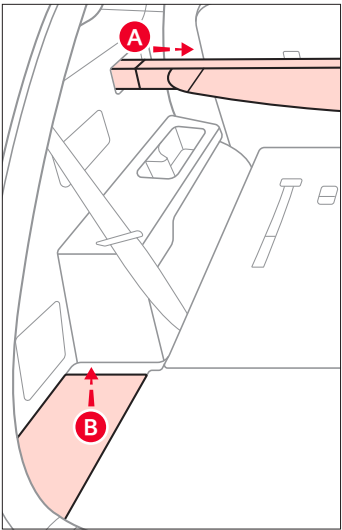

QR CODE

Cargo Cover & Storage Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*


QUICK TIP

- Insert the third-row seat belts into the retaining clips on the left and right sides before removing/ installing Cargo Cover

Full Display Mirror (FDM)*

Full Display Mirror, or FDM, allows the driver to switch the rearview mirror from standard optical view to digital display view.

- B** Pull/press to switch between view modes
- C** Press to display the icon menu (1) and select the item you want to adjust for brightness and tilt
- D** Press to select/adjust the menu item selected
- E** Camera is operating indicator
- F** Homelink buttons (3)

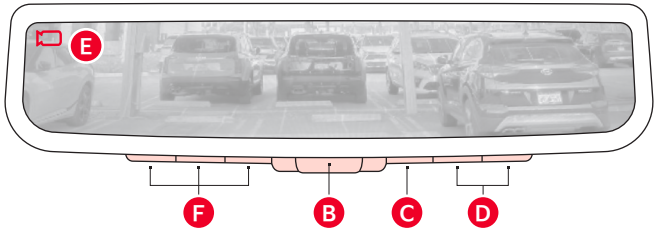


(Digital Rearview Mirror is only available on select Kia models.)*

HomeLink® with Auto-Dimming Rearview Mirror*†2

The HomeLink® / Auto-Dimming Rearview Mirror* is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters into one location.

- A** HomeLink® Channel 1
- B** HomeLink® Channel 2
- C** HomeLink® Channel 3
- D** Garage Door Opener Status Indicator: Closing or Closed
- E** HomeLink® Operation Indicator
- F** Garage Door Opener Status Indicator: Opening or Open
- G** HomeLink® User Interface Indicator

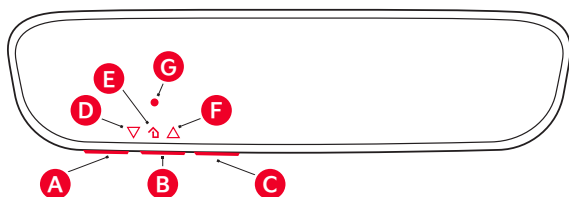

How to Sync Transmitter with HomeLink®

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and **C** buttons simultaneously until the indicator light **G** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A**, **B**, or **C** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **E** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the **A** and **C** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

QR CODE

HomeLink® Support Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit.

For more information, go to www.HomeLink.com or call (800) 355-3515.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing the programmed buttons will delete all trained transmitters


Sun Visor^{†17}

Use the Sun Visor to shield direct light through the front or side windows. Slide the Sun Visor out and adjust as needed.

REMINDERS:

- Sun Visor may not shield all direct light
- Sun Visor may impair visibility if not adjusted properly
- Be aware of seating position when adjusting or swinging Sun Visor around to or from the front or side windows
- Do not operate the vehicle if the Sun Visor is impairing your visibility

See section 4 in the Owner's Manual for more information.

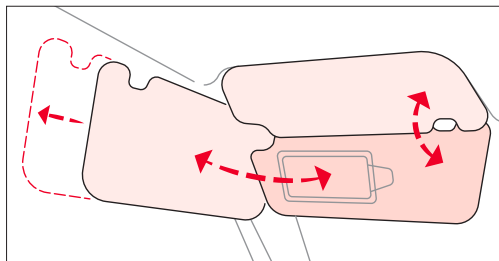


Hood Release Lever and Latch

Opening the Hood:


1. Pull the hood release lever **A** to unlatch the hood
2. In the front of the vehicle, lift the hood slightly, push the secondary latch **B** to the left inside of the hood's center and lift the hood

Closing the Hood:

Lower the hood about halfway and then release hood to drop into place and securely latch.

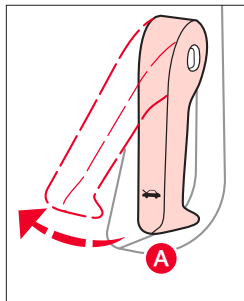

(Located on Driver side kick panel)

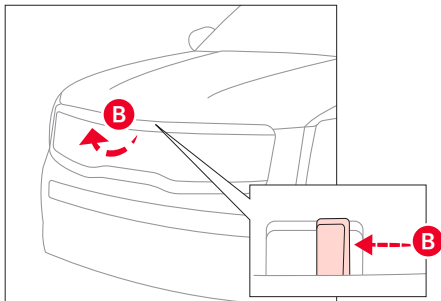

(Located inside of Hood's center)


REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

See section 4 in the Owner's Manual for more information.

Fuel Cap / Malfunction Indicator (Check Engine Light)

To access the Fuel Cap, press the Fuel Filler Lid to open. Tighten for ONE CLICK to prevent malfunction indicator  from illuminating.

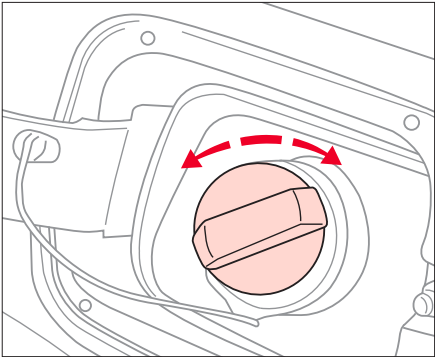

REMINDER: It is normal operation when tightening to hear one click and then when Fuel Cap is released, it clicks back.

See section 4 in the Owner's Manual for more information.

QR CODE

Kia Fuel Cap Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Fuel Filler Lid Release


To open the Fuel Filler lid:

1. Press the right edge of the Fuel Filler lid **A**
2. Pull the Fuel Filler lid out to fully open **B**

To open the Fuel Cap, turn it counterclockwise **C**


QUICK TIP

- Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **D**

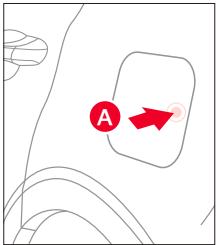

REMINDER: The fuel filler lid lock will unlock/open only when driver's side door is unlocked.

See section 4 in the Owner's Manual for more information.

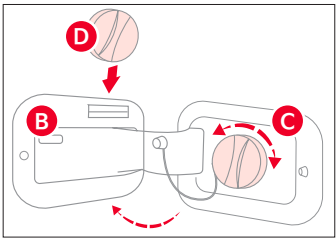

QR CODE

Fuel Filler Lid Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Seat Belts^{†13}


To properly fasten your safety belts:

1. Insert the belt tongue plate **A** into the buckle until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **B**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **C**

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to help reduce the risk of injury.

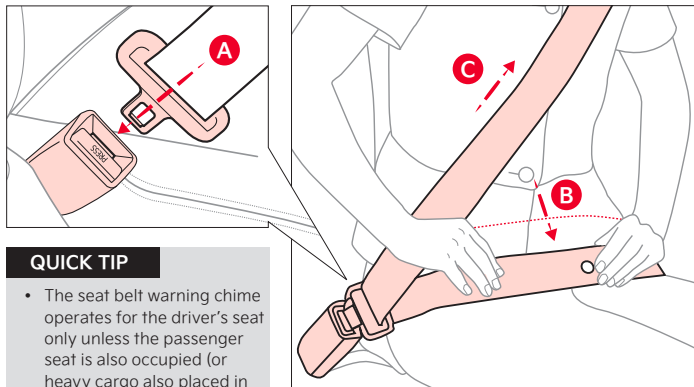

QUICK TIP

- The seat belt warning chime operates for the driver's seat only unless the passenger seat is also occupied (or heavy cargo also placed in passenger seat)

REMINDER: For maximum protection, always wear your seatbelt.

QR CODE

Latch Anchors for the Child Restraint System Video



Refer to the inside front cover for more information on QR codes, www.youtube.com/KiaFeatureVideos

For more detailed information regarding your vehicle's safety belts, please refer to section 3 in the Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."


Occupant Detection System (ODS)^{†10} / Passenger Airbag Off

ODS is designed to detect the presence and position of the front passenger and is designed to adjust or turn off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the "PASSENGER AIRBAG OFF" light will illuminate **D**.

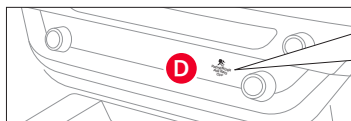

(Located to the right of Climate Controls, Center Panel)



REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

See section 3 in the Owner's Manual for more information.

TELLURIDE NORMAL MAINTENANCE SCHEDULE

(up to 64,000 miles)^A

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)			
	8,000	16,000	24,000	32,000
Add fuel additives ^C	P	P	P	P
Rotate tires (check tire pressure and tread wear)	P	P	P	P
Engine oil and oil filter (Full Synthetic Oil) ^D	R	R	R	R
Climate control air filter	I	R	I	R
Air cleaner filter	I	I	R	I
Brake fluid	I	I	I	I
Brake lines, hoses and connections	I	I	I	I
Brake discs and pads	I	I	I	I
Vacuum hoses	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I
Suspension ball joints	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I
Tire (pressure and tread wear)	I	I	I	I
Parking brake	I	I	I	I
Exhaust system	I	I	I	I
Cooling system	I	I	I	I
12V Battery condition	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I
Drive shafts and boots		I		I
Propeller shaft		I		I
Fuel tank air filter ^E		I		I
Fuel tank, fuel cap		I		I
Fuel lines, fuel hoses and connections		I		I
Drive belts ^H				
Transfer case oil (AWD) ^F				
Differential oil, rear (AWD) ^F				
Valve clearance ^G (Every 56,000 or 72 months)				

P=Perform R=Replace I=Inspect^B

‡ If equipped.

- A. See the Owner's Manual for complete maintenance schedule.
- B. If necessary, adjust, correct, clean or replace
- C. If TOP TIER detergent gasoline is not available, one bottle of fuel additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- D. As it is normal for engine oil to be consumed during driving, the engine oil level should be checked on a regular basis. The engine oil change interval for normal operating conditions is based on the use of the recommended engine specification. If the recommended engine oil specification is not used, then replace the engine oil according to the maintenance schedule under severe operating conditions.

- E. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- F. Transfer case oil and rear axle oil should be changed anytime they have been submerged in water.
- G. Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.
- H. The drive belt should be replaced when cracks occur or tension is reduced excessively.

[illegible]

QR CODE

Full Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect account by logging into your Kia Access App or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect only - See page 43 for setup information)

- ### QUICK TIP
- Check your Maintenance Schedule or schedule an appointment with a dealer using your Kia Connect account by logging into your Kia Access App or your account on <https://owners.Kia.com> (Vehicles equipped with Kia Connect only - See page 43 for setup information)

See the Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **Kia Connect:** Purchase/lease of certain 2022 and newer Kia vehicles with Kia Connect includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store®. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
2. **Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
3. **Driver Assist Features — Intelligent Speed Limit Assist (ISLA), Forward Collision-Avoidance Assist (FCA), Blind-Spot Collision-Avoidance Assist (BCA), Blind-Spot View Monitor (BVM) System, Rear Cross-Traffic Collision-Avoidance Assist (RCCA), Lane Keeping Assist (LKA), Lane Following Assist (LFA), Rear View Monitor (RVM), Reverse Parking Aid Function, Forward/Reverse Parking Distance Warning (PDW), Smart Cruise Control (SCC), Navigation-based Smart Cruise Control - (NSCC), Safe Exit Assist (SEA), Rear Occupant Alert (ROA) with Ultrasonic Sensors, Highway Driving Assist (HDA), Leading Vehicle Departure Alert (LVDA), Reverse Parking Collision-Avoidance Assist (PCA):** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
4. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
5. **Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
6. **Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control.
7. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
8. **Head-Up Display (HUD):** Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
9. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
10. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model. Children age 12 and under should always be seated in the REAR seats. ODS is not a substitute for one's attention and may not detect all occupants within the vehicle. Always check the vehicle interior when exiting the vehicle.
11. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via **Bluetooth®** within the cellular service coverage area is required.
12. **Seat Adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
13. **Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.
14. **Seat Warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
15. **Smart Power Liftgate:** Driving with the liftgate open may be unlawful and can draw dangerous exhaust fumes into your vehicle.
16. **Steering-Wheel-Mounted Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
17. **Sun Visors:** Sun Visor may not shield all direct light. Do not operate the vehicle if Sun Visor is impairing your visibility.
18. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
19. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.
20. **The myQ logo** is a registered trademark of The Chamberlain Group, Inc.

