



GETTING TO KNOW YOUR **2024** **ENVISION**



Review this Quick Reference Guide for an overview of some important features in your Buick Envision. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [buick.com/owners](https://www.buick.com/owners). For easy reference, keep this guide in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Cruise Control/Forward Collision Alert/Voice Recognition/Manual Mode Buttons

Turn Signal Lever/Windshield Wipers Control

Manual Shift Paddle

Digital Driver Display

Electronic Precision Shift Lever

Manual Shift Paddle

Driver Information Center/Audio/Phone/Heated Steering Wheel Buttons



Electric Parking Brake/Driver Mode/Lane Keep Assist/Auto Stop Disable/Instrument Panel Illumination Controls

Power Liftgate Control

Audio Favorite Station or Seek Controls (behind steering wheel)

Steering Wheel Adjustment Lever (under steering column)

Audio Volume Controls (behind steering wheel)

Engine Start/Stop Button (on instrument panel)

Symbols

- Low Fuel
- Traction Control Off
- BRAKE Brake System
- Cruise Control
- Adaptive Cruise Control

- StabiliTrak Active
- StabiliTrak Off
- Engine Coolant Temperature
- Security
- PARK Electric Parking Brake

- Service Electric Parking Brake
- Lights On Reminder
- Airbag Readiness
- Engine Oil Pressure
- Auto Stop



- | | | | |
|--|-----------------------|--|------------------------------------|
| | Check Engine | | Low Tire Pressure |
| | Lane Keep Assist | | Door Ajar |
| | Vehicle Ahead | | Charging System |
| | Pedestrian Ahead | | Driver Seat Belt Reminder |
| | Antilock Brake System | | Front-Passenger Seat Belt Reminder |

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.



Power Liftgate

Press twice to open or close the liftgate.
Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
The horn sounds and lights flash 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



Remote Vehicle Start

Press twice to start the engine from outside the vehicle. The turn signal lamps will flash. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press the  button twice.

Key Release

In case of loss of vehicle power, press the button on the back of the transmitter to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or purse. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

Keyless Unlocking

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

Keyless Locking

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

Starting the Engine

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the front of the center console storage compartment to enable the engine to start. Replace the key fob battery as soon as possible.



Stopping the Engine/Off

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

Accessory Mode

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories. The amber button indicator will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.

Auto Engine Stop/Start Disable

- ▶ Press the **(A) Auto Stop** button on the left side of the instrument panel to turn off the automatic engine stop/start system. The button indicator is illuminated when the system is on. The system turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.



ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the **(P) Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** button.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

Manual Mode – With the transmission in Drive, press the **M** button on the steering wheel to shift manually. Pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Press the **M** button again to return to Drive.

See Driving and Operating in your Owner's Manual.



DRIVER MODE SELECTOR

The Driver Mode Selector system can automatically adjust various vehicle control systems based on driving preferences, weather and road conditions.

- Press the **MODE** button on the left side of the instrument panel to display the Mode menu on the cluster display and activate the next available mode.

Modes

 
Normal – Use for normal driving.

All-Wheel Drive – Use for enhanced responsiveness.

Sport – Use for enhanced handling and acceleration on dry pavement.

Off-Road – Use for enhanced driving on unpaved roads.

See Driving and Operating in your Owner's Manual.

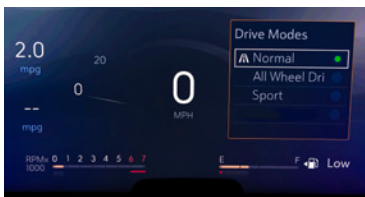

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down, and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



POWER FRONT SEATS[◆]

Power Seat Adjustments

A. Seat Adjustment

Move the horizontal control to slide the seat forward or rearward, and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

 
Move the vertical control to recline or raise the seatback.

C. Lumbar Adjustment/Massage[◆]

Turn the feature select knob to view lumbar or massage settings on the infotainment screen. Press the 4-way control to adjust the selected setting.

D. Massage Recall

Press the button to turn the massage feature on/off.

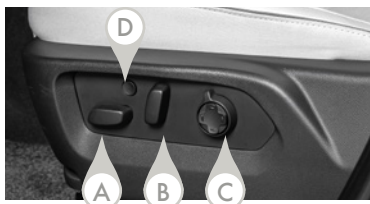

Set Memory Positions

1. Adjust the seat and power outside mirrors.
2. Press the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button **1** or **2** until two beeps sound.

To set a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

Recall Memory Positions

- ▶ Press and hold button **1**, **2**, or  **Exit** until the set position is reached.
- ▶ To enable the memory/exit positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.



See Seats and Restraints in your Owner's Manual.

FOLDING REAR SEATS

- ▶ Pull the lever on top of the seatback and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To raise the seatback, lift it up until it locks in place.

See Seats and Restraints in your Owner's Manual.



POWER LIFTGATE[♦]

Open/Close the Power Liftgate

- ▶ Press the **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad above the license plate to open the liftgate.
- ▶ Press the button (B) on the bottom edge of the liftgate to close the liftgate.



Programming the Liftgate Height

1. Turn the Power Liftgate knob to the 3/4 mode.
2. Open the liftgate and adjust it manually to the desired height.
3. To save the setting, press and hold the button (B) on the bottom edge of the liftgate until the turn signals flash and a beep sounds.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.



Hands-Free Operation

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. The Buick logo is projected on the ground near the rear bumper, indicating the kicking motion location for hands-free operation. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

DIGITAL DRIVER INFORMATION CENTER (DIC)

The reconfigurable Driver Information Center (DIC) displays a variety of vehicle messages and system information.

DIC Controls

 
Use the controls on the right side of the steering wheel to view and select Vehicle, Audio and Phone information.

- ▶ Press the  Display button to view and scroll through the cluster display layouts.
- ▶ Press the  or  switch to scroll through the active menu.
- ▶ Press the  switch to open a menu, or to select or reset an item.



Vehicle Information

1. Press the  Vehicle Status icon on the infotainment screen to view all available vehicle information.
2. Select the Maintenance, Gauges, Trip or Air Quality tab.
3. Select an item to view additional information or to reset an item.
4. When viewing an item, select Add to Driver Display to display an item or Remove from Display to remove an item on the driver display.

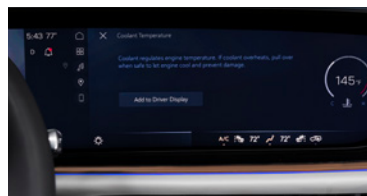


See Instruments and Controls in your Owner's Manual.

HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are located on the left side of the cluster display.


- ▶ Select HUD > Adjust HUD to adjust the height, brightness and rotation of the display on the windshield.
- ▶ Go to Settings on the infotainment screen to select several HUD display options.

 See Instruments and Controls in your Owner's Manual.

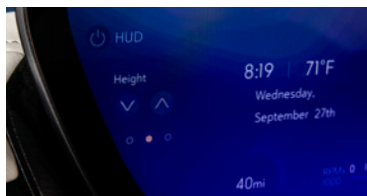

INFOTAINMENT SYSTEM

 Read your Owner's Manual for important information about using the infotainment system while driving.

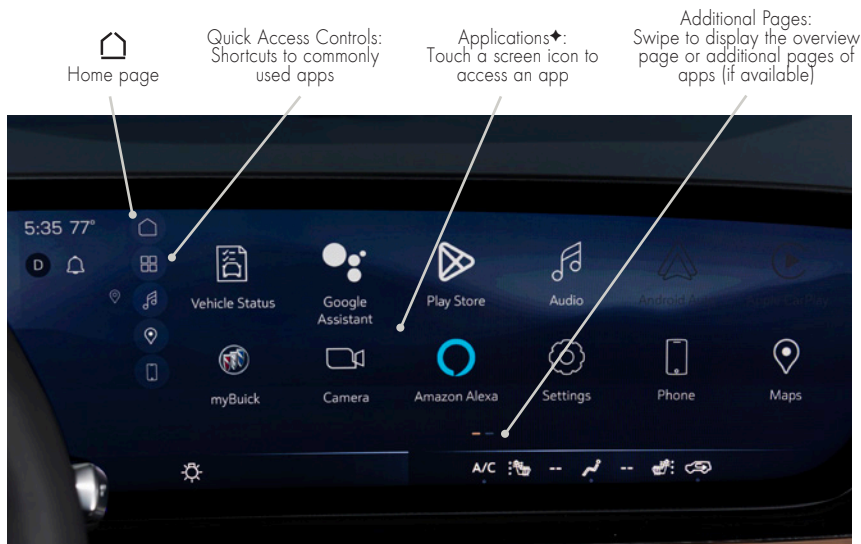

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. Use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For additional information, visit buick.com/support.

Managing Home Page Icons

1. Press the  **Home** icon.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

Storing Favorites

Radio stations from all bands (AM, FM or SiriusXM[♦]) can be stored in any order.

1. Tune in a radio station. The sources menu is at the top of the Audio page.
2. Select the desired page of favorite buttons.
3. Touch and hold one of the favorite buttons until a beep is heard.

Audio Sources

1. Select the current Source  icon at the top of the Audio page.
2. Select the desired audio source or radio band.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Google Built-In

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

- Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google to get hands-free help. Easily get directions, play media, control vehicle functions and more.

- To start, say “Hey Google,” tap the Google Assistant icon in the App Tray on the Home page, or press the Push to Talk button on the steering wheel.

Google Maps – Reach your destination faster with real-time traffic information, automatic rerouting and voice control. Sign in for personalized maps with home and recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

Note: Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play and Google Maps are trademarks of Google LLC.

SiriusXM® with 360L†

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and the Buick Connected Access plan. See siriusxm.com and onstar.com for details.

Apple CarPlay® and Android Auto™†

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection while parked:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 2. Follow the instructions on the infotainment system and the phone.
 3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- To exit Apple CarPlay or Android Auto, press the  **Home** icon. To return to Apple CarPlay or Android Auto, press and hold the  **Home** icon.

See Infotainment System in your Owner's Manual.

†Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

INFOTAINMENT SYSTEM

Natural Voice Recognition

Control the music source and adjust vehicle features, or make phone calls hands-free (after pairing your Bluetooth-enabled phone), using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel for Google Assistant. Press and hold the  **Push to Talk** button to access your connected phone's voice assistant.
2. The radio will play a prompt.
3. After the beep, say what you want it to do using natural speech. Examples: "Call Dave" or "Play 99.5 FM." Say "Help" for assistance.

Portable Audio Devices

USB ports (Type A and Type C) for data and charging are located at the front of the center console. Connect an iPod®, iPhone®, MP3 player, or a USB flash drive to a USB data port.

- ▶ Touch Audio and then touch Source to select the USB device.



See Infotainment System in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Answer Call

Press to answer an incoming call or display the recent call list on the Driver Display.

End Call

Press to end or decline a call.

Press to mute/unmute the vehicle speakers.

Audio

Press to display the audio sources list on the Driver Display.

+ - Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station/Seek (behind left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite station or track (on a connected device).



See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving. Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit buick.com/support for more information.

Pair a Phone

1. Press the  **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected) or select the Phone icon > Manage Phones > Add Phone on the infotainment screen.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

First To Connect Paired Phone

Multiple phones can be paired to the Bluetooth system. The system connects to the paired phone that is set as First to Connect.

- To set the First to Connect phone, select Settings > Connections > Phone > Options for the connected phone > First to Connect.



See Infotainment System in your Owner's Manual.

ONSTAR® 4G LTE WI-FI HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit buick.com/support. Visit onstar.com for more information about connected services.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > Connections > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING◆

The Wireless Phone Charging system is located at the front of the center console. Visit buick.com/support to check device compatibility. See your phone retailer for details on required phone accessories.

 
1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The  charging symbol will appear on the infotainment screen when charging.

See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many vehicle features, including Remote Vehicle Start[◆], Auto Heated/Ventilated Seats[◆], Safety Alert Seat, Power Door Locks and others, can be turned on/off and customized using the Settings menus on the infotainment screen.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press <Back to exit each menu.

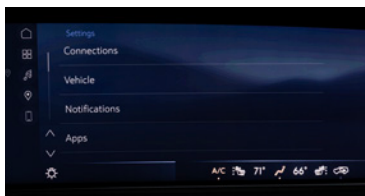

See Infotainment System in your Owner's Manual.

LIGHTING

Exterior Lamp Controls

- ▶ Select the  Automatic Light Control icon on the infotainment screen to turn the auto headlamps on/off.
- ▶ To operate the exterior lamp controls, go to Controls > Lights > Headlights on the infotainment screen. Select the Auto setting to have the exterior lamps turn on or off automatically, depending on outside lighting conditions.



IntelliBeam System

- ▶ To enable the IntelliBeam system, which automatically turns the high-beam headlamps on/off based on traffic conditions at night, go to Controls > Lights > Auto High Beams. The exterior lamps must be in the Auto setting. A white  on the cluster display indicates the system is on. A blue  appears when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

Ambient Lighting

- ▶ To change the color of the interior ambient lighting, go to Settings > Vehicle > Lighting on the infotainment screen.

See Lighting in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM[◆]

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to **homelink.com** for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS



ON/OFF

AUTO
Automatic
Operation

Driver's
Temperature
Control

Fan
Control

Passenger's
Temperature
Control ♦

Windshield
Defrost

Rear Window
and Heated
Mirrors Defog

Dual-zone climate controls ♦ shown

Automatic Operation

- Press AUTO and set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

Climate Display

- Select Climate on the infotainment screen to view the current operation of the Climate Controls and to adjust the settings.
- To adjust or turn several features on/off, go to Settings > Vehicle > Climate and Air Quality.



See Climate Controls in your Owner's Manual.

WIPERS AND WASHERS

Rotate the outer band to activate the windshield wipers.

OFF

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

LO Slow Wipes

HI Fast Wipes

Single Wipe

Push the button on the end of the lever to the first stop for a single wipe. Hold the button for additional wipes.



Washer Fluid

Push the button on the end of the lever completely to wash the windshield.

Rear Window Wiper

Rotate the inner band to activate the rear wiper and wash the rear window.

See Instruments and Controls in your Owner's Manual.

CRUISE CONTROL

Setting Cruise Control

1. Press the **On/Off** button. The Cruise Control symbol will illuminate in white.
2. When traveling at the desired speed, press the **-SET** button to set the speed. The symbol will illuminate in green.

Adjusting Cruise Control

+RES Resume/Accelerate

Press to resume a set speed. When active, press to increase speed.

-SET Set/Coast

When active, press to decrease speed.

Cancel

Press the button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

Adaptive Cruise Control

The system enhances regular Cruise Control to automatically maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the **Following Gap** button to select a targeted gap setting of Far, Medium, or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the **Cancel** button to switch between regular Cruise Control and Adaptive Cruise Control.



 
See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for more important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

- ▶ To turn some of the following systems on/off or to change some settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

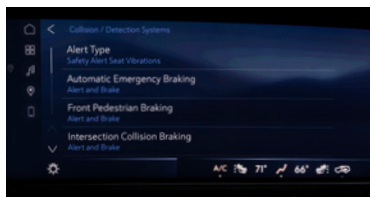

Safety Alert Seat – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards. Audible alerts may be selected instead of seat-pulsing alerts using the Settings menu on the infotainment screen.

Forward Collision Alert – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield or in the HUD and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near. The setting is displayed on the cluster display.

Automatic Emergency Braking – The system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

Intersection Automatic Emergency Braking[♦] – The system can help you avoid or reduce the severity of an intersection collision with a detected cross-traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

Lane Change Alert with Bicycle Detection – The system works to help you avoid a potential collision with a detected vehicle or bicycle in an adjacent lane. While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side. If a bicycle is detected, the Safety Alert Seat may pulse or beeps may sound (if selected). Bicycle Detection is available for a short time after the vehicle is turned off.

Blind Zone Steering Assist – The system can help you avoid a potential collision with a detected vehicle in an adjacent lane. If a vehicle is detected in the adjacent lane that you are entering, the system provides an urgent steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green  Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  **Lane Keep Assist** button on the left side of the instrument panel.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Front Pedestrian Braking with Bicycle Detection – During daytime driving below 50 mph, the system can detect pedestrians and bicycles directly ahead and displays an amber  indicator. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

Traction Control and StabiliTrak – The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

Reverse Automatic Braking⁺ – In detected, potentially imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

Rear Cross Traffic Alert – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and the Safety Alert Seat pulses or beeps sound (if selected).

Rear Park Assist – During low-speed parking maneuvers, the system provides “distance to closest object” information on the cluster display and the Safety Alert Seat pulses or beeps sound (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

HD Surround Vision – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph.



- ▶ Touch one of the camera view buttons on the screen to change the camera view.
- ▶ To turn the guidance lines on or off, touch the Settings gearwheel icon while in Drive or Reverse and choose the desired option.
- ▶ Camera views are available at any speed while in Drive by selecting the Camera icon on the Home page of the infotainment screen.

Enhanced Automatic Parking Assist⁺ – The system can search for a parallel or perpendicular parking space and then steer and brake the vehicle into that space while shifting gears as needed. It can also help you unpark the vehicle after parallel parking. While using the system, you need to remain in your vehicle and be prepared to take control.

- ▶ To activate the system, select Auto Park Assist on the infotainment screen. A parking assist display will be shown. Follow all instructions as directed.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR◆

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

 
Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.

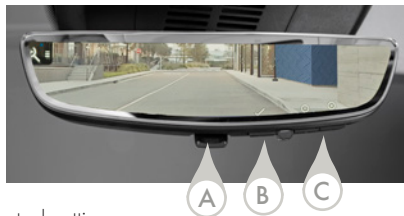

See Keys, Doors and Windows in your Owner's Manual.

SUNROOF/SUNSHADE◆

- ▶ Press and release the  **SLIDE** switch to express-open the sunroof. Pull and release the switch to express-close the sunroof.
- ▶ Press and release the  **TILT** switch to vent the sunroof. Pull and release the switch to close the sunroof.
- ▶ Press and release the  **Sunshade** switch to express-open the sunshade. Pull and release the switch to express-close the sunshade.



See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. The horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-252-1112

TTY Users: 1-888-889-2438

As the owner of a new Buick, you are automatically enrolled in the Buick Roadside Assistance program for 5 years/60,000 miles, whichever occurs first, at no expense to you. The Buick Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Buick dealer.

Roadside Assistance and OnStar®

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYBUICK MOBILE APP

Download the myBuick app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from the App Store or Google Play Store.

MY BUICK ACCOUNT

Get to know more about your vehicle and view your plans, services and rewards with your Buick account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **buick.com/owners**.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



85525482

We recommend always using
ACDelco or GM Genuine Parts.



85525482 A