



GETTING TO KNOW YOUR **2024 CAMARO**




chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Camaro. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at **chevrolet.com/owners**. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

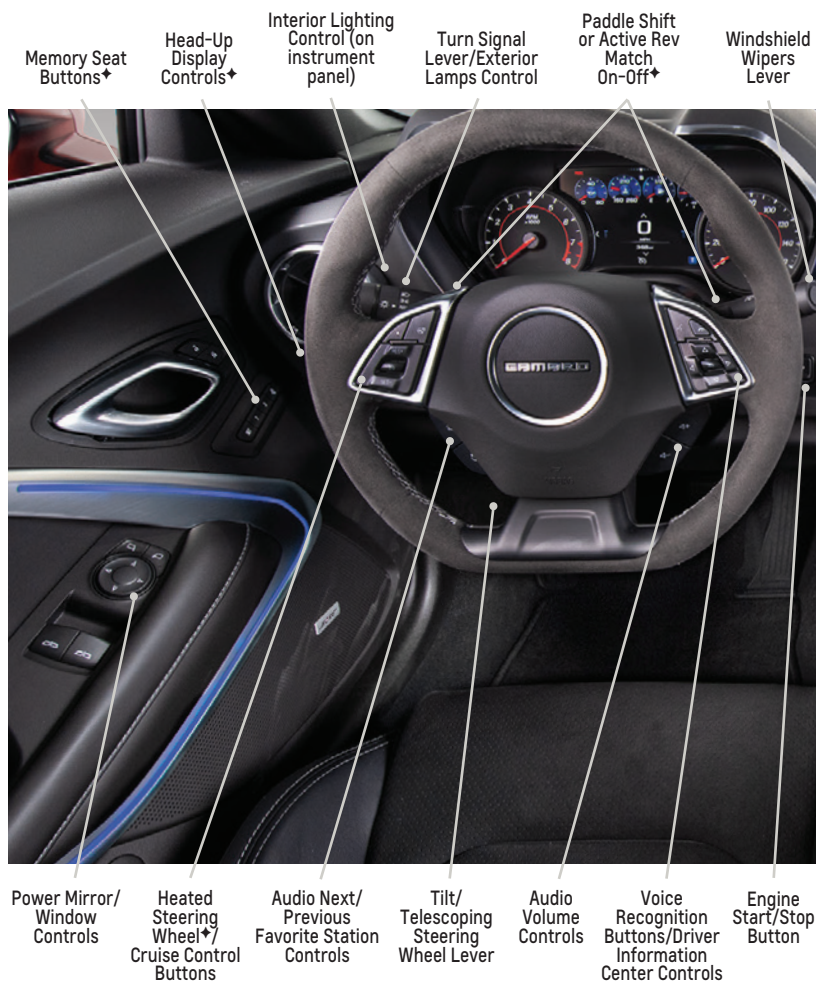

SYMBOLS

	Low Fuel		StabiliTrak Active		Service Electric Parking Brake
	Traction Control Off		StabiliTrak Off		Lights On Reminder
	Brake System		Security		Airbag Readiness
	Cruise Control Set		Electric Parking Brake		Check Engine

Driver's Heated/
Ventilated Seat
Buttons*

Infotainment
System
Touchscreen

Automatic
Climate
Controls

Passenger's
Heated/Ventilated
Seat Buttons*



Hazard
Warning
Flashers
Button

Driver Mode
Selector/
Stability Control
Button

Electric
Parking
Brake
Switch

Accessory
Power Outlet

-  Antilock Brake System
-  Low Tire Pressure
-  Door Ajar
-  Engine Oil Pressure

-  Charging System
-  Driver Seat Belt Reminder
-  Passenger Seat Belt Reminder

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

* Optional equipment

Some equipment shown may not be included in your vehicle.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Lock

Press to lock all doors.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The lights flash and the horn chirps 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Trunk Release

Press twice quickly to release the trunk.

Note: To change the remote settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start* on the infotainment screen.

Lower Convertible Top⁺ (Convertible Models Only)

Press and release the  **Unlock** button and then press and hold the  button to lower the top.

Remote Vehicle Start⁺

Press and release the  **Lock** button and then press and hold the  button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes.
- Repeat these steps for an additional 15 minutes. A remote start can be extended once.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and trunk without removing the Remote Keyless Entry transmitter (key fob) from a pocket or bag. The key fob must be within 3 feet of the door being unlocked/locked or within 3 feet of the trunk.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on the passenger's door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the trunk.



KEYLESS LOCKING

With the ignition off, the key fob out of the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay once all doors are closed.

Note: To change the lock settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start* on the infotainment screen.

See *Keys, Doors and Windows* in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and the clutch pedal (if equipped) and then press the **ENGINE START/STOP** button. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the rear cupholder to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park (automatic transmission, if equipped). Press the **ENGINE START/STOP** button.

ACCESSORY MODE

With the engine off and the brake pedal or clutch pedal (if equipped) not depressed, press the **ENGINE START/STOP** button. The amber button indicator will illuminate.

See *Driving and Operating* in your Owner's Manual.

DRIVER INFORMATION CENTER (DIC)

The DIC on the instrument cluster displays a variety of vehicle system information and warning messages. Use the controls on the right side of the steering wheel to select the Info (includes trip and fuel information), Performance[†], Audio, Navigation, Phone, or Options menu.



Reconfigurable instrument cluster[†] shown

DIC CONTROLS

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press the **SEL (Select)** button to open a menu, or to select or reset an item.



RECONFIGURABLE INSTRUMENT CLUSTER[†]

The instrument cluster features different display themes.

1. Use the controls to display the Options menu.
2. Select Display Theme.
3. Select the desired cluster theme.

See *Instruments and Controls* in your Owner's Manual.

HEAD-UP DISPLAY (HUD) ♦

The HUD projects some operating information on the windshield. Temporary information, such as audio changes and navigation maneuvers ♦, also will be displayed. The HUD controls are located on the left side of the instrument panel.

HUD HUD

Press down or lift up to adjust the position of the image. It cannot be adjusted side to side.

INFO

Press to select a display view: Speed View, Audio/Phone View, Navigation View, or Performance View.

± Brightness

Press down to dim or lift up to brighten the display. Press down and hold to turn off the HUD.

Rotation Option

- To adjust the HUD angle, use the Driver Information Center controls to select Options > HUD.



See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to answer an incoming call or to use natural voice recognition with the Bluetooth or OnStar® system.

Press and hold to activate Bluetooth voice recognition (Siri or Google Assistant) with a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Volume

Pull the + or - button to adjust the volume.

FAV Next/Previous Favorite Station

Pull the  or  button to go to the previous or next favorite radio station or track.



See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Applications*:
Touch a screen icon to access an app

Applications Tray:
Shortcuts to commonly used apps

Home page

SEEK
Previous radio station or track

Power/Volume

SEEK
Next radio station or track

(7-inch* screen)
View the Phone screen or answer a call

< BACK
(8-inch* screen*)
Move back one level in the menus

8-inch* color screen* shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. Visit chevrolet.com/support for additional information.

MANAGING HOME PAGE ICONS

The Home page icons can be arranged in any order.

1. To enter edit mode, touch and hold the Home page icon to move.
2. Continue holding the icon and drag it to the desired position, and then release. Drag the icon to the edge of the screen to move to another page.

INFOTAINMENT SYSTEM♦

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Tune in the desired radio station.
Sources are on the left side of the audio screen.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.
4. Repeat the steps to store another favorite station.



SIRIUSXM WITH 360L♦

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will play a prompt.
3. After the prompt, say what you want it to do using natural speech.
Examples: "Call Dave" or "Tune to 99.5 FM." Say "Help" for assistance.

APPLE CARPLAY® AND ANDROID AUTO™†

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. Download the Android Auto app to your compatible phone from the Google Play Store. No app is required for Apple CarPlay.
2. There are two ways to set up device projection while parked:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
3. Follow the instructions on the infotainment system and the phone.
4. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the Home button.

†Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc.
User terms and privacy statements apply.

INFOTAINMENT SYSTEM

IN-VEHICLE APPS

In-vehicle apps offering entertainment, news, weather, travel information and more, including Amazon Alexa Built-in, are available on the infotainment screen or can be downloaded through the Apps icon. Downloading and using the apps requires internet connectivity and may require a data plan, accessed through the vehicle's available 4G LTE Wi-Fi Hotspot, if active, or a mobile hotspot. Go to **onstar.com** for data plan information.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 Player, a USB flash drive or a portable USB hard drive can be connected to the USB data ports located inside the center-console storage compartment.

- ▶ Touch Audio, and then touch More, if necessary, to select USB from the sources list.



See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices support all functions.

PAIR A PHONE

1. To use the infotainment screen, select the Phone icon > Connect Phone > Add Phone; or, to use voice recognition, press the **Push to Talk** button and say "Pair phone."
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed. Your phone book may be downloaded, depending on the phone.

FIRST TO CONNECT

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect.

- ▶ To set the First to Connect phone, select the Phone icon > Phones > ⓘ Information.

STREAMING AUDIO

- ▶ With a paired device connected via Bluetooth, touch Audio, and then touch More, if necessary, to select Bluetooth from the sources list.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT◆

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit chevrolet.com/support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING◆

The Wireless Phone Charging system is located at the back of the center console. To check device compatibility, visit chevrolet.com/support. See your phone retailer for details on required phone accessories or charging adapters.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the  charging pad.
4. The ⚡ charging symbol will display on the infotainment screen. If not charging, remove the device for 3 seconds and rotate it 180 degrees.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some vehicle features can be turned on/off or customized using the Settings menus on the infotainment system. The Settings menus include System, Apps, and Vehicle.

1. Select Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Select <Back to exit each menu.



See Infotainment System in your Owner's Manual.

AUTOMATIC CLIMATE CONTROLS

Air Delivery Modes:



SYNC
Synchronize
passenger's settings
to driver's settings

AUTO
Automatic
Operation

A/C
Air
Conditioning
Control

Recirculation
Mode



Driver's
Heated/
Ventilated
Seat
Buttons

Temperature
Control

Fan Control
(Dual Automatic
System)

Rear
Window
Defog

Defrost

Fan Control or
Passenger's
Temperature
Control

Passenger's
Heated/
Ventilated Seat
Buttons

Dual Automatic Climate Controls shown

AUTOMATIC OPERATION

- Press **AUTO**.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature. If the functions are manually adjusted, the Auto indicator turns off and full automatic operation is canceled.

See Climate Controls in your Owner's Manual.

ELECTRIC PARKING BRAKE

- To apply the parking brake, pull the **(P) Parking Brake** switch.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear, and an attempt is made to drive.



See Driving and Operating in your Owner's Manual.

HIGH-PERFORMANCE DRIVING FEATURES

TRACTION CONTROL AND STABILITY CONTROL SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center console to turn off traction control.
- ▶ Press and hold the  button to turn off both traction control and StabiliTrak.
- ▶ Press the  button again to turn on traction control and StabiliTrak.



DRIVER MODE CONTROL

Up to four selectable driver modes are available to adjust various vehicle control systems based on driving preferences, weather or road conditions. The modes are displayed on the instrument cluster: Tour (default mode), Sport (will remain active at next ignition cycle if selected), Snow/Ice (automatic transmission), and Track⁺.

1. Press the **MODE** button on the center console to view the current mode.
2. Press the **MODE** button again to scroll through the four modes.

COMPETITIVE MODE AND LAUNCH CONTROL⁺

Note: *Competitive Mode and Launch Control are recommended only for use on closed-course tracks.*

Competitive Mode

Competitive Mode is an optional handling mode that allows increased performance while accelerating and cornering.

- ▶ To turn on Competitive Mode, press the  **Traction Control/StabiliTrak Off** button twice quickly while in the Sport or Track Mode. Competitive Mode will display on the instrument cluster.
- ▶ Press the  button again to return to normal traction control/StabiliTrak operation.

Launch Control

Launch Control is a form of traction control that optimizes wheelspin while launching the vehicle. It is activated when the vehicle is at a standstill on level ground, with the front wheels straight, while in Competitive Mode.

- ▶ Press the accelerator pedal to the floor with the clutch engaged (manual transmission in 1st gear) or the brake pedal firmly applied (automatic transmission); release the clutch or brake while keeping the accelerator pedal pressed to the floor for controlled wheelspin and acceleration.

Note: *The brake-cooling deflectors should be installed on SS models before closed-course track events. The brake-cooling deflectors should be removed once the track event is completed.*

SUMMER PERFORMANCE TIRES⁺

Your vehicle may be equipped with high-performance summer tires that are optimized for maximum dry- and wet-road performance. It is recommended to install winter tires in cold temperatures. See your Chevrolet dealer for information about winter tires.

HIGH-PERFORMANCE DRIVING FEATURES

AUTOMATIC TRANSMISSION PERFORMANCE

Paddle Shifting[♦]

- ▶ To temporarily take control of gear selection while in Drive (D), pull either paddle on the back of the steering wheel. Automatic shifting returns after 7 seconds of cruising at a steady speed without any manual shifts, or when the vehicle stops.
- ▶ To use Manual Mode, move the shift lever to the left from Drive (D) into the gate marked +/- and use the paddles to manually upshift or downshift the transmission. If the current vehicle speed is too fast or too slow for the requested gear, the shift will not occur.
- ▶ Pull the right paddle to upshift and the left paddle to downshift. The current gear will be displayed on the instrument cluster or HUD[♦].



Performance Shifting

While driving in Sport Mode or Track Mode (V8 models), the transmission may hold the current gear during high-cornering loads. When braking, the transmission will downshift to keep up engine speed for exiting the corner. When driving at a steady speed, the transmission will upshift to the appropriate gear.

Powertrain Braking

With the shift lever in Drive (D) when driving on steep grades, where frequent braking is required, the transmission may downshift to help hold vehicle speed and reduce brake wear. Continuing to apply the brake pedal will cause the transmission to downshift until 3rd gear is reached. When the road levels out and the accelerator pedal is applied, the transmission will upshift to the appropriate gear.

MANUAL TRANSMISSION SHIFTING (V8 MODELS ONLY[♦])

1-to-4 Shift

The 1st-to-4th shift feature helps achieve the best possible fuel economy. The 1-to-4 shift message will display on the instrument cluster when, from a stop, acceleration and vehicle qualifications are met. When the shift message is displayed, the transmission can be shifted only from 1st to 4th gear. Forcing the shift lever into any other gear may damage the transmission.

Active Rev Match

Active Rev Match aids in smoother shifting by matching engine speed to the next selected gear.

- ▶ Pull either REV MATCH paddle on the back of the steering wheel to activate or deactivate the system. When active, the current gear is displayed in amber on the instrument cluster.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT* – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

REAR PARK ASSIST* – During low-speed parking maneuvers when in Reverse, the system provides “distance to closest object” information on the instrument cluster and sounds a beep. Five beeps sound when an object is very close.

REAR CROSS TRAFFIC ALERT* – During low-speed maneuvers when in Reverse, the system warns of detected cross traffic approaching in either direction by displaying a red alert on the infotainment screen and sounding directional beeps.

FORWARD COLLISION ALERT* – The  Vehicle Ahead Indicator is green when a vehicle is detected ahead that you're following and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium, or Near.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR*

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull/push the lever at the bottom of the mirror to turn the video display on/off.

B. Selection Control

Press and release the button to select the brightness, tilt or zoom setting.

C. Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

See Vehicle Care in your Owner's Manual.

TIRES

TIRE SEALANT AND COMPRESSOR KIT*

The kit, located under the trunk floor, can be used to temporarily seal small punctures in the tread area of a tire. Refer to the kit instructions for operating information.

RUN-FLAT TIRES*

The run-flat tires eliminate the need for a spare tire. The tire design enables safe driving function during and after loss of pressure for 50 miles at a moderate speed. A tire pressure of 0 will display on the Driver Information Center. Driving only a short distance with a loss of pressure increases the chance that the tire can be repaired. Contact Roadside Assistance for the nearest run-flat tire servicing facility.

See Vehicle Care in your Owner's Manual.

CONVERTIBLE TOP OPERATION*

Before operating the convertible top, the cargo partition (A) must be in the fastened position with no objects forward of the partition, and the trunk must be closed. The top can be operated at vehicle speeds up to 30 mph.

OPERATING THE POWER TOP

- Press and hold the  **Open/Close** switch (B) on the overhead console, or use the  **Convertible Top** button on the Remote Keyless Entry transmitter (key fob) to lower the top only. The windows will lower automatically when operating the top. A message will display on the Driver Information Center when top operation is completed.

Note: The top will not operate in cold weather below 32°F (0°C).

POWER WINDOWS

- Press the front- (C) or rear-window button (D) to operate the desired window. The indicator light on the selected button will illuminate.
- Fully press/pull the desired window switch (E) to express open/close the window.

Note: Raise the rear windows before the front windows to help ensure proper sealing.

LOSS OF VEHICLE POWER

- If the vehicle has lost power, the convertible top can be raised manually by releasing pressure on the hydraulic pump. Refer to your Owner's Manual.

See Keys, Doors and Windows in your Owner's Manual.



ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CHEVROLET ACCOUNT

Get to know your vehicle as well as view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at chevrolet.com/owners.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



85536897

**We recommend always using
ACDelco or GM Genuine Parts.**



85536897 A