



GETTING TO KNOW YOUR
**3500 HG / 4500 HG /
5500 HG / 5500 XG
6.6L GAS LOW CAB FORWARD**



chevrolet.com

 
Review this quick reference guide for an overview of some important features in your Chevrolet Low Cab Forward. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions, and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



OVERVIEW



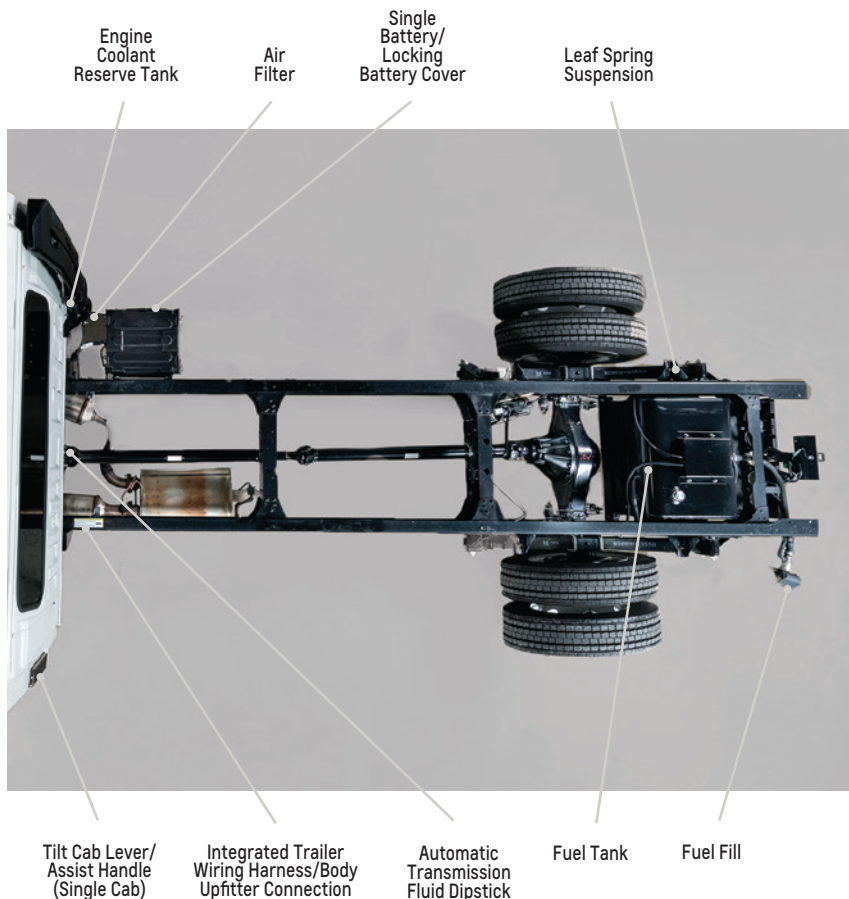


Crew cab model shown

See Introduction in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

 INSTRUMENT PANEL

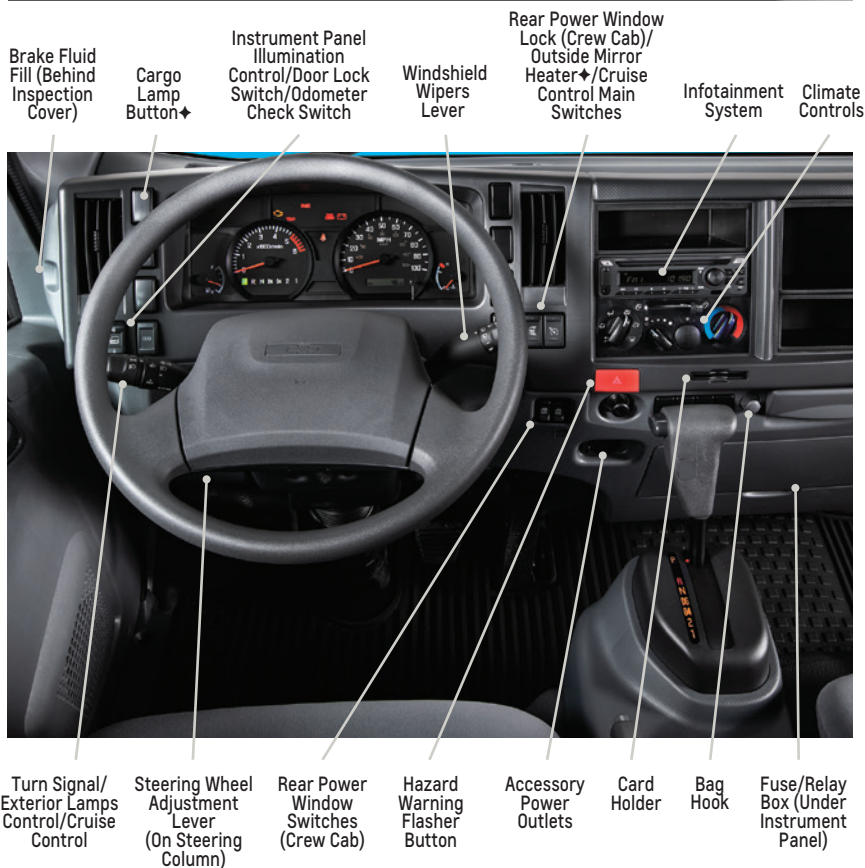

TRIP ODOMETER RESET

 
- ▶ With the ignition On, press and release the trip odometer reset stem on the instrument cluster to display the odometer, trip A and trip B mileage. Press and hold the reset stem to reset the trip A or trip B odometer while displayed.

ODOMETER/FUEL GAUGE CHECK

- ▶ To display the odometer, trip odometer mileage and fuel gauge with the ignition Off, press the Odometer Check switch on the left side of the instrument panel.

See Introduction in your Owner's Manual.

INSTRUMENT CLUSTER

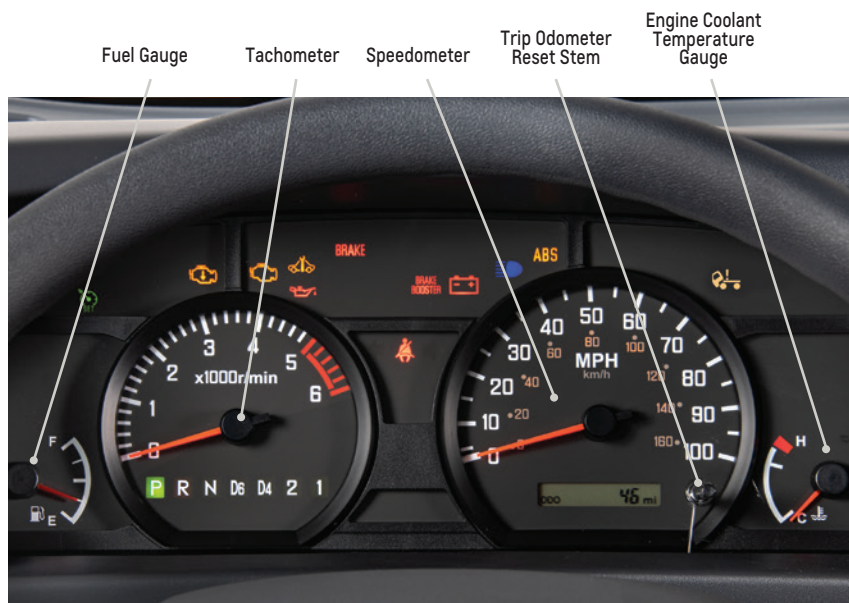

SYMBOLS

	Cruise Control On		Engine Oil Pressure		High-Beam Headlamps
	Cruise Control Set		Brake System/Parking Brake Set		Antilock Brake System
	Daytime Running Lamps		Brake Booster		Seat Belt Reminder
	Check Engine		Reduced Engine Power		Engine Coolant Temperature
	Service Vehicle Soon		Charging System		Cab Tilt Sensor

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument panel.

See Instruments and Controls in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB) ♦



Lock

Press for 1 second to lock all doors.



Unlock

Press for 1 second to unlock all doors.

Note: If a door is not opened within 30 seconds after pressing the Unlock button, the doors will lock again to help prevent theft.

See *Keys, Doors and Windows* in your Owner's Manual.

 
KEYED IGNITION SYSTEM

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the On position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park. Allow the engine to idle for approximately 3 minutes.
- ▶ Push the key all the way in (1) and then rotate the key counter-clockwise to the Lock/Off position (2).

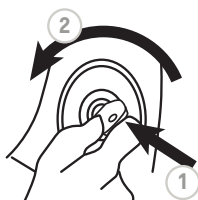

See *Driving and Operating* in your Owner's Manual.

SEATS

DRIVER'S SEAT

A. Seat Adjustment

Lift the lever under the front of the seat to slide the seat forward or rearward.

B. Seatback Adjustment

Lift the side lever to recline or raise the seatback.

C. Suspension Adjustment ♦

Turn the knob under the front of the seat to adjust the scale to match your weight.



PASSENGER'S SEAT/CENTER SEAT

D. Seatback Adjustment

Pull the side lever to fold the seatback.



See *Seats and Restraints* in your Owner's Manual.

Pre-production model shown.

STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, pull up the lever on the left side of the steering column to unlock the column. The steering wheel can be adjusted up or down and forward or rearward. Push down the lever to lock the steering wheel in place.

See *Instruments and Controls* in your Owner's Manual.



POWER DOOR LOCKS

DOOR LOCK BUTTON (DRIVER'S DOOR)

- ▶ To lock all doors, push the door lock button, located above the driver's door handle, forward.

DOOR LOCK SWITCH (INSTRUMENT PANEL)

- ▶ Press the door lock switch on the left side of the instrument panel to  lock all doors or  unlock all doors.



See *Keys, Doors and Windows* in your Owner's Manual.

HEATED MIRRORS♦

- ▶ Press the  **Outside Mirror Heater** switch on the instrument panel to defog the outside mirrors. Press the switch again to turn off operation when defogging is complete.

See *Keys, Doors and Windows* in your Owner's Manual.



POWER OUTLETS

Use the accessory power outlets on the center of the instrument panel to power electrical equipment.

When inserting or removing the plug of any equipment, turn off the equipment or place the ignition in the Lock position. Total maximum electrical load must not exceed 120W. Turn off any electrical equipment when not in use for extended periods to avoid draining the battery.

See *Instruments and Controls* in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROLS

Rotate the end of the lever to activate the exterior lamps.

○ Off

☾ Parking Lamps

☾ Headlamps

Note: The Daytime Running Lamps will turn on when the engine is started in the daytime with the lamp control off and the parking brake released.



INSTRUMENT PANEL LIGHTING

☼ Instrument Panel Brightness

Rotate the thumbwheel (A) to adjust the instrument panel lighting.

CARGO LAMP♦

☼ Cargo Lamp

Press the button (B) to turn the rear body interior lamp on or off. The button indicator illuminates when the lamp is on.

See Lighting in your Owner's Manual.



WINDSHIELD WIPERS

Rotate the end of the lever to activate the wipers.

○ OFF

☼ INT Intermittent wipes

— Slow wipes

== Fast wipes

☼ Washer Fluid

Push the button on the end of the lever to wash the windshield.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



 
MAXIMUM HEATING/COOLING

- Select the  Recirculation Mode, the desired temperature and the maximum fan speed to quickly heat or cool the air inside the vehicle. Selecting the Recirculation Mode also prevents dusty air or outside odors from entering the cab.

Note: Extended use of the Recirculation Mode increases air humidity and may cause the windows to fog.

PASSENGER COMPARTMENT AIR FILTERS

- There are two air filters – an inside air filter and an outside air filter – that filter air in the passenger compartment. The inside air filter (A) is located behind the cover on the right side of the instrument panel. The outside air filter (B) is located under the right side of the instrument panel. Remove the filters and use a vacuum cleaner to clean them of dust and dirt.

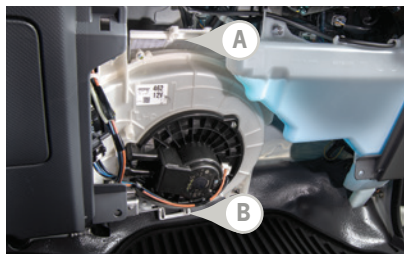

See Climate Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



Note: The audio system will mute the volume automatically when the vehicle is shifted into Reverse.

SETTING THE TIME

1. Press the **FUNC** button.
2. Turn the **MODE** knob to display Clock. Press **ENTER** (press the knob).
3. Turn the **MODE** knob to display Set. Press **ENTER**.
4. Turn the **MODE** knob to adjust the hour and minutes. Press **ENTER**.

TUNING STATIONS

- ▶ For manual tuning, press a $\wedge \vee$ button. Press a $\wedge \vee$ button again to view the next or previous station.
- ▶ For automatic tuning, press a $\wedge \vee$ button for more than 1 second to seek the next or previous station. Press and hold a $\wedge \vee$ button for more than 2 seconds to continue seeking stations. To cancel, press the button again.

STORING FAVORITES (PRESET)

Up to 30 radio stations (12 AM, 18 FM) can be stored on up to 5 pages.

1. Press the **MODE** knob, and then turn the knob to display the desired favorite page (FM1, FM2, FM3, AM1, AM2). Press **ENTER**.
2. Tune in the desired radio station.
3. Press and hold one of the Favorite buttons until the station is displayed.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

PORTABLE AUDIO DEVICES

- ▶ Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to the USB port or auxiliary jack.
- ▶ Press the MODE knob, and then turn the knob to display USB or AUX. Press ENTER.

For assistance with the infotainment system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit chevrolet.com/support.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. Press FUNC.
2. Turn the MODE knob to display Bluetooth. Press ENTER (press the knob).
3. When Pairing is displayed, press ENTER. If the device has been paired previously, turn the MODE knob to display Pairing. Press ENTER.
4. Start the pairing process on your phone. A 4-digit code is displayed on the infotainment system.
5. Follow the pairing instructions.
6. When pairing is complete, Connected is displayed.



MAKING/ANSWERING A PHONE CALL

- ▶ To make a call, press the  **Off Hook** button to talk hands-free. Use the MODE knob to enter a phone number or use your phonebook. Press ENTER. Calling is displayed.
- ▶ When a call is received, Incoming is displayed. Press the  **Off Hook** button to talk hands-free. To end the call, press the  **On Hook/List** button.

See Infotainment System in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button on the instrument panel. The  Cruise Control symbol will illuminate on the instrument cluster.
2. When traveling at the desired speed, rotate the band on the turn signal lever down to the **SET** position to set the speed. The  symbol will illuminate on the instrument cluster.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Rotate the band on the turn signal lever up to the **RES** position to resume a set speed. When active, rotate and hold the band up to increase speed.

SET- Set/Coast

When active, rotate and hold the band down to decrease speed.

Cancel

Press the brake pedal to cancel Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.



See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION

Use the selector lever to select the gear or the range of gears desired for the current driving conditions.

P – Park

R – Reverse

N – Neutral

D6 – Drive D6 Gear: Use for normal driving. Gears 1–6 are available.

D4 – Drive D4 Gear: Use while climbing a long hill. Gears 1–4 are available.

2 – Second: Use on downhill roads or when engine braking is required. Select the 2 position at speeds below 25 mph.

1 – Low: Use on steep downhill roads or when strong engine braking is required.



See Driving and Operating in your Owner's Manual.

PARKING BRAKE

Engage the parking brake when parking or stopping the vehicle. The parking brake lever is located to the right of the driver's seat.

- ▶ To set the parking brake, pull the parking brake lever all the way up. The parking brake indicator will illuminate on the instrument cluster when the parking brake is set.
- ▶ To release the parking brake, push the release button and then push down the parking brake lever.



Pre-production model shown.

See Driving and Operating in your Owner's Manual.

WINDSHIELD WASHER FLUID

The windshield washer fluid fill is located on the passenger's side of the instrument panel.

1. Remove the cap.
2. Fill the reservoir with a quality, premixed washer fluid.
3. Tighten the cap.

See Vehicle Care in your Owner's Manual.



BATTERY LOCATION

The battery is located behind the cab on the passenger's side of the vehicle.

- ▶ Release the spring clip on the cover to access the battery.

See Vehicle Care in your Owner's Manual.



AIR FILTER

The air filter should be changed following the recommended maintenance schedule. A dirty air filter reduces engine output and increases fuel consumption. The air filter is located behind the cab (single cab) or under the cab (crew cab) on the passenger's side of the vehicle.

See Vehicle Care in your Owner's Manual.



BRAKE FLUID

The brake fluid fill is located behind the inspection cover on the driver's side of the instrument panel.

1. Remove the cover by pushing forward with your thumb in the cover indentation.
2. The brake fluid level in the reservoir should be between the Max and Add lines.
3. If the fluid is below the Add line, remove the cap and add fluid. Do not add fluid above the Max line.
4. Tighten the cap and install the cover.

 


See Vehicle Care in your Owner's Manual.

ENGINE OIL

Check the engine oil regularly. The engine oil dipstick (A) is located on the passenger's side of the engine and the oil fill (B) is located on the driver's side of the engine.

- ▶ On single cab models, tilt the cab to access the dipstick and oil fill.
- ▶ On crew cab models, the dipstick is located under the inspection cover beneath the passenger's seat. Secure the upright seat with the strap behind the passenger's seat. The oil fill is located under the inspection cover beneath the driver's seat. Pull the red lock lever and remove the driver's seat cushion to access the cover.

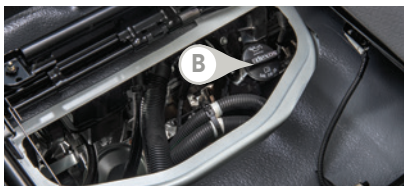

See Vehicle Care in your Owner's Manual.

REFUELING THE VEHICLE

The fuel fill port(s) is located on the driver's side of the vehicle.

 
 
1. Remove the fuel cap by turning it counterclockwise.
2. Fully insert the fuel pump nozzle before starting to fill the tank.
3. Replace the fuel cap and turn it clockwise fully until tight.

See Driving and Operating in your Owner's Manual.

TILT-CAB OPENING (SINGLE CAB)


TILT THE CAB

1. Follow all precautions before tilting the cab, including removing or securing all loose items in the cab.
2. On the driver's side of the vehicle, behind the cab, pull and hold the metal lever (A) by the assist handle (B) and then pull up the lock handle (C).
3. Hold the assist handle (B) to prevent the cab from lifting and pull up the safety hook (D) to release the cab.
4. Raise the cab fully while holding the assist handle (B) until the cab support locks.
5. With the cab support locked by the support lock lever (E), insert the safety lock pin (F).

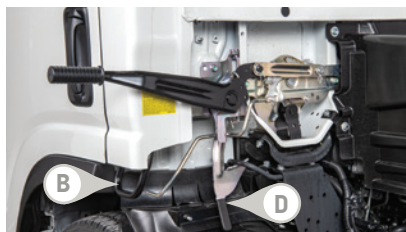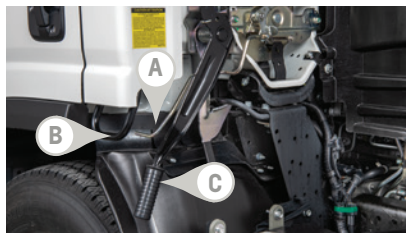

LOWER THE CAB

 1. Remove the safety lock pin (F).
2. Hold the assist handle (B) and, while pressing the support lock lever (E), pull the cab support rearward.
3. Lower the cab until the safety hook is engaged and then push down the lock handle (C).

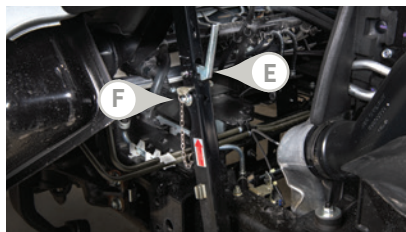

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-899-1327

As the owner of a new medium-duty Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for the duration of the vehicle's powertrain warranty, which is up to 5 years/75,000 miles, whichever occurs first, at no expense to you. For qualifying fleet accounts, Roadside Assistance is available for up to 5 years/100,000 miles, whichever occurs first.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump starts, flat tire and lock outs) or make arrangements to tow your vehicle to the nearest Chevrolet Medium-Duty Dealer for any repairs.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual, track your service history and warranty status, and more. Create an account today at **chevrolet.com/owners**.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



86560120

**We recommend always using
ACDelco or GM Genuine Parts.**



86560120 A