



GETTING TO KNOW YOUR ***ALL-NEW*** ***2024 TRAVERSE***



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Traverse. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



Preproduction model shown throughout. Actual production model and feature availability may vary.

INSTRUMENT PANEL

Cruise Control/
Forward Collision
Alert/Super Cruise⁺
Buttons

Manual
Shift
Paddle

Turn Signal/
Windshield
Wipers Lever

Digital
Driver
Information
Center

Driver Information Center/
Audio/Phone/Voice
Recognition /Heated
Steering Wheel⁺ Buttons

Manual
Shift
Paddle

Precision
Shift
Lever



Power
Mirror/
Window
Switches

Electric Parking Brake/
Driver Mode Control/
AWD⁺/Auto Stop
Disable/ Instrument
Panel Lighting Controls

Audio Favorite
Station or Seek
Controls (back
of steering
wheel)

Steering
Wheel
Adjustment
Lever

Audio Volume
Controls (back
of steering
wheel)

Engine
Start-Stop
Button (on
instrument
panel)

SYMBOLS

- Low Fuel
- BRAKE** Brake System Warning
- Cruise Control Set
- Security
- Forward Collision Alert
- Fog Lamps

- Traction Control/
StabiliTrak Active
- Airbag Readiness
- High-Beam Headlamps
- Check Engine
- Traction Control Off

- Stability Control Off
- Lights On Reminder
- Antilock Brake System
- Charging System
- Low Tire Pressure
- Lane Keep Assist



-  Pedestrian Ahead
-  Engine Oil Pressure
-  Engine Coolant Temperature Warning
-  Auto Stop
-  Door Ajar

- PARK**  Parking Brake Set
-  Vehicle Ahead
-  Service Electric Parking Brake
-  Driver Seat Belt Reminder
-  Super Cruise

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.

Power Liftgate[†]

Press twice to open or close the liftgate.

Press once to stop power liftgate operation.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold to activate the alarm.

Press again to cancel the alarm.

Remote Vehicle Start[†]

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the **ENGINE START/STOP** button.

- The engine will run for 15 minutes. Repeat the steps to extend the remote start an additional 15 minutes.
- To cancel a remote start, press the  button until the parking lamps turn off.

Key Release

If vehicle power is lost, press the button on the side of the key fob to pull out the door key.

Note: To change the remote settings, go to *Settings > Vehicle > Remote Lock, Unlock and Start* on the infotainment screen.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS ACCESS SYSTEM[†]

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and liftgate.
- ▶ Press the button on a passenger's door handle to unlock all doors and liftgate.
- ▶ Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and liftgate immediately.
- ▶ All doors will lock automatically after a short delay once all doors are closed if Passive Locking is turned on in the Settings menu.

Note: To change the lock settings, go to *Settings > Vehicle > Remote Lock, Unlock and Start* on the infotainment screen.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the key fob battery is weak, place the key fob in the left cupholder to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The button indicator will be amber.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is applied and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the (A) symbol displays in the Driver Information Center. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.

AUTO STOP DISABLE

- ▶ To turn off the system, press the (A) **Auto Stop** button on the left side of the instrument panel. The button indicator will turn on when the system is off.

The Auto Engine Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

BUCKLE TO DRIVE

Buckle to Drive delays the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed, and the driver's and front-seat passenger's seat belts are not buckled. Buckle the seat belts to shift out of Park. If a seat belt remains unbuckled, the vehicle can be shifted out of Park once the Driver Information Center message turns off after several seconds. Shifting from Park is delayed once each ignition cycle.

- ▶ To turn off or on again, go to Settings > Vehicle > Buckle to Drive on the infotainment screen. The vehicle may need to be restarted to register the setting change.

Note: Rear Seat Reminder also will provide an alert if 2nd- or 3rd-row passengers have taken off their seat belts.

See Seats and Restraints in your Owner's Manual.

DIGITAL DRIVER INFORMATION CENTER



The reconfigurable Driver Information Center (DIC) displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view and select Vehicle, Audio and Phone information.

- ▶ Press the  Display button to view and scroll through the cluster display layouts.
- ▶ Press the  or  switch to scroll through the active menu.
- ▶ Press the  switch to open a menu, or to select or reset an item.



VEHICLE INFORMATION

1. Press the  Vehicle Status icon on the infotainment screen to view all available vehicle information.
2. Select the Maintenance, Gauges or Trip button, or select an item on the vehicle graphic.
3. Select an item to view additional information or to reset an item.
4. When viewing an item, select Add to Driver Display to display an item or Remove from Display to remove an item on the driver display.



See *Instruments and Controls* in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The automatic transmission is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

Manual Mode – While in Drive, pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull and hold the right paddle to deactivate, or automatic shifting will return after 7-10 seconds without any manual shifts.

See Driving and Operating in your Owner's Manual.



ELECTRIC PARKING BRAKE

▶ To apply the parking brake, press the (P) **Parking Brake** button on the left side of the instrument panel.

▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) button.

Note: The parking brake will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away.



See Driving and Operating in your Owner's Manual.

STEERING WHEEL ADJUSTMENT

▶ With the vehicle parked, push down the lever or use the power control* under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

POWER FRONT SEATS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



SET MEMORY SEATS

1. Adjust the seat, power outside mirrors and power steering column.
 2. Press and release the **SET** button; a beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound.
- To save a seat position for more clearance when entering or exiting the vehicle, repeat these steps using the **Exit** button instead of button 1 or 2.



RECALL MEMORY POSITIONS

- Press and hold button 1, 2, or  **Exit** until the saved position is reached.
- To set the memory/exit positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

REAR SEATS

ENTER OR EXIT THE 3RD-ROW SEATS

1. Remove anything on the 2nd-row seat or the floor in front of, or behind, the seat.
2. Pull the handle on top of the seatback (A) and pull the Smart Slide seat forward or press the available one-touch fold button at the bottom of the seat.
3. After entering/exiting, move the seatback rearward until it locks in place.



SLIDE THE 2ND-ROW SEATS

- Lift the bar under the seat cushion to slide the seat forward or rearward.

REAR SEATS

RECLINE THE 2ND-ROW SEATBACKS

- ▶ While seated, pull the lever on the side of the seat cushion (B) to move the seatback to the desired position.

FOLD THE 2ND-ROW SEATS

1. Pull the lever on the side of the seat cushion (B) and fold the seatback forward or press the power folding seat switches♦ on the passenger's side of the cargo area.
2. To raise the seatback, lift it up until it locks in place.



FOLD THE 3RD-ROW SEATS

1. Adjust the 2nd-row seat to allow the 3rd-row seat to fold fully flat.
2. Remove anything on or under the 3rd-row seat.
3. Use the key fob door key in the mini-buckle slot to disconnect the mini-latch of the center seat belt and stow in the headliner.
4. Pull the release strap to fold the headrest. Pull the release strap fully to release the seatback and fold the seatback forward, or press the power folding seat switches♦ on the passenger's side of the cargo area.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the key fob twice.
- ▶ Press the Power Liftgate button (A) on the driver's door.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.
- ▶ Press the button next to the liftgate pull handle to close the liftgate.
- ▶ To change the power liftgate settings, go to Settings > Vehicle > Comfort and Convenience on the infotainment screen.

AUTOSENSE POWER LIFTGATE

The liftgate will open automatically when the key fob is within 3 feet of the rear of the vehicle for 3 seconds. 4 beeps sound before the liftgate will open. Press and hold the liftgate handle touchpad until the taillights flash to disable or enable Autosense.



PROGRAMMING THE LIFTGATE HEIGHT

1. Open the liftgate and adjust it manually to the desired position.
2. To save the setting, press and hold the button next to the lift gate pull handle until the turn signals flash and a beep sounds.

See Keys, Doors and Windows in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. Use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For additional information, visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the  **Home** icon.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position on the screen or the app tray, and then release.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM⁺) can be stored in any order.

1. Tune in a radio station. The Sources menu is at the top of the Audio page.
2. Touch and hold one of the Favorite buttons until a beep is heard.

SIRIUSXM WITH 360LTM+

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

INFOTAINMENT SYSTEM

GOOGLE BUILT-IN

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

- Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google to get hands-free help. Easily get directions, play media, control vehicle functions and more.

- To start, say “Hey Google,” tap the Google Assistant icon in the App Tray on the Home page, or press the **Push to Talk** button on the steering wheel.

Google Maps – Reach your destination faster with real-time traffic information, automatic rerouting and voice control.

Sign in for personalized maps with home and recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

***Note:** Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play and Google Maps are trademarks of Google LLC.*



APPLE CARPLAY® AND ANDROID AUTO™

1. There are two ways to connect to Apple CarPlay or Android Auto:

- **Wireless Connection** – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
- **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.

2. Follow the instructions on the infotainment system and the phone.

3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.

PORTABLE AUDIO DEVICES

A smartphone, MP3 player or a USB flash drive can be connected to a USB data port located at the front of the center console.

- Touch Audio and then touch Source to select the USB device.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel. A prompt will be played.
2. After the prompt, say what you want it to do using natural speech. Example: “Call Dave.” Say “Help” for assistance.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. Press the  **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected) or select the Phone icon > Manage Phones > +Add Phone on the infotainment screen.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT PAIRED PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the paired phone that is set as First to Connect.

- To set the First to Connect phone, select Settings > Connections > Phones > Options for the connected phone > First to Connect.

See Infotainment System in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available built-in 4G LTE Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. Visit onstar.com for more information.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > Connections > Wi-Fi Hotspot on the infotainment system.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The wireless charging system for smartphones is located at the front of the center console. To check device compatibility, visit chevrolet.com/support. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before placing it on the pad again.

See Instruments and Controls in your Owner's Manual.

AUDIO/PHONE STEERING WHEEL CONTROLS

Push to Talk

Press to use natural voice recognition with the Bluetooth system of a paired, compatible phone.

Answer/End Call

Press up to answer an incoming call and down to end a call, or to mute/unmute the speakers.

Audio

Press to display the Audio source on the Driver Information Center.

Volume (back of right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station/Seek (back of left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track (on a connected device).



See Infotainment System in your Owner's Manual.

VEHICLE CUSTOMIZATION


Some features can be turned on/off or customized using the Controls and Settings menus on the infotainment screen, including Buckle to Drive, Exterior Lamps, Driver Assistance and others.

1. Select Controls or Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press **<Back>** to exit each menu.

See Infotainment System in your Owner's Manual.



CLIMATE CONTROLS

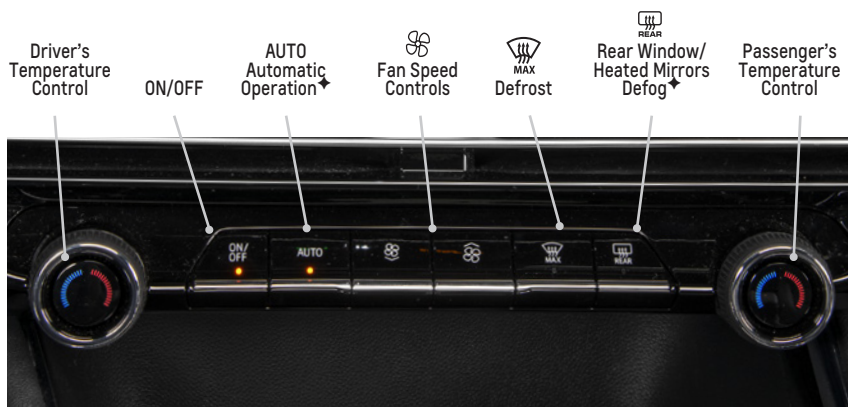

Dual Automatic Climate Controls* shown

CLIMATE DISPLAY

- ▶ Select the Climate icon on the Home page of the infotainment screen to view and adjust the current operation of the Climate Controls.

AUTOMATIC OPERATION*

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

See Climate Controls in your Owner's Manual.

SUNROOF*

- ▶ Press or pull the  SLIDE switch to express-open or express-close the sunroof. Press or pull again to stop operation.
- ▶ Press or pull the  TILT switch to vent the sunroof.
- ▶ Press or pull the  Sunshade switch to express-open or express-close the sunshade. Press or pull again to stop operation.



See Keys, Doors and Windows in your Owner's Manual.

WIPERS AND WASHERS

Rotate the outer band to activate the windshield wipers.

OFF

INT Intermittent Wipes

Rotate the band up for more frequent wipes or down for less frequent wipes.

LO Slow Wipes

HI Fast Wipes

Single Wipe

Push the button on the end of the lever to the first stop for a single wipe. Hold the button for additional wipes.

Washer Fluid

Push the button on the end of the lever completely to wash the windshield.

Rear Window Wiper

Rotate the inner band to activate the rear wiper and wash the rear window.



See Instruments and Controls in your Owner's Manual.

EXTERIOR LIGHTING

- ▶ Unique entry and exit lighting illuminates the exterior and interior of the vehicle. RS models also feature walk-up animation lighting when approaching the vehicle. To adjust the lighting settings, go to Settings > Vehicle > Lighting.
- ▶ Select the Automatic Light Control icon on the infotainment screen to turn the auto headlamps on/off.
- ▶ To enable the IntelliBeam system, which automatically turns the high-beam headlamps on/off based on traffic conditions at night, go to Controls > More Controls > Lights > Auto High Beams. The exterior lamps must be in the Auto setting. A green  on the instrument cluster indicates the system is on. A blue  appears when the high-beam headlamps are on.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

- ▶ To operate the exterior lamp controls, go to Controls > More Controls > Lights > Headlights on the infotainment screen. Select the Auto setting to have the exterior lamps turn on or off automatically, depending on outside lighting conditions.

See Lighting in your Owner's Manual.



CRUISE CONTROL

Note: Refer to the *Getting to Know Super Cruise™* guide to learn more about using Super Cruise♦.

SETTING CRUISE CONTROL

- ▶ Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
- ▶ When traveling at the desired speed, press down the switch to the SET position to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

+RES Resume/Accelerate

Press up to resume a set speed. When active, press once to increase speed 1 mph; press and hold to continue increase speed.

-SET Set/Coast

When active, press down once to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel

Press the  button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL♦

The system enhances regular Cruise Control to automatically maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** switch to select a targeted gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.



DRIVER MODE CONTROL/AWD♦

The Driver Mode Control system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions. Controls are on the left side of the instrument panel.

- ▶ Press the **MODE** button to activate each available drive mode.
- ▶ Press the **AWD** button♦ to select the All-Wheel-Drive mode.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

CHEVY SAFETY ASSIST PACKAGE

- To turn some of the following systems on/off or to change some settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.



FORWARD COLLISION ALERT – The Vehicle Ahead Indicator is green on the instrument cluster when a vehicle that you're following is detected, and it is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound (if selected).

- Press the **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle detected ahead is indicated in seconds on the instrument cluster.

AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The **Lane Keep Assist** indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber may flash and beeps may sound on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- To turn on or off, press the **Lane Keep Assist** button on the infotainment screen.

Note: IntelliBeam automatic high-beam headlamps are included with the Chevy Safety Assist Package. See Exterior Lighting on page 15.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT ♦ – The driver's seat pulses – left, right, or both sides – to alert the driver of the direction of potential hazards.

- ▶ Audible alerts or seat-pulsing alerts may be selected. To change the alert settings, go to Settings > Vehicle > Collision/Detection Systems > Alert Type.

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT ♦ – While driving, the system displays a warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Lane Change Alert.

INTERSECTION AUTOMATIC EMERGENCY BRAKING ♦ – The system can help you avoid or reduce the severity of an intersection collision with a detected cross-traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

REAR PEDESTRIAN ALERT ♦ – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat ♦ pulses or rapid beeps sound (if selected). Nighttime and low visibility performance are limited.

- ▶ To set to Alert or Off, go to Settings > Vehicle > Collision/Detection Systems > Rear Pedestrian Detection.

PARK ASSIST WITH BRAKING ♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the instrument cluster and a beep sounds (if selected). When an object is very close, 5 beeps sound (if selected). The system may apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

- ▶ To turn on or off, go to Settings > Vehicle > Collision/Detection Systems > Park Assist.


REAR CROSS-TRAFFIC ALERT BRAKING ♦ – When in Reverse, the system warns of detected cross traffic approaching in either direction and provides alerts and hard emergency braking to help reduce the severity or help avoid collisions at very low speeds.

REAR VISION CAMERA – When the vehicle is in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen.

- ▶ Touch the **Guidance Lines** button on the screen to turn the guidelines on or off.

HD SURROUND VISION ♦ – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. It works at low speeds and can help when parking.

- ▶ Touch one of the **Camera View** buttons on the screen to change the view.
- ▶ Select the Settings button to turn the guidelines on or off.

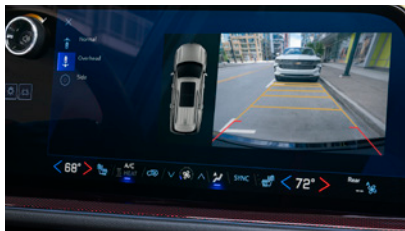

See Driving and Operating in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

REAR CAMERA MIRROR

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull/push the lever at the bottom of the mirror to turn the video display on/off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

TRACTION CONTROL & STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn traction control or electronic stability control (ESC) on or off, select the  Traction Control icon on the infotainment screen or go to Controls > More Controls > Drive & Park > Traction Control.

See Driving and Operating in your Owner's Manual.



TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated (excluding the spare tire). Fill the tires to the recommended pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Driver Information Center.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended cold tire pressure (excluding the spare tire). With the vehicle On, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

Note: Refer to your Owner's Manual for additional information about routine tire maintenance.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from the App Store or Google Play Store.*

MY CHEVROLET ACCOUNT

Get to know more about your vehicle and review your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Scan the QR code or go to **chevrolet.com/owners** to create an account today.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2023 General Motors LLC. All Rights Reserved.



84879659

We recommend always using
ACDelco or GM Genuine Parts.



84879659 A