

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, consult your Owner's Manual.

WARRANTY INFORMATION:

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of **owner.ford.com**. (United States)

For Canada, visit **ford.ca/warranty**.

For Limo/Livery/Hearse vehicles: View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, **fleet.ford.com/limo**. (United States only)



WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

United States

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 7-1-1
**where offered by your telephone
service provider**)
owner.ford.com  **@FordService**

Canada

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
(TDD for the hearing impaired: 7-1-1
**where offered by your telephone
service provider**)
ford.ca  **@FordServiceCA**



2024 EDGE

QUICK REFERENCE GUIDE

VOICE INTERACTION

The digital assistant allows you to control vehicle features using conversational requests.

TO BEGIN A VOICE INTERACTION, YOU CAN EITHER:

- Press the voice interaction button on the steering wheel.
- Say the selected wake word.

Voice Command Examples

To see examples of what voice commands you can use with different features:

1. Press the  button on the touchscreen.
2. Press **Ford Assistant**.
2. Press **Voice Command Help**.
3. Select a feature.

Ford Assistant Settings

To access the settings menu:

1. Press the  button on the touchscreen.
2. Press Ford Assistant.

From the settings menu you can do the following:

- Switch listen for wake word on or off.
- Set the preferred wake word.
- Switch advance mode on or off.
- Switch phone confirmation on or off.
- Switch the commands list on or off.
- View the commands help menu.

Additionally:

Some voice commands may require your modem to be enabled. For more information about your vehicle's modem, see the **Connected Vehicle** chapter of your *Owner's Manual*.

Tips:

- When using voice commands make sure that you wait for the tone before giving the voice command.
- When saying the name of a contact, track or artist make sure that you say the name exactly as it appears on your device.

For more information about using voice interaction and for troubleshooting information, see the *Owner's Manual* in your vehicle's touchscreen.

Some services may not be available in your area. Refer to your *Owner's Manual* in the touchscreen, visit the website or call the toll-free number.

FOR U.S. CUSTOMERS:

Visit owner.ford.com or call 1-800-392-3673.

FOR CANADIAN CUSTOMERS:

Visit syncmyride.ca or syncmaroute.ca or call 1-800-565-3673.

TABLE OF CONTENTS

INSTRUMENT PANEL	2–5
CENTER DISPLAY OVERVIEW	6–8
COMFORT	9–10
CONVENIENCE	11–13
FUNCTION	14–15
ESSENTIAL INFORMATION	16–17

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



owner.ford.com (U.S.)



ford.ca (Canada)



INSTRUMENT PANEL



1 POWER ADJUSTABLE STEERING COLUMN*

Use the control on the side of the steering column to adjust the position.

To tilt: Press the top or bottom of the control.

To telescope: Press the front or rear of the control.

2 ADAPTIVE CRUISE CONTROL*

Adaptive cruise control adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the gap controls on the steering wheel. To set a cruise speed, switch cruise control on, accelerate to the desired speed and press the **SET-** or **RES+** button. An indicator, the current gap setting and your set speed appear in the instrument cluster display.

Press **CNCL** to cancel cruise control, press the **RES+** button to return to the set speed and gap setting and press the **ON/OFF** button or switch off the ignition to turn cruise control off. The system can also bring your vehicle to a complete stop and may resume going forward in stop-and-go traffic.

Lane centering* helps keep your vehicle in the center of the lane by applying continuous assistance steering torque input toward the lane center on highways. To switch it on, press the  button.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary.

Refer to the **Adaptive Cruise Control** chapter in your *Owner's Manual* for safety information, more details and limitations.

3 INSTRUMENT CLUSTER DISPLAY*

Displays information about various systems in your vehicle. Use the left instrument cluster display controls on the steering wheel to choose and confirm settings and messages. For your safety, some features are speed-dependent and could be unavailable when your vehicle is above a certain speed. Refer to the **Instrument Cluster Display** chapter of your *Owner's Manual* for more information.

4 LANE KEEPING SYSTEM

See page 14 for more information.

5 MANUALLY SHIFTING GEARS*

With this feature, you can use the paddles on your steering wheel to manually shift your transmission. Pull either paddle on the steering wheel to activate manual shifting.

To change gears:

- Pull the right paddle (+) to upshift.
- Pull the left paddle (-) to downshift.

For more information and system operation, refer to the **Automatic Transmission** chapter of your *Owner's Manual*.

6 AUTOWIPERS*

The autowiper system turns the wipers on only when moisture is present on the windshield.


The wiper speed depends on how much moisture the system detects and the sensitivity setting.

7 PUSH BUTTON IGNITION

You can start your vehicle by pressing the **START STOP** button while pressing the brake pedal. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine automatically shuts down. Before this happens, a message appears in the instrument cluster display, allowing you time to override the shutdown feature.

Note: A valid remote control must be inside the vehicle for the ignition to start.



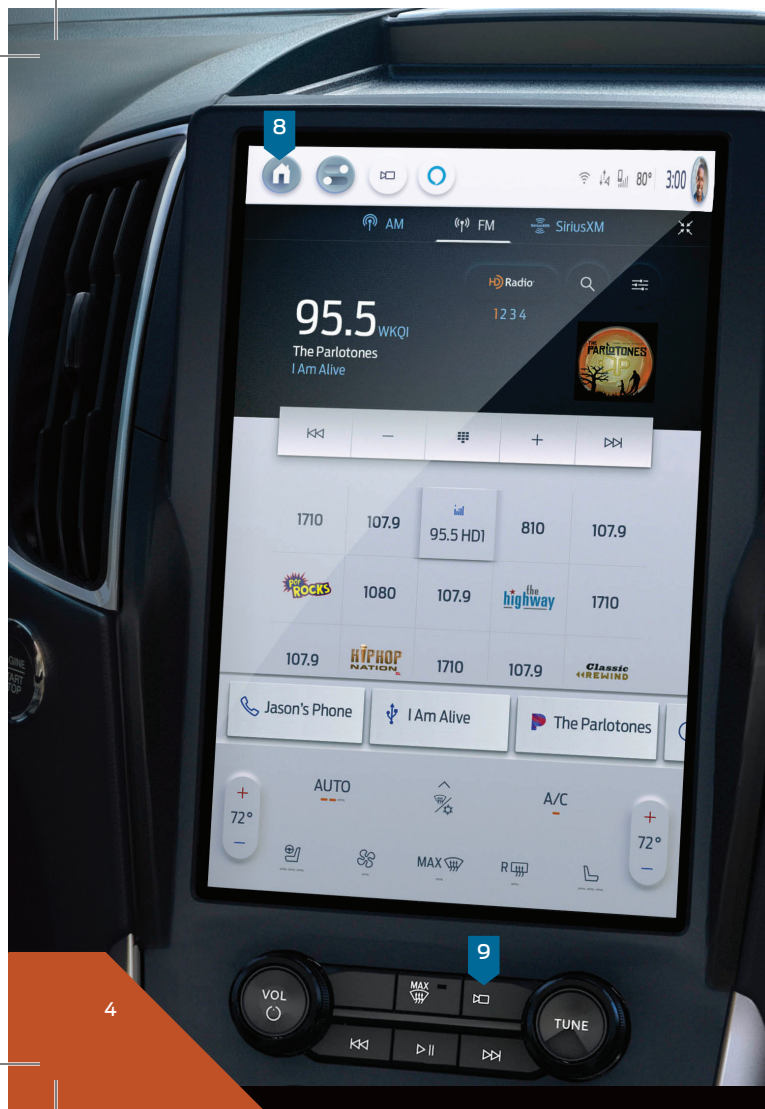

8 OWNER'S MANUAL

Select the application drawer  on the touchscreen and select the Owner's Manual icon  to view your Owner's Manual on the touchscreen.

9 180 DEGREE CAMERA*

Provides a video image of the area in front of or behind your vehicle.

The system:

- Allows you to see what is directly in front of or behind your vehicle.
- Provides cross traffic view in front of your vehicle.
- Provides visibility during parking maneuvers.

The camera button  is on the audio unit.

Press the camera button  to toggle between different views:

- **Normal Front View:** Provides an image of what is directly in front of your vehicle when your vehicle is in neutral (N) or drive (D).
- **Expanded Front View:** Provides an expanded 180 degree image of what is directly in front of your vehicle when your vehicle is in neutral (N) or drive (D).

Note: The front view camera switches off if your vehicle speed exceeds 6 mph (10 km/h). Switch the system back on using the camera button  once you are below the speed threshold.

See the *180 Degree Camera* chapter of your *Owner's Manual* for details.

*if equipped

INSTRUMENT PANEL

10 ELECTRIC PARKING BRAKE

The electric parking brake switch replaces the conventional parking brake. The switch is on the center console. To apply the electric parking brake, pull the switch up. The brake system warning lamp flashes, then illuminates to confirm that you applied the parking brake. To manually release the electric parking brake, switch the ignition on, press the brake pedal and then press the switch down. The brake system warning lamp turns off. Your vehicle automatically releases the parking brake when the driver door is closed, the vehicle is shifted into gear and you press the accelerator.

The electric parking brake audible warning sounds when the parking brake is on and your vehicle is moving. If the warning tone continues after you have released the parking brake, this indicates a malfunction. Have your vehicle checked as soon as possible.

11 ACTIVE PARK ASSIST*

Active park assist uses sensors to detect available parallel or perpendicular parking spaces and automatically steers the vehicle (hands-free) when you control the accelerator, gearshift and brakes. To use active park assist, press the  button to bring up full screen notifications.

Then use the soft keys on the touchscreen to switch between Parallel Park In, Perpendicular Park In or Parallel Park Out parking modes.

Use the turn signal to select from which direction you want to begin searching, either to the left- or right-hand side of your vehicle.


To enter a parallel parking space, drive your vehicle approximately 3 ft (1 m) away from and parallel to the other parked vehicles when searching for a parking space. A tone sounds and a message appears in the instrument cluster display when active park assist finds a suitable parking space. To park, press and hold the brake pedal, then release the steering wheel and shift into reverse (R). Use the accelerator and brake to control your vehicle's speed when parking. You are responsible for stopping your vehicle. Active park assist is a multi-step process and requires you to shift the transmission multiple times. Follow the on-screen instructions until parking is complete.

You can slow down your vehicle at any time by pressing the brake pedal.

To leave a parallel parking space when your vehicle is at rest, press the active park assist button and select parallel park exit. Use the turn signal to choose the direction to exit the space. Press and hold the brake pedal. Release the steering wheel and shift into the instructed gear. Use the accelerator and brake to control your vehicle's speed when exiting the parking space. You are responsible for stopping your vehicle. Active park assist is a multi-step process and requires you to shift the transmission multiple times. Follow the on-screen instructions until operation is complete. After the system drives your vehicle to a position where you can exit the parking space in a forward movement, a message appears instructing you to take full control of your vehicle. For complete information, refer to the *Active Park Assist* chapter of your *Owner's Manual*.



*if equipped

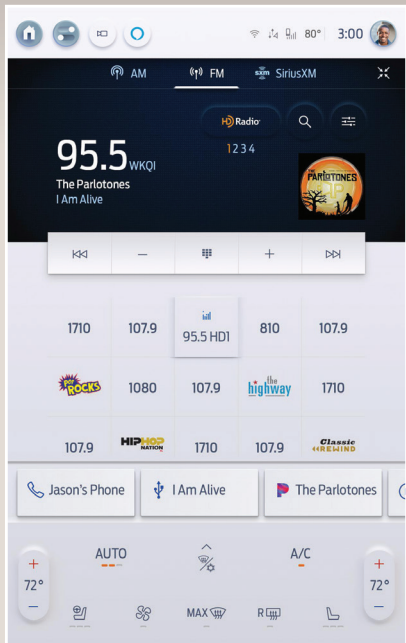

Speed-Restricted Features

For your safety, some functions of the system are speed dependent. Some features of this system may be too difficult to use when your vehicle is moving so they are restricted from use unless your vehicle is stationary. Other features are limited to when your vehicle is traveling at speeds under 5 mph (8 km/h).

Connecting Your Phone

Switch on **Bluetooth®** on your device to begin pairing. Check the compatibility of your device on the local Ford website.

To add a phone:

1. Press on the touchscreen.
2. Press **Phone List**.
3. Select **Add Phone**.
4. Follow the on-screen instructions to pair your device.

Phone Menu

From the phone menu, you can check your messages or email, adjust phone settings, change devices or place your device in Do Not Disturb mode. The Do Not Disturb mode rejects all incoming calls and switches off ringtones and alerts.

Making Calls

To make calls, select from your contacts, recent calls, favorites or dial the number on the phone keypad.

Receiving Calls

To accept the call, select **Accept** on the touchscreen or press the phone button on the steering wheel.

To reject the call, select **Reject** on the touchscreen.

During a Phone Call

When you take a phone call, the screen displays the contact's name and number, the call duration and the phone signal strength and battery. You can also select End Call, Keypad, Mute or Privacy during the call. Selecting privacy transfers the call to your cell phone.

Text Messages

The system can receive and notify you of text messages. You can use the touchscreen to select to hear or see the text messages, call the sender or reply to the text message. For more information, see the **Phone** chapter of your *Owner's Manual*.

Apps

The first time you start an app through the system, you could be asked to grant certain permissions. Some apps work with no setup. Others require you to configure some personal settings before you can use them. To access the apps, select to access the application drawer.

Apple CarPlay® And Android Auto™

To use Apple CarPlay and Android Auto, pair your device and follow the instructions on the touchscreen. Certain system features are not available when you are using Apple CarPlay or Android Auto.


Android Auto may need to be enabled from the Settings menu. You can switch Apple CarPlay or Android Auto off through the Settings menu. See the **Apps** chapter of your *Owner's Manual* for more information.

Vehicle Software Updates

This introduces new features and provides updates to the vehicle's software systems. You can update your vehicle system wirelessly by making sure Vehicle Connectivity and Automatic System Updates are switched on. When an update is available, tap the notification icon and follow the on-screen prompts.

To make sure you receive all updates, switch automatic updates on, set a recurring schedule and connect to Wi-Fi. Updates may take longer if not connected to Wi-Fi, or may not download at all. Your vehicle may be able to receive drivable software updates, non-drivable software updates or both. Drivable software updates happen during normal vehicle usage and require limited input from you. You are notified on your touchscreen and connected device prior to a non-drivable update. Most updates complete in less than 30 minutes, although some updates could take up to a few hours.



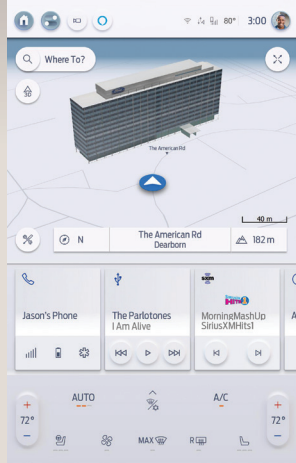

Navigation

You can set your destination using the text entry or map screen. Using text entry, you can enter your destination using the keyboard. Press **Search** and select the destination from the list on the screen. Press **Start** to begin navigation. Using the map screen, you can press and hold a location on the map to place a pin. Press the **▲** to begin the route guidance. Through the menu button, you can change the format of the map, switch live traffic on and off, update the map and navigate to a recent destination or saved destination.

During route guidance, you can adjust the guidance prompt volume by turning the volume control when a guidance prompt plays. To repeat an instruction, press the turn indicator. To cancel route guidance, press the **✕** button.

Connected Vehicle

A connected vehicle has technology that allows your vehicle to connect to a mobile network and to access a range of features. When used in conjunction with the FordPass App, this technology could allow you to monitor and control your vehicle further, for example, checking the tire pressures, the fuel level and the vehicle location. For additional information, refer to the local Ford website.

The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive

automatic software updates and send vehicle-related information to us, for example, diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example, cell phone network tower identification. For additional information about our privacy policy, visit www.FordConnected.com or refer to your local Ford website.




COMFORT

HEATED AND COOLED FRONT SEATS*

Press the or seat icon repeatedly to cycle through the settings and off. More lights indicate warmer or cooler settings.

MEMORY FUNCTION*

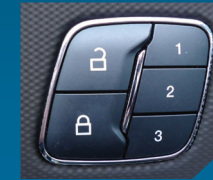

The memory function allows a one-touch recall of personalized memory features, including the driver seat, power mirrors and power steering column*. Use the memory controls on the driver door to program and then recall memory positions. To program a position, switch the ignition on.

Adjust the memory features to your desired positions. Press and hold the desired preset button until you hear a single tone. You can now use these controls to recall the set memory positions. You can also program your memory seat to your remote control. That way, when you unlock your door with the remote control, your memory features automatically move into your saved positions.

See the *Memory Function* chapter in your *Owner's Manual* for more details.

FRONT FOG LAMPS

Press to switch the fog lamps on or off. When the lighting control is in the autolamps position, you cannot switch the fog lamps on unless the headlamps are on.

ADAPTIVE FRONT LIGHTING

The headlamp beams move in the same direction as the steering wheel, providing more visibility when driving around curves. To switch adaptive front lighting on and off, use the instrument cluster controls on the steering wheel.

1. Select **Settings**.
2. Select **Vehicle**.
3. Select **Lighting**.
4. Switch **Adaptive Headlamps** on or off.

Set the lighting control to the autolamps position to use the adaptive front lighting.



*if equipped

COMFORT

MOONROOF*

The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time.

- ↑ Press and release to open the moonroof. The moonroof stops short of the fully opened position. To fully open the moonroof, press and release the control again.
- ↓ Press and release to close the moonroof. The moonroof stops short of the closed position. To close the moonroof, press and hold the moonroof close control until the moonroof is fully closed.
- ☁ Press and release to vent the moonroof.
- ☂ Press and release to open the sunshade.
- ☂ Press and release to close the sunshade.

CLIMATE CONTROL *

Press the **AUTO** button to switch on automatic operation and set your preferred temperature using the left-hand side (+) or (–) button. The system adjusts fan speed, air distribution, air conditioning operation, and selects outside air or recirculated air to heat or cool the vehicle to maintain the desired temperature.

MYKEY™

MyKey allows you to program certain driving restrictions to promote good driving habits. You can program things like speed reminder and limited volume levels. For complete information, refer to the **MyKey** chapter in your **Owner's Manual**.

**if equipped*

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your remote control.

To start, press  and then press  twice within three seconds. Before driving your vehicle, you must press the push button ignition switch on the instrument panel while applying the brake pedal. You can also turn your vehicle off from outside after a remote start by pressing  once. If your vehicle is equipped with remote feedback, an LED on the remote control provides status feedback of remote start or stop commands. A solid green light means the remote start or extension was successful, while a blinking red light means the remote start or stop has failed. A solid red light means that the remote stop was successful and the engine is off. When the system is waiting for a status update from the vehicle, you see a blinking green light.

WIRELESS ACCESSORY CHARGER*

This feature supports Qi wireless charging-compatible devices. You can only charge one device at a time on the charging area. You can charge a device if the vehicle is running, in accessory mode or if SYNC is on. Keep the charging area clean and remove foreign objects prior to charging. To begin charging your device, place the device in the port with the charging side down. The charging stops after your device reaches a full charge. For more information, see the **Wireless Accessory Charger** chapter of your **Owner's Manual**.



CONVENIENCE

**if equipped*

CONVENIENCE

EXIT WARNING

This feature uses radar sensors to help you determine when it is safe to exit your vehicle. Exit warning detects traffic as it approaches your vehicle from the rear and crosses into the area to the left and right side of the vehicle and slightly past a fully open door.

When exit warning detects traffic on one side, the corresponding alert indicator in the exterior mirror is illuminated. If exit warning alert or the optional exit warning prevention are active, the same alert indicator flashes.

Depending on your vehicle's features, exit warning prevention may stop the door latch from opening when traffic is detected on the same side. The inner door handle is disabled, and the door remains closed. Once traffic has cleared, the inner door handle is automatically enabled and the occupant can open the door to exit the vehicle.

KEYLESS ENTRY

You can unlock and lock the vehicle without taking the remote control out of your pocket or bag when your remote control is within 3 ft (1 m) of your vehicle.

To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful not to touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the door for approximately one second, being careful not to touch the unlock sensor on the back of the door handle at the same time.

AUTO-START-STOP

The system helps reduce fuel consumption by automatically shutting off and restarting the engine when your vehicle is stopped. The engine restarts automatically when you release the brake pedal.

In some situations your vehicle may restart automatically, for example, to maintain interior comfort or recharge the battery.

To switch this feature off, press the **(A)** button. The button lights. Press the **(A)** button again to restart the feature, or restart the vehicle. See the **Auto-Start-Stop** chapter in your **Owner's Manual** for more details.



REMOTE CONTROL ICONS

- Press  once to lock all doors.
- Press  once to unlock all doors.
- Press  to sound the panic alarm. Press again or switch on the ignition to turn off.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the turn signals flash.

REAR POWER FOLDING SEATS*

The controls are on the left-hand side (accessible from the liftgate area). Press and hold the top control to lower the left seat backrest or the bottom control to lower the right seat backrest. To unfold the seat backrest, rotate each seat backrest up until it latches into the upright position. The seat backrest clicks when it locks into position.



Note: This feature is operational when the vehicle is in park (P) and the liftgate has been open for less than 10 minutes.

POWER OUTLETS*

USB ports and power outlets are available throughout your vehicle. Not all USB ports in your vehicle have data transfer capabilities and may only be used for charging. The power outlet is on the instrument panel or the rear of the center console. Power outlets have indicators that illuminate to let you know the status of the system.

POWER LIFTGATE*

You can use either of the following power features to open or close your liftgate:

- Press the  button on the instrument panel.
- Press the remote control  button twice within three seconds.

Note: Allow the power system to open the liftgate after pressing the control. Manually pushing or pulling the liftgate may activate the system's obstacle detection feature and stop the power operation.

HANDS-FREE FEATURE*

To Open Your Liftgate Hands-Free While You Are at the Liftgate

1. Make sure you have a passive key within 3 ft (1 m) of the liftgate.
2. Move your foot under and away from the rear bumper detection area in a single-kick motion. Do not move your foot sideways or the sensors may not detect the motion. Kick between the exhaust and hitch if your vehicle is equipped with a hitch.

Any movement that mimics a kick can cause the hands-free liftgate to activate. Switch the power liftgate off through your vehicle settings or keep the passive key away from the rear bumper detection area. Refer to your **Owner's Manual** for additional information.





PARKING AIDS*

With the front, rear and side parking aids, a warning tone sounds if there is an obstacle near either bumper or near the sides of your vehicle. The warning tone increases in frequency as the object gets closer. The front sensors are active when the gearshift is in any position other than park (P) and traveling at a low speed; the rear sensors activate when the vehicle is in reverse (R) and traveling less than 5 mph (8 km/h). The side sensor coverage is up to 24 in (60 cm) from the sides of your vehicle. The system provides object distance indication through the center display. As the distance to the object decreases, the indicator waves and the lines move toward the vehicle icon. Visual indication remains on when the transmission is in reverse (R).

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

LANE KEEPING SYSTEM

When you switch the system on and an unintentional drift out of your lane is detected, the system notifies or assists you to stay in your lane through the steering system and instrument cluster display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert mode is selected.

You can switch the system on or off by pressing the  button on the turn signal. Refer to the *Lane Keeping System* chapter of your *Owner's Manual* for system operation and limitations.

DRIVER ALERT

The system automatically monitors your driving behavior using various inputs, including the front camera sensor. If the system detects that your driving alertness is reduced below a certain threshold, the system alerts you using a message in the instrument cluster display.

Switch the system on or off using the instrument cluster display. When activated, the system monitors your alertness level based upon your driving behavior in relation to the lane markings and other factors.

See the *Driver Alert* chapter in your *Owner's Manual* for more information.

EVASIVE STEERING ASSIST*

When your vehicle is rapidly approaching a road user that is stationary or traveling in the same direction as you, evasive steering works in conjunction with the pre-collision assist system to apply additional steering torque to help you steer around the road user. After you pass the road user, the system applies steering torque in the opposite direction to encourage you to steer back into the lane. The system deactivates after you fully pass the road user.

**if equipped*

PRE-COLLISION ASSIST

If your vehicle is rapidly approaching another stationary vehicle, a vehicle traveling in the same direction as yours or a pedestrian within your driving path, the system is designed to provide three levels of functionality:

Alert: When active, a flashing visual warning appears and a warning tone sounds.

Brake support: The system helps reduce the impact speed by preparing the brakes for rapid braking. Brake support does not automatically apply the brakes. If you press the brake pedal, the system could apply additional braking up to maximum braking force, even if you lightly press the brake pedal.

Automatic Emergency Braking: This may activate if the system determines that a collision is imminent.

See the *Pre-Collision Assist* chapter in your *Owner's Manual* for safety information, more details and limitations.

REAR VIEW CAMERA

The rear view camera system provides a video image of the area behind the vehicle. The image appears when the transmission is in reverse (R) and uses a variety of guidelines to alert you of your proximity to objects. If your vehicle is equipped with the obstacle distance indicator, the system provides an image of your vehicle and the red, yellow and green sensor zones. For more information about the rear view camera, see the *Rear View Camera* chapter of your *Owner's Manual*.

GLOBAL OPENING

You can open the front windows for a short time after you unlock your vehicle with the remote control. After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the remote control lock or unlock button to stop movement.

BLIND SPOT INFORMATION SYSTEM AND CROSS TRAFFIC ALERT

The blind spot information system uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). Both systems illuminate an indicator in the exterior mirror on the side of the vehicle from which the approaching vehicle is coming. Cross traffic alert also sounds tones and displays an arrow in the instrument cluster display to warn you from which direction vehicles are approaching.

Note: Visibility aids do not replace the need to watch where the vehicle is moving.

Refer to your *Owner's Manual* for safety information, more details and system limitations.

REFUELING



When refueling your vehicle:

1. Make sure the ignition is switched off.
2. Open the fuel door.
3. Insert the fuel pump nozzle up to the first notch. Keep the fuel pump nozzle resting on the fuel tank filler pipe.
4. Make sure you keep the fuel pump nozzle in a level position when refueling or it may impact the flow of the fuel. Improper positioning can also cause the fuel pump to shut off before the fuel tank is full.
5. When you finish refueling, slowly raise and remove the fuel pump nozzle. Close the fuel door.

If you are refilling your tank from a fuel container, make sure you use the fuel filler funnel included with your vehicle. Using an aftermarket funnel may not work with the capless system and could cause damage to your vehicle. For more information and for your fuel filler funnel location, see the **Fuel and Refueling** chapter of your *Owner's Manual*.

FUEL TANK CAPACITY AND FUEL INFO

For vehicles with front-wheel drive, the fuel tank capacity is 18.4 gal (69.7 L). For vehicles with all-wheel drive, the fuel tank capacity is 18.5 gal (70 L). We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage, such as trailer towing. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87. Do not use any other fuel because it could damage or impair the emission control system.

CONFIGURABLE DAYTIME RUNNING LAMPS*

When you switch the feature on in the instrument cluster display, the daytime running lamps turn on when you are driving, the lighting control is in the autolamps position  and the headlamps are off. See the **Exterior Lighting** chapter in your *Owner's Manual* for complete information.

TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to **Towing the Vehicle on Four Wheels** in the **Towing** chapter of your *Owner's Manual*.

TILTING HEAD RESTRAINTS*

The front head restraints tilt for extra comfort. To tilt the head restraint, do the following:

1. Adjust the seat backrest to an upright driving or riding position.
2. Pivot the head restraint forward toward your head to the desired position.

After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, un-tilted position.

**if equipped*

TIRE PRESSURE MONITORING SYSTEM

The tire pressure monitoring system allows you to view the tire pressure readings through the instrument cluster display. When one or more of your tires are underinflated, your vehicle turns on the low tire pressure warning light  in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Tire Pressure Monitoring System** chapter of your *Owner's Manual* for more information.

TIRE SEALANT AND INFLATOR KIT*

The tire sealant and inflator kit consists of an air compressor to re-inflate the tire and a canister of sealing compound that effectively seals most punctures. This kit provides a temporary tire repair allowing you to drive your vehicle up to 120 mi (200 km) at a maximum speed of 50 mph (80 km/h) to reach a tire service location. The temporary mobility kit contains enough sealant compound in the canister for one tire repair only. See your authorized Ford dealer for replacement sealant canisters.

**if equipped*

The kit is located under the load floor in the rear of the vehicle.

For complete information on using the tire sealant and inflator kit, refer to the **Tire Sealant and Inflator Kit** chapter of your *Owner's Manual*.

LOCATION OF SPARE TIRE AND TOOLS*

Your spare tire and tools are under the carpeted load floor panel. A dissimilar spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the **Changing a Road Wheel** chapter of your *Owner's Manual*.

