



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of publication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, consult your Owner's Manual.

LEARN MORE ABOUT YOUR NEW VEHICLE

United States

Ford Customer Relationship Center

1-800-392-3673 (FORD)
TDD for the hearing impaired:
7-1-1 (where offered by your
telephone service provider)

owner.ford.com



@FordService

Canada

Ford Customer Relationship Centre

1-800-565-3673 (FORD)
TDD for the hearing impaired:
7-1-1 (where offered by your
telephone service provider)

ford.ca



@FordServiceCA

Scan the country-appropriate code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



owner.ford.com



ford.ca

WARRANTY INFORMATION

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of owner.ford.com. (United States)

For Canada, visit ford.ca/warranty.

For Fleet, Limo/Livery/Hearse vehicles:

View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, fleet.ford.com/limo. (United States only)



October 2023
First Printing
Litho in U.S.A.
RL3J19G217 GA



2024

F-150 LIGHTNING

QUICK REFERENCE GUIDE

VOICE INTERACTION

The digital assistant allows you to control vehicle features using conversational requests.

TO BEGIN A VOICE INTERACTION, YOU CAN EITHER:

- Press the voice interaction  button on the steering wheel.
- Say the selected wake word.

VOICE COMMAND EXAMPLES

To see examples of what voice commands you can use with different features:

1. Press the  button on the touchscreen.
2. Press **Ford Assistant**.
2. Press **Voice Command Help**.
3. Select a feature.

FORD ASSISTANT SETTINGS

To access the settings menu:

1. Press the  button on the touchscreen.
2. Press **Ford Assistant**.

From the settings menu you can do the following:

- Switch listen for wake word on or off.
- Set the preferred wake word.
- Switch advanced mode on or off.
- Switch phone confirmation on or off.
- Switch the commands list on or off.
- View the commands help menu.

ADDITIONALLY:

Some voice commands may require your modem to be enabled. For more information about your vehicle's modem, see the *Connected Vehicle* chapter of your *Owner's Manual*.

TIPS:

- When using voice commands make sure that you wait for the tone before giving the voice command.
- When saying the name of a contact, track or artist make sure that you say the name exactly as it appears on your device.

For more information about using voice interaction and for troubleshooting information, see the *Owner's Manual* in your vehicle's touchscreen.

Some services may not be available in your area. Refer to your *Owner's Manual* in the touchscreen, visit the website or call the toll-free number.

FOR U.S. CUSTOMERS:

Visit owner.ford.com or call 1-800-392-3673.

FOR CANADIAN CUSTOMERS:

Visit syncmyride.ca or syncmaroute.ca or call 1-800-565-3673.




TABLE OF CONTENTS

2	15 INCH CENTER DISPLAY OVERVIEW
3	COMFORT
4	ELECTRIC VEHICLE INFORMATION
5	CONVENIENCE
6–8	FUNCTION
9	ESSENTIAL INFORMATION

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any handheld device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

15 INCH CENTER DISPLAY OVERVIEW*

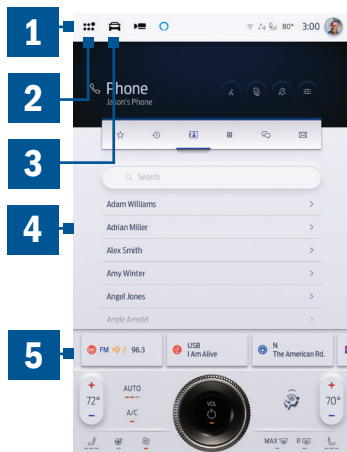

1 STATUS BAR AREA

The bar on top of the display contains a status area. This area includes items like cell phone signal strength and text message notifications, and an action area. The action area contains status that require your input such as vehicle system updates.

2 APP LAUNCHER

Press to see a list of apps. Select an app to open it.

3 SETTINGS

Press to access settings for a list of features.

4 OPEN APP AREA

This is the main app area where apps are launched and you can utilize the full functionality of the chosen app.

5 APP BAR

Here you can see applications, with limited content. When you select one of these cards, the app displays in the app area with full functionality. Swipe down on a card to remove it from the app bar.

SPEED-RESTRICTED FEATURES

For your safety, some settings and features are not available while the vehicle is in motion at or above 5 mph (8 km/h).

CONNECTING YOUR PHONE

1. Make sure *Bluetooth*® is enabled on your device.
2. From the settings menu, press **Phone List**.
3. Select **Add Phone**.
4. Follow the instructions on the screen to pair your device.

APPLE CARPLAY AND ANDROID AUTO

To use Apple CarPlay and Android Auto, pair your device and follow the instructions on the touchscreen. You can switch Apple CarPlay or Android Auto off through the settings menu. See the *Apps* chapter of your *Owner's Manual* for more information.

APPS

The first time you start an app through the system, you could be asked to grant certain permissions. Some apps work with no setup. Others require you to configure some personal settings before you can use them. To access the apps, select the apps option on the application drawer.

COMFORT

HEATED AND VENTILATED FRONT SEATS*

To operate the heated feature, press the seat symbol  on the touchscreen to switch on the heated seats. Rotate the knob to control the heat intensity. The more indicators that display, the warmer the temperature of the seat.

To operate the ventilated feature, press the seat symbol  on the touchscreen to switch on the cooled seats. Rotate the knob to control the fan speed. The more indicators that display, the higher the fan speed. The ventilated seats function only when the battery is running.



PERSONAL PROFILES*

You can create multiple personal profiles for each driver to personalize the vehicle's settings. You can create one profile for each preset memory seat button along with a guest profile. A profile can be recalled using the touchscreen, the selected preset button, a linked remote control or mobile device.

Use the touchscreen to create a personal profile.

1. Switch the vehicle on and make sure the transmission is in park (P).
2. From the settings menu, press **Personal Profiles**.
3. Press **Add New Profile**.
4. Follow the instructions on the display.

You can save preset memory positions for up to three remote controls by assigning a remote control to a personal profile using the touchscreen.

MEMORY FUNCTION*

The memory function allows a one-touch recall of personalized memory features, including the driver seat, power mirrors, adjustable pedals* and power steering column*. Use the memory controls on the driver door to program and then recall memory positions. To program a position, switch the vehicle on. Adjust the memory features to your desired positions. Press and hold the desired preset button until you hear a single tone. A confirmation message appears in the instrument cluster display. You can now use these controls to recall the set memory positions. You can also program your memory seat to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions.

See the **Memory Function** chapter in your *Owner's Manual* for more details.

TRAILER HITCHING ASSISTANCE

Trailer hitching assistance helps the driver align the vehicle hitch ball to a trailer coupler. Trailer hitching assistance uses the rear view camera, radar, parking aid sensors and external rear lighting to detect your trailer, and controls the steering, shifting, braking and acceleration to align the hitch ball with the trailer coupler. Press the **Pro Trailer** button to switch the system on and off.



ELECTRIC VEHICLE INFORMATION

LOCATING THE CHARGE PORT

The charge port is on the left-hand side of the vehicle. Press and release the center rearward edge of the charge port door to open.

CHARGING THE HIGH VOLTAGE BATTERY

To charge the high voltage battery with the mobile power cord:

1. Unwrap the mobile power cord completely before charging.
2. Put your vehicle in park (P).
3. Plug the connector into the charger control box.
4. Plug the connector into the wall outlet.
5. Confirm that the mobile power cord indicators illuminate.
6. Press and release the center right-hand edge of the charge port door to open.
7. Plug the charge coupler into the charge port receptacle on your vehicle.

When the handle is properly engaged and clicked in, the light ring illuminates. This indicates the beginning of a normal charge cycle. Charging stops when complete or when paused due to charge settings or charge station actions. Refer to the *Charging Your Vehicle* chapter in your *Owner's Manual* for more information.

DISCONNECTING THE CHARGING COUPLER WHEN USING THE AC CHARGER:

Do not pull the wall plug from the wall or the connector from the mobile power cord control box while your vehicle is charging. Doing so could damage the outlet and the cord.

1. Press the latch on the charger coupler and remove it from the vehicle charge port.
2. Remove the connector plug from the wall outlet.
3. Press the center right-hand edge of the charge port door to close.

WHEN USING A DC CHARGER:

Do not attempt to remove the charge coupler before it is unlocked or use any kind of tool to try and remove a locked charge coupler.

1. Push the coupler unlock button on the light ring.

2. Press the latch on the charge coupler and remove it from the vehicle charge port.
3. Close the dust cap for the lower connectors.
4. Press the center right-hand edge of the charge port door to close.

NOTE: You can also unlock the cord through the vehicle touchscreen. Refer to the *Charging Your Vehicle* chapter in your *Owner's Manual* for more information.

CHARGE PORT INDICATORS

Divided into five zones, the charge status indicator displays the state of charge in 20 percent increments:

- When one zone is pulsing, the charge is between 0-20 percent.
- When the second zone starts pulsing, the charge is between 20-40 percent.
- When the third zone starts pulsing, the charge is between 40-60 percent.
- When the fourth zone starts pulsing, the charge is between 60-80 percent.
- When the fifth zone starts pulsing, the charge is between 80-100 percent.
- When all zones illuminate, the charge is 100 percent.

When charging stops, the charge status indicator shows all the completed zones solidly lit blue for 30 seconds before turning off.

CONVENIENCE

BLUECRUISE*

BlueCruise is an advanced driver assistance feature that enables hands-free highway driving on divided highways across North America.

BlueCruise Setup:

1. Enable BlueCruise through the touchscreen in the **Driver Assistance** menu by selecting **Cruise Control** and **Lane Centering with Hands-Free**.
2. Make sure that lane centering is turned on. If not, press the lane centering button  on the steering wheel to enable it.

Using BlueCruise on the road:

1. Activate BlueCruise by pressing the Adaptive Cruise Control  button on the steering wheel.
2. When BlueCruise is active and hands-free driving mode is available, the BlueCruise indicator changes to blue.
3. You can then take your hands off the wheel, while keeping your eyes on the road.

While in use, the system monitors your eyes and head position to detect if you are distracted. If the system determines you are distracted, it reminds you to watch the road with prompts on the instrument cluster and a chime. Eventually, if you do not respond to the warnings, the vehicle slows to a low speed. When an external condition cancels BlueCruise, for example, no lane markings available, a tone sounds

and a message appears in the instrument cluster. The icon in the cluster changes to a wheel with hands on  indicating that you should put your hands back on the wheel.

BlueCruise Features:

Vehicles equipped with the latest version of BlueCruise have additional hands-free capability, including:

- Lane Change Assist – tap your turn signal to initiate a hands-free lane switch.
- In-Lane Repositioning – helps provide more space by subtly shifting away from vehicles in adjacent lanes.

For additional system information, settings and limitations, see your *Owner's Manual*. For more information about BlueCruise and available versions, visit ford.com/bluecruise.

BlueCruise requires a Connected Service plan that provides regular map updates, FordPass App, and modem activation. Ford BlueCruise-equipped vehicles come with either a 90-day trial or a 3-year BlueCruise Connected Service plan, after which purchase is required. See ford.com/bluecruise for BlueCruise version details. See the Connected Services section of your Ford Account for your BlueCruise Connected Service plan status and available plan options.

EXTERIOR ZONE LIGHTING

You can illuminate the exterior of your truck by selecting from several exterior zone lighting areas. To use exterior zone lighting, from the apps menu, press **Zone Lighting**. You can toggle **All Zones** on to switch all exterior lighting zones on. Use the touchscreen to switch individual zones on or off. You can also switch exterior lighting on and off or adjust the settings.

ONBOARD GENERATOR

The vehicle functions as a portable generator and can power devices that require up to the rating listed on the power outlet label. The power outlets are in the cabin, bed, and frunk of the vehicle. The power mode indicator on the touchscreen displays the power currently being used and the total amount of power available.

You can switch the outlets on and off through the touchscreen or by pressing the control button in the bed or frunk.



**if equipped*

FUNCTION

ONBOARD SCALES*

Onboard scales provides the estimated payload of your vehicle and warns when your vehicle is overloaded. Onboard scales uses sensors mounted to the suspension to calculate the vehicle's payload.

To use onboard scales select **Onboard Scales** from the Applications of the touchscreen.

Press **Passenger Load Reminder** to switch the load reminder on and off.

Press **Limit Alert** to switch on and off the external chime during overload.

SMART HITCH*

Smart hitch indicates if the trailers load is within the recommended range based on the weight of the trailer and its cargo.

To use smart hitch:

1. Select **Smart Hitch** from the Applications of the touchscreen.
2. Select your hitch type and choose **Quick Setup**.

Select **Loaded Trailer Weight** to set the total weight of the loaded trailer.

VEHICLE SOFTWARE UPDATES

You can update your vehicle system wirelessly by making sure Vehicle Connectivity and Automatic system Updates are switched on. When an update is available, tap the notification icon and follow the prompts on the screen.

To make sure you receive all updates, set a recurring schedule and connect to Wi-Fi. Updates may take longer if not connected to Wi-Fi, or may not download at all.

Your vehicle may be able to receive drivable software updates, non-drivable software updates or both. Drivable software updates happen during normal vehicle usage and require limited input from you. You are notified on your touchscreen and connected device prior to a non-drivable update. Most updates complete in less than 45 minutes, although some updates could take longer. Check your touchscreen or connected device for the most accurate estimated update time. You are notified of the status of the vehicle software update in the touchscreen and on your connected device.


Once you begin a non-drivable software update, there are features that do not operate until the update is complete. See the *Vehicle Software Updates* chapter of your *Owner's Manual* for requirements, limitations and additional instructions.

CENTER CONSOLE WORK SURFACE*

The interior work surface provides you with a location to work from. The work surface is available on the center console.

To access the work surface on the center console:

1. With the vehicle in park, press the stow button to fold down the selector lever. Press the button again to release the selector lever from the stow position to use.
2. Release the work surface using the latch by the rear console cup holders. Open the work surface. Fold the work surface to close.

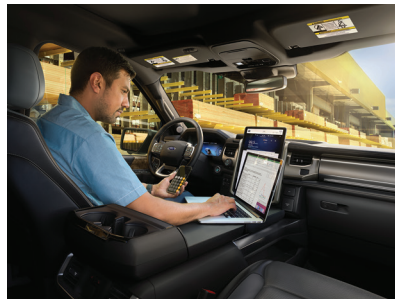

ONE PEDAL DRIVE

One pedal drive allows you to accelerate and brake using only the accelerator pedal. Pressing the accelerator down accelerates your vehicle, releasing pressure on the accelerator with your foot still on the pedal slows down your vehicle and releasing the pedal completely allows your vehicle to come to a complete stop.

One pedal drive can be switched on and off by selecting **Controls** in the settings menu, then selecting **Drive Modes**.

When one pedal drive is active, the  indicator displays in the instrument cluster.

NOTE: Releasing the accelerator pedal may not bring your vehicle to a complete stop on steep grades. Increased vehicle load or towing a trailer may reduce accelerator pedal ability to slow the vehicle.

REVERSE BRAKE ASSIST

Reverse brake assist uses sensors on the rear of your vehicle to reduce the impact or avoid a collision completely when you are in reverse (R). The system applies the brakes for a short period of time when an event occurs. A message and warning indicator appear when the system applies the brakes. Take action as soon as you notice the brakes apply.

To switch reverse braking assist on or off, select **Driver Assistance** from the settings menu then switch **Reverse Brake Assist** on or off.

Refer to the *Reverse Brake Assist* chapter in your *Owner's Manual* for more information.



**if equipped*

FUNCTION

CONNECTED VEHICLE

A connected vehicle has technology that allows your vehicle to connect to a mobile network and for you to access a range of features. When used in conjunction with the FordPass app, it could allow you to monitor and control your vehicle further, for example, checking the tire pressures or the vehicle location. For additional information, refer to the local Ford website.

The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example, diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example, cell phone network tower identification.

For additional information about our privacy policy, visit www.FordConnected.com or refer to your local Ford website.

PHONE AS A KEY

Phone as a key allows you to use your phone in place of a remote control. You can use your phone for the following:

- Remote locking and unlocking.
- Passive entry and exit.
- Passive start and drive the vehicle.
- Remote start.
- Memory function recall.

To program your device to use phone as a key:

1. Visit your device's app store to download the FordPass app.
2. Create a new account or sign in to an existing account on the FordPass app.
3. Add the vehicle identification number to your account and follow the prompts in the FordPass app to complete the Sync Connect Authorization process.
4. After the authorization is complete, you can set up phone as a key following the prompts in the FordPass app.
5. After phone as a key is set up, you can set up the backup start passcode by following the prompts on your touchscreen.

OPENING AND CLOSING THE FRUNK

You can open the frunk multiple ways:

- Press  on the remote control twice within three seconds.
- Press the  button on the instrument panel.
- Using the touchscreen, press **Controls** from the settings menu then press the frunk  icon.
- Using the keyless entry keypad, enter the factory-set code or your personal code, then press **7-8** on the keypad within five seconds.

You can press the same button on the remote, instrument panel or frunk control button to close the frunk. A warning tone sounds when the frunk opens or closes.



ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM

The tire pressure monitoring system allows you to view the tire pressure readings through the instrument cluster display. When one or more of your tires are under-inflated, your vehicle illuminates the low tire pressure warning light (!) in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Tire Pressure Monitoring* chapter of your *Owner's Manual* for more information.

EMERGENCY TOWING

If your vehicle becomes inoperable without access to wheel dollies or a vehicle transport trailer, it can be flat-towed with all wheels on the ground, under the following conditions:

- Your vehicle is facing forward for towing in a forward direction.
- You switch Emergency Tow on.
- Maximum speed is 35 mph (56 km/h).
- Maximum distance is 50 mi (80 km).

For additional details and instructions, see the *Towing your Vehicle* chapter of your *Owner's Manual*

LOCATION OF SPARE TIRE AND TOOLS

The spare tire is located under the vehicle, just forward of the rear bumper. The jack and tools are behind the passenger seat. A dissimilar spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* chapter of your *Owner's Manual*.

TOWING YOUR VEHICLE

You cannot recreationally tow your vehicle with all wheels on the ground. Doing so could cause vehicle or electric drive motor damage. You must recreationally tow your vehicle with all four wheels off the ground, such as when using a car-hauling trailer.

If your vehicle becomes inoperable and must be towed, see the *Towing your Vehicle* chapter of your *Owner's Manual* for instructions, limitations and precautions.

