



---

2024  
**QX50**

QUICK REFERENCE GUIDE

To view detailed instructional videos, go to  
[www.infinitiquickguide.com/2024/qx50](https://www.infinitiquickguide.com/2024/qx50)  
or snap this QR code with an appropriate  
QR code reader.



## Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

### • VEHICLE OWNER'S MANUAL

### • INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your INFINITI retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

### • INFINITI CONNECTION TO ROADSIDE ASSISTANCE

**1-800-662-6200 (option 1)**

As part of the INFINITI Total Ownership Experience®, Connection to Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

### • INFINITI ELITE® EXTENDED PROTECTION PROGRAM

**1-800-662-6200**

Infiniti Elite® Assurance Products provide you with quality, long-term protection and enhanced peace of mind.

### • INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-800-627-4437

For client support with your INFINITI Financial Services loan or lease.

### • INFINITI FINANCIAL SERVICES [www.infinitifinance.com](https://www.infinitifinance.com)

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

### • OWNER PORTAL 1-855-444-7244 <https://www.infinitiusa.com/owners>

Your INFINITI Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

### • INFINITI INTOUCH® 1-855-444-7244 [www.infinitiusa.com/intouch](https://www.infinitiusa.com/intouch)

This suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.

### • SiriusXM® RADIO 1-877-447-0011

For support with your SiriusXM® subscription.

### • InfinitiUSA.COM [www.infinitiusa.com/bluetooth](https://www.infinitiusa.com/bluetooth)

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

### • INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(Use the Quick Response (QR) code or URL on this page or on the back cover)

### • GENUINE INFINITI ACCESSORIES [www.infiniti-techinfo.com](https://www.infiniti-techinfo.com)

Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.

# Table of Contents

|                                                       |    |                                                               |    |
|-------------------------------------------------------|----|---------------------------------------------------------------|----|
| Cockpit Overview.....                                 | 1  | Connecting Your Cellular Phone or Device via Bluetooth® ..... | 17 |
| Instrument Panel.....                                 | 3  | Bluetooth® Streaming Audio.....                               | 17 |
| Meters and Gauges .....                               | 5  | Console box .....                                             | 18 |
| Shift Lever.....                                      | 7  | USB Connection Port Interface.....                            | 18 |
| Electronic Parking Brake.....                         | 8  | Apple CarPlay® .....                                          | 19 |
| Locking and Unlocking Your Vehicle.....               | 9  | Android Auto™ .....                                           | 20 |
| Memory Seat (if so equipped).....                     | 10 | Wireless Charging.....                                        | 21 |
| Outside Mirror Control Switch.....                    | 11 | Navigation System (if so equipped).....                       | 22 |
| HomeLink® Universal Transceiver (if so equipped)..... | 12 | INFINITI InTouch® Services (if so equipped).....              | 23 |
| Heater and Air Conditioner (automatic) .....          | 14 | Voice Recognition.....                                        | 24 |
| Wiper and Washer Switch .....                         | 15 | Forward Driving Aid Sensors .....                             | 25 |
| Opening the Liftgate.....                             | 16 | ProPILOT Assist .....                                         | 26 |
| Motion-Activated Liftgate (if so equipped).....       | 16 | Head Up Display (HUD) (if so equipped).....                   | 28 |

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch® Owner's Manual at [www.InfinitiUSA.com](http://www.InfinitiUSA.com).

## PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the **"Safety – Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

## Cockpit Overview



# Cockpit Overview

- ❶ Turn signal switch
- ❷ Bluetooth®/Center display multi-function control switches
- ❸ Wiper and washer switch
- ❹ ProPILOT Assist/Intelligent Cruise Control (ICC) switches
- ❺ Vehicle information display switches

# Instrument Panel



1

2

3

2

4

5

6

8

7

3

# Instrument Panel

- ❶ Upper touch-screen display/Navigation System (if so equipped)
- ❷ Automatic heater and air conditioner controls
- ❸ Lower touch-screen display
- ❹ Audio control panel
- ❺ Shift lever
- ❻ Push-button ignition switch
- ❼ Hood release
- ❽ Lower switch bank
  - Instrument brightness control
  - Front and rear sonar system switch (if so equipped)
  - Steering assist switch
  - Power liftgate switch
  - Headlight control switch
  - Fog light switch (if so equipped)
  - Head Up Display (HUD) (if so equipped)

## Meters and Gauges





# Meters and Gauges

- 
- 1 Engine coolant temperature gauge
  - 2 Odometer/Trip 1/Trip 2
  - 3 Shift lever indicator
  - 4 Vehicle information display
  - 5 Speedometer
  - 6 Fuel gauge

# Shift Lever

## TO PUT THE VEHICLE IN N (NEUTRAL):

The ignition switch must be in the ON position and the brake must be depressed.

### From P (Park) to N (Neutral) and D (Drive) to N (Neutral):

Without pressing the shift lever button, push the shift lever forward from the home position and hold for 0.5 seconds.

### From R (Reverse) to N (Neutral):

Without pressing the shift lever button, pull the shift lever backward from the home position (1 notch) and hold for 0.5 seconds.

After operating the shift lever, the shift lever returns to the home position by releasing your hand from the shift lever.

While in the **N (Neutral)** position, the **P (Park)** position is automatically engaged if the ignition switch is placed in the OFF position or if the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

## TO PUT THE VEHICLE IN R (REVERSE):

Press the button ①, and make sure the brake pedal is depressed, then push the shift lever forward past the point of resistance and release the shift lever.

## TO PUT THE VEHICLE IN D (DRIVE):

Make sure the brake pedal is depressed, then pull the shift lever back past the point of resistance and release the shift lever. Use this position for all normal forward driving.

## TO PUT THE VEHICLE IN P (PARK):

Make sure the vehicle is completely stopped and press the **P (Park)** button ②. If you switch the ignition off with the transmission in **D (Drive)**, **N (Neutral)** or **R (Reverse)**, the transmission automatically shifts into the **P (Park)** position. The **P (Park)** position is automatically engaged if the ignition is turned off or if the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



# Electronic Parking Brake

To apply the parking brake, pull the electric parking brake switch ① up, located below the instrument panel, regardless of the ignition switch position.

To release the parking brake, depress the brake pedal and push the electric parking brake switch ① down while the ignition is on. The parking brake will be automatically released when you depress the accelerator pedal as long as certain conditions are met, such as having your seatbelt fastened.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**



# Locking and Unlocking Your Vehicle

To use the door handles to lock and unlock your vehicle, make sure the INFINITI Intelligent Key is with you (that is, in your purse or bag).

## LOCKING THE VEHICLE

- To lock the vehicle with the INFINITI Intelligent Key, press the lock button (1).
- To lock the vehicle from the door, press the door handle request switch (2) on the handle.

## UNLOCKING THE VEHICLE

- To unlock the vehicle with the INFINITI Intelligent Key, press the unlock button (3).
- The driver's and fuel-filler doors unlock.
  - To unlock all doors, press the unlock button (3) again within 1 minute.
- To unlock the vehicle from the driver or passenger door, touch the one-touch unlock sensor (4).
- If selective door unlock is OFF, this unlocks all doors.
- If selective door unlock is ON, only the door you have touched will unlock.
  - To unlock all doors from the driver or passenger door, push the door handle request switch within 1 minute (2) before opening door.
- To unlock the vehicle from the rear doors, touch the one-touch unlock sensor.
  - All doors will unlock, even if selective door unlock is ON.



 
## SELECTIVE DOOR UNLOCK

To change the settings for the door locking and unlocking system, press the **MENU** button, then select the "Settings" key on the lower display followed by the "Comfort & Convenience" (5) key.



- To unlock all doors by touching the one-touch unlock sensor of the front door handles, select "Selective Door Unlock" to off.
- To disable unlocking by touching the one-touch unlock sensor of the door handle, select "Touch Sensitive Door Sensor".

Do not touch the unlock sensor or press the lock button while holding the key. The close distance to the door handle will cause the Intelligent Key system to have difficulty recognizing the Intelligent Key.

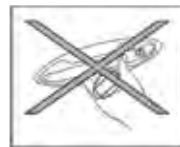

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


## Memory Seat (if so equipped)

 Two positions for the driver's seat, steering column (if so equipped) and outside mirrors can be stored in the memory seat system. To set a memory position:

1. The vehicle should be stopped while setting the memory.
2. Adjust the driver's seat, steering column (if so equipped) and outside mirrors to the desired positions using the adjusting switches for each feature.
3. Push the **SET** switch ①, and within 5 seconds, push the memory switch (**1** or **2**) ②. The indicator light for the memory switch you select will illuminate for approximately 5 seconds and a chime will sound when the memory is stored.

The driver's seat and steering column (if so equipped) will automatically move when the ignition is switched to OFF and the driver's door is opened to allow the driver to get in and out of the driver's seat more easily. "Lift Steering upon Exit" and "Slide Driver Seat Back on Exit" can be adjusted in the lower touch-screen display under "Comfort & Convenience."

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

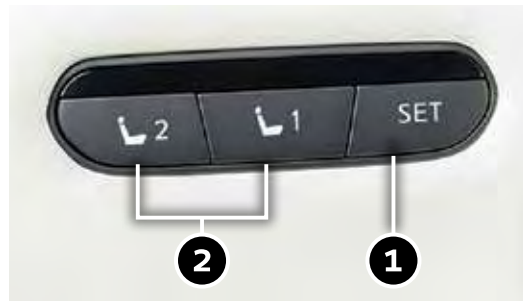

# Outside Mirror Control Switch

- To select the right or left side mirror, slide the control switch ① right or left.
- To adjust the mirror angle, move the directional control switch ② up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch ① to the center (neutral) position.

## POWER FOLDING OUTSIDE MIRRORS (if so equipped)

- To fold the mirrors, push the  switch ③.
- To open the mirrors, push the  switch ④.
- If mirrors are manually operated or bumped, the mirror can become loose at the pivot point. To correct electronic mirror operation, cycle the mirrors by pushing  switch ③ until completely closed, then push  switch ④ until the mirrors are in the open position.

## AUTOMATIC FOLDING OUTSIDE MIRRORS (if so equipped)

- The outside mirrors fold automatically when the vehicle is locked with the intelligent Key or by using the request switch.
- Select  switch ④ to unfold the mirror automatically when the ignition switch is placed in the on position or when the vehicle is unlocked with the intelligent Key or by using the request switch.

## REVERSE TILT-DOWN FEATURE (if so equipped)

The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle when the mirror control switch is in either the **L** or **R** position. The mirrors automatically return to their original position when you shift out of **R (Reverse)**. The outside mirror surfaces will return to their original position when one of the following conditions has occurred:

- The shift lever is moved to any position other than **R (Reverse)**.
- The outside mirror control switch is set to the neutral or center position.
- The ignition switch is placed in the OFF position.

## AUTOMATIC ANTI-GLARE OUTSIDE MIRROR (if so equipped)

The outside mirror will automatically dim during nighttime conditions to reduce the glare from the headlights of trailing vehicles. The automatic anti-glare feature operates only when the ignition switch is placed in the ON position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



# HomeLink® Universal Transceiver (if so equipped)

The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, gates, home and office lighting, entry door locks and security systems.

Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink®.

To program the HomeLink® Universal Transceiver:

1. Press and release the HomeLink® button (1) that you would like to program. The HomeLink® indicator light (2) will flash slowly.
2. Position the hand-held transceiver within 1-3 in (2-8 cm) away from the HomeLink® button (1).
3. While the HomeLink® indicator light (2) light is flashing, press and hold the hand-held transmitter button. Continue pressing the hand-held transmitter button until the HomeLink® indicator light (2) changes. You may now release the hand-held transmitter button.

To verify the programming is complete, press the HomeLink® button (1) and observe the indicator light (2):

 
- If the HomeLink® indicator light (2) remains constant, your device should operate when the HomeLink® button (1) is pressed. At this point, if your device operates, programming is complete.
- If the HomeLink® indicator light (2) rapidly flashes, firmly press, hold for 2 seconds and release the HomeLink® button (1) up to three times until the HomeLink indicator changes from slow to rapidly blinking to complete the programming process. Do not press the HomeLink® button (1) rapidly. At this point if your device operates, programming is complete. If the device does not operate, additional steps are required to complete the programming.



# HomeLink® Universal Transceiver (if so equipped)

An additional person may make the remaining steps easier. To complete the programming process:

- At the receiver of the device that you are programming to the HomeLink® button ①, press and release the "Learn" or "Set" button ③. (The name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit.) You have approximately 30 seconds to initiate the following step.
- Firmly press and hold the programmed HomeLink® button ① for 5 seconds and release the Homelink® button ① up to two times. Do not press the HomeLink® button ① rapidly. At this point programming is complete and your device should operate when the HomeLink® button ① is pressed and released.

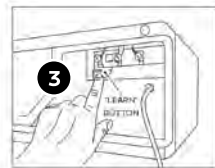

To view a detailed instructional video, go to [www.infinitiquickguide.com/2024/qx50](http://www.infinitiquickguide.com/2024/qx50) or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door".

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

**For more information, refer to "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink® website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515**



# Heater and Air Conditioner (automatic)

The climate controls can be adjusted using the buttons on either side of the lower display and through the "Climate" screen (1) on the lower display.

- To access the "Climate" screen (1), press the **CLIMATE** button (2) below the lower display.

## HEATED STEERING WHEEL (if so equipped)

To turn the heated steering wheel on or off, touch the "Steering Heater" key (3) on the lower display.

## REAR CLIMATE CONTROL (if so equipped)

- Adjust the temperature up or down using the temperature buttons (4).

## SYNC MODE SETTING

The driver's, passenger's and rear (if so equipped) temperature setpoints can be synchronized touching the "SYNC" key (5) on the lower display. If the feature is engaged, the rear temperature settings will synchronize with the driver's and passenger's side settings. The temperature can then be controlled by using the temperature control buttons (6).

## DEFROSTING THE OUTSIDE MIRRORS AND REAR WINDOWS

- Push the rear window defroster (7) window glass and outside mirrors switch, with the ignition switch in the ON position. Push the switch again to turn the defroster off. The rear window defroster automatically turns off after approximately 15 minutes.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

**MIST** One sweep operation

**OFF** Wipers are OFF

**AUTO** Speed-sensing and rain-sensing automatic wiper (if so equipped)

**LO** Continuous wipe, slow

**HI** Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②. Pull the lever ① toward you to operate the windshield washer.

## REAR WIPER AND WASHER

Turn the rear wiper switch ③ to one of the following positions to operate the rear wiper:

**OFF** Wiper is OFF

**— —** Intermittent wipe

**—** Continuous wipe

Push the lever ① forward to operate the rear windshield washer.

## RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)

To set the rain-sensing auto wiper system, place the lever in the AUTO position ①. The wiper will sweep once while the ignition switch is in the ON position. The rain sensor sensitivity level can be adjusted by turning the knob ② toward the front (High) or toward the rear ③ (Low).

– High – High sensitive operation

– Low – Low sensitive operation

To turn the rain-sensing auto wiper system off, rotate the lever to the OFF position, or rotate the lever to the low or high position.

## WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

 
To move the wiper blades to the service position:

- When the ignition switch is in the ON position or within 60 seconds after placing the ignition switch in the OFF position, lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Lift the windshield wiper and washer lever to the mist position once and release. This action will cause the wipers to resume the set position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

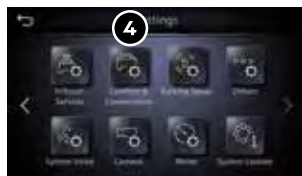

## Opening the Liftgate

 


The power liftgate operation can be turned on or off by the power liftgate main switch ① inside the glove box.

To open the liftgate, perform one of the following procedures:

- Push and hold the power liftgate switch ② on the instrument panel.
- Push the liftgate opener switch ③; the liftgate must be unlocked, or you must have the Intelligent Key® with you (that is, in your pocket or purse).
- Press the  button ④ on the INFINITI Intelligent Key for 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

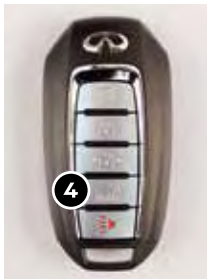

## Motion-Activated Liftgate (if so equipped)



To operate the liftgate hands-free:

- Ensure you have the Intelligent Key within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper ①. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Connecting Your Cellular Phone or Device via Bluetooth®\*



Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

 
1. Press the **MENU** button below the lower display.
2. Touch "Connections".
3. Touch "Add New (X/6)".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Bluetooth® Streaming Audio\*

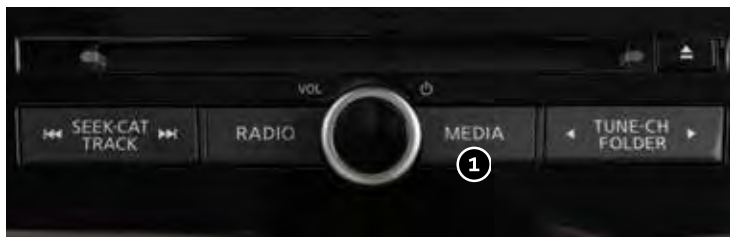

If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.


After connecting your Bluetooth® device, press the **MEDIA** button ① on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

\* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## Console Box

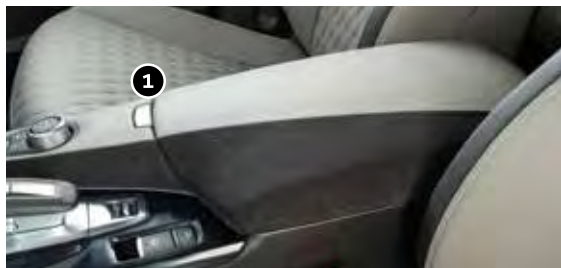 

To open the console box, press down on the latch ①. The latch will release.

To close, push the lid down until the lock latches.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

## USB Connection Port Interface

The USB connection ports (USB Type-C/USB Type-A) are located below the climate controls ①.

- When a compatible USB memory device is plugged into one of the USB ports, compatible audio files stored on the device can be played through the vehicle's audio system.
- These ports will also charge compatible devices.



### USB CHARGING PORTS

- There are USB ports located on the rear seats on the back of the center console ②. These ports will charge compatible devices using Type-A or Type-C USB connections.

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**



# Apple CarPlay®

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display. The display may be different based on iOS software version.

Connect your compatible iPhone via bluetooth for Wireless Apple CarPlay or by USB cable to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key ① or  key ② on the lower left corner of the Apple CarPlay screen.

 
Press the  button on the steering wheel or touch the  key ① or  key ② on the lower left corner of the Apple CarPlay screen to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

When Siri finishes responding the session will automatically end and return to the home screen.

Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

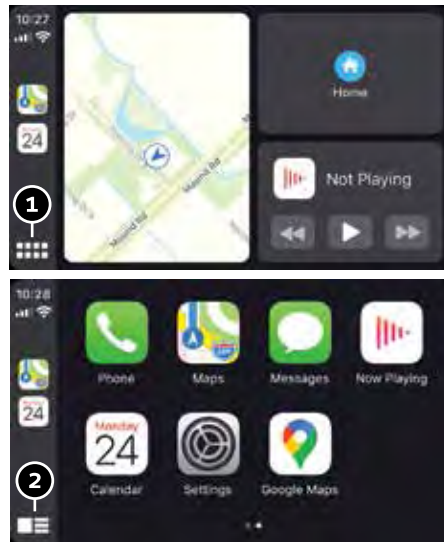

# Android Auto™

Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

## INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

## USING ANDROID AUTO

To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:
  1. Press and hold the  button on the steering wheel until a beep is heard.
  2. Touch the  key ① on the Launch Bar.
  3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

To return to the Android Auto home screen after operation, touch the  key ② on the Launch Bar.

 
To exit the Android Auto screen, touch the  key ② on the Launch Bar and then touch the exit key.

To return to the Android Auto home screen from the main menu:

1. Press the **MENU** button and touch the  key ③, or
2. Touch the "Information" key ④, touch the "Apps" key, and then select the "Android Auto" key.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

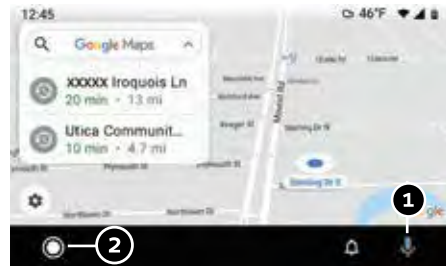

# Wireless Charging

The wireless charger is located on the lower part of the instrument panel. Ensure the smartphone is positioned horizontally and fully seated on the center of the charging pad over the "Qi" logo ①. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position.

- The  indicator ② will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange for 8 seconds and then turn off.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**





# Navigation System (if so equipped)

Use the INFINITI controller ①, touch-screen and **OK** button ② to navigate through the upper display screens.

- Press the  button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

## SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the upper display.

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Destination" key ⑥ on the lower display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

 
## SETTING A ROUTE WHILE DRIVING USING VOICE RECOGNITION

1. Press the  button on the steering wheel. Wait for the prompt and say "Navigation".
2. Then, say a command from the list, such as "Street Address", and follow the prompts until your route is calculated.

## CANCELING A ROUTE

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Cancel Route" key ⑦ on the lower display.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

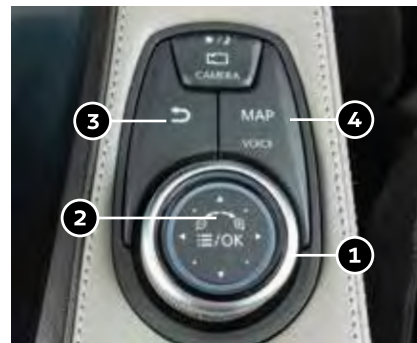

# INFINITI InTouch® Services (if so equipped)

If equipped, your vehicle may include INFINITI InTouch® Services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your INFINITI InTouch® Services, please visit [www.infinitiusa.com/intouch.html](http://www.infinitiusa.com/intouch.html) or call **1-855-444-7244**. For frequently asked questions, please visit [www.infinitiusa.com/intouch/faq](http://www.infinitiusa.com/intouch/faq).

To access INFINITI InTouch® Services:

 
1. Press the **MENU** button ① under the lower display.
2. Select the "InTouch Services" key ② on the lower display.

In case of an emergency, press and release the **SOS** button lid ③, located above the rearview mirror, and press the in-vehicle telematics **SOS** button ④.

## INFINITI INTOUCH® SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account. (<https://www.infinitiusa.com/owners>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch® Services.
3. Download the INFINITI InTouch® Services companion app from the App store and log in using your INFINITI Owner Portal ID and password.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

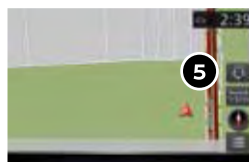

Available services may include:

- Automatic Collision Notification
- Emergency Calling
- Stolen Vehicle Locator
- Alarm Notification
- Maintenance Alert
- Vehicle Health Report
- Scheduled Maintenance Notification
- Remote Door Lock/Unlock
- Remote Horn & Lights
- Remote Engine Start/Stop
- Maximum Speed Alert
- Valet Alert
- Curfew Alert
- Destination Send-to-Vehicle
- Connected Search

The following services can also be accessed by touching the headset icon ⑤:

- INFINITI Personal Assistant
- Connection to Roadside Assistance

# Voice Recognition



## SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

## USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button ① on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button ① or  on the steering wheel.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Forward Driving Aid Sensors

A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror ① and the radar sensor is located on the front of the vehicle ②.

Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:

- Forward Emergency Braking (FEB) with Pedestrian Detection
- ProPILOT Assist
- Predictive Forward Collision Warning (PFCW)

The "Forward Driving Aids temporarily disabled Front Sensor Blocked See Owner's Manual" warning ③ may illuminate if the front radar sensor ② is obstructed.

The warning light ④ may illuminate and blink if the front camera sensor ① is obstructed.

Front sensor areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc).

If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a INFINITI retailer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Forward Driving Aids temporarily disabled  
Front Sensor blocked  
See Owner's Manual ③



# ProPILOT Assist

 
The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction.

## PROPILOT ASSIST DISPLAY

- ① Set vehicle speed indicator: Displays the speed set by the driver.
- ② Steering Assist indicator: Shows whether steering assist is active or inactive (green-active, grey-standby, orange-malfunction).
- ③ Lane marker indicator: Appears green on the display when lane lines are detected and steering assist is active.
- ④ ProPILOT Assist status indicator: Displays whether ProPILOT Assist is engaged or not.
- ⑤ Vehicle ahead detection indicator: Appears on the display when a vehicle is detected ahead.
- ⑥ Set distance indicator: Displays the gap amount between the vehicle and the preceding vehicle as set by driver (1 bar - shortest gap, 3 bars - longest gap).

To set ProPILOT Assist, push the ProPILOT Assist switch ⑦ on the steering wheel.

The ProPILOT Assist status ④ will appear on the vehicle information display. When the desired cruising speed is reached push the **SET-** switch ⑧ and release it.

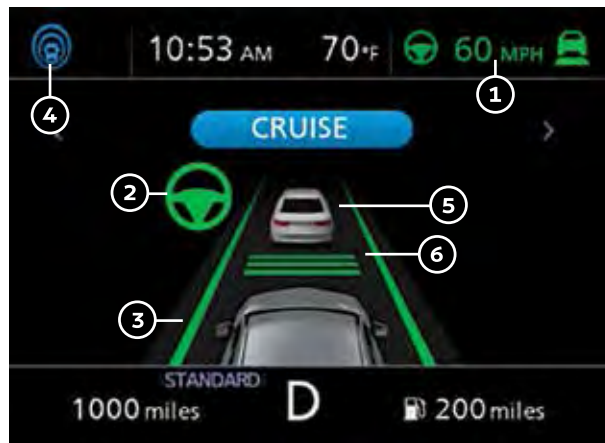

# ProPILOT Assist

## PROPILOT INTELLIGENT CRUISE CONTROL

To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch (9) or **SET-** switch (8) and release it.

When a vehicle is detected in the lane ahead, the Intelligent Cruise Control system controls the vehicle speed based on the distance set by the driver.

To cancel a set speed, push the **CANCEL** switch (10) on the steering wheel or tap the brake pedal.

To turn the system off, push the ProPILOT Assist switch (7).

## CONVENTIONAL (FIXED SPEED) CRUISE CONTROL

To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch (7) for longer than approximately 1.5 seconds.

## VEHICLE AHEAD STOPS

When the vehicle ahead decelerates to stop, your vehicle decelerates to a standstill if the ProPILOT Assist is activated. Once the vehicle stops, the system will keep the vehicle stopped.

If the vehicle is stopped for less than 3 seconds, and the vehicle ahead begins to move, your vehicle will start moving again automatically.

If the vehicle is stopped for more than 3 seconds, and the vehicle ahead begins to accelerate, push and release the **RES+** switch (9) or the accelerator pedal. This will resume the last set cruising speed.

ProPILOT Assist does not provide approach warnings, automatic braking, or steering assist in the conventional (fixed speed) cruise control mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



## Head Up Display (HUD) (if so equipped)



The Head Up Display (HUD) can show Vehicle Speed, Driving Aids (if so equipped), Navigation (if so equipped)/Warning and Traffic Sign Recognition (if so equipped) on the center of the windshield. Push the HUD switch (1) on the instrument panel to turn the system on and off.

To adjust the HUD settings, when the system is on:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Head Up Display" key (2).
3. Adjust the positioning of the HUD on the windshield by touching the arrows (3), and the brightness by touching the brightness keys (4).

To change what items are shown in the HUD, touch the "Display items" key (5).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# Memo





# Memo



 


Printing October 2023  
QR24EO 0J55U1  
Printed in USA


This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **<https://owners.infiniti-usa.com/iowners/navigation/manualsAndGuides>**. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).

The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

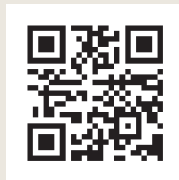

 To view detailed instructional videos, go to **[www.infinitiquickguide.com/2024/qx50](http://www.infinitiquickguide.com/2024/qx50)** or snap this QR code with an appropriate QR code reader.

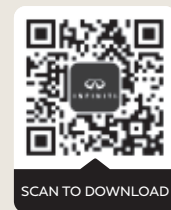

For vehicles equipped with remote connectivity, including an SOS button, scan to download in the smartphone app.



I N F I N I T I