



QUICK REFERENCE GUIDE

2024 **ARIYA**

 
COCKPIT OVERVIEW



COCKPIT OVERVIEW

- 1** Vehicle Information Display/Power Meter/Li-ion Battery/Ambient Lighting
- 2** Li-ion Battery Available Charge Gauge/Driving Range
- 3** Driver Detection Device (if so equipped)
- 4** Headlight, Fog Light (if so equipped) and Turn Signal Switch
- 5** Wiper and Washer Switch
- 6** Steering Wheel Switches for Audio Control/Navigation (if so equipped)/
Vehicle Information Display
- 7** Steering Wheel Switches for ProPILOT Assist/Bluetooth®
- 8** Memory Seat (if so equipped)
- 9** Headlamp Tilt Position 
- 10** Steering Assist Switch 
- 11** Heads Up Display ON/OFF (if so equipped) 
- 12** Automatic Brake Hold
- 13** Immediate Charge Switch 
OFF
- 14** Power Liftgate Switch (if so equipped) 
- 15** Tilt/Telescoping Steering Wheel Lever
- 16** Electronic Parking Brake Switch

INSTRUMENT PANEL

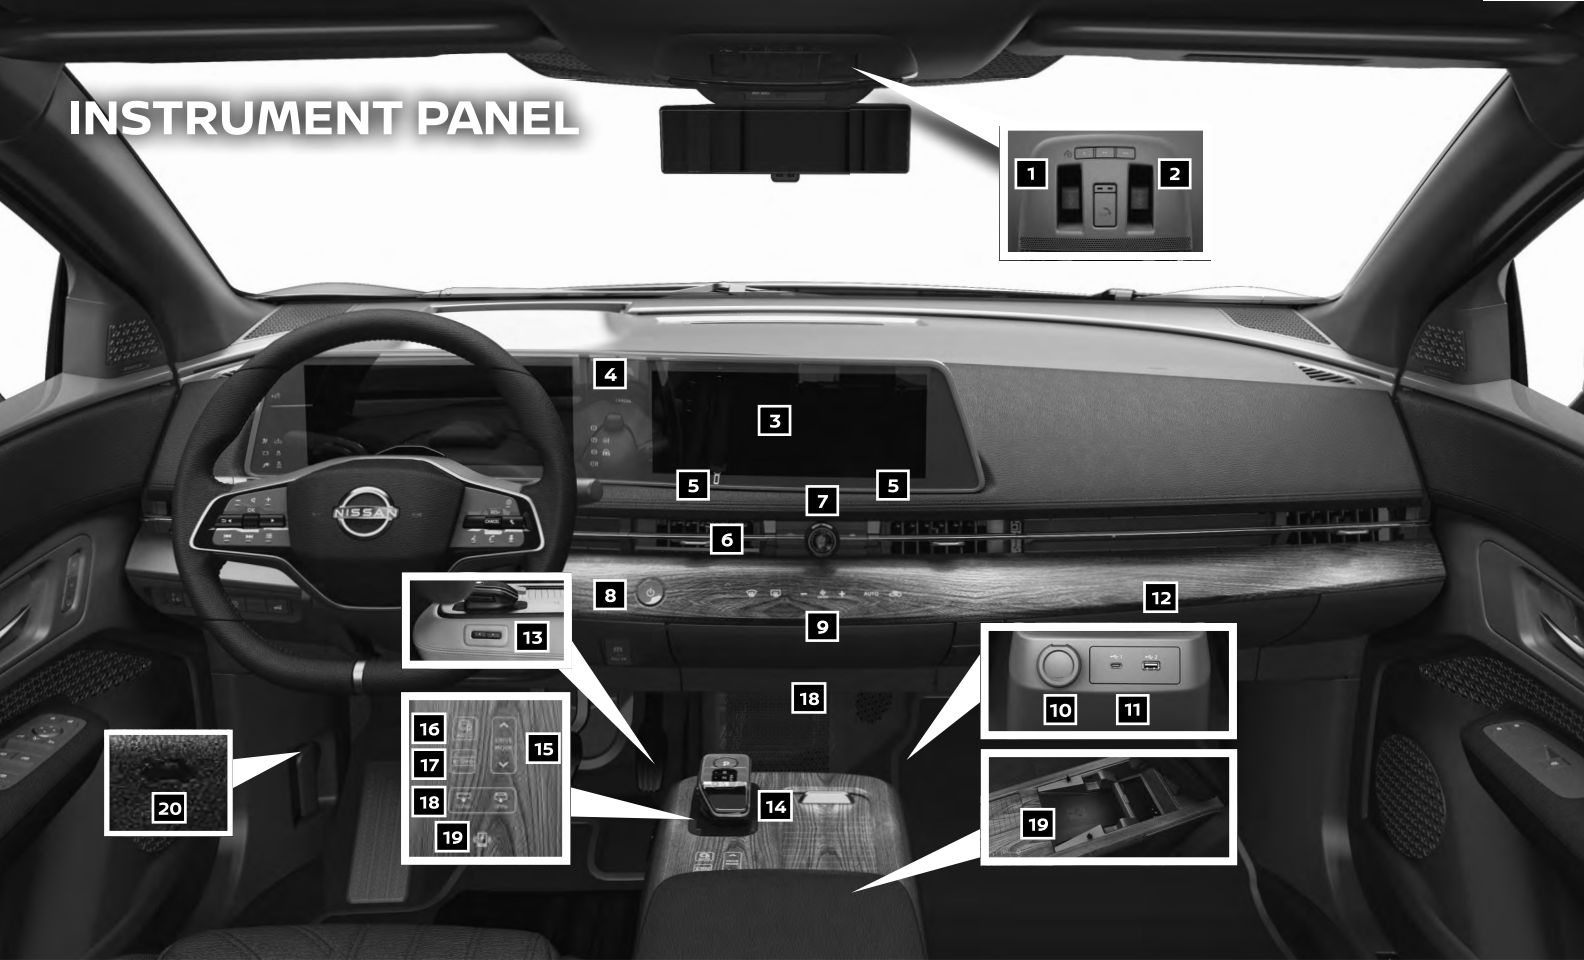

4

3

5

7

5

6

8

12

9

13

10

11

18

14

16

17

18

19

15

20

INSTRUMENT PANEL

- 1** Moonroof Switch (if so equipped)
- 2** Sunshade Switch (if so equipped)
- 3** Control Panel Touch Screen Display
- 4** Camera Button
- 5** Climate Controlled Seat Keys   (if so equipped)
- 6** Hazard Warning Flasher Switch
- 7** Audio ON/OFF and Volume Control Knob
- 8** Push-Button Power Switch
- 9** Heater and Air Conditioner Control (automatic)
- 10** 12-Volt Power Outlet
- 11** USB Connection Port Interface
- 12** Glove Box
- 13** Center Console Adjust Switch (if so equipped)
- 14** Shift Lever
- 15** Drive Mode Switch
- 16** ProPILOT Park switch (if so equipped)
- 17** e-Step Switch
- 18** Flexible Center Storage switch (if so equipped)
- 19** Wireless Charging/Indicator Light (if so equipped)
- 20** Hood Release 

TABLE OF CONTENTS

GETTING STARTED

NISSAN Intelligent Key® System.....	3
Seat Adjustments (if so equipped).....	4
Rear Door Alert.....	4
Rear Seat Belt Warning.....	5
Starting/Stopping the Electric Vehicle (EV) System.....	5
Outside Mirror Control Switch.....	6
Intelligent Rear View Mirror (if so equipped).....	7
Emergency Call (SOS) Button (if so equipped).....	8
Heater and Air Conditioner (automatic).....	9
Climate Controlled Seats and Heated Steering Wheel (if so equipped).....	11
Headlight Control Switch.....	12
Wiper and Washer Switch.....	13
Vehicle Information Display.....	14
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert.....	16
Power Liftgate Release (if so equipped).....	17
Charge Port Lid/Charge Connector Lock System.....	17
Cold Weather Range and Parking in Extremely Cold Weather.....	18
Electric Vehicle (EV) System Warning Light.....	18
Li-ion Battery Charging.....	19
Li-ion Battery Gauges.....	21
Power Limitation Indicator Light.....	21
Power Meter.....	21
Quick Charge in Cold Weather.....	22
Motion-Activated Liftgate (if so equipped).....	22

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

System Updates.....	23
How to Use Your ARIYA's Touch-Screen Display.....	25
Clock Set/Adjustment.....	27
USB Connection Port Interface.....	28
Bluetooth® Hands-free Phone System.....	28
• System Operating Tips.....	28
FM/AM/SiriusXM® Radio.....	30
Apple CarPlay®.....	31
Android Auto™.....	32
Wireless Charging (if so equipped).....	33
EV App Function.....	33
Navigation System.....	35



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, heater, air conditioner, audio and phone systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual and your NissanConnect® Manual.

TABLE OF CONTENTS

NissanConnect® Services Powered by SiriusXM® (if so equipped)..... 36

SXM Travel Link and SiriusXM® Traffic (if so equipped)..... 38

Hands-free Text Messaging Assistant 38

Bluetooth® Streaming Audio..... 39

Voice Control with Natural Commands..... 39

Amazon Alexa..... 40

DRIVING FEATURES

Forward Driving Aid Sensors.....41

Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) 41

Intelligent Blind Spot Intervention (I-BSI) 42

ProPILOT Park (if so equipped)..... 43

ProPILOT Assist Systems..... 44

Automatic Emergency Braking (AEB) with Pedestrian Detection System.....51

Intelligent Around View® Monitor (if so equipped).....51

Hill Start Assist 53

Rear Automatic Braking (RAB) 53

Lane Departure Warning (LDW) and Intelligent Lane Intervention (I-LI) 54

Approaching Vehicle Sound for Pedestrians (VSP) System..... 54

e-Step System 54

Intelligent Driver Alertness (I-DA) (if so equipped) 55

Intelligent Forward Collision Warning (I-FCW) 55

Shift Control System..... 56

Vehicle Dynamic Control (VDC) 56

Head Up Display (HUD) (if so equipped) 57

Driver Monitor System (if so equipped) 58



Additional information about your vehicle is also available in your Owner’s Manual, NissanConnect® Manual and at www.NissanUSA.com.



- Please see your Owner’s Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
 - Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
 - Do not drink and drive.

 
For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, heater, air conditioner, audio and phone systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner’s Manual and your NissanConnect® Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle or open the rear liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, push the driver door handle touch sensor **1**, or
- For all other doors, press and hold the driver door handle touch sensor. For the liftgate door, press the power liftgate door request switch **2** or press and hold the **i** button **3** on the key.
- To unlock the vehicle, perform one of the following procedures:
 - Wrap your hand around the door handle **7** to activate the capacitive unlock sensor. When unlocking from the driver's door handle, the driver's door will unlock. Unwrap your hand from the driver's door handle and touch the lock sensor **1** within 60 seconds to unlock all doors. When unlocking from the front passenger door, rear doors, all vehicle doors will unlock. To allow driver and passenger doors to unlock at the same time from the driver's door handle, turn off the Selective Unlock feature in the vehicle settings menu.
 - Press the **i** button **4** on the Intelligent key to unlock the driver's side door. Press the **i** button **4** again within 60 seconds; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **▶** button **5** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
 - Press any button on the key fob to turn the panic alarm off if the key fob is in range.

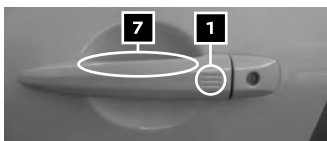

LIFTGATE RELEASE (if so equipped)

- To open the liftgate, press the **HOLD** button **6** for longer than 1 second.
- To close the liftgate, press the **HOLD** button **6** for longer than 1 second.

APPROACH UNLOCK FUNCTION

- When you approach the vehicle with the Intelligent Key, all the doors will be unlocked automatically by the approach unlock function, the operation range is around 3 ft (1 m). This function is disabled by the default setting. You can enable this function by the vehicle information display.

WALK AWAY LOCK FUNCTION

- When you walk away from the vehicle with the Intelligent Key, the vehicle will be locked automatically by the walk-away lock function, the operation range is around 7 ft (2 m). This function is disabled by the default setting. You can enable this function by the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

SEAT ADJUSTMENTS (if so equipped)

FRONT POWER SEATS (driver and passenger's seat if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



FRONT POWER SEAT LIFTER (driver and passenger's seat if so equipped)

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **1** up or down.



FRONT POWER LUMBAR SUPPORT (driver's seat if so equipped)

- To adjust the seat lumbar support, push the front, back, upper or downside end of the switch **3**.

FOLDING THE REAR SEATBACKS DOWN

- To fold the seatback down, pull the release lever **4**.
- To return the seatback to the seating position, lift up each seatback and push it to the upright position until it is latched. Then return the seat belt to its original position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate that there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being started.

 
REAR DOOR ALERT (ACTIVE)

- To activate Rear Door Alert in your vehicle information display:
 - Press the ◀▶ buttons on the steering wheel until the "Settings" menu screen appears.
 - Using the scroll dial, select "Vehicle Settings", "Rear Door Alert" and press the **OK** button.
 - Choose from the following options: "Horn & Alert", "Alert Only", or "OFF" and then press the **OK** button.
- To Dismiss Rear Door Alert:
 - To dismiss the warning, use the scroll dial on the steering wheel to select "Dismiss Message" **1**. If no selection is made, this message will disappear after a period of time.



GETTING STARTED

- To temporarily disable Rear Door Alert for the remainder of the current trip, use the scroll dial on the steering wheel to select "Disable Alert" **2** and press the **OK** button.
- When the system is active, an audible alert (horn) will sound and a **Check Rear Seat For All Articles** warning **3** will appear on the vehicle information display.

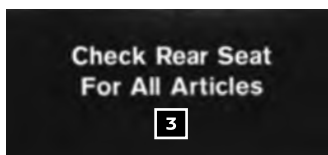

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

REAR SEAT BELT WARNING

- The rear seatbelt warning **1** appears for 65 seconds after the power switch is placed in the ON position and the EV system is started. This warning shows the status of the rear seat belts.
- When one of the rear seat belts is buckled, the corresponding rear seat belt status **1** will appear in gray or green, depending on the model.
- When one of the rear seat belts is unbuckled, the rear seat belt status image **1** will appear red and a chime will sound. This chime will continue to sound until the seat belt is buckled again.
- After a change in buckle status from green to red, a chime will sound and the warning **1** will appear for another 65 seconds.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

STARTING/STOPPING THE ELECTRIC VEHICLE (EV) SYSTEM

It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

- Push the power switch to start the EV system.
- Confirm the parking brake is applied and push the **P (PARK)** switch on the shift lever to place it in the **P (PARK)** position.
- Depress the brake pedal.
- Check that the READY to drive indicator light **1** illuminates and the start-up sound is audible.
- Check the Li-ion battery level and the estimated driving range shown on the meter.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

TURNING THE EV SYSTEM OFF

- Push the **P (PARK)** switch on the shift lever to place it in the **P (PARK)** position.
- Apply the parking brake.
- Push the power switch to the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver side outside mirror or push the right switch **2** to select the passenger side outside mirror.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.

REVERSE TILT-DOWN FEATURE (if so equipped)

- When backing up the vehicle, the right or left outside mirror will turn downward automatically to provide better rear visibility.

1. Place the power switch in the ON position.

2. Using **1** or **2**, choose which mirror you would like to tilt-down when **R (REVERSE)** is selected.

3. Move the shift lever to the **R (REVERSE)** position.

4. The selected outside mirror will move to the reverse tilt-down position. While in **R (REVERSE)**, you can adjust the selected mirror's tilt-down position using **3**.

5. The mirror will return to the position set in Step 4 the next time the vehicle is placed in **R (REVERSE)**.

- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:

 
1. The shift lever is moved to any position other than **R (REVERSE)** for a short period of time.
2. The selected mirror is deselected using the left switch **1** or the right switch **2**.
3. The vehicle speed increases to more than 5 mph (8 km/h).
4. The power switch is placed in the OFF position.

AUTOMATIC FOLDING MIRRORS


- The Automatic Folding Mirrors will automatically fold the mirrors in and out as needed by pressing the **4** switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

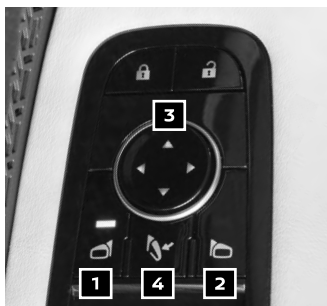


GETTING STARTED

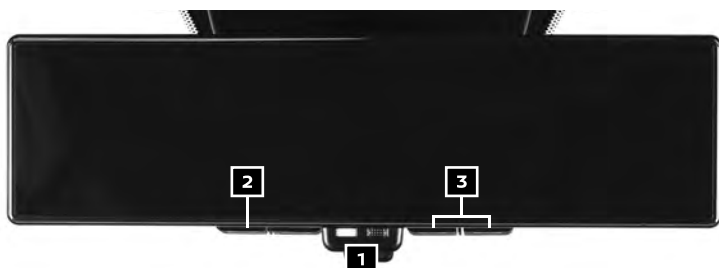 

INTELLIGENT REAR VIEW MIRROR (if so equipped)

 - The Intelligent Rear View Mirror provides a clear rear view from a camera located on the rear of the vehicle. Intelligent Rear View Mirror has two modes: conventional rearview mirror mode and Intelligent Rear View Mirror mode (camera view mode). You can switch between these two modes by using the mode select lever **1**.

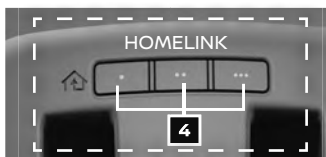

- When the Intelligent Rear View Mirror mode is on, the settings menu can be selected by pressing the menu button **2**.
- Press the adjustment buttons **3** to adjust the following settings:
 - Brightness
 - Rotation
 - Indication
 - Down/Up
 - Left/Right
 - License
 - Language
 - Switch Backlight
- To program the HomeLink® Universal Transceiver (if so equipped):
 - Press and release the desired HomeLink® button **4**. The indicator light will flash.
 - Position the hand-held transceiver 1-3 in (2-8 cm) away from the HomeLink® surface, keeping the HomeLink® indicator light in view.
 - While the indicator light is flashing in orange, press and hold the hand-held transmitter button. DO NOT release until the HomeLink® indicator light changes. When the indicator light illuminates in green, the hand-held transmitter button may be released.

VERIFYING HOMELINK PROGRAMMING

- To verify the programming is complete, press and hold the HomeLink® button and observe the indicator light:
 - A solid, continuous light indicates the programming is complete and the HomeLink® button will activate your device.
 - If the device does not operate or operates but no door status indicator appears, this indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - You may need a ladder to reach the "Learn," "Program," or "Smart button on your garage door opener. Do not stand on your vehicle to perform the next steps.

 
- At the receiver of the device that you are programming to the HomeLink® button, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
- Press and hold the programmed HomeLink® button for 2 seconds and release.
- You may have to repeat the previous two steps up to 3 times to complete the programming process. HomeLink® should now activate your device.
- The two way communication must be programmed and confirmed. For details on the procedure for your vehicle and garage door opener, please visit www.homelink.com/Nissan.
- **If two way communication is not completed properly, there is a potential the opener will lose its programming and stop functioning. If this occurs, please reprogram the opener properly by completing the two way communication programming.**
- To view a detailed instructional video, go to www.nissanquickguide.com/2024/ariya or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door."

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and "Pre-driving checks and adjustments (section 3)" of your Owner's Manual, and the HomeLink® website at www.homelink.com/nissan or call 1-800-355-3515.

EMERGENCY CALL (SOS) BUTTON (if so equipped)


- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the switch cover **1** to release, then press the **SOS** button **2** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call **855-426-6628**.

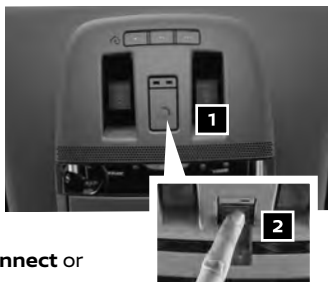

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Applications (section 6)" of your NissanConnect® Manual.

 GETTING STARTED

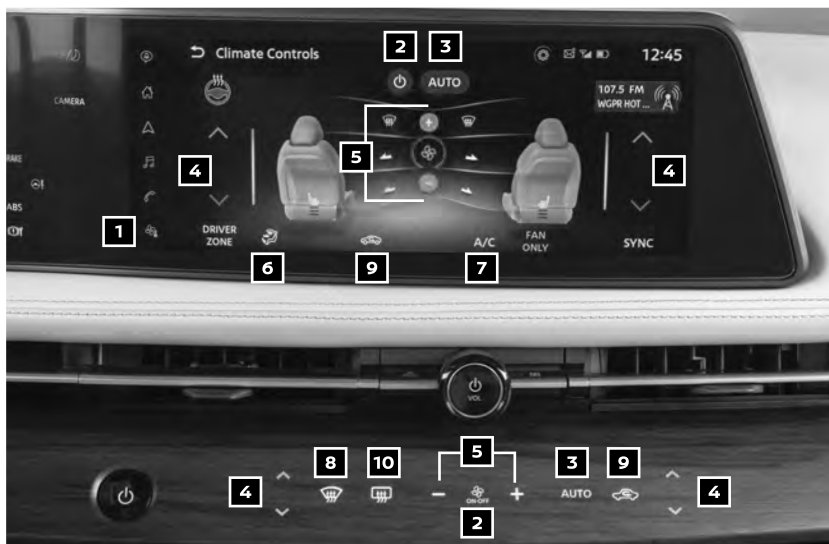

HEATER AND AIR CONDITIONER (automatic)

The Heater and Air Conditioner screen can be accessed by pressing the "Climate Controls" button **1** on the Launch Bar. All of the haptic control buttons are located on the front display. Please see your Owner's Manual for instructions to adjust haptic button sensitivity to your preference.

2 ON-OFF BUTTON/KEY

- Press the **ON-OFF** button/key on the front display or press the  button/key on the touch screen to turn the climate control system on or off.

3 AUTO BUTTON/KEY

- The automatic mode may be used year-round. Press the **AUTO** button/key on the front display or on the touch screen. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

4 TEMPERATURE CONTROL BUTTON/KEY

- Press the temperature control buttons/keys on the front display or touch screen to turn up  for warmer air or down  for cooler air.

5 FAN SPEED CONTROL BUTTON/KEY

- Press the fan speed control button/key on the front display or touch screen to manually adjust the fan speed up  or down .

6 AIR FLOW CONTROL KEY

- Touch the air flow control key on the touch screen to cycle through the following air flow outlets:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the front defroster and foot vents.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

7 A/C BUTTON KEY

- Press the **A/C** button on the touch screen to manually turn the A/C on or off.

8 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS BUTTON

- Press the  front defroster button on the front display to turn the system on. Both the air conditioner and heater will automatically turn on when the front defroster mode is selected. The driving range will be reduced when using this setting.
- To remove moisture or fog on the front window quickly, set the temperature control buttons **4** and the fan speed control buttons **5** to their maximum settings.

9 AIR INTAKE CONTROL BUTTON/KEY

- For air recirculation, press the  intake air control button/key on the front display or touch screen to recirculate air inside the vehicle. The indicator light on the button/key will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- For outside air recirculation, press the  intake air control button/key three times to turn off air recirculation. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor vent or front defroster/floor vent mode.
- For automatic air intake control mode, press the  intake air control button/key. The inside/outside circulation will then be controlled automatically.

10 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER SWITCH

- Push the  rear window and outside mirror defroster switch on the front display to turn the system on or off.
- The rear window defroster automatically turns off after approximately 20 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
 
For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.

GETTING STARTED



CLIMATE CONTROLLED SEATS AND HEATED STEERING WHEEL (if so equipped)

- Push the or key **1** on the touch screen to access the climate control screen for each seat.
- Press the climate control key **2** to turn the climate controlled seats ON or OFF.
 - Press the climate control key to adjust the power of the temperature for your seat **3**.
- Use the temperature keys **4** to adjust the temperature of your seat.
- The heated seats automatically turn off and on to maintain a temperature above 68°F (20°C).

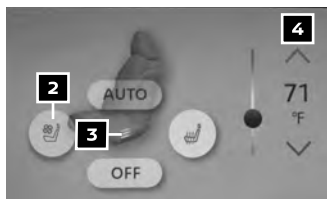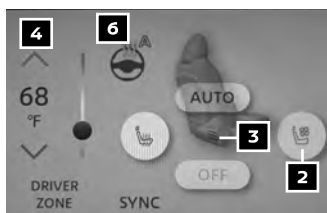

HEATED STEERING WHEEL (if so equipped)

- Push the key **5** to open the climate control screen. Press the indicator light key **6** on the touch screen. The icon will illuminate.
- When the system activated, it will heat the steering wheel and cycle on and off to maintain a temperature above 86°F to 104°F (30°C to 40°C).
- When the surface temperature of the steering wheel is above 68°F (20°C) and the switch is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



INTELLIGENT AUTO HEADLIGHT SYSTEM

- The Intelligent Auto Headlight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the power off and all doors are closed.
- To activate the Intelligent Auto Headlight system, turn the headlight control switch to the **AUTO** position **3** then turn the power switch to ON. To deactivate the auto headlight system, turn the headlight control switch to the **OFF** position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights turned to the  position **2**, push the headlight control switch forward **4** to select the high beam function. The blue indicator light will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlamp high beams on and off.



HIGH BEAM ASSIST

- To activate the High Beam Assist system, push the switch **6** as shown. The high beam assist indicator light in the meter will illuminate while the headlights are turned on.



FOG LIGHT SWITCH (if so equipped)

In order to operate the fog lights, you must have your headlights on with the low beams selected.

- Turn the switch (inside collar) to the  position **7** to turn on the fog lights.
- Turn the switch (inside collar) to the **OFF** position to turn off the fog lights.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

GETTING STARTED

Choose the appropriate method to signal a lane change based on road and traffic conditions.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – This is a one-sweep operation of the front wipers.
- 2** Intermittent (**INT**)/**AUTO** (if so equipped) – Front wipers operate intermittently by moving the lever down to the **INT** position and then rotating the control ring **3** to increase or decrease **INT** wiper speed. Also, the intermittent operation speed varies in accordance to the vehicle speed.
- 4** Low (**LO**) – Front wipers operate at a continuous low speed.
- 5** High (**HI**) – Front wipers operate at a continuous high speed.
- 6** Front washer – Pull the lever toward you to activate the front washer. The front wipers will operate several times.

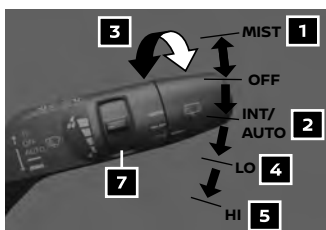

RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)

- The rain-sensing auto wiper system can automatically turn on the wipers and adjust the wiper speed depending on the rainfall and the vehicle speed by using the rain sensor located on the upper part of the windshield.
- To set the rain-sensing auto wiper system, push the lever down to the **AUTO** position **2**. The wiper will sweep once while the power switch is in the "ON" position.
- The rain sensor sensitivity level can be adjusted by turning the knob toward (High) or (Low) **7**.



REAR WIPER AND WASHER SWITCH

- 8** Intermittent (**INT**) – Rear wiper operates intermittently.
- 9** Low (**ON**) – Rear wiper operates at a continuous low speed.
- 10** Rear washer – Push the lever forward to activate the rear washer. The rear wiper will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Battery information
- Audio
- Navigation
- Energy economy
- Safety Shield
- Average vehicle speed
- Driving distance
- Driving time
- Cruise control information
- Intelligent Key information
- Indicators and warnings
- Settings



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed or selected using the scroll dial **2** or **◀▶** buttons **3** located on the steering wheel.

- Use the scroll dial or **◀▶** buttons **3** on the steering wheel to navigate the vehicle information display.
- Press the **OK** button **2** on the steering wheel to change or select an item.
- Press the **◀** button **4** on the steering wheel to go back to the previous menu.

DRIVE COMPUTER RESET

The drive computer reset **5** is displayed on the vehicle information display when the power switch is in the ON or READY to drive position.

1. Using the **◀▶** buttons on the steering wheel, navigate to find the Drive Computer screen in the vehicle information display.
2. Use the scroll dial to cycle through to the drive computer you wish to reset. Then press and hold the **OK** button on the steering wheel.
3. Select what you would like to reset from the list: ALL Items, Avg Energy Economy, Average Speed, Driving distance and Driving Time. Press the **OK** button to make your selection.
4. Make your selection and press the **OK** button again. The reset is complete.



GETTING STARTED

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- VDC Setting ■ Driver Assistance ■ Personal Display ■ Head-Up Display
- ECO Mode Setting ■ TPMS Setting ■ Clock ■ Vehicle Settings
- EV Settings ■ Maintenance ■ Customize Display ■ Unit/Language
- Factory Reset

CHANGING THE METER SCREEN VIEW AND CHANGING HEAD UP DISPLAY (HUD) (if so equipped)

The meter screen view can be changed to expand the vehicle information display area. To change the meter screen view:

1. Push the shortcut menu button **6** on the steering wheel.
2. "ShortCut Menu" will appear on the vehicle information display.
3. Select "Change Meter View" by rotating the scroll dial **2** and push it to make a selection.



MAP IN THE METER VIEW

Map in the meter view displays the map in the vehicle information display. This feature can be set with or without a navigation route set.

The Map in the Meter View can be activated two ways:

- Using the scroll dial on the steering wheel to cycle through the screens in the vehicle information display until you get to the map **7**.
- With navigation in full screen on the center console display **8**, use two fingers (in a "peace sign") and swipe from the right side of the screen to the left.

This allows customers to customize their driving experience having maps in the vehicle information display and music (or some other domain) in the center console.

 
AMBIENT LIGHTING & ACCENT LIGHTING

The Ambient Lighting and Accent Lighting can be accessed by:

1. Select the "Settings" screen.
2. Select "Vehicle Settings".
3. Select "Lighting". Then choose from "Ambient Lighting" or "Accent Lighting" to adjust the lighting feature of your vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

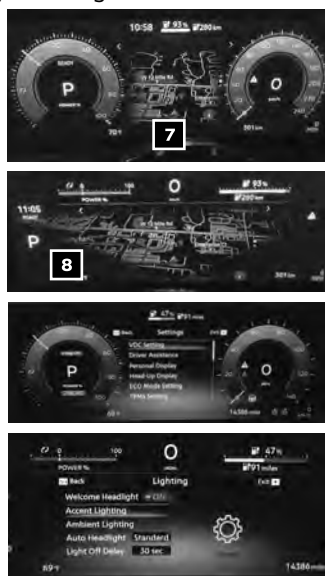

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended that you visit a NISSAN certified ARIYA dealer for this service.

EASY FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.

To use the Easy-Fill Tire Alert system:

1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
2. Place the power switch in the ON position. Do not place the power switch in the READY to drive mode.
3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"**, the **"Starting and driving (section 5)"**, the **"In case of emergency (section 6)"**, the **"Do-it-yourself (section 8)"** and the **"Technical and consumer information (section 10)"** of your Owner's Manual.

 
GETTING STARTED

POWER LIFTGATE RELEASE (if so equipped)

When the power liftgate release is closed and locked, the rear liftgate will open automatically by pushing and holding the switch **1** on the instrument panel.



- To unlock the power liftgate, push the liftgate opener switch **2**. Pull the power liftgate up to open. The power liftgate can also be unlocked by:
 - Pressing the  button **3** on the NISSAN Intelligent Key® twice.
 - Pushing the liftgate opener switch **2** while carrying the Intelligent Key with you (that is, in your purse or pocket).
 - Press the  button **4** on the NISSAN Intelligent key for more than 1 second.
 - Pushing the door handle touch sensor twice.
 - Pushing the power door lock switch to the unlock position.

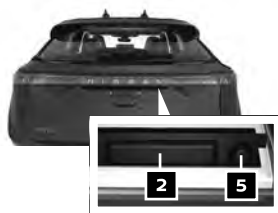

The power liftgate does not lock when closed. To lock the power liftgate, use the power liftgate request switch **5**, power door lock or key fob.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

CHARGE PORT LID/CHARGE CONNECTOR LOCK SYSTEM

- To open the charge port lid, unlock the doors then push the part of the lid near the rear of vehicle **1**.
 - When the charge port lid springs up slightly, place your hand underneath the lid and open it fully.
- To close the charge port lid, slowly move the lid and lock it securely in place.
- The normal or trickle charge connector can be locked to the normal charge port by selecting the charge connector lock mode in the vehicle information display.
- There are three different modes of the charge connector lock system:
 - AUTO** – The charge connector is locked while charging is in progress and will automatically unlock when charging is complete.
 - LOCK** – The charge connector will remain locked until UNLOCK mode is selected.
 - UNLOCK** – When the unlock mode is selected, the charge connector will unlock and remain unlocked.



NOTE: For DC Quick chargers only, locking is automated for safety, and not controlled by vehicle selection.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Charging (section CH)"**, the **"Instruments and controls (section 2)"**, the **"Pre-driving checks and adjustments (section 3)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

COLD WEATHER RANGE AND PARKING IN EXTREMELY COLD WEATHER

COLD WEATHER RANGE

- Vehicle range is reduced when the heater is used and the battery temperature drops below 77°F (25°C).
- Using the climate control system to heat the cabin when the outside temperature is below 32°F (0°C) uses more electricity (heat pump, if so equipped) and affects vehicle range more than using the heater at temperatures above 32°F (0°C).

PARKING IN EXTREMELY COLD WEATHER

- Do not store the vehicle in temperatures below -13°F (-25°C) for over seven days. If the outside temperature is -13°F (-25°C) or lower, the Li-ion battery may freeze, and it cannot be charged or provide power to run the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

ELECTRIC VEHICLE (EV) SYSTEM WARNING LIGHT

- The warning light will illuminate if there is a malfunction in the following systems:
 - Traction motor and inverter system
 - Charge port or on-board charger
 - Li-ion battery system
 - Cooling system
 - Emergency shut-off system is activated
- If the warning light illuminates, it is recommended that you visit a NISSAN® certified ARIYA dealer.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Overview (section EV)"** and the **"Instruments and controls (section 2)"** of your Owner's Manual.

GETTING STARTED

LI-ION BATTERY CHARGING

Before charging the Li-ion battery, see your Owner's Manual for detailed warnings and cautions when charging your battery.

- There are three methods available to perform the charge operation: normal charge, trickle charge and quick charge.

 
NORMAL CHARGE (Level 2)

- Perform a normal charge using the charging device installed in your home.
- Normal charging uses SAE J1772 compliant charger connected to a dedicated 220-240 volt circuit.
- To charge your vehicle:
 - Place the power switch in the OFF position.
 - Press the charge port tab and open the cap.
 - Connect the charge connector **1** to the charge port **2**. When connected correctly, a beep will sound once.
 - If charging has started, a beep will sound twice and the charging status indicator light will turn on.
- To stop charging:
 - Ensure that the charge connector lock is not engaged.
 - Press the button on the charge connector **3** to release the lock and remove the charge connector from the charge port.
 - Close the charge port cap and the charge port lid.



TRICKLE CHARGE (Level 1)

- Perform a trickle charge by connecting a charge connector to the Electric Vehicle Supply Equipment (EVSE) (if so equipped) or a SAE J1772 compliant cord set to connect the vehicle to a dedicated AC 110-120 volt, 15A dedicated outlet.
- To charge your vehicle:
 - Place the power switch in the OFF position.
 - Open the charge port lid.
 - Connect the EVSE plug **4** to the 110-120 volt, 15A dedicated electrical outlet. The EVSE control box's green indicator light **5** will illuminate when connected properly.
 - Open the charge port cap.
 - Remove the safety cap from the charge connector.
 - Connect the charge connector **6** to the charge port **2**. A beep will sound once.
 - If charging has started, a beep will sound twice and the charging status indicator light will turn on.

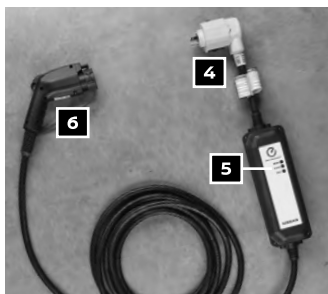


Type A

- While the Li-ion battery is charging, you can hang it up by passing a rope through the hole in the EVSE control box **7**.

■ To stop charging:

 - Ensure that the charge connector lock is not engaged.
- Press the button on the charge connector **3** to release the lock and remove the charge connector from the charge port.
- Close the charge port cap and the charge port lid.
- Attach the safety cap to the charge connector, remove the electrical plug from the dedicated outlet and store it in the case.

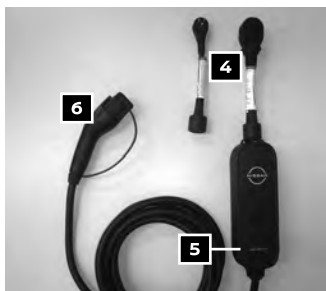

Type B

QUICK CHARGE (Level 3)

- Perform a quick charge by connecting a CCS charge connector at a public charging station to charge the battery in a short period of time.
- Quick charging is possible if the battery temperature is not near the red zone.
- To charge your vehicle:
 - Place the power switch in the OFF position.
 - Open the charge port lid and the charge port cap.
 - Align the groove of the charge connector **8** with the groove of the charge port, then insert the charge connector.



- Grasp the lock lever and lock the charge connector.
- Follow the instructions on the quick charge equipment to start charging. When the equipment is properly installed and ready to charge, a beep sounds twice and the charging status indicator light will change.



- To stop charging:
 - The charge connector can be disconnected from the vehicle when the charging is stopped.
 - Disengage the charge connector and remove it from the vehicle.
 - If the charge connector does not immediately unlock, please wait at least 3 minutes then use the key fob to lock, and then unlock all doors which will also unlock the charge port.
 - After closing the charge port cap, close the charge port lid.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Overview (section EV)" and the "Charging (section CH)" of your Owner's Manual.

GETTING STARTED

LI-ION BATTERY GAUGES

LI-ION BATTERY GAUGES

- The Li-ion Battery Available Charge Gauge **1** displays the approximate available Li-ion battery power remaining to drive the vehicle. Charge the Li-ion battery before the blue bar of the gauge disappears.

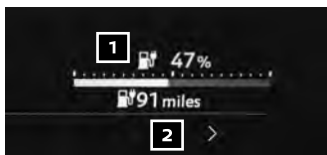


- The driving range **2** provides an estimated distance that the vehicle can be driven before recharging is necessary. The driving range is constantly being calculated based on the amount of available Li-ion battery charge and the actual power consumption average.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview (section EV)", the "Charging (section CH)" and the "Instruments and controls (section 2)" of your Owner's Manual.

POWER LIMITATION INDICATOR LIGHT

 - When the power limitation indicator light illuminates, power provided to the traction motor is reduced.
- This light illuminates in the following conditions:
 - The Li-ion battery available charge is extremely low.
 - The Li-ion battery temperature is very low.
 - The temperature of the Electric Vehicle (EV) system is high (motor, inverter, coolant system, Li-ion battery, etc.).
 - The EV system has a malfunction.
- If the power limitation indicator light is illuminated, follow the instructions provided on the center display.

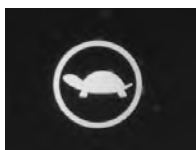

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview (section EV)", the "Charging (section CH)", the "Instruments and controls (section 2)" and the "In case of emergency (section 6)" of your Owner's Manual.

POWER METER

- The power meter **1** displays the traction motor power consumption and the regenerative brake power applied to the Li-ion battery.
- The white segment moves to the right when power is provided to the traction motor.



- The white segment moves to the left when power is generated and provided to the Li-ion battery by the regenerative brake system.
- The illuminated segments on the display are narrowed if the power provided to the motor is limited or if regenerative braking is limited.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

QUICK CHARGE IN COLD WEATHER

- It may take more time to charge the Li-ion battery using the quick charger if the vehicle is parked in a cold location (for example, 32°F [0°C]) for a long period of time.
- It may take more time to charge the Li-ion battery using the quick charger if the temperature of the Li-ion battery is high or low.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Charging (section CH)", the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the NISSAN Intelligent Key® within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of the rear bumper **1**. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

 
- Yes - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- Later - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.
- No (display may vary) - Skips the software update, the pop-up message is hidden and will be shown again at a later date.

You can trigger the software update manually in the event that "Later" or "No" was unintentionally pressed.

- To manually update the software to the latest version:
 1. Touch the  button on the Launch Bar.
 2. Touch  and then touch "System Updates".
 3. Touch "Software Update".
 4. Touch "Start Software Update" and then "Download".
- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.


Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:
 1. Touch the  button on the Launch Bar. Then press the  key to take you to the "Connections" screen.
 2. Touch "Connections" and then touch "Wi-Fi".
 3. Touch "Wi-Fi" to turn it on.
 4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

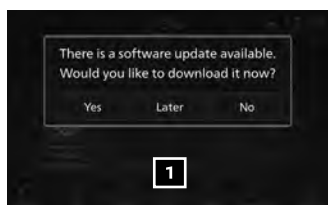

- To manually update your software using Wi-Fi:

 1. Touch the  button on the Launch Bar.
2. Touch  and then touch "System Updates".
3. Touch "Software Update", "Start Software Update", touch "Software Update", and then touch "Download".

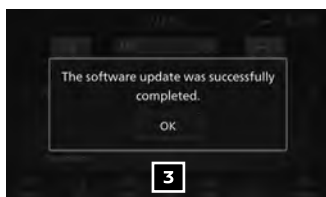

- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

- To turn on automatic updates of map software:

 
1. Touch the  button on the Launch Bar.
2. Touch  and then touch "System Updates".
3. Touch "Map Update" and then touch "Map Update Settings".
4. Select an area to be updated and touch "Start".

- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.

- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.

- To manually update the map software via Wi-Fi:


1. Connect the vehicle to an available Wi-Fi network.
2. Touch the  button on the Launch Bar.
3. Touch  and then touch "System Updates".
4. Touch "Map Update" and then touch "Update via Wi-Fi".
5. Select an area to be updated and touch "Start".

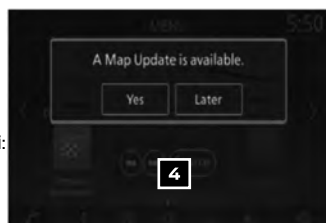

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the **"Getting started (section 2)"** and the **"Navigation (section 7)"** of your NissanConnect® Manual.

 AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

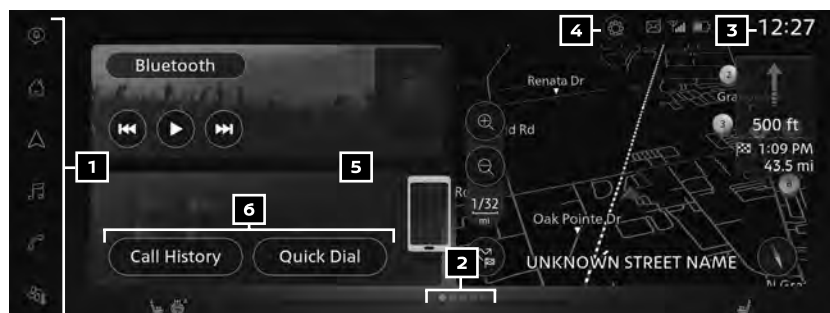

HOW TO USE YOUR ARIYA'S TOUCH-SCREEN DISPLAY

 - 1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.
- 2** The white dot indicates the page you are currently on. Additional pages are indicated by the grey dots.
- 3** Press Clock.
 - Press the clock to bring up clock settings.
- 4** This key will navigate you to the "Settings" menu, where you are able to access other features for this vehicle.
- 5** Widgets - Useful information from primary menu functions can be displayed as widgets.
- 6** Shortcuts - Icons for frequently used menu items can be placed on the Home "MENU" screens as shortcuts.
 - The shortcut and widget selections can be set up in the "Customize Menus" screen which can be accessed by touching the Settings key **4** followed by the "Customize Menus" key **7** then the Select the "Customize Home Menu" **8**. This will display the "Customize Menus" screen, which allows shortcuts and widgets to be added **9**, replaced, rearranged or deleted **10**.

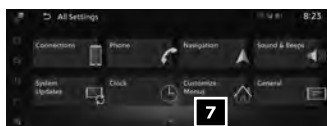

QUICK SETTINGS

- Quick Settings allows you to make quick changes to the interior of your vehicle for the audio.
- The Quick Settings screen is displayed by swiping the touch screen display from top to bottom.
- The sound settings are also located by:
 1. Touch the "Settings" key.

 


2. Touch the “Sound and Beeps” key.

3. Touch the “Sound” key.

NOTIFICATIONS

- You can review notifications that you receive by pressing the “Notification” key **11** on the screen.
- This will show you text messages and phone calls that you have received.
- Your phone must be paired by Bluetooth® in order for this feature to work.

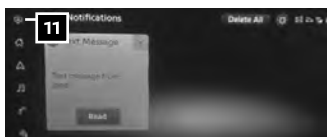

2 FINGER SWIPE

To navigate the vehicle screens:

- 2 fingers are required in order to move between the screens.
- A single finger can be used to select items on the screen.

 
INTEGRATED ROUTE PLANNER (IRP)

Intelligent route planner is a way to ensure that an EV gets to the destination (also called Smart Route Planner)



To access this feature, IRP will add charge stops along your route:

- From the Settings screen, select “Navigation” **12**. Then select “Route Settings”.
- This feature should be turned on by default and labeled as “Add Chargers Along Route”.

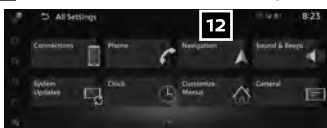


CHARGING WAYPOINTS SCREEN

To enter the Charging Waypoints Screen, Intelligent Route Planner (IRP) needs to be turned ON and a route must be set with charging waypoints added.

To get to the Charging Waypoints Screen:

- A popup is displayed when a route is completed with charging stops. The info button can be pressed to bring you to the Charging Waypoints Screen, or
- Open the navigation menu and touch the charging waypoints icon.

 The Charging Waypoints Screen displays the calculated charge stops with information for each stop on your route. This feature shows: name of charge station, number of stops, estimated arrival time, distance from current location to stop, estimated arrival SOC and charging time. Press the **i** key **13** in the corresponding line to get more details on the charging station.

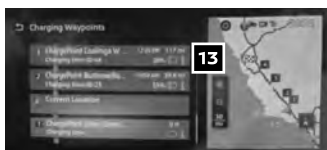

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CHARGE STATION POI SEARCH

 
 
 
 
"Charge Station POI Search" is located on the bottom bar **14** on the navigation screen.

- This feature will automatically pull up a list of chargers near you and list them on a map to show their location.

DETAIL CHARGE STATION INFORMATION

The Detail Charge Station Information screen allows you to view information about charging stations near you. These can be viewed both using the vehicles Onboard feature or through Google.

- Onboard shows: name, address, phone number, standard, quick, plugs, open hours and restrictions with options.
- Google shows: name, rating, address, phone number, "Go Here" option, "Call" Option, reviews, satellite view and street view.

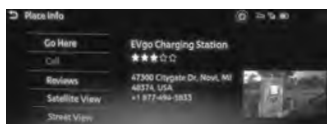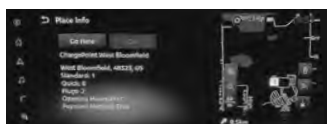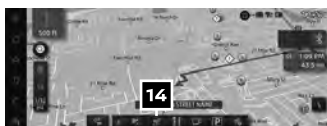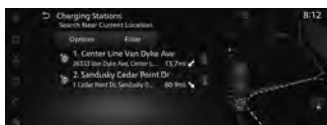

Please see your Owner's Manual for important safety

information, system limitations, and additional operating and feature information.

For more information, refer to the "Navigation (section 7)" of your NissanConnect® Manual.

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Touch the  button on the Launch Bar.
2. Touch the  Settings key **1**.
3. Touch the "Clock" key **2**.
4. Touch "Set Clock Manually" to manually adjust the time displayed on the clock. ("Clock Mode" must be set to "Manual" with navigation system).
5. Touch the  key **3** to return to the previous screen.



Please see your Owner's Manual for important safety

information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual and the "Getting started (section 2)" of your NissanConnect® Manual.

USB CONNECTION PORT INTERFACE

- The USB ports **1** (USB Type-C/USB Type-A) are located under the front of the center armrest.
- When a compatible USB memory device is plugged into one of the USB ports **1** (USB Type-C/USB Type-A), compatible audio files stored on the device can be played through the vehicle's audio system.
- Touch the "Audio" key on the Launch Bar, to view the folder list and track listing, playlist, album artwork, album name, artist and songs.



CHARGE ONLY PORT

- The USB charging ports **2** (USB Type-C/USB Type-A) are located on the back of the center armrest. These ports will charge compatible devices.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

For a full list of compatible devices, refer to your NissanConnect® Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual and the "Audio system (section 4)" of your NissanConnect® Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.



 
 
AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, wait 5 seconds, say "Cancel" or "Quit" or press and hold the  button on the steering wheel for 5 seconds.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOLUME** control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



CONNECTING PROCEDURE

1. Select the  Settings key **1** on the home menu screen.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

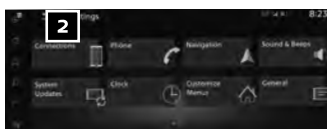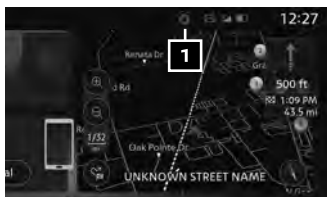


VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" tab.
3. Choose the desired entry from the displayed list.


MAKING A CALL

 1. Touch the  Phone key on the Launch Bar. The "Phonebook" screen **4** will appear on the display.
2. Select one of the options to make a call.

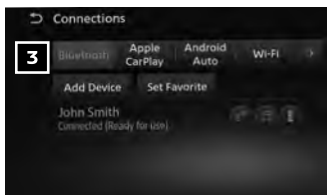


RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.

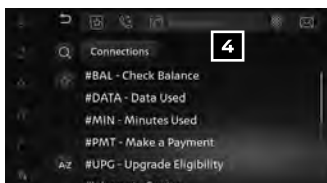

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

 - To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Hang up key on the screen.

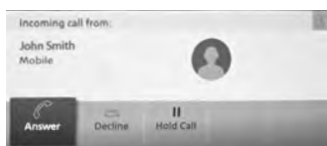

SWITCH TO HANDSET

- Start the call using your Bluetooth® hands-free phone and touch the "Use Handset" key on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Hands-Free phone (section 5)**" of your NissanConnect® Manual or please visit www.NissanUSA.com/bluetooth.



FM/AM/SiriusXM® RADIO

Touch the  Audio key on the Launch Bar to display the current audio source. Touch the Source key to access the source selection screen.

1 (ON-OFF) BUTTON

- To turn the audio system on or off, press the  (on-off) button.

2 **VOL (volume) CONTROL KNOB**

- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.
- Touch the  Settings key and then touch the "Sound" key to view all audio settings.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

3 ◀◀ / ▶▶ (SEEK and CAT/TRACK) BUTTONS

- Press the ◀◀ button or the ▶▶ button to seek up or down to the next receivable station.
- For satellite radio to switch to the first channel of the previous or next category, press the ◀◀ button or the ▶▶ button.

4 AUDIO (SOURCE) BUTTON

 
- Pressing this button will give access to the AM, FM, SiriusXM®, USB1, USB2, Bluetooth®, Apple CarPlay® or Android Auto™ audio source.
- 36 preset stations can be set for the FM, AM and satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key, "FM" key or "SiriusXM" key then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then press the corresponding station select key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system (section 4)" of your NissanConnect® Manual.

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone® apps directly from your vehicle display.
- Connect your compatible iPhone® to the USB connection port located beneath the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- There are two ways to start a Siri® session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay® screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay® screen to end the Siri® session.

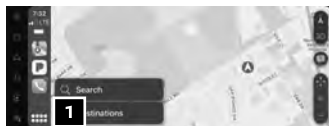

- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available during driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the  button on the Launch Bar.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **2**.
- NISSAN® Phone menu and NISSAN® Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** and the **"Applications (section 6)"** of your NissanConnect® Manual.

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto™ app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android® phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android® phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Android Auto™.
 - After the cellular phone is connected, the Android Auto™ home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed.
- There are three ways to start

Google Assistant™:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Touch the  key **1** on the launch bar.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

- To return to the Android Auto™ home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto™ screen, touch the  key **2** on the Launch Bar and then touch the exit key.
- To return to the Android Auto™ home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  key **4** on the Launch Bar, touch the "Smartphone Connection" key, and then touch the "Android Auto" key.
- NISSAN® Phone menu and NISSAN® Voice Recognition cellular phone commands will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Applications (section 6)" of your NissanConnect® Manual.

WIRELESS CHARGING (if so equipped)

The wireless charger is located under the center console arm rest. Ensure the smartphone is positioned horizontally and fully seated on the center of the charging pad over the "Qi" logo **1**. Charging will start automatically. The smartphone will be charged continuously while the power switch is in the ON position. All doors should be closed for charging operation to work properly. Phone cases may impact charging condition.

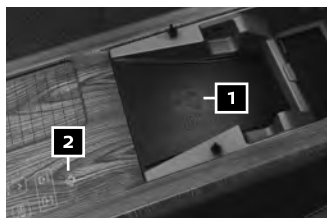


- The  indicator **2** will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

EV APP FUNCTION

 - EV Functions is a feature that allows you to get more in-depth information about the electrical functions of your vehicle.
- This feature can be accessed by:
 1. While on the Home Screen, use two fingers (in a "peace sign") to swipe the screen to the left.

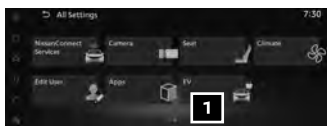

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

2. Touch the "EV" key **1**.

3. Choose which feature you want to view.

CLIMATE CTRL. TIMER

This function pre-heats or pre-cools the vehicle's passenger compartment before driving. This helps reduce power consumption from the Li-ion battery while driving.

The available setting items:

- Temperature

- Touch the +/- key to adjust the temperature.

- Timer Settings

- Touch to turn on/off the timer. The indicator light will turn on when the timer setting is turned on.

- key:

- Touch to display the Climate Ctrl. Timer setting screen. Set preferred time and day of the week for Climate Ctrl. Timer activation.

After completing the settings, place the power switch in the OFF position, and then connect the charge connector to the vehicle.

CHARGE TIMER

Use charge timer to schedule when the Li-ion battery charges. You can save three timer settings, including the charging start time and end time. The vehicle automatically begins charging at the scheduled times when the charge connector is connected to the vehicle.

The available actions are:

- Charge only at Home:

- When this item turns on, charging timer only works at home.

- Timer Settings:

- Touch to turn the timer on/off. The indicator light will turn on when the timer setting is turned on.

- key:

- Touch  key to display the charging time setting screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Charging (section CH)", "Unique EV functions (section 3)" and "Monitor, heater, air conditioner, audio and phone systems (section 4)" of your Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS



NAVIGATION SYSTEM

- Your navigation system can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The navigation system will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to your NissanConnect® Manual.

- 1** Touch-screen
- 2** Map Menu - Touch to access different navigation options such as "Save Location", "Points of Interest", "Map Icons" and "Cancel Route".
- 3** Navigation Options Bar - Bar with personally selected options to choose from.
- 4** Navigation key - Press to display the map.
- 5** ⚙ Settings - Touch to display the system settings.

SETTING A DESTINATION

You can set a destination with your navigation system using the touch-screen display or Voice Recognition.

- Touch-screen Display
 - Touch the "Destination" key on the Launch Bar and touch "Enter POI/Address". Enter a nearby location name or the street address of the desired location.
- Voice Recognition
 - Press the  button on the steering wheel, and after the tone, say "Navigation". From here, the system will give you the options available for setting a destination.

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Touch the "POI" key and then select one of the displayed options for choosing your destination. To find a specific location, touch the "Spell Name" key and type the desired location's name using the on-screen keyboard.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say "Navigation". Next, say "Nearby" or "POI by category". The system will give you the options available for setting a POI.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Navigation (section 7)"** of your NissanConnect® Manual.

NissanConnect® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle and get assistance when you need it.

NissanConnect® enables you to perform remote functions from a compatible internet-enabled smartphone, such as:

- **Battery status check** - The status of the battery can be checked even if you are not in the vehicle.
- **Unplugged status and charge status** - A notification e-mail can be sent if the charging connector is disconnected or if charging is complete.
- **Remote charge and remote climate control** - Start battery charging, or climate controls can be set.
- **Destinations by Google™** - Allows you to search for locations near your vehicle's current location, near a plotted destination, near the map's scroll position or near a searched city center.

To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Follow the prompts to enroll in NissanConnect® Services. Next, download the NissanConnect® Services app on your compatible iPhone® or Android® smartphone and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect® Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect® Services can be found in your NissanConnect® Manual.

- **Automatic Collision Notification** - A service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

 
 
 
 
- **Connection to Roadside Assistance** - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance in non-emergency situations.
- **Stolen Vehicle Locator** - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock** - For use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect® Services companion app or website or contact a NissanConnect® Services Response Specialist.
- **Alarm Notification** - This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert** - Use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect® Services companion app.
- **Curfew Alert** - Specify curfew limits via the NissanConnect® Services companion app and will be notified via a selected method if curfew is violated.
- **Route Planner** - Allows you to plan your itinerary and simplify your trip. By entering a starting point and end destination, Route Planner will look at the vehicle's range and suggest routes by identifying charging station waypoints along the way.
- **Boundary Alert** - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect® Services companion app.
- **Speed Alert** - Sends you alerts when your vehicle speed exceeds a threshold you have set on the companion app.

To access these features in your vehicle:

- From the Home Screen **1**, swipe the screen to the left.
- Touch the "All Apps" key **2**.
- Touch the "NissanConnect Services" key **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual and the **"Introduction (section 1)"**, the **"Getting started (section 2)"**, the **"Unique EV functions (section 3)"**, the **"Applications (section 6)"** and the **"Troubleshooting guide (section 9)"** of your NissanConnect® Manual.

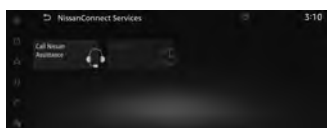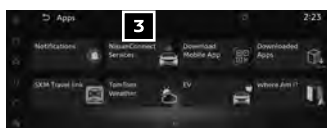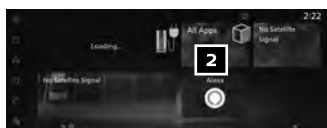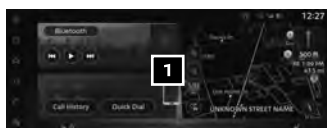

SXM TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SXM Travel Link and SiriusXM® Traffic capabilities.
- Touch the **i** Info key to access SiriusXM® Travel Link and SiriusXM® Traffic.
- SiriusXM® Travel Link provides access to real-time weather information and forecasts, Charging Station Info, movie listings, sport scores and stock quotes.
- SiriusXM® Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

 
 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to "Navigation (section 7)" of your NissanConnect® Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the date, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.

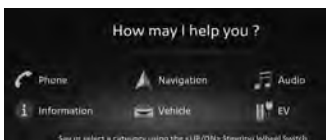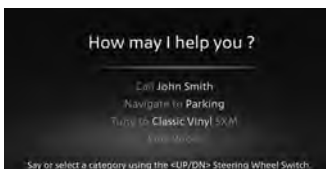

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

 
*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Hands-Free Phone (section 5)"** of your NissanConnect® Manual.

BLUETOOTH® STREAMING AUDIO*

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- If the device needs to be connected, refer to the connecting procedure within this guide.
- To use Bluetooth® streaming audio:
 - Touch the "Settings" key on the main menu screen, then touch the "Connections" key **1**.
 - On the "Bluetooth" tab, touch the  key **2** next to you connected phone.
 - Touch the "Bluetooth Audio" key **3** to turn this feature on to "Active".

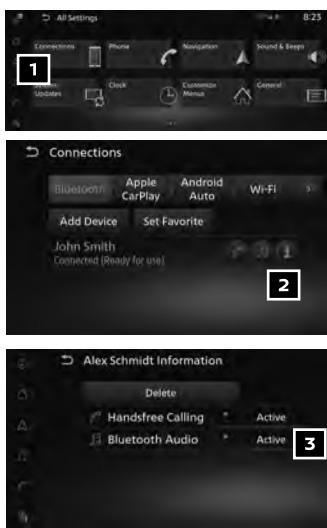

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Audio system" (section 4)** of your NissanConnect® Manual or www.NissanUSA.com/bluetooth.

 
VOICE CONTROL WITH NATURAL COMMANDS

AWAKE-WORDS CAPABILITY "HELLO NISSAN"

- Awake words is a feature that allows you to interact with your vehicle while loud music is playing.
- Your voice can overlap with voice guidance for navigation. It is not necessary to push any keys on your steering wheel to say the next command.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

- This feature can be found by going to:
 1. Touch the "Settings" key"
 2. Touch the "Sound and Beeps" key
 3. Touch the "System Voice" key
 4. Touch the "Allow "Hello Nissan"" Key **1**
- This feature can be used for the following items:
 - Audio
 - Navigation
 - Bluetooth

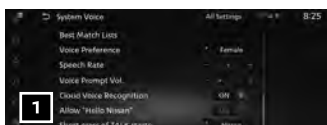



*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Voice Recognition (section 8)" of your NissanConnect® Manual or www.NissanUSA.com/bluetooth.

AMAZON ALEXA

  - Alexa Built-in can be used as a Virtual Personal Assistant. You can log in to your Amazon account and use Alexa like you would with an Amazon speaker device.
- To get to the Amazon Alexa screen:
 1. From the Home Screen **1**, swipe the screen to the left.
 2. Touch the "Alexa" key **2**.

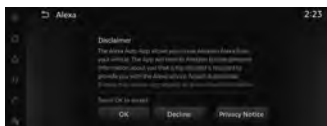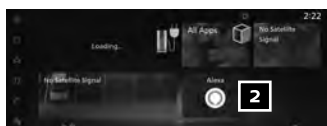

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Voice Recognition (section 8)" of your NissanConnect® Manual or www.nissanusa.com/connect/features-apps/nissanconnect-services-amazon-alexa-skill.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.



- Forward Driving Aid systems supported by these sensors include, but are not limited to:

- Intelligent Cruise Control (ICC)
- Automatic Emergency Braking (AEB) with Pedestrian Detection
- Intelligent Forward Collision Warning (I-FCW)
- Lane Departure Warning
- Intelligent Lane Intervention
- ProPILOT Assist Systems

Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual **3**

- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.



- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed. If this icon is flashing, turn on the windshield wipers to clean the front windshield and/or turn on the windshield defrost setting for a few minutes until it clears.
- Front sensor areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc.).
- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (PARK)** position and turn the EV system off. Clean the sensor areas and restart the EV system. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN certified ARIYA dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- An indicator light **1** located on the outside mirrors will illuminate if the side radar sensors detect a vehicle in the detection zone.
- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone and is detected.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

- If the turn signal is activated and a vehicle is detected, the system will chime (twice), the side indicator light will flash, and the BSW indicator will illuminate (yellow) in the vehicle information display.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The side radar sensors can detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA and BSW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT BLIND SPOT INTERVENTION (I-BSI)

- The I-BSI system helps alert the driver of other vehicles in adjacent lanes when changing lanes, and helps assist the driver to return the vehicle to the center of the traveling lane.
- An indicator light **1** located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- When the BSI system is turned on the I-BSI ON indicator light on the instrument panel illuminates.
- To turn on the I-BSI system, push the  switch **2** on the steering wheel.

NOTE: The switch design varies depending on models.

- The I-BSI system operates above approximately 37 mph (60 km/h). If the system detects a vehicle in the detection zone and your vehicle is approaching the lane marker, the BSI system provides an audible warning (three times), flashes the side indicator light and slightly applies the brakes for a short period of time on one side to help return the vehicle back to the traveling lane.
- The I-BSI system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.



DRIVING FEATURES

PROPILOT PARK (if so equipped)

ProPILOT Park is a parking assist system that can help detect an available parking space and support parallel and perpendicular back-in parking maneuvers. Once activated, the system controls the accelerator, brake, steering wheel and shifting operations in order to support the series of parking operations.

PROPILOT PARK OPERATION

1. Push the ProPILOT Park Switch **1**.
 - The ProPILOT Park display appears on the navigation system screen.
 - ProPILOT park can also be activated by touching **CAMERA** button on the navigation system and then touch the key **2** on the Intelligent Around View® Monitor screen.

NOTE: Vehicle speed must be less than 19 mph (30 km/h) to activate and search for an available parking space.

2. Select desired parking method by using the switch **3** on the screen:

- Bay Reverse parking (Perpendicular Back-in) parking: Supports reversing into a parking space where vehicles are parked next to each other or within two painted parking lines
- Parallel parking: Supports reversing into a parking space where vehicles are parking in line with each other.

3. Drive forward slowly while the system searches for a space:

- Stop the vehicle next to the available space within approximately 3 ft (1 m). When a parking space is detected, the system will provide a chime and the indicator **4** will appear.
- See owner's manual for detailed detection requirements.

4. Adjust space, if necessary.

- Using the  arrows key **5** to adjust target parking position as desired.

5. Keep the brake pedal depressed and touch the **Start** key on the screen.

- The ProPILOT Park icon turns green and the brakes are applied automatically to keep the vehicle stopped.
- Parking control cannot be started if the system detects an obstacle with the parking sonar sensors or cameras.

6. Release the brake pedal and monitor surrounds:

- Vehicle will move in the intended direction as indicated by the green rectangle.
- Vehicle will control accelerator, brake, steering wheel and gear shift as necessary to complete the parking maneuver.



Bay reverse parking



Parallel parking



- Parking control may be interrupted if an obstacle or object is detected in the intended path.
- See owner's manual for additional deactivation or cancellation conditions.

7. Parking complete.

- When the vehicle is in the intended parking space as indicated by the blue rectangle the parking maneuver is complete.
- The shift position changes to **P (PARK)** and the electronic parking brake is applied.
- A sound and display will notify the driver when the parking control ends.

 
NOTE: Sonar system alerts are active during the parking maneuver.

TO PAUSE THE SYSTEM

- Apply the brake pedal. System will resume when brake pedal is released.

TO DEACTIVATE THE SYSTEM

- Shift Gears
- Apply steering wheel input
- Press the accelerator pedal

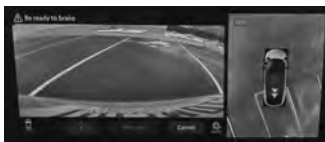

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.

PROPILOT ASSIST SYSTEMS

 
ProPILOT Assist is a hands-on driver assistance system intended for limited access expressways and is not designed to be used on city/rural streets. The system is intended to help keep the vehicle in the center of the lane and help maintain a preset distance to the vehicle ahead traveling in the same lane. The two primary features of ProPILOT Assist include Intelligent Cruise Control (ICC) and Steering Assistance. ProPILOT Assist with Navi-link equipped vehicles include Speed Adjust by Route and Speed Limit Assist. ProPILOT Assist 2.0 (if so equipped and subscribed) offers hands-off capability on compatible freeways along with features like Lane Change Assist, Passing Assist, and Route Assist. Driver is responsible for the driving task and must be prepared to steer and brake the vehicle at all times.

Vehicles equipped with ProPILOT Assist 2.0 will have two roof mounted antennas.

PROPILOT ASSIST OPERATION

1. Push the  ProPILOT Assist switch **1** on the steering wheel.
 - The ProPILOT Assist display appears
 - Safety Shield status screen is temporarily displayed.

NOTE: The switch design varies depending on models.

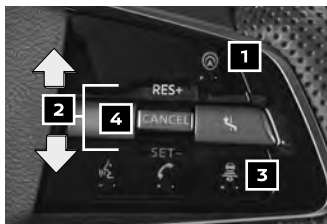

2. Once the vehicle is at the desired speed, push down the cancel switch to the

DRIVING FEATURES

SET- direction **2**.

- The vehicle will maintain the set speed, unless the vehicle detects a slower vehicle in the traveling lane, or Speed Limit Assist or Speed Adjust by Route is active.

3. Adjust distance setting using the distance switch **3**, if necessary.

- Distance will vary based on vehicle speed as this setting is time dependent, not based on vehicle length.

TO INCREASE SPEED

- Push up and hold the **CANCEL** switch **4** to the **RES+** direction **2** to increase speed in 5 mph (5 km/h) increments.
- Push up and quickly release the **CANCEL** switch to the **RES+** direction **2** to increase speed by 1 mph (1 km/h).
- Accelerate to new desired speed and press the **CANCEL** switch **4** to the **SET-** direction **2**.

TO DECREASE SPEED

 
- Push down and hold the **CANCEL** switch **4** to the **SET-** direction **2** to decrease speed in 5 mph (5 km/h) increments.
- Push down and quickly release the **CANCEL** switch **4** to the **SET-** direction **2** to decrease speed by 1 mph (1 km/h).

TO CANCEL THE SYSTEM

- Push the **CANCEL** switch **4** or tap the brake pedal.
- These actions will keep the system in standby. To resume, push up the cancel switch to the **RES+** direction **2** to return to the original vehicle set speed, or push down the cancel switch to the **SET-** direction **2** to set the current vehicle speed.

FOR INTELLIGENT CRUISE CONTROL (by disabling Steering Assist)

- Push the  Steering Assist switch **5** on the instrument panel to the left of the steering column or in the settings of "Driver Assistance" in the vehicle information display.

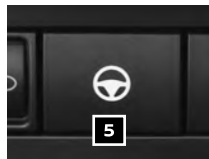

FOR CONVENTIONAL (fixed speed) CRUISE CONTROL

- Push and Hold the  ProPILOT Assist switch **1** on the steering wheel for longer than approximately 1.5 seconds.

NOTE: No other ProPILOT Assist features will be available in conventional (fixed speed) cruise control mode.

UNDERSTANDING THE DISPLAY

Display color will change depending on ProPILOT Assist modes. See Table. Images shown are examples - actual condition may vary slightly.

Color	Meaning
None	System off
Gray	Standby
White	ICC system active
Green	Hands-On mode active
Blue	Hands-Off mode active (ProPILOT Assist 2.0 only)

6 ProPILOT Assist indicator

- Indicates the status of the ProPILOT Assist function.

7 Steering Assist indicator

- Indicates the status of the Steering Assist function.

8 Vehicle Set Speed Indicator

- Indicates the vehicle set speed.

9 Intelligent Cruise Control (ICC) Status Indicator

- Displays the status of the speed control including the distance setting and detection of a lead vehicle.

10 Speed Limit Adjust Indicator

- Indicates the detected speed limit. "A" indicates Auto mode.

11 Route Assist Indicator

- Icon is displayed when Route Assist feature is available.

12 Lane Change Assist Indicator

- Icon is displayed when Lane Change Assist feature is available.

13 Lane Marker Indicator

- Displays real world lane condition.

14 Blind Spot Detection

- Indicates when a vehicle is detected in the blind spot.

15 Surrounding Vehicle Display

- Displays other detected vehicles, including passenger vehicles, trucks and motorcycles. The multi-lane display is only available on HD mapped divided highways

ProPILOT Assist with NAVI-link display



ProPILOT Assist 2.0 display



UNDERSTANDING THE FEATURES OF PROPILOT ASSIST SYSTEMS

INTELLIGENT CRUISE CONTROL (ICC)

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h). Hands-off driving is only available for speeds up to 85 mph (136 km/h).
- When a vehicle is detected in the lane ahead, the ICC system helps control the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- The system may not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone. The driver must control the vehicle to prevent a collision.

DRIVING FEATURES

 
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and keep the vehicle stopped.
- When the vehicle ahead begins to move, push and release the toggle switch towards **RES+** or tap the accelerator pedal if your vehicle has been stopped for more 3 seconds (and up to 30 seconds on the highway). The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system may warn the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected.

STEERING ASSIST

- When the lane markers are clear and consistent on both sides of the vehicle, the Steering Assist system assists the driver to help keep the vehicle within the traveling lane.
- This feature can operate when vehicle speed is above 37 mph (60 km/h).
- Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- With the Steering Assist active, when a curve or strong cross wind exceeds the capabilities of the system and your vehicle approaches either the left or the right side of the traveling lane, the I-LI system will flash the I-LI indicator on the vehicle information display and provide steering wheel vibration to alert the driver.
- Steering Assist may cancel or temporarily go into standby mode under the following conditions:
 - The turn signal is activated (for vehicles not equipped with ProPILOT Assist 2.0)
 - Hands are not detected on the steering wheel
 - The system cannot detect clear and consistent lane markers
 - The lane marker has been crossed


TO TURN OFF STEERING ASSIST

- Push the  Steering Assist switch **5** on the instrument panel to the left of the steering column or turn it off in the "Driver Assistance" settings under "Lane Centering Assist" in the vehicle information display.

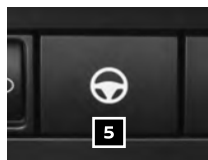


HANDS ON DETECTION

 - The vehicle uses capacitive and torque sensors in the steering wheel to detect whether the driver has their hands placed on the wheel.
- If the driver's hands are not detected on the wheel, the warning **16** appears and a series of escalating warnings will continue. Driver must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

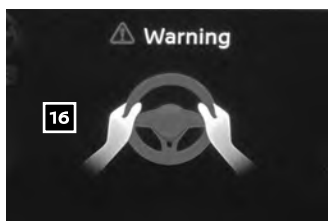

SPEED LIMIT ASSIST

 - When ProPILOT Assist is active and detects a change of the speed limit, the new speed limit sign value **17** is indicated (green outline around sign icon) in the display and can be applied to the vehicle set speed automatically or manually. The driver also has the option to add an offset to the posted speed limit.

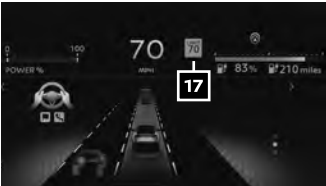

- To accept the new **SET-** speed, press the toggle switch up to accept a higher speed or press down to accept a lower speed.
- If you wish to maintain the current **SET-** speed, no action is required.
- If Speed Limit Assist is set to "AUTO" mode, the **SET-** speed will automatically change with no driver action required.

TO TURN OFF SPEED LIMIT ASSIST

- Speed Limit Assist can be turned off in the "Driver Assistance" settings under "Intelligent Cruise" in the vehicle information display through:
 - Intelligent Cruise / Speed Limit Assist / Auto/Manual/OFF
 - Intelligent Cruise / Speed Limit Assist Offset / -5mph to +5mph

SPEED ADJUST BY ROUTE

- When ProPILOT Assist is active on the freeway, the system uses road information provided by the navigation system to help reduce the vehicle speed as indicated by the Speed Adjust by Route Icon **18**.
- When approaching tight curves, this speed reduction helps the driver maintain lane center when Steering Assist is active.



- When approaching exits, it helps reduce vehicle speed through the exit ramp.
- The driver needs to maintain vehicle control and apply braking whenever necessary. For best results, a route must be set using in vehicle navigation.

TO TURN OFF SPEED ADJUST BY ROUTE

- Speed Adjust by Route can be turned off in the "Driver Assistance" settings under "Intelligent Cruise" in the vehicle information display.

HANDS-OFF DRIVING

- ProPILOT Assist 2.0 allows the driver to take their hands off the steering wheel when certain conditions are met as indicated by blue indicators.
- While hands are off the steering wheel, the vehicle is monitoring driver's attention to the road ahead with a driver facing camera located on the steering column.


Mode	Display Color	Steering Assist Symbol
OFF	None	None
Standby	Gray	None
Intelligent Cruise Control	White	
Hands-On mode	Green	
Hands-Off mode	Blue	

DRIVING FEATURES

- For Hands-Off driving, the vehicle must be on a highway or limited access freeway as defined by the HD map as indicated by the Hands-Off steering assist indicator and blue display.
 - For a detailed HD map, visit www.nissanusa.com/experience-nissan/news-and-events/propilot-assist-2-0-driving-map.html.
- The system may request the driver to place their hands back on the wheel at any time if conditions are no longer met – including construction zones, tight curves, merging lanes, as examples.
- Hands-off driving is only available for speeds up to 85 mph (136 km/h).
- **Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

DRIVER MONITOR

 - ProPILOT Assist 2.0 uses a driver facing camera located on the steering column to monitor the driver's attention to the road ahead.
- If the system does not detect driver's attention to the road ahead, a series of escalating warnings will display **16** in an effort to draw the driver's attention back forward.
- On ProPILOT Assist 2.0 vehicles, the driver monitor is monitoring driver attention in all driving conditions, not just when ProPILOT Assist 2.0 is active. System will default to ON when ProPILOT Assist 2.0 is activated.

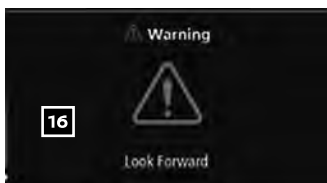

TO TURN OFF DRIVER MONITOR

- Driver Monitor can be turned off in the "Driver Assistance" settings under "Driver Monitor" in the vehicle information display.

NOTE: For more information, see "Driver Monitor System" later in this section.

 
LANE CHANGE ASSIST (A feature of ProPILOT Assist 2.0)

- When ProPILOT Assist 2.0 is active and the Lane Change Assist indicator **19** is illuminated in blue, Lane Change Assist can help the driver with steering control during a lane change when the turn signal is activated and conditions are met.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change
- **Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**



TO TURN OFF LANE CHANGE ASSIST

- Lane Change Assist can be turned off in the "Driver Assistance" settings under "Lane Change Assist" in the vehicle information display.

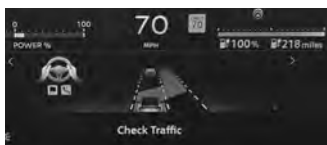

PASSING ASSIST (A feature of ProPILOT Assist 2.0)

- When ProPILOT Assist is active and the Lane Change Assist indicator **20** is illuminated in blue, the Passing Assist feature can suggest a lane change to the left when a slower vehicle is detected ahead.
- The driver can accept to pass the slower vehicle by pressing the lane change assist switch on the steering wheel.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.



TO ADJUST SUGGESTION TIMING OR TURN OFF PASSING ASSIST

- Passing Assist can be changed or turned off in the "Driver Assistance" settings under "Lane Change Assist" in the vehicle information display.


Setting	Lead vehicle speed
Sport	3 MPH + (5 km/h) slower
Standard	6 MPH + (10 km/h) slower
Comfort	9 MPH + (15 km/h) slower

ROUTE ASSIST (A feature of ProPILOT Assist 2.0)

- When ProPILOT Assist is active and the Route Assist indicator **21** is illuminated in blue, the Route Assist feature can suggest an upcoming lane change according to the route set in the navigation system

NOTE: A route must be set using the onboard navigation system inside the vehicle and does not operate with third party navigation systems.

 - The driver can accept to the lane change by pressing the lane change assist switch on the steering wheel.
- If multiple lane changes are required, an indicator will appear in the display **22**. By accepting with the steering wheel switch, the system is capable of making all necessary lane changes when conditions are met. This feature can be disabled to require approval for each necessary lane change.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

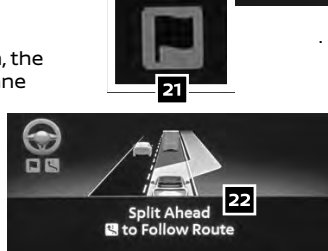

TO TURN OFF OR CHANGE ROUTE ASSIST MODE

- Route Assist can be turned off in the "Driver Assistance" settings under "Lane Change Assist" in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or unique traffic conditions. Clean/defrost your windshield and/or cleaning sensor to keep this feature is working properly. Please refer your Owner's Manual for more information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection System can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane or with a pedestrian.
- The AEB with Pedestrian Detection System will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection System operates at speeds between 6-37 mph (10-60 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator **1** will illuminate. In addition, the system applies partial braking. If the driver does not take action, the AEB with Pedestrian Detection System will provide a second set of audible and visual warnings **2** to the driver and then automatically apply harder braking.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the power switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the navigation unit, or by moving the shift lever to the **R (REVERSE)** position. The monitor displays various views of the position of the vehicle.
- When the vehicle is in the **P (PARK)**, **N (NEUTRAL)** or **D (DRIVE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:



Front view & bird's-eye view



Press

CAMERA

Front view & front-side view



Front-wide view



 
Press

CAMERA

Press

CAMERA

- When the vehicle is in the **R (REVERSE)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

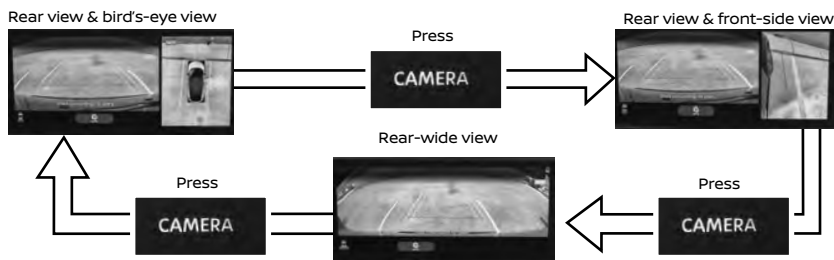

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.

- Red 1.5 ft (0.5 m)
- Blue 3 ft (1 m)
- Blue 7 ft (2 m)
- Blue 10 ft (3 m) (if so equipped)

- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- There are some areas where the system will not show objects.

 
- When in the front or the rear view display, an object below the bumper or on the ground may not be viewed **2**.
- When in the bird's-eye view, a tall object near the seam of the camera detecting areas **3** will not appear in the monitor.

- The distance between objects viewed on the Intelligent Around View Monitor differs from the actual distance.

- Objects in the bird's-eye view will appear farther than the actual distance.

MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P (PARK)**, **R (REVERSE)**, **N (NEUTRAL)** or **D (DRIVE)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Green MOD icon **4**; the system is active.
 - Gray MOD icon; the system is not active.

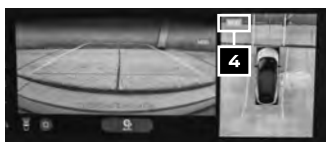

DRIVING FEATURES

- No MOD icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the “Settings” menu.

- The MOD system will not operate if the liftgate is open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls (section 2)” and the “Monitor, heater, air conditioner, audio and phone systems (section 4)” of your Owner's Manual.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

 
- Hill Start Assist system will operate automatically under these conditions:
 - The shift lever is placed in the **D (DRIVE)**, **B** mode or **R (REVERSE)** position.
 - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist system will not operate when the shift lever is in the **N (NEUTRAL)** or **P (PARK)** position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving (section 5)” of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (REVERSE)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning indicator **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.
- The RAB system can be turned on and off in the “Driver Assistance” settings under “Emergency Assist” in the vehicle information display.

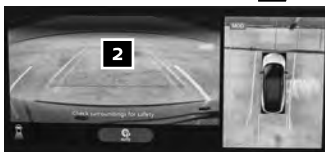

When the RAB system is turned off, the RAB system warning light **1** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving (section 5)” of your Owner's Manual.

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will vibrate and the LDW light **1** on the vehicle information display will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off in the "Driver Assistance" settings under "Lane Assist" in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low-speed.
- When the vehicle starts to move, it produces a sound. The sound stops when the vehicle speed reaches approximately 25 mph (40 km/h) while accelerating.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview (section EV)" and the "Instruments and controls (section 2)" of your Owner's Manual.

e-STEP SYSTEM

- The e-Step system enables the driver to slow the vehicle by operating only the accelerator pedal. This system helps to keep the driver from moving his/her foot between the accelerator pedal and the brake pedal.
- When the e-Step system is activated, the regenerative brake is enhanced and the driver can adjust the vehicle speed by only depressing or returning the accelerator pedal.
- Be sure to confirm the status of the e-Step system in the vehicle information display before driving.



DRIVING FEATURES

- To activate or deactivate the e-Step system, place the power switch in the **ON** position and push the e-Step switch **1** located on the center console.
- The e-Step system indicator illuminates **e-Step** **2** in the vehicle information display when the e-Step system has been activated. To turn the e-Step system off, push the e-Step switch.
- To turn the e-Step system off push the e-Step switch **1**.
- The e-Step system will not function under the following conditions.
 - When the vehicle is placed in the **P (PARK)** or **N (NEUTRAL)** position.
 - When the cruise control (if so equipped), ProPILOT Assist (if so equipped) or Automatic Emergency Braking (AEB) is operated.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT DRIVER ALERTNESS (I-DA) (if so equipped)

- When Driver Alertness **1** is selected in the vehicle information display, the system uses an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the "Take a Break?" message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).

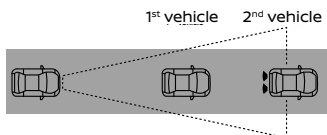

 - If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator **1** and sounding an alert.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

SHIFT CONTROL SYSTEM

This vehicle is equipped with an electric shift control system **1**, providing smooth and easy shift lever operation.

- There are five shift positions for operating the vehicle: **P (PARK)**, **R (REVERSE)**, **N (NEUTRAL)**, **D (DRIVE)** and **B** mode.
 - **P (PARK)** – Activated by pushing the **P (PARK)** switch on the shift lever when the vehicle has come to a complete stop.
 - **R (REVERSE)** – Use this position to back up. Make sure that the vehicle is completely stopped before selecting the **R (REVERSE)** position.
 - **N (NEUTRAL)** – Neither forward nor reverse gear is engaged. The vehicle can be placed in the READY to drive position in this position.
 - **D (DRIVE)** – For normal driving, it is activated by moving the shift lever down. The shift lever will then return to the home position.
 - **B** mode – Engages the regenerative braking system more aggressively when decelerating, helping to put energy back into the battery pack. To enter **B** mode, the vehicle must be in **D (DRIVE)** and then move the shift lever to the **D (DRIVE)** position again. The shift lever will then return to the home position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview (section EV)" and the "Starting and driving (section 5)" of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure VDC is on before driving the vehicle.
- VDC should remain on when driving, except when freeing the vehicle from mud or snow.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
 
 
For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

HEAD UP DISPLAY (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle speed
 - Navigation
 - Driving Assist
 - Traffic Sign
 - Audio
 - TEL/SMS
- Press the Head Up Display (HUD) switch **1** on the lower instrument panel to turn the system on and off.
 - To adjust the Head Up Display settings, when the system is on:
 1. Press the ◀▶ arrows on the steering wheel until you get to the "Settings" menu in the vehicle information display. Press the **OK** button to make your selection.
 2. Press the **OK** button to select "Head-Up Display" **2**.
 3. Adjust the positioning of the Head Up Display on the windshield by making a selection and scrolling the scroll dial **3** on the steering wheel to adjust features such as the height **4** and brightness **5**.

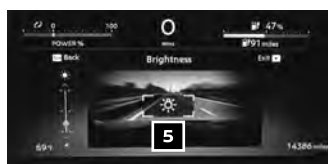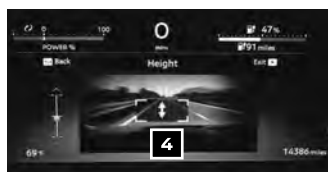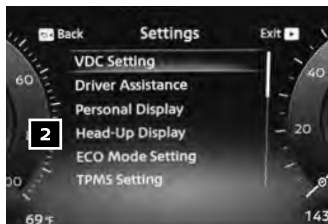

The following features can be adjusted through the "Settings" menu in the vehicle information display:

- Brightness
- Height
- Rotation
- Content Selection
- Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

DRIVER MONITOR SYSTEM (if so equipped)

The Driver Monitor System determines if the driver is monitoring the road ahead, in all driving conditions, with a driver-facing camera located on the steering column **1**. It is the driver's responsibility to pay attention in order to avoid these alerts:



FIRST WARNING

- A beep and message will appear to draw the driver's attention toward the road.
- The driver must look ahead to clear the message.

SECOND WARNING

- The message changes and request to hold the steering wheel appears.
- Message flashes with escalating beeping sounds to draw driver's attention
- Drive must place their hands back on the steering wheel to apply light torque to the steering wheel to clear the message.

THIRD WARNING

- Vehicle will apply 3 brake pulses to alert the driver of failure to comply.
- Drive must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

EMERGENCY STOP

- Emergency warning sound will play and a "Take Vehicle Control" and/or "Slowing to Stop" warning message will display.
- The vehicle will gradually slow to a complete stop in the traveling lane and the hazard indicator lights will automatically activate when the vehicle reaches approximately 40 mph (65 km/h).
- After the emergency stop, the vehicle will be connected to the NissanConnect® Services Response Center to call for help.
- Driver must place their hands back on the steering wheel or apply light torque to the steering wheel to deactivate the emergency stop.

If the system does not detect the driver's attention on the road, a series of warnings will display in an effort to draw the driver's attention back forward.

TO ENABLE/DISABLE DRIVER MONITOR

- The Driver Monitor system can be turned on and off in the "Driver Assistance" settings under "Driver Monitor" in the vehicle information display.

NOTE: Driver Monitor is required for ProPILOT Assist 2.0 hands-off driving and will default to ON when ProPILOT Assist 2.0 is activated.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving (section 5)"** of your Owner's Manual.

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2024/ariya or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

