



QUICK REFERENCE GUIDE

2024 KICKS


COCKPIT OVERVIEW



COCKPIT OVERVIEW

- 1** Vehicle Information Display / Trip Computer
- 2** Headlight and Turn Signal Switch
- 3** Low Tire Pressure Warning Light (!)
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio Control /
Vehicle Information Display
- 6** Cruise Control / Intelligent Cruise Control (if so equipped) / Bluetooth® Switches
- 7** Fuel-Filler Door Release 
- 8** Hood Release 
- 9** Tilt and Telescopic Steering Wheel Lock Lever

INSTRUMENT PANEL

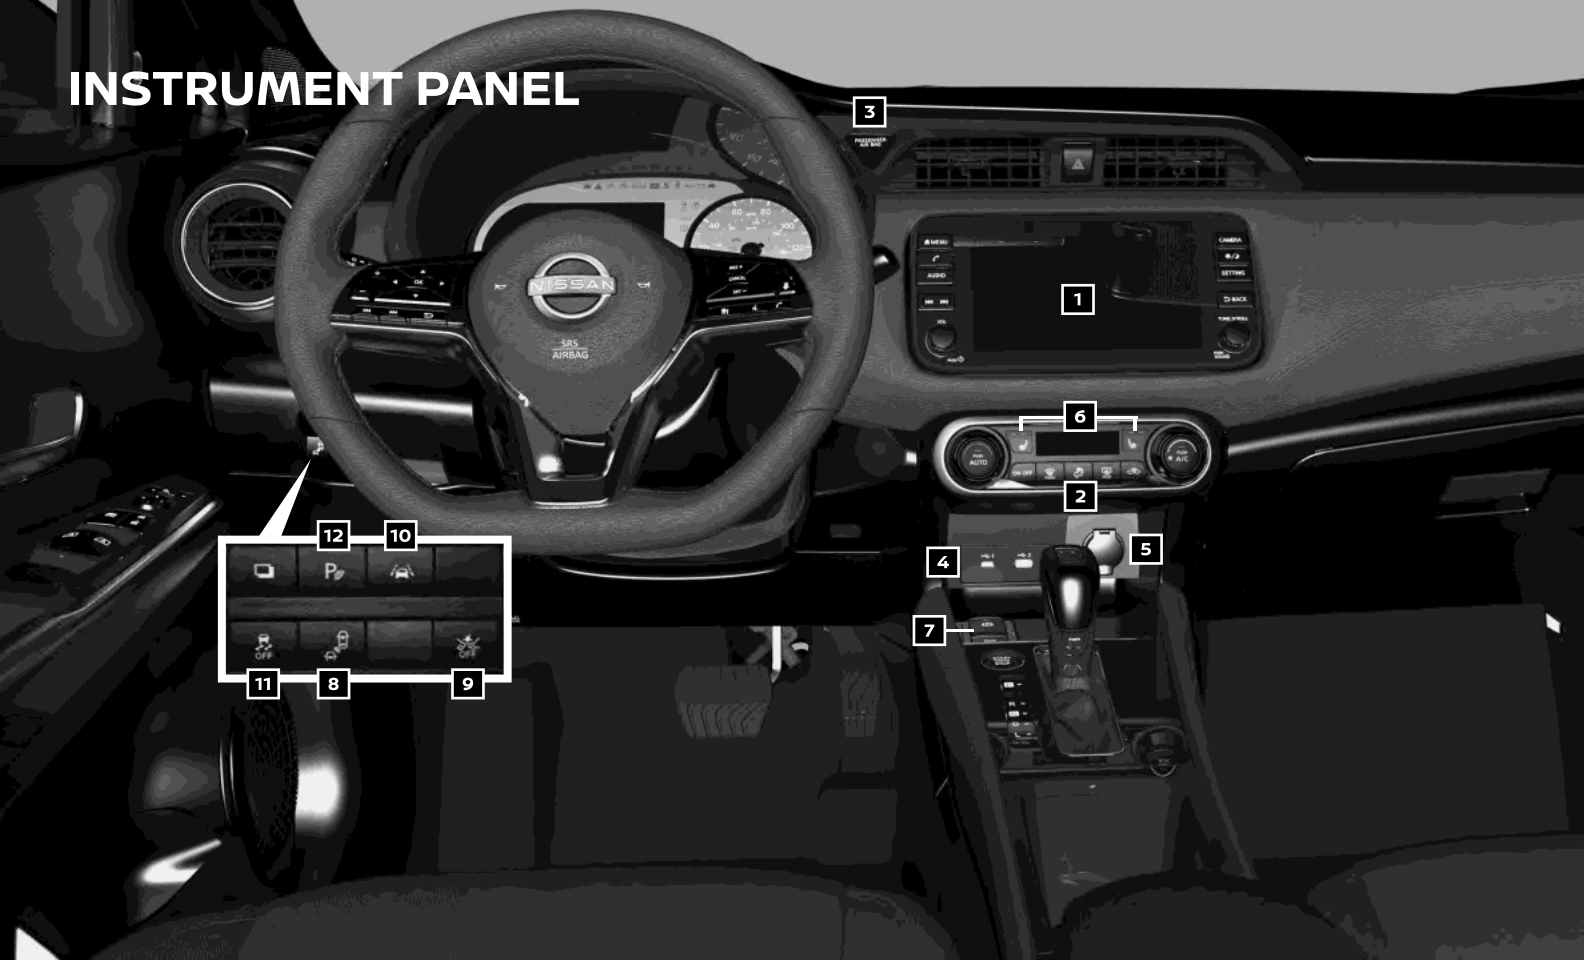

3

1

6

2

4

5

7

12

10

11

8

9

INSTRUMENT PANEL

- 1** Center Display / Rearview Monitor Display
/ Around View® Monitor Display (if so equipped)
- 2** Climate Control Panel
 - Heater and Air Conditioning (automatic) (if so equipped)
 - Manual Air Conditioning
 - Front and Rear Window Defroster
- 3** Front Passenger Air Bag Status Light
- 4** USB Connection Port Interface
- 5** Power Outlet
- 6** Heated Seats Switches (if so equipped)
- 7** Electronic Parking Brake / Automatic Brake Hold Switch
(if so equipped)
- 8** Blind Spot Warning (BSW) Switch (if so equipped)
- 9** Drive Systems Off Switch (if so equipped)
- 10** Lane Departure Warning (LDW) Switch (if so equipped)
- 11** Vehicle Dynamic Control (VDC) Off Switch (if so equipped)
- 12** Rear Sonar System (RSS) Off Switch (if so equipped)

TABLE OF CONTENTS

GETTING STARTED

NISSAN Intelligent Key® System.....	2
Seat Adjustments.....	3
2 nd Row Seats.....	3
Starting/Stopping the Engine.....	4
Tilt and Telescopic Steering Wheel Adjustments.....	4
Outside Mirror Control Switch.....	4
Emergency Call (SOS) Button (if so equipped).....	5
Heater and Air Conditioner (automatic) (if so equipped).....	5
Headlight Control Switch.....	6
Wiper and Washer Switch.....	8
Vehicle Information Display.....	8
Outside Temperature Display.....	10
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert.....	10
Fuel-Filler Door.....	11
Liftgate Release.....	11

AUDIO AND BLUETOOTH® SYSTEMS

System Updates.....	12
Clock Set/Adjustment.....	13
USB Connection Port Interface.....	13
Bluetooth® Hands-free Phone System.....	14
FM/AM/SiriusXM® Radio (if so equipped).....	16
Apple CarPlay®.....	17
Android Auto™.....	18
NissanConnect® Services Powered by SiriusXM® (if so equipped).....	19
Wi-Fi (if so equipped).....	20
Hands-free Text Messaging Assistant (if so equipped).....	21
Siri® Eyes Free.....	21

DRIVING FEATURES

Electronic Parking Brake (if so equipped).....	22
Forward Driving Aid Sensors (if so equipped).....	22
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA).....	23
Cruise Control (if so equipped).....	24
Intelligent Cruise Control (ICC) (if so equipped).....	24
Automatic Emergency Braking (AEB) with Pedestrian Detection System.....	25
Vehicle Dynamic Control (VDC).....	26
Hill Start Assist.....	26
Intelligent Around View® Monitor (if so equipped).....	26
Rear Automatic Braking (RAB).....	28
Lane Departure Warning (LDW).....	29
Rear Cross Traffic Alert (RCTA).....	29



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
 - Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
 - Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM


The NISSAN Intelligent Key® System allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For the Remote Engine Start to function, the vehicle must be in the **P** (Park) position with the ignition off and all doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Aim the Intelligent Key at the vehicle.
 2. Press the **i** button **1**.
 3. Within 5 seconds, press and hold the engine start **Q** button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside air temperature.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 and 2 to extend the time for an additional 10-minute period.
 - After two remote starts, the ignition switch must be cycled before the Remote Engine Start can be used again.
- To start driving, depress the brake pedal and press the ignition switch button.

LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch (if so equipped).
- To lock the vehicle, push either door handle request switch **3** (if so equipped), push the liftgate request switch (if so equipped) **4** or press the **i** button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch (if so equipped) **3** once and the corresponding door will unlock. Push the request switch **3** again within 30 seconds; all other doors will unlock, or
 - Press the **i** button **5** on the key fob to unlock the driver's side door. Press the **i** button **5** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **▶** button **6** for longer than 1 second. Once activated, the headlights will flash and the panic alarm will stay on for a period of time.

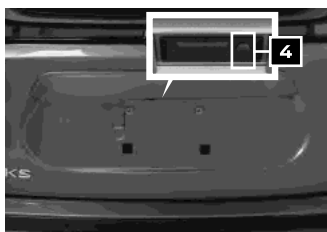

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P** (Park) position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, press the ignition switch **START/STOP** button while depressing the brake pedal and the engine will start.

* State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"**, the **"Pre-driving checks and adjustments (section 3)"**, the **"Starting and driving (section 5)"** and the **"Do-it-yourself (section 8)"** of your Owner's Manual.

SEAT ADJUSTMENTS

- To slide the seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



SEAT LIFTER (driver's seat)


- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** of your Owner's Manual.

2ND ROW SEATS

- To lay the seatback down:
 - Pull the release knob **1** to fold the seatback forward.
- To lay the 2nd row seats down flat:
 - Remove the rear headrests **2** and stow them on the floor.
 - Fold both seatbacks forward **3**.

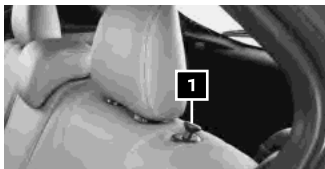

GETTING STARTED

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.



STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position.



TURNING THE ENGINE OFF

- Move the shift lever to the **P** (Park) position, apply the parking brake and push the ignition switch to the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL ADJUSTMENTS

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.
- Lock the steering wheel in place by pulling the lock lever up firmly.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



OUTSIDE MIRROR CONTROL SWITCH

- Move the small switch **1** to select the right or left side mirror.
- Adjust each mirror to the desired position using the large switch **2**.
- To prevent accidentally moving the mirror, move the small switch **1** to the center (neutral) position.

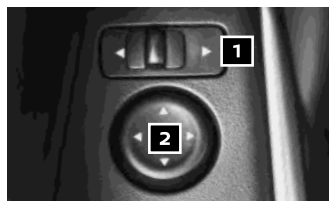

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.


EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of emergency.
- To use this feature, press the switch cover **1** to release, then press the **SOS** button on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call **855-426-6628**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

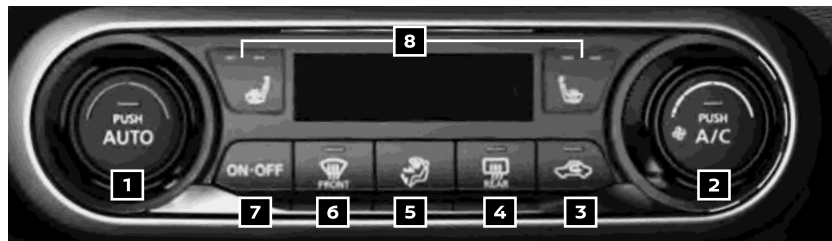

HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 TEMPERATURE CONTROL DIAL / AUTO BUTTON

- Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the temperature control dial counterclockwise for cooler air or clockwise for warmer air.

2 FAN SPEED CONTROL DIAL / A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the vehicle and defog the windows.
- Turn the fan speed control  dial to manually control the fan speed.

GETTING STARTED

3 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

4 REAR WINDOW AND OUTSIDE MIRRORS (if so equipped) DEFROSTER BUTTON

- To defog/defrost the rear window glass and outside mirrors (if so equipped), push the rear window defroster  switch **4**. Push the switch again to manually turn the rear defroster off. This function automatically turns off after approximately 15 minutes.

5 MODE BUTTON

- Press the **MODE** button to cycle through the following air flow outlets:
 -  Air flows from the center and side vents.
 -  Air flows from the center, side and foot outlets.
 -  Air flows mainly from the foot outlets.
 -  Air flows from the front defroster and foot outlets.

6 FRONT DEFROSTER BUTTON

- Press the front defroster  button. If it is difficult to defrost the windows, press the **A/C** button **2**. This feature removes humidity from the air.
- To set the front defroster on high, turn the fan speed control  dial **2** all the way up and turn the driver's side temperature control dial **1** all the way to the right.

7 ON-OFF BUTTON

- Press the **ON/OFF** button to turn the climate controls on or off.

8 HEATED SEAT SWITCHES (if so equipped)

- Press the driver's or passenger's heated seat button to control the heat.
- Press the button once, twice or thrice to set level as desired.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

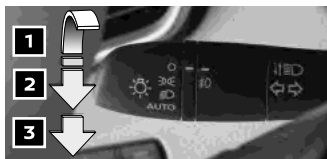

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then turn the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

HIGH BEAM SELECT

- With the headlights ON (in the  position), push the headlight control switch forward **4** to select the high beam function. The indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.




HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **2** or select the low beam position by placing the lever in the neutral position.

FOG LIGHT SWITCH (if so equipped)

- To turn the fog lights on, turn the headlight switch to the  or  position.
- Turn the switch (inside collar) to the  position **6** to turn the fog lights on.
- Turn the switch (inside collar) to the OFF position to turn the fog lights off.

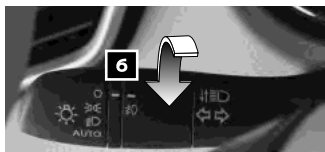

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

GETTING STARTED

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist — One sweep operation of the front wipers.
- 2** Intermittent — Front wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper speed.
- 4** Low — Front wipers operate at a continuous low-speed.
- 5** High — Front wipers operate at a continuous high-speed.
- 6** Front Washer — Pull the lever toward you to activate the front washer. The front wipers will operate several times.

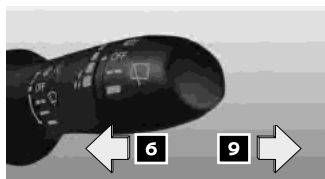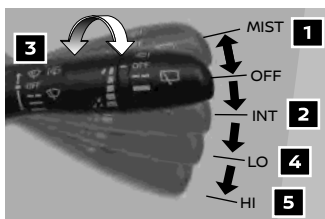


REAR WIPER AND WASHER

- 7** Intermittent — Rear wiper operates intermittently.
- 8** Low — Rear wiper operates at a continuous low-speed.
- 9** Rear Washer — Push the lever forward to activate the rear washer. The rear wiper will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

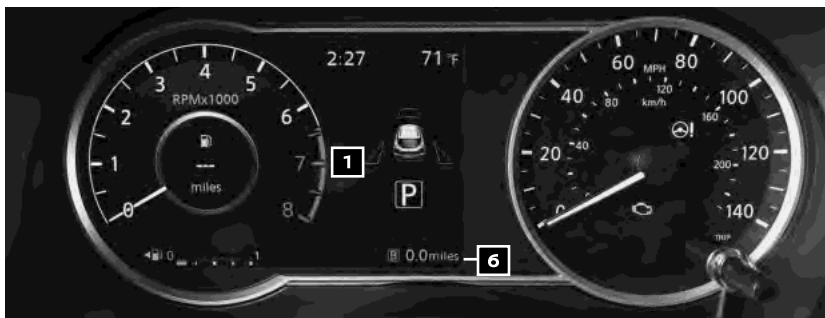

VEHICLE INFORMATION DISPLAY

The vehicle information display is located above the steering wheel.

Press the arrows on the steering wheel to change between different screens and the tachometer.


The vehicle information display **1** displays items such as:

- Audio Information
- Drive Computer Information
- Fuel Economy Information
- Indicators and Warnings
- Vehicle and Meter Display Settings
- Odometer/twin trip odometer
- Gear Position Indicator (P, R, N, D, L)
- Distance To Empty and Fuel Indicator

USING THE VEHICLE INFORMATION DISPLAY


The vehicle information display can be changed using the **OK** button **2** and the **▲** or **▶** buttons **3** located on the steering wheel.

- Press the **▶** buttons **3** on the steering wheel to change the display mode.
- Press the **▲** buttons **3** on the steering wheel to navigate through the mode's menu.
- Press the **OK** button **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.

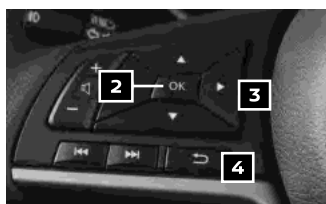

RESETTING THE TRIP COMPUTER

Pushing the TRIP RESET switch **5** for more than 1 second resets the currently displayed trip odometer **6** to zero.

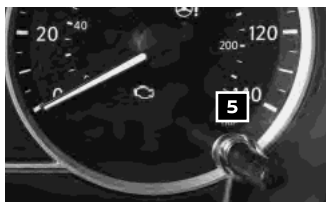

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- | | | |
|---------------------|--------------------|-----------------|
| ■ Driver Assistance | ■ TPMS Settings | ■ Clock |
| ■ Customize Display | ■ Unit / Language | ■ Maintenance |
| ■ VDC Setting | ■ Vehicle Settings | ■ Factory Reset |


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

GETTING STARTED


OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, the outside air temperature will appear in the vehicle information display.
- If the outside air temperature is below 37°F (3°C), the outside temperature display will have a snowflake **1**.

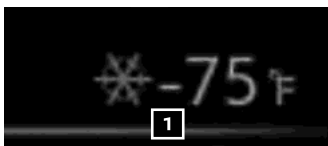

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

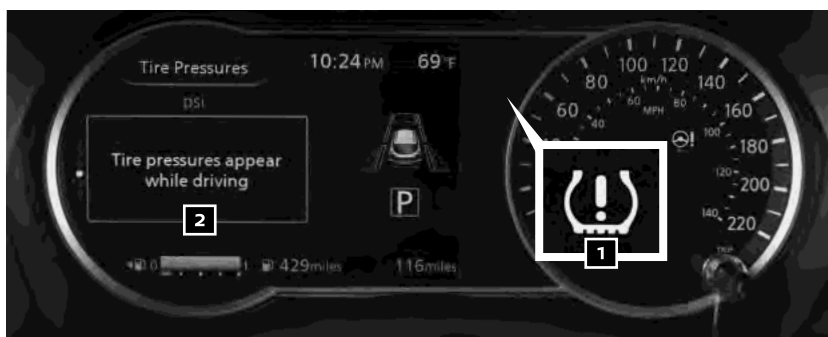

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires **2** (except the spare) may be visible on the Tire Pressure screen in the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals outside of the vehicle to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Move the shift lever to the **P** (Park) position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
4. When the designated tire pressure is reached, the horn will beep once and the hazard indicators will stop.
5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the driver's side of the vehicle.
- To open the fuel-filler door, pull the fuel-filler door release **2**, located below the instrument panel to the left of the steering wheel.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

LIFTGATE RELEASE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- To open the liftgate, first unlock the liftgate using one of the following methods:
 - Press the  button **1** on the Intelligent Key twice.
 - Push the liftgate request switch (if so equipped) **2**.
- Then push the liftgate release switch **3** and pull the liftgate up.

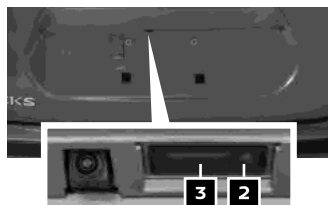

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

- **Yes** - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- **Later** - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.

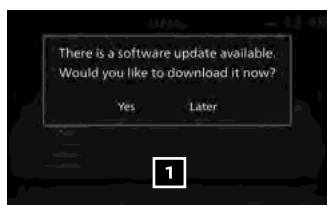

You can trigger the software update manually in the event that "Later" was unintentionally pressed.

- To manually update the software to the latest version:

1. Press the **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information"
3. Touch "Software Update"
4. Touch "Start Software Update" and then "Download"

- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.



Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:


1. Press the **MENU** button on the control panel.
2. Touch "Connections" and then touch "Wi-Fi"
3. Touch the  icon and then touch "Wi-Fi" to turn it on.
4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

- To manually update your software using Wi-Fi:

1. Press the **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information"
3. Touch "Software Update", "Start Software Update" and then touch "Download"

- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

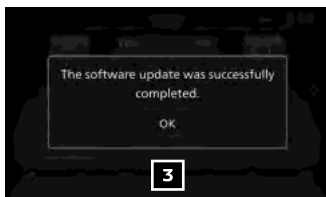

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the  **MENU** button on the control panel
 2. Touch the  **Settings** key on the Launch Bar.
 3. Touch the "Clock" key.
- Select "Set the clock manually" to manually adjust the time displayed.
- Touch the  key **1** to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

USB CONNECTION PORT INTERFACE

- The USB connection port **1** (USB Type-C/USB Type-A) and AUX jack (if so equipped) are located beneath the climate controls. There are two additional USB connection ports **2** in the console in front of the backseats.
- When a compatible USB memory device or auxiliary device is plugged into the USB connection port **1** (USB Type-C/USB Type-A) or AUX jack (if so equipped), compatible audio files stored on the device can be played through the vehicle's audio system. The additional USB charging ports **2** are for charging only.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command (if so equipped) can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a NISSAN Voice Recognition session, press and hold the  or  button on the steering wheel, or  **BACK** on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **—** or **+** on the steering wheel or turn the **VOLUME** control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the NISSAN Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



CONNECTING PROCEDURE

1. Select the "Settings" key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New". A message is displayed.



4. Touch "Yes" to connect a cellular phone.
Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the control panel.
2. Touch the "Phonebook" key .
3. Choose the desired entry from the displayed list.




MAKING A CALL

1. Press the  button on the Launch Bar. The "Phone" screen  will appear on the display.
2. Select one of the options to make a call.



RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.

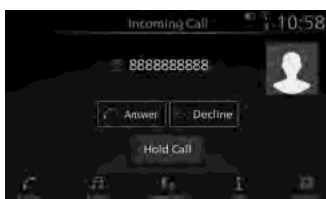

SWITCH TO HANDSET

- Start the call using Bluetooth hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO AND BLUETOOTH® SYSTEMS



FM/AM/SiriusXM® RADIO (if so equipped)

1 PUSH BUTTON/VOLUME CONTROL KNOB

- Press the power  button to turn the system on or off.
- Turn the **VOL** (volume) control knob to the right or left to increase or decrease the volume.

2 PUSH SOUND BUTTON/TUNE-SCROLL

- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .

4 STATION SELECT KEYS


- Up to 36 stations/channels of AM/FM radio and/or SiriusXM® Audio can be registered in the preset list.
- To store a station in a preset, you must first select a radio band by touching the **AM** key , **FM** key  or **SiriusXM** key  then tune to the desired FM, AM or satellite radio station.
- Next touch and hold the desired station select key. The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the  **MENU** button on the launch bar.
- To return to the Apple CarPlay screen from the main menu:
 - Touch the  Apple CarPlay key **2**, or
 - Touch the  Info key **3** on the Launch Bar, touch the “Smartphone Connection” key, and then select the “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

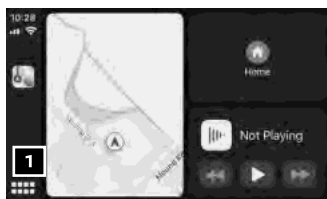

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

AUDIO AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the Nissan key.
- To return to the Android Auto home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the “Apps” key, and then touch the “Android Auto” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started (section 2)” and the “Information (section 5)” of your NissanConnect® Owner's Manual

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect Services, create an account or log into your NISSAN Owner Portal with your Vehicle Identification Number or VIN. Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services® app on your compatible iPhone® or Android smartphone and log into it using your NISSAN Owner Portal ID and password.
- For full details on NissanConnect Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.
- Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Bluetooth® and more. For frequently asked questions, please visit **www.nissanusa.com/connect/support-faqs**.
- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect® Services Response Specialist.
- Remote Engine Start - Start your engine remotely using the NissanConnect Services companion app or website.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Curfew Alert - Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.

AUDIO AND BLUETOOTH® SYSTEMS

To access these features in your vehicle:

- Press the  **MENU** button **1** on the control panel.
- Touch the  Info key.
- Touch the “NissanConnect Services” key **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Information (section 5)” of your NissanConnect® Owner's Manual.



WI-FI (if so equipped)

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.


1. Touch  Settings key on the Launch Bar.
2. Touch the “Connections” key.
3. Touch the “Wi-Fi” key **1**.
4. Touch the name of the device you wish to connect.
5. Enter a password and touch the “OK” key.
The device will be connected.



- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the “Connections” key.
3. Touch the “Wi-Fi” key **1**.
4. Touch the  key **2**.
5. Touch a preferred item.

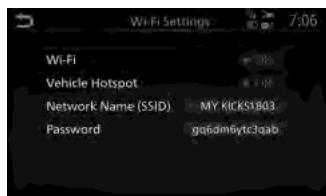

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started (section 2)” of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.




* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel and Siri will be activated in Eyes Free mode.

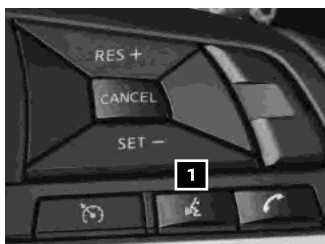

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

DRIVING FEATURES

ELECTRONIC PARKING BRAKE (if so equipped)

ELECTRONIC PARKING BRAKE (if so equipped)

- To apply the parking brake, pull the electronic parking brake switch **1** up, located on the center console, behind the electronic shift lever. The electronic parking brake indicator light **2** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **1** down. The electronic parking brake indicator light **2** will turn off.



AUTOMATIC BRAKE HOLD (if so equipped)

- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the automatic brake hold switch **3** to activate the automatic brake hold function. The indicator light will illuminate.
- To use the automatic brake hold function, the following conditions need to be met:
 - The driver's seat belt is fastened.
 - The electronic parking brake is released.
 - The shift lever is not in the **P** (Park) position.
 - The vehicle is not parked on a steep hill.
- To cancel the automatic brake hold function push the automatic brake hold switch **3**. To deactivate while the brake force has been maintained, depress the brake pedal and push the automatic brake hold switch **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.


FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:



- Automatic Emergency Braking (AEB) with Pedestrian Detection (if so equipped)
- Intelligent Forward Collision Warning (I-FCW)

- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.

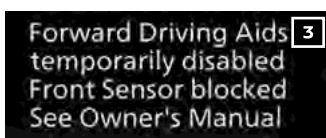

- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.



- Front sensor areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, move the shift lever to the **P** (Park) position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and Driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.



- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.

- If the turn signal is turned on with a vehicle in the detection zone, there will be an audible alert and the indicator light will flash.



- The indicator light **2** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.

- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R** (Reverse) position and the vehicle speed is less than approximately 5 mph (8 km/h).

- The BSW system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn off the system.
- To activate the cruise control, push the  Cruise ON/OFF switch **1** on the steering wheel. The CRUISE indicator light will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. A  indicator light in the instrument panel will illuminate, and the set speed will display next to the indicator light. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CANCEL** switch **4** on the steering wheel. The  indicator light in the instrument panel will turn off.

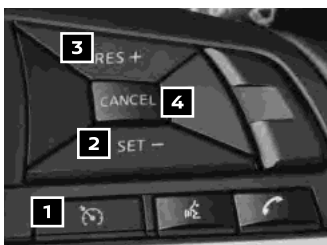



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

 - To set vehicle-to-vehicle distance control mode, push the ICC switch **1** on the steering wheel. The ICC indicators will illuminate in the vehicle information display.
- Accelerate to the desired speed.
- Push the **SET-** switch **2** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  switch **3** on the steering wheel repeatedly to change the set distance between long, middle and short **4**.

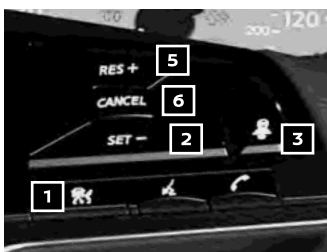

- To reset at a faster cruising speed, push and hold the **RES+** switch **5** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **6** on the steering wheel.
- To turn off ICC, push the ICC switch **1** on the steering wheel. The ICC system indicator **7** in the instrument panel will turn off.



CONVENTIONAL (FIXED SPEED)

CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push the ICC switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection System can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane or with a pedestrian.
- The AEB with Pedestrian Detection System will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection System operates at speeds between 6-37 mph (10-60 km/h).
- If there is a risk of a forward collision with a vehicle, an audible tone will sound and the vehicle ahead detection indicator **1** will illuminate. In addition, the system applies partial braking. If the driver does not take action, the AEB with Pedestrian Detection System will provide a second set of audible and visual warnings to the driver and then automatically apply harder braking.
- If there is a risk of a forward collision with a pedestrian, an audible tone will sound and the AEB emergency warning indicator **2** will flash. Partial braking will be applied, followed by harder braking if the driver fails to react.
- The AEB with Pedestrian Detection system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure VDC is on by ensuring the VDC OFF light is not on before driving the vehicle.
- The VDC should remain on when driving, except when freeing the vehicle if it is stuck in snow or mud.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and Controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

HILL START ASSIST

The Hill Start Assist system allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.


- The Hill Start Assist system will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- The Hill Start Assist system will not operate when the shift lever is in the **N** (Neutral) or **P** (Park) position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R** (Reverse) position. The monitor displays various views of the position of the vehicle.

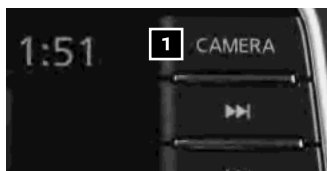

- When the shift lever is in the **P** (Park), **N** (Neutral) or **D** (Drive) position and the **CAMERA** button **1** is pressed, the following views will display in order:

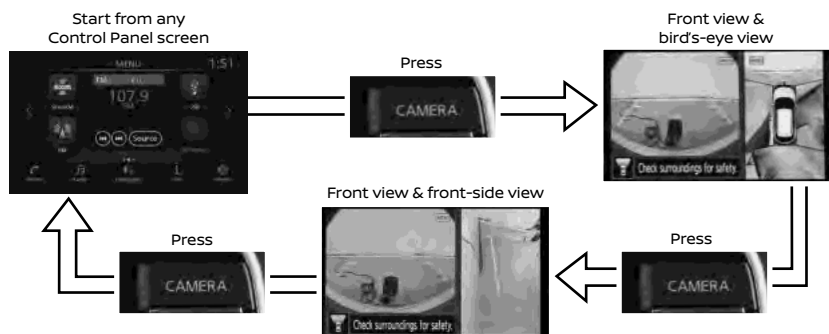


To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

- When the shift lever is in the **R** (Reverse) position and the **CAMERA** button **1** is pressed, the following views will display in order:

Rear view & bird's-eye view



 
Press



Rear view & front-side view



- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

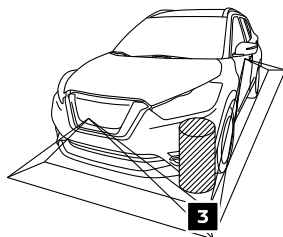

MOVING OBJECT DETECTION (MOD)

(if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P** (Park), **R** (Reverse), **N** (Neutral) or **D** (Drive) position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.

DRIVING FEATURES

- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the “Settings” menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems (section 4)” of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R** (Reverse) position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning light **1** will flash in the vehicle information display (if so equipped) and the system will chime three times.
- A red frame will appear in the center display **2** (for vehicles equipped with the Around View® Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING THE RAB SYSTEM ON/OFF

- The RAB system can be turned on and off through the “Driver Assistance” section in the vehicle information display.

When the RAB system is turned off, the RAB system warning light **1** illuminates.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving (section 5)” of your Owner's Manual.

LANE DEPARTURE WARNING (LDW)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will chime and the orange LDW indicator **1** on the instrument panel will blink and the steering wheel will vibrate to alert the driver.



TURNING THE LDW SYSTEM ON/OFF

- The LDW system can be turned on and off through the "Driver Assistance" section in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

REAR CROSS TRAFFIC ALERT (RCTA)

- The RCTA system can help alert the driver of an approaching vehicle when the driver is backing out of a parking space.
- When the shift position is in **R (Reverse)** and the vehicle speed is less than approximately 5 mph (8 km/h), the RCTA system is operational.
- If the radar detects an approaching vehicle from either side, the system chimes (once) and the side indicator light flashes on the side the vehicle is approaching from.
- The RCTA system can be turned on or off through the Driver Assistance menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2024/kicks or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

