



QUICK REFERENCE GUIDE

2024 **TITAN**

COCKPIT OVERVIEW



15
Behind the
steering
wheel

PUSH ON
PUSH OFF

COCKPIT OVERVIEW

- 1** Turn Signal / Wiper and Washer Switch
- 2** Headlight Control Switch
- 3** Low Tire Pressure Warning Light (!)
- 4** Vehicle Information Display
- 5** Tow Mode Switch (if so equipped)
- 6** Cruise Control
- 7** Steering Wheel Switches for Audio / Bluetooth® / Siri® Eyes Free / Vehicle Information Display
- 8** Fog Light Switch (if so equipped) 和 PUSH
- 9** Cargo Lamp Switch
- 10** Power Inverter Switch (if so equipped)
- 11** Manual Headlight Aiming Control (if so equipped) 
- 12** Electronic Locking Rear Differential (E-Lock) System Switch (if so equipped)
- 13** Hill Descent Control Switch (if so equipped) 
- 14** Hood Release 
- 15** Tilt / Telescopic Steering Column

INSTRUMENT PANEL



INSTRUMENT PANEL

- 1** Heater and Air Conditioner (automatic) (if so equipped)
- 2** Vehicle Dynamic Control (VDC) OFF Switch 
- 3** Parking Aids System Switch (if so equipped) 
- 4** Warning Systems Switch 
- 5** Heated Steering Wheel Switch (if so equipped) 
- 6** 4WD Shift Switch (if so equipped)
- 7** Trailer Brake Controller Unit (TBCU) (if so equipped)
- 8** USB Connection Port Interface
- 9** Front Passenger Air Bag Status Light (if so equipped)
- 10** 12V Power Outlet
- 11** Climate Controlled Seat Switches (if so equipped)  

TABLE OF CONTENTS

GETTING STARTED

NISSAN Intelligent Key® System	3
Seat Adjustments (if so equipped) and Rear Seats (if so equipped)	4
Memory Seat (if so equipped)	5
Mirror Control Switch (Electric Control Type) (if so equipped)	6
HomeLink® Universal Transceiver (if so equipped)	7
Emergency Call (SOS) Button (if so equipped)	8
Heater and Air Conditioner (automatic) (if so equipped)	8
Headlight Control Switch	10
Wiper and Washer Switch	11
Vehicle Information Display	12
Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert	13
Loose Fuel Cap	14
Starting/Stopping the Engine	14
Fuel-filler Door	14
Driver and Passenger Seat Belt Warning	15
Rear Doors (King Cab® models only)	15
Opening the Tailgate	15
Power Outlets	15

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

System Updates (if so equipped)	17
Clock Set/Adjustment	19
USB Connection Port Interface	19
Bluetooth® Hands-free Phone System	19
• System Operating Tips	19
FM/AM/SiriusXM® Radio (if so equipped)	22
Apple CarPlay®	23
Android Auto™	24
Navigation System (if so equipped)	25
NissanConnect® Services Powered by SiriusXM® (if so equipped)	26
SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped)	27
Wi-Fi (if so equipped)	27
Hands-free Text Messaging Assistant	28
Siri® Eyes Free	29
Rear Seat Infotainment (RSI) System (if so equipped)	29



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

TABLE OF CONTENTS

DRIVING FEATURES

Forward Driving Aid Sensors (if so equipped).....	31
Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA)	31
Automatic Emergency Braking (AEB) with Pedestrian Detection System.....	32
Lane Departure Warning (LDW)	33
Hill Start Assist and Hill Descent Control (if so equipped).....	33
Cruise Control.....	34
Intelligent Cruise Control (ICC) (if so equipped).....	34
Front and Rear Sonar System (if so equipped)	35
Intelligent Around View® Monitor (if so equipped).....	36
Towing	38



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
 - Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
 - Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock the vehicle and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) of the corresponding request switch (if so equipped).
- To lock the vehicle, push either door handle request switch **1** (if so equipped) or press the **1** button **2** on the key fob.



- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **1** (if so equipped) once and the corresponding door will unlock. Push the request switch **1** (if so equipped) again within 1 minute; all other doors and tailgate (if so equipped) will unlock, or
 - Press the **1** button **3** on the key fob to unlock the driver's side door. Press the **1** button **3** again within 1 minute; all other doors and tailgate (if so equipped) will unlock.



- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the **1** button **4** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Place the shift lever in the **P** (Park) position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch to the ON position while depressing the brake pedal and the engine will start.

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls, strong radio wave sources near the operating location or other obstructions between the key and the vehicle.
- For the Remote Engine Start to function, the vehicle must be in the **P** (Park) position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Aim the Intelligent Key at the vehicle.
 2. Press the **1** button **2** to lock all of the doors.

3. Within 5 seconds, press and hold the engine start  button **5** for at least 2 seconds.

- The engine will start, and the parking lights will turn on.
- While the Remote Engine Start feature is being used, the manual or automatic climate control system will default to the last used heating or cooling mode.
- The engine will run for 10 minutes and then turn off.
- Repeat steps 1 through 2 to extend the time for an additional 10-minute period. Remote Engine Start can only be activated for a maximum of 20 minutes.
 - After two remote starts, the ignition switch must be cycled before the Remote Engine Start can be used again.
 - To cancel Remote Engine Start, press the engine start  button **5**.
- To start driving, depress the brake pedal and push the ignition switch to the ON position.

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"**, the **"Starting and driving (section 5)"** and the **"Do-it-yourself (section 8)"** of your Owner's Manual.

SEAT ADJUSTMENTS (if so equipped) AND REAR SEATS (if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

SEAT LIFTER (driver's seat)



- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

LUMBAR SUPPORT (driver's seat)

- To adjust the lumbar area, push the front or back end of the switch **3**.

REAR SEATS

- To access the under seat storage (if so equipped):
 - Pull up the bottom of the seat toward the rear of the vehicle to fold the seat.
 - Lift the flat floor panels **4** toward the seat.
- When not in use, the storage bin's cover may be locked (if so equipped).

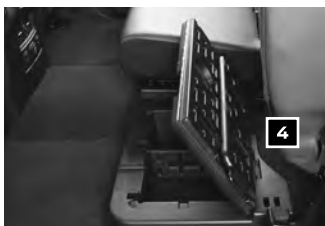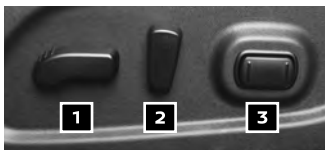

GETTING STARTED

- To use the flat floor feature (if so equipped):
 - Pull up the bottom of the seat toward the rear of the vehicle to fold the seat.
 - Pull the handle **5** of the smaller top panel toward the rear of the vehicle.
 - Pull the flat floor panels **6** up and toward the front seats to fully unfold them and place them on the floor.
- Up to 247 lbs. (112 kg) of cargo can be attached to the flat floor panels using bungee cords. Only use bungee cords rated at the appropriate strength.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system (section 1)"** and the **"Instruments and controls (section 2)"** of your Owner's Manual.

MEMORY SEAT (if so equipped)

- Two positions for the driver's seat, steering column and outside mirrors (if so equipped) can be stored in the Memory Seat.
- Follow this procedure to set the memory system:
 - Place the ignition switch in the ON or ACC position.
 - Adjust the driver's seat, steering column and outside mirrors (if so equipped) to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch **1**, and within 5 seconds, push the memory switch (**1** or **2**). A chime will sound.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver's seat, steering column and outside mirror positions (if so equipped) are now set to your preferences. The chime will sound when the memory is stored.
- These memorized positions can also be linked to your NISSAN Intelligent Key®. To link a memorized position to your NISSAN Intelligent Key, press the **1** button on the key fob after completing the previous steps.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Pre-driving checks and adjustments (section 3)"** of your Owner's Manual.

MIRROR CONTROL SWITCH (Electric Control Type) (if so equipped)

- The outside mirror control switch is located on the driver's side door panel.
- The outside mirror will only operate when the ignition switch is in the ACC or ON position.
- To select the left or right mirror, rotate the dial **1** to select the desired mirror.
- Adjust each mirror to the desired position by rotating the dial **1** up, down, left, or right.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle when the mirror control switch is in either the **L** or **R** position.
- The outside mirror surfaces will return to their original positions when one of the following conditions occurs:
 - The shift lever is moved to any position other than **R** (Reverse).
 - The outside mirror control switch **1** is set to the center (neutral) position.
 - The ignition switch is placed in the OFF position.

POWER FOLDING OUTSIDE MIRRORS (if so equipped)

- To open or close the mirrors, push the  switch **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED



HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, gates, home and office lighting, entry door locks and security systems.
- Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink®.
- To program the HomeLink® Universal Transceiver:
 - Press and release the HomeLink® button that you would like to program. The HomeLink® indicator light **1** will flash slowly.
 - Position the hand-held transmitter 1-3 in (2-8 cm) away from the HomeLink® button.
 - While the HomeLink® indicator light **1** is flashing, press and hold the hand-held transmitter button. Continue pressing the hand-held transmitter button until the HomeLink® indicator light **1** changes. You may now release the hand-held transmitter button.
- To verify the programming is complete, press the HomeLink® button and observe the indicator light **1**:
 - If the HomeLink® indicator light **1** remains constant, your device should operate when the HomeLink® button is pressed. At this point, if your device operates, programming is complete.
 - If the HomeLink® indicator light **1** rapidly flashes, firmly press, **hold for 2 seconds** and release the HomeLink® button up to three times to complete the programming process. **Do not press the HomeLink® button rapidly.** At this point if your device operates, programming is complete. If the device does not operate, additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink® button, press and release the "Learn" or "Set" button. (The name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit.) You have approximately 30 seconds to initiate the following step.
 - Firmly press and hold the programmed HomeLink® button for 2 seconds and release the HomeLink® button up to three times. **Do not press the HomeLink® button rapidly.** At this point programming is complete and your device should operate when the HomeLink® button is pressed and released.
- To view a detailed instructional video, go to www.nissanquickguide.com/2024/titan or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door".

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the **SOS** button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call **855-426-6628**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



HEATER AND AIR CONDITIONER (automatic) (if so equipped)

1 FRONT DEFROSTER BUTTON

- Press the front defroster button  to turn the system on. The A/C automatically turns on when the front defroster mode is selected. This feature removes humidity from the air.
- Set the temperature control dial **2** and the fan speed control button to their maximum settings.

2 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the automatic mode on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial left for cooler air or right for warmer air.

3 DUAL BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **DUAL** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

GETTING STARTED

4 FRESH AIR INTAKE CONTROL BUTTON

- Press the fresh air intake control button  to draw outside air into the passenger compartment. The indicator light on the button will illuminate.

5 REAR WINDOW AND/OR OUTSIDE MIRROR DEFROSTER SWITCH (if so equipped)

- To defog/defrost the rear window glass and/or the outside mirrors (if so equipped), push the rear window defroster switch  to turn the system on or off.
- The rear window defroster automatically turns off after approximately 15 minutes.

6 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the system on or off.

7 FAN SPEED CONTROL BUTTONS

- Press the  side or  side of the button to decrease or increase the fan speed.

8 MODE BUTTON

- Press the **MODE** button to manually control air flow.



Air flows from the center and side vents.



Air flows from the center, side and foot vents.



Air flows mainly from the foot outlets.



Air flows from the front defroster and foot vents.

9 A/C BUTTON

- Press the **A/C** button to manually turn the A/C on or off.

10 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- Press the fresh air intake control button  to turn air recirculation off. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor or front defroster/floor mode.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode .

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights.
- Turn the control switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition switch in the ON position. To deactivate the autolight system, turn the headlight control switch to the **OFF** position **4**,  position **1** or  position **2**.

HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **5**. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **2** or select the low beam position by placing the lever in the neutral position.
- Pulling and releasing the lever **6** flashes the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on with either AUTO or the low beams selected for the fog lights to operate.
- Push the  switch **7** to turn on the fog lights.
- To turn them off, push the  switch **7** again.
- The fog lights will turn off if the headlights are turned off.



GETTING STARTED

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

WIPER AND WASHER SWITCH

- Rotate the control ring to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) – One sweep operation of the wipers.
- 2** Auto (**AUTO**) (if so equipped) – Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by rotating the control ring to increase or decrease wiper sensitivity.
- 3** Low (**LO**) – Wipers operate at a continuous low speed.
- 4** High (**HI**) – Wipers operate at a continuous high speed.
- 5** To activate the washer, press the button on the end of the lever. The wipers will operate several times.



Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:


- Vehicle settings
- Trip computer information
- Drive system warnings and settings (if so equipped)
- Cruise control system information
- Blind Spot Warning (BSW) system
- Rear Cross Traffic Alert (RCTA) system
- NISSAN Intelligent Key® operation information
- Indicators and warnings
- Tire pressure information



USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the ◀▶ buttons **2**, the ⬆⬇ buttons **3** and the **ENTER** button **4** located on the steering wheel.

- Press the ◀▶ buttons **2** and push the ⬆⬇ buttons **3** to navigate through the items in the vehicle information display.
- Press the **ENTER** button **4** to change or select an item in the vehicle information display.

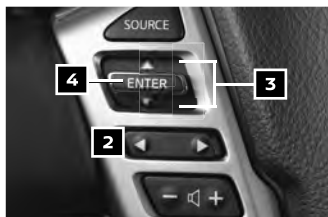

RESETTING THE TRIP ODOMETER

1. Push the **TRIP RESET** switch **5** on the left side of the instrument panel to change the display as follows:
ODO > Trip **A** > Trip **B** > ODO
2. Push the **TRIP RESET** switch **5** for 2 seconds to reset the currently displayed trip odometer to zero.



SETTINGS

The setting mode displays the settings that can be changed:

- | | | |
|---------------------|-------------------|-----------------|
| ■ Driver Assistance | ■ Towing Settings | ■ Unit |
| ■ Meter Settings | ■ Alerts | ■ Language |
| ■ Vehicle Settings | ■ Maintenance | ■ Factory Reset |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

GETTING STARTED



TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen **2** in the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

EASY-FILL TIRE ALERT


- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Place the shift lever in the **P** (Park) position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard indicators will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

LOOSE FUEL CAP

- A  Loose Fuel Cap warning message will display in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- If the cap is not properly tightened, the  Malfunction Indicator Light **2** may also illuminate in the instrument panel.

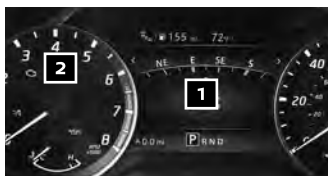

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position to start the engine.

TURNING THE ENGINE OFF

- Move the shift lever to the **P** (Park) position.
- Push the ignition switch to the OFF position to turn off the engine.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the driver's side of the vehicle.
- To open the fuel-filler door **1**, pull the lid open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



GETTING STARTED

DRIVER AND PASSENGER SEAT BELT WARNING

- The  warning light **1** will be displayed in the instrument panel **2** for a period of time after the ignition switch is placed in the ON position or until the seat belt is fastened. This does not indicate a malfunction.
- The rear seat icons **3** will illuminate when not fastened. When a rear passenger's seat belt has been securely fastened, the color of the corresponding seat belt icon **3** will change.

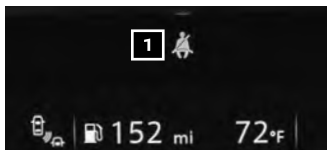

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety-Seats, seat belts and supplemental restraint system (Section 1)" and the "Instruments and controls (section 2)" of your Owner's Manual.

REAR DOORS (King Cab® models only)

- Do not open the driver's side Rear Doors to the fully open position while the fuel-filler door is open; only open it as far as the first detent.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

OPENING THE TAILGATE

- Pull the tailgate handle **1** upward and lower the tailgate. Support cables hold the tailgate open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



POWER OUTLETS

12V OUTLETS

- The 12V power outlets are only powered when the ignition switch is in the ACC or ON position.
- The 12V power outlets are for powering electrical accessories such as cellular phones.



To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com


- The power outlets **1** are located on the passenger's side of the control panel, inside the center console (if so equipped) **2** and on the rear console (if so equipped) **3**. They are powered directly by the vehicle's battery.



- To use a power outlet, open the cap.

120V OUTLETS (if so equipped)

- 120V power outlets are not powered directly by the battery and require the ignition switch to be in the ON position, the vehicle in **P** (Park) and the power inverter switch **4** to be depressed.
- 400W mode is only available with the shift lever in the **P** (Park) position.
- The 120V power outlets are for powering electrical devices up to 120V.
- The power outlets located in the rear seat area, behind the center console **3**, and in the truck box **5** are powered directly by the vehicle's battery.
- For devices that require power of 120W or more, the shift lever must be placed in the **P** (Park) position.

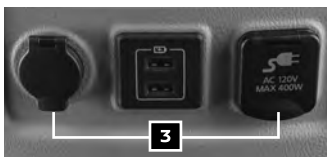

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES (if so equipped)

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

- **Yes** - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- **Later** - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.

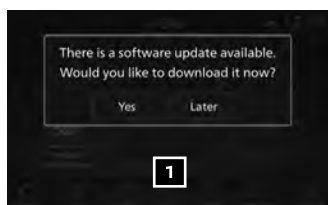


You can trigger the software update manually in the event that "Later" or "No" was unintentionally pressed.

- To manually update the software to the latest version:
 1. Press the **MENU** button on the control panel.
 2. Touch "Info" and then touch "System Information"
 3. Touch "Software Update"
 4. Touch "Start Software Update" and then "Download"
- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.


Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4 GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:
 1. Press the **MENU** button on the control panel.
 2. Touch "Connections" and then touch "Wi-Fi".
 3. Touch the  icon and then touch "Wi-Fi" to turn it on.
 4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

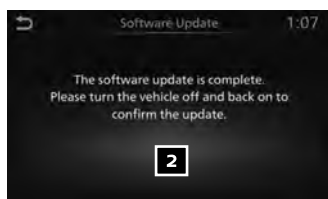

- To manually update your software using Wi-Fi:

1. Press the **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information".
3. Touch "Software Update", "Start Software Update" and then touch "Download".

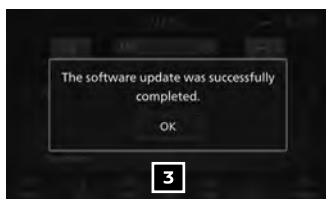

- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

- To turn on automatic updates of map software:

1. Press the **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information".
3. Touch "Map Update" and then touch "Map Update Settings".
4. Select an area to be updated and touch "Start".

- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.

- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.



- To manually update the map software via Wi-Fi:

1. Connect the vehicle to an available Wi-Fi network
2. Press the **MENU** button on the control panel.
3. Touch "Info" and then touch "System Information".
4. Touch "Map Update" and then touch "Update by Wi-Fi."
5. Select an area to be updated and touch "Start".

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the MENU button on the control panel.
2. Touch the Settings key **1** on the Launch Bar.
3. Touch the "Clock" key.

Touch the key **2** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.



USB CONNECTION PORT INTERFACE

- The USB connection port interface **1** (USB Type-C/USB Type-A) are located on the control panel below the climate controls.
- When a compatible USB memory device is plugged into a USB port, compatible audio files stored on the device can be played through the vehicle's audio system and front display.

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Audio system (section 3)" of your NissanConnect® Owner's Manual.



BLUETOOTH® HANDS-FREE PHONE SYSTEM*


- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the button on the steering wheel, and after the tone, say "Call Michael Smith".

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com

- The “Help” command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  button on the steering wheel, or the  BACK button on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches  or  on the steering wheel or turn the **VOL** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner’s Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone’s Owner’s Manual and visit **www.NissanUSA.com/bluetooth**.

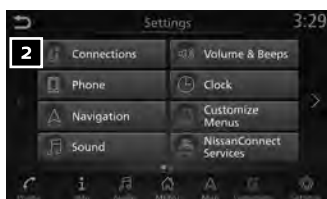

CONNECTING PROCEDURE

1. Touch the  Menu key **1** on the Launch Bar, then touch the “Settings” key.
2. Touch the “Connections” key **2**.
3. Touch the “Devices” key **3** and touch “Add New”. A message is displayed.
4. Touch “OK” to connect a cellular phone.

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the launch bar.
2. Touch the “Phonebook” key **4**.
3. Choose the desired entry from the displayed list.


AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

MAKING A CALL

1. Press the  button on the Launch Bar. The "Phone" screen **5** will appear on the display.


2. Select one of the following options to make a call:

- "Quick Dial": Select a telephone number registered as a Quick Dial.
- "Phonebook": Select the name from an entry stored in the vehicle phonebook.
- "Call History": Select a telephone number from recent incoming, outgoing or missed calls.
- "Dial Number": Enter the phone number manually using the keypad displayed on the screen.

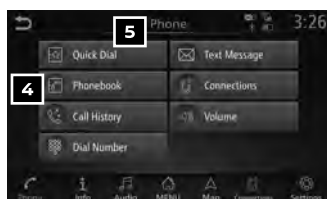

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch  Answer on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, touch  Hang up, or
 - Touch  Decline on the screen.

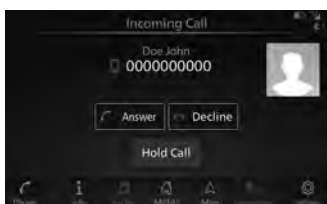


SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

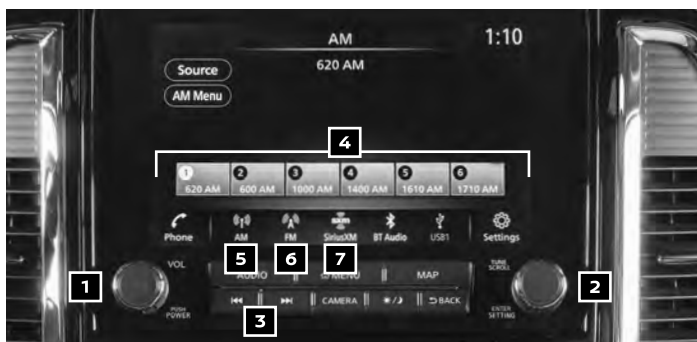

FM/AM/SiriusXM® RADIO (if so equipped)

1 PUSH POWER BUTTON / VOL CONTROL DIAL

- Press the **PUSH POWER** button to turn the system on or off.
- Turn the **VOL** control knob to the right or left to increase or decrease the volume.

2 TUNE-SCROLL / ENTER/SETTING DIAL

- Press the **ENTER/SETTING** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for satellite radio.
- To store a station in a preset, you must first select a radio band by touching the **AM** key **5**, **FM** key **6** or **SiriusXM** key **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- Next touch and hold the desired station select key. The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Audio System (section 3)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls or the Bluetooth® Hands-free phone system pairing procedure for wireless connection (for NAVI headunits only).
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay.
 - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.

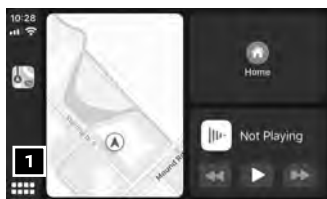

- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the  **MENU** button on the control panel.
- To return to the Apple CarPlay screen from the main menu:
 - Touch the  Apple CarPlay key **2**, or
 - Touch the  Info key **3** on the Launch Bar, touch the “Smartphone Connection” key, and then select the “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the launch bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the “Nissan” key to exit.
- To return to the Android Auto home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the “Smartphone Connection” key, and then touch the “Android Auto” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS



NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be "grayed-out" or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Navigation (if so equipped) (section 6)" of your NissanConnect® Owner's Manual.

- 1 MAP button** – Press to display the current location map screen.
- 2** button – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE-SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 3 VOL control knob** – Turn right to increase the volume or left to decrease the volume.
- 4** key – Select to zoom the map out.
- 5** key – Select to zoom the map in.
- 6 TUNE-SCROLL knob** – Turn to navigate the items in a list. Press to select a menu item.
- 7** **BACK** button – Press to return to the previous screen
- 8** Touch-screen display

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Navigation (if so equipped) (section 6)" of your NissanConnect® Owner's Manual.

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

If equipped, your vehicle may include NissanConnect connected features and services such as Emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle's NissanConnect Owner's Manual at <https://owners.nissanusa.com/nowners/navigation/manualsGuide>.

For frequently asked questions, please visit www.nissanusa.com/connect/faq.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect or scan the QR code on the back of this book.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

Some of the available NissanConnect Services include:

- Automatic Collision Notification (if so equipped) - A service that generates an automatic connection between the vehicle and a live response specialist when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call (if so equipped) - Connects you to a live response specialist who will assist in the dispatch of emergency services to the vehicle location. To use this feature, press the SOS button on the overhead console. The SOS button should only be used in emergency situations or in conjunction with the Roadside Assistance feature, if warranted.
- Wi-Fi Hotspot (if so equipped) - Enables you to connect up to seven devices to the vehicle and access the Internet when a service provider's subscription is active.

To access these features in your vehicle:

- Press the  MENU button **1** on the control panel.
- Touch the "Info" key
- Touch the "NissanConnect Services" key **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SiriusXM® TRAVEL LINK AND SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

WI-FI (if so equipped)

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch the  **MENU** key on the Launch Bar.
 2. Touch the "Connections" key.
 3. Touch the "Wi-Fi" key **1**.
 4. Touch the name of the device you wish to connect.
 5. Enter a password and touch the "OK" key. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.



TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Home key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key **1**.
4. Touch the  key **2**.
5. Touch a preferred item.

TO DELETE A WI-FI DEVICE:

1. Touch the  Home key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key **1**.
4. Touch the  key by the name of the device you wish to delete.
5. Touch the "Delete" key and then touch the "Yes" key when a message appears.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Getting started (section 2)"** of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to a name or phone number stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle is not in motion.
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see **www.NissanUSA.com/bluetooth** for compatibility information as well as your device's Owner's Manual.



*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Hands-Free Phone (section 4)"** of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel and Siri will be activated in Eyes Free mode.





Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

REAR SEAT INFOTAINMENT (RSI) SYSTEM (if so equipped)


- With the RSI system, you can play SD cards and USB drives that contain music, image or sound content. Images will display on the corresponding monitor. Sound will play from the vehicle's audio system (or wireless headphones provided in the kit) or your own wired headphones after connecting them to the headphone jacks **4** located on the corresponding monitor control panel.
1. Place the ignition switch in the **ACC** or **ON** position.
 2. Press the  (power) button **1** on each monitor control panel to power on.
 3. Insert a SD card, USB drive or HDMI cable.
 4. Press the  button on the remote or on the monitor to get to the HOME screen. Select "Source" **2** then select the media from the Home screen to begin or resume playback.
- Use the remote control provided with the system or the buttons on the corresponding monitor control panel to operate the rear display screens.
 - Use the headphones **3**, also provided with the system, to listen to audio wirelessly and independently. You may also connect your own wired headphones to the headphone jacks **4** located on the corresponding monitor control panel.
 - To use the headphones, set the select switch on the side to **A** or **B** for use with the MONITOR A or MONITOR B respectively.

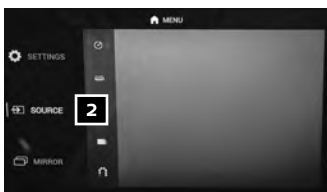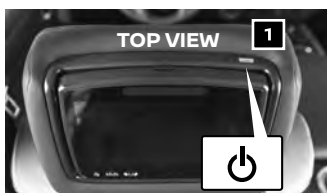

- Navigate to "Source" **2** by using the directional pad on the remote **5** to cycle through the available video sources.
- For best results, it is recommended that you use manufacturer-branded cables, which may be sold separately. See your mobile device's owner's information for more details.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "**Monitor, heater, air conditioner, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual.

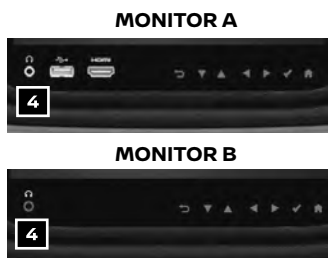

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Cruise Control (ICC) (if so equipped)
 - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P** (Park) position, and turn off the engine. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.

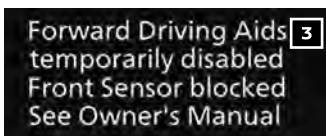

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Starting and Driving (section 5)" of your NissanConnect® Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light located on the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.



- The indicator **2** in the vehicle information display will illuminate after the ignition switch is ON and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R** (Reverse) position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides of the vehicle near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA and BSW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instrument panel (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the vehicle ahead detection (yellow) indicator **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red and white) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

LANE DEPARTURE WARNING (LDW)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the steering wheel will vibrate and the LDW indicator **1** on the instrument panel will blink to alert the driver.
- The LDW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

HILL START ASSIST AND HILL DESCENT CONTROL (if so equipped)

HILL START ASSIST SYSTEM

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N** (Neutral) or **P** (Park) position or when the vehicle is on a flat and level road.

HILL DESCENT CONTROL SYSTEM (if so equipped)

- Hill Descent Control is designed to apply the brakes to help control the speed of the vehicle and reduce the workload of the driver while descending steep hills.

To activate the system:

- Push the Hill Descent Control switch **1** to the ON position.
- The vehicle must be in 4H or 4LO (4WD) mode.
- The shift lever must be in a forward or a reverse gear.
- Hill Descent Control operates at speeds of 15 mph (25 km/h) or less.

To deactivate Hill Descent Control, push the Hill Descent Control switch **1** to the OFF position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

CRUISE CONTROL

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **1** on the steering wheel. The  (white) indicator light in the vehicle information display will illuminate.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **2** on the steering wheel and release. The  (green) indicator light in the vehicle information display will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push up and hold the **ACCEL/RES** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push down and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **ON/OFF** switch **1** on the steering wheel. The  (green) indicator light in the vehicle information display will extinguish.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set vehicle-to-vehicle distance control mode, push the **ON/OFF** switch **1** on the steering wheel. The ICC indicators will illuminate in the vehicle information display.
- Accelerate to the desired speed.
- Push the **COAST/SET** switch **2** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  switch **3** on the steering wheel repeatedly to change the set distance between long, middle and short **4**.



DRIVING FEATURES

- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **5** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **6** on the steering wheel.
- To turn off ICC, push the **ON/OFF** switch **1** on the steering wheel. The ICC system indicator **7** in the instrument panel will extinguish.



CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push the **ON/OFF** switch **1** for longer than 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

FRONT AND REAR SONAR SYSTEM (if so equipped)

- The system informs with a visual and audible alert of front obstacles when the shift lever is in the **D** (Drive) position and both front and rear obstacles when the shift lever is in the **R** (Reverse) position.
- The sonar (parking sensor) system sounds a tone to inform the driver of obstacles near the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R** (Reverse) position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P** (Park), **N** (Neutral) or **D** (Drive) position and the **CAMERA** button **1** is pressed, the following views will display in order:

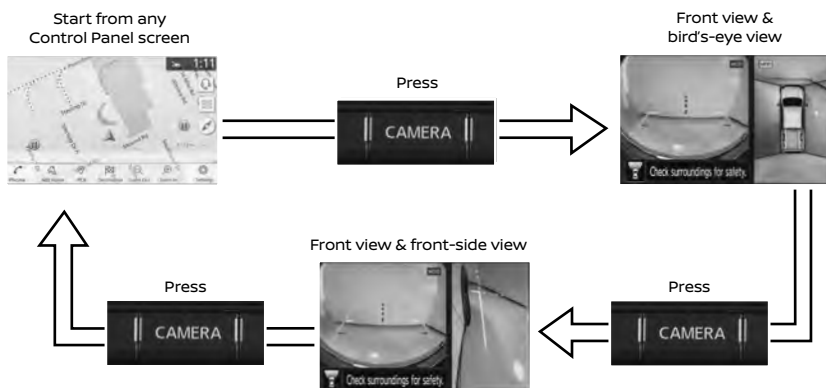


- When the shift lever is in the **R** (Reverse) position and the **CAMERA** button **1** is pressed, the following views will display in order:

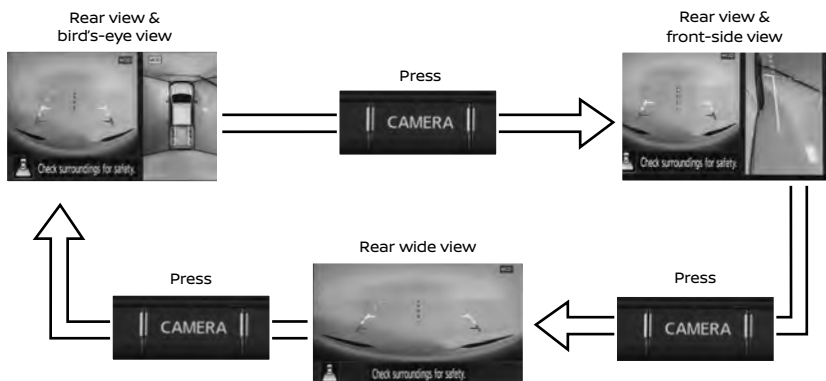

DRIVING FEATURES

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
- When the vehicle's outside mirrors are extended for towing, you may see the mirrors in the bird's-eye view or the front-side view.
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

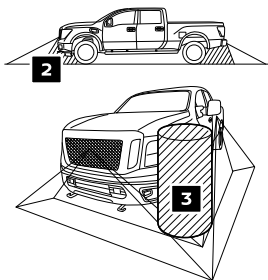

MOVING OBJECT DETECTION (MOD)

(if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D** (Drive), **N** (Neutral), **R** (Reverse) or **P** (Park) position and the vehicle is driven at speeds of approximately 6 mph (10 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will be heard.
- When the following is displayed:
 - Blue **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will be off if the system is deactivated using the "Settings" menu.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

TOWING

TRAILER BRAKE CONTROLLER UNIT (TBCU) (if so equipped)


The Trailer Brake Controller Unit will assist with effective and smooth braking while towing a trailer.

■ Operating Modes:

- Automatic: Automatic operation of trailer brake pressure based on gain and boost settings.
- Manual: Manually applies trailer brake pressure without pressing the vehicle's brake pedal.

■ In automatic mode, the gain controls the amount of trailer braking pressure. To set the gain:

- Press the — or + button **1** to decrease or increase the braking force supplied to the trailer brakes. For example, a gain setting of 6.0 is a typical starting point for heavy loads.

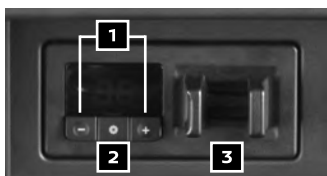

■ In automatic mode, the boost can be set to change the feel of the trailer brake when the vehicle's brake pedal is pressed. To set the boost:

- Press the gear icon button **2** once to display the current boost setting.
- Press the gear icon button **2** again to increase the boost level or continue to press the gear icon button **2** to return boost to the off position.

■ To manually apply brake pressure to the trailer without pushing the vehicle's brake pedal, pinch the manual control levers **3** together. The amount of pinch pressure applied to the levers **3** will correlate to the amount of brake pressure applied.

TRAILER LIGHT CHECK (if so equipped)

Your NISSAN Intelligent Key® can be used to check the trailer lights from outside the vehicle. If your vehicle is equipped with a three-button key fob, this feature operates in the same manner.

1. Aim the Intelligent Key at the vehicle.
2. Press and release the lock button **4**.
3. Within 2 seconds, press the unlock button **4** again and hold it for at least 2 seconds until the horn beeps once and the parking lights turn on.



The trailer light check will follow the following sequence:


- The left turn light on the vehicle and trailer will flash for 5 seconds.
- The right turn light on the vehicle and trailer will flash for 5 seconds.

DRIVING FEATURES

- The brake lights on the vehicle and trailer will turn on for 5 seconds.

GOOSENECK HITCH (if so equipped)

- The integrated gooseneck hitch is located in the center of the vehicle bed **5**.
- For installation instructions and towing information, refer to the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

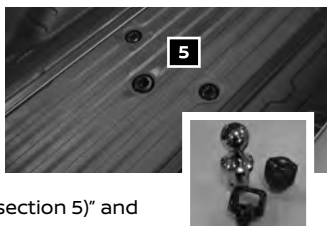

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls (section 2)**", the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO

MEMO



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory.
From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2024/titan or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

