



OPTIQ CONVENIENCE & PERSONALIZATION GUIDE

2025

 
[cadillac.com](https://www.cadillac.com)



Review this quick reference guide for an overview of some important features in your Cadillac OPTIQ. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [cadillac.com/owners](https://www.cadillac.com/owners).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.


INSTRUMENT PANEL

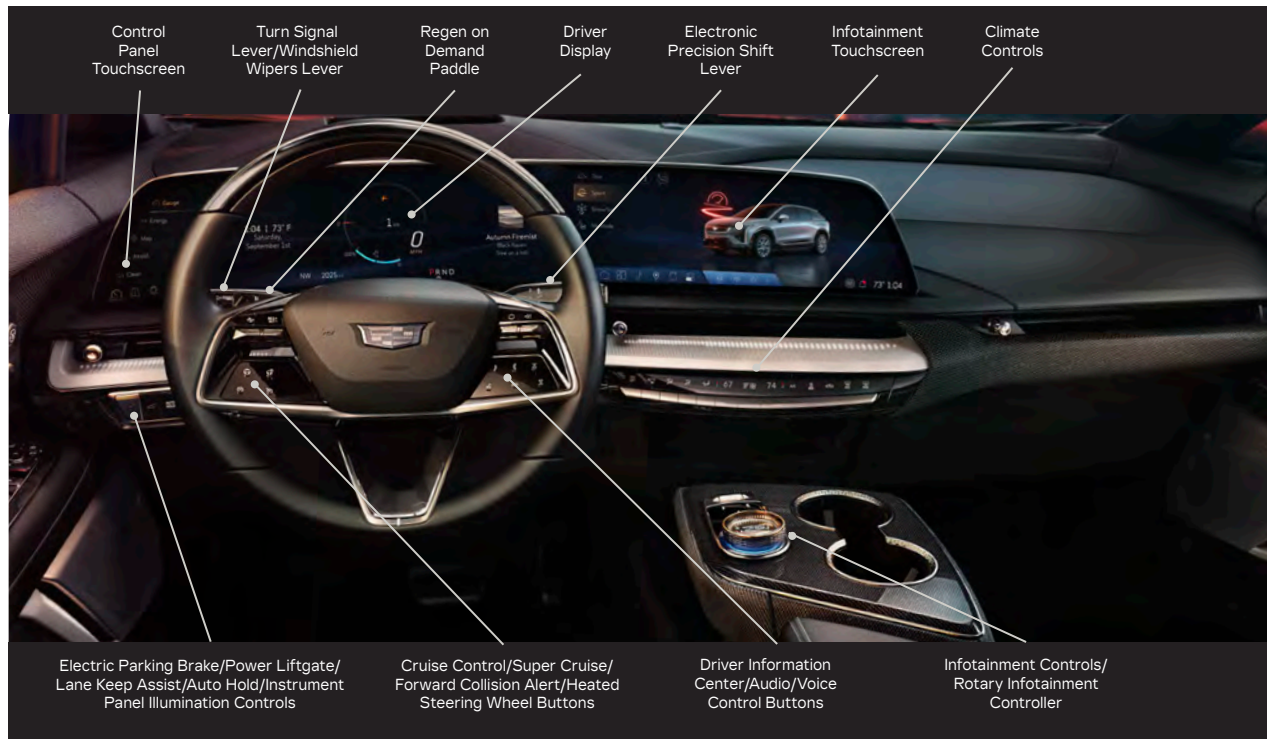

Preproduction model shown throughout. Actual production model may vary.
Certain features shown have limited or late availability, or are no longer available.
See the window label or your dealer regarding the features on an individual vehicle.

See Introduction in your Owners Manual.

 ADVANCED LED DISPLAY

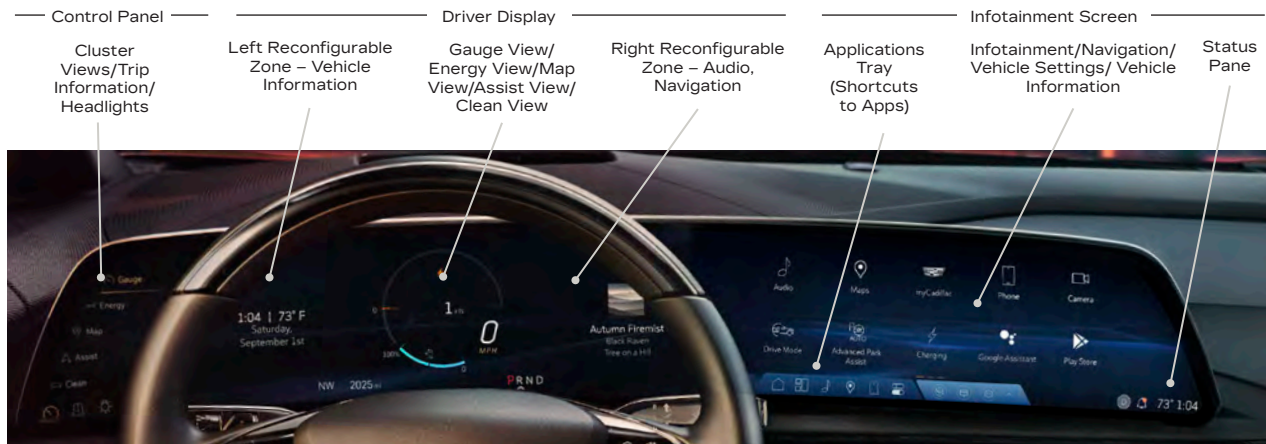

TOUCH CONTROLS

Use simple gestures to interact with the control panel and the infotainment screen.

- ▶ Swipe left/right to view the available menus and options.
- ▶ Scroll up/down to view menu items.
- ▶ Tap to select or adjust the displayed item.
- ▶ Press and hold some icons to reset the information.

CLUSTER DISPLAY CONFIGURATION

1. Select (🔌) Instrument Cluster on the control panel.
2. Select the desired display view.

VEHICLE INFORMATION (GAUGE VIEW)

1. Select (🚗) Vehicle Status on the infotainment screen to view the vehicle information displays.
2. To view an item on the cluster display while in Gauge view, select Add to Driver Display. Select Remove from Display to remove the item or select another item.

BATTERY GAUGE – Displays the propulsion battery state of charge and an estimated range of the remaining charge.

POWER INDICATOR GAUGE – Displays the instantaneous charge and consumption power of the propulsion battery.

See Instruments and Controls in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors and liftgate.



Unlock

Press to unlock the driver's door or all doors and liftgate.



Remote Start

Press twice to power on the vehicle and condition the cabin temperature. After entering the vehicle, press the brake pedal.

To cancel a remote start, press and hold the  button until the parking lamps turn off.

Note: It's RECOMMENDED to remote start the vehicle when it is plugged in to use energy from the electrical outlet to assist in getting the cabin to a comfortable temperature and to leave more battery energy for driving.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.



Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.

AUTOMATIC MIRROR FOLDING

To enable the automatic power folding mirrors, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Note: To change or enable some settings, go to Settings > Vehicle > Remote Lock, Unlock and Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the liftgate or door being unlocked.

KEYLESS UNLOCKING (DOOR HANDLE PRESENTERS)

With the key fob within range:

- ▶ Press the front of the door handle to deploy it. Pull the handle to open the door.
- ▶ To program the locked door handles to deploy automatically, go to Settings > Vehicle > Remote Lock, Unlock and Start > Remote Door Unlock.
- ▶ Press the lower part of the Cadillac Crest to open the power liftgate.



KEYLESS LOCKING

With the key fob within range:

- ▶ Press  Lock button on the key fob or interior door panel to lock all doors and liftgate immediately.

PASSIVE LOCKING/UNLOCKING

- ▶ To have all doors and liftgate lock automatically after a short delay when the vehicle is off, the key fob is removed from the vehicle, and all doors are closed, go to Settings > Vehicle > Remote Lock, Unlock and Start > Passive Door Lock.
- ▶ To have the driver's door or all doors and liftgate unlock when using the driver's door, go to Settings > Vehicle > Remote Lock, Unlock and Start > Passive Door Unlock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The vehicle is equipped with Hands-Free Start, which will automatically start the vehicle. The Remote Keyless Entry transmitter (key fob) must be in the passenger cabin to power on the vehicle.

STARTING THE VEHICLE – POWER ON

- ▶ With the key fob in the vehicle, press the brake pedal or close the driver's door to power on the vehicle. If a key fob was left in the vehicle after the last power cycle, the brake pedal must be applied to power on the vehicle.

When the vehicle is ready to be driven, the  READY icon will appear on the cluster display.

Note: If the key fob battery is weak, place the key fob in the rear cupholder in the center console to enable the vehicle to start. Replace the key fob battery as soon as possible.

STOPPING THE VEHICLE – POWER OFF

- ▶ With the vehicle in Park, unbuckle the seat belt and open the driver's door. After exiting the vehicle and closing the door, the vehicle will power off automatically.
- ▶ To turn off the vehicle manually, with the vehicle in Park, select the OFF icon on the infotainment screen.

Note: If the vehicle was powered on, but never shifted out of Park, the vehicle must be turned off manually.

POWER ON AFTER DRIVER EXIT

- ▶ To keep the vehicle on after a driver exit, shift to Park and then select the  Extend Mode icon on the infotainment screen. The vehicle will remain on for a set time displayed on the infotainment screen.

See Driving and Operating in your Owner's Manual.

DRIVING EFFICIENTLY

MAXIMIZING RANGE

A number of factors influence energy use and electric range. Here are a few factors that impact driving range:

Technique – Avoid rapid acceleration or braking. Higher speeds use more energy and significantly reduce range.

Terrain – Varying road conditions, such as hills, rain, snow, and wind, impact range.

Climate Settings – The energy needed to warm or cool the vehicle's cabin and propulsion battery can cause range to decline. Turning off the Heat and A/C settings will increase efficiency.

Outside Temperature – Hotter or colder air has an effect on vehicle aerodynamics and range.

POWER INDICATOR GAUGE

The cluster display features a power indicator gauge to help track energy use and extend battery range. The gauge displays the consumption of the propulsion battery and, when regenerative braking is active, the amount of instantaneous power being regenerated.



See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The drive unit is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.



Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) Parking Brake button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the vehicle, press the brake pedal, and then press the (P) button.

The parking brake will release automatically if the vehicle is placed in Drive or Reverse and an attempt is made to drive away.

See Driving and Operating in your Owner's Manual.

ONE-PEDAL DRIVING

When active, the  One-Pedal Driving symbol will illuminate on the cluster display. When the accelerator pedal is released, regenerative braking will slow the vehicle without using the brake pedal, which can help increase energy efficiency. Use the brake pedal for additional braking or panic stops.

- ▶ Go to Controls > Drive & Park > One-Pedal Driving to enable and customize the One-Pedal Driving features.

 
Note: One-Pedal Driving may be limited under certain conditions, including when the propulsion battery is near full charge or cold.

See Driving and Operating in your Owner's Manual.

REGEN ON DEMAND

Regen on Demand regenerates some energy from the vehicle's momentum and stores it in the propulsion battery for later use.

- ▶ To activate Regen on Demand, pull and hold the paddle (A) on the back of the left side of the steering wheel.

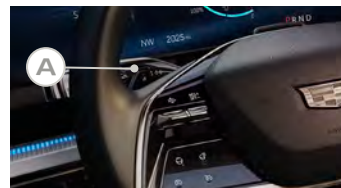

While pulling the paddle, the vehicle will decelerate using regenerative braking. The paddle is pressure-sensitive and the vehicle will slow more as the paddle is pulled; continue holding the paddle for greater regeneration. Regen on Demand is deactivated once the paddle is released.

Note: Regenerative braking may be limited under certain conditions, including when the propulsion battery is near full charge or cold.

See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL

The Drive Mode settings automatically adjust various vehicle systems based on driving preferences, weather and road conditions.

- Select the Drive Modes icon on the infotainment screen to change the drive mode.

Tour – Use for everyday driving, with tuning and calibration tailored for a smooth ride.

Snow/Ice – Designed to help prevent wheel spin in snow or other slippery conditions.

Sport – Calibrated for an enhanced feeling of road connection and improved steering at higher speeds.

My Mode – Allows you to personalize characteristics of your drive, including accelerator responsiveness, steering feel and braking responsiveness.

See Driving and Operating in your Owner's Manual.



LIGHTING

The IntelliBeam system automatically turns the high-beam headlamps on/off when it is dark enough based on traffic conditions.

1. To view the exterior lamp controls, go to Controls > Lights on the infotainment screen.
2. Select Auto High Beams to activate the IntelliBeam system. The headlights must be set to Auto or On. The  indicator illuminates on the cluster display when the system is on.

Note: The IntelliBeam system activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS

OFF/Wiper Speed

Rotate the Wiper control band to turn the wipers on/off and to adjust the wiper speed.

1x Single Wipe

Press the button on the end of the lever to the detent to activate the wipers for a single wipe.



Washer Fluid

Press the button on the end of the lever fully to wash the windshield and activate the wipers for additional wipes.

See Instruments and Controls in your Owner's Manual.

AUTOMATIC VEHICLE HOLD

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The AVH indicator is green on the cluster display when the system is holding the vehicle.

- To turn the system on or off, press the AUTO HOLD button (A) on the left side of the instrument panel.



 
 
Note: Automatic Vehicle Hold is not active under all conditions. Do not rely on the system to hold the vehicle.

See Driving and Operating in your Owner's Manual.

INFOTAINMENT SYSTEM CONTROLS

Read your Owner's Manual for important information about using the infotainment system while driving.

The infotainment system comes with Google built-in compatibility, which offers a variety of entertainment, communication and vehicle options. Touch an application icon on the infotainment touchscreen or use the rotary infotainment controller and buttons to access an item. You can use simple gestures on the touchscreen, such as tap, drag, pinch, and spread, to interact with the system. Link a compatible phone or portable audio player to the system using a Bluetooth or USB connection. For additional information, visit cadillac.com/support.

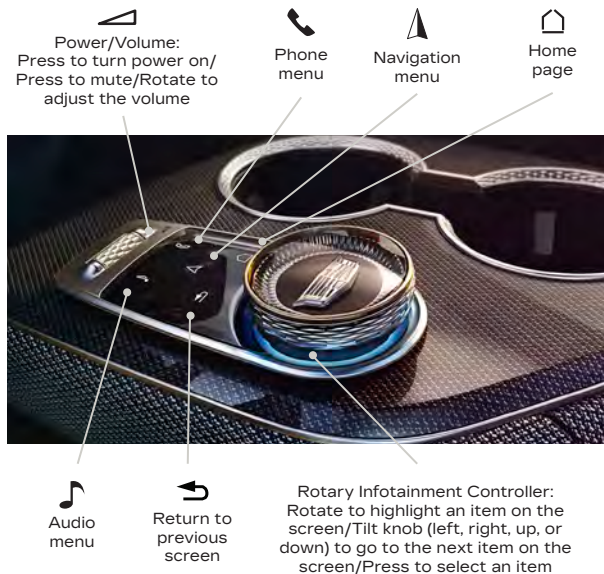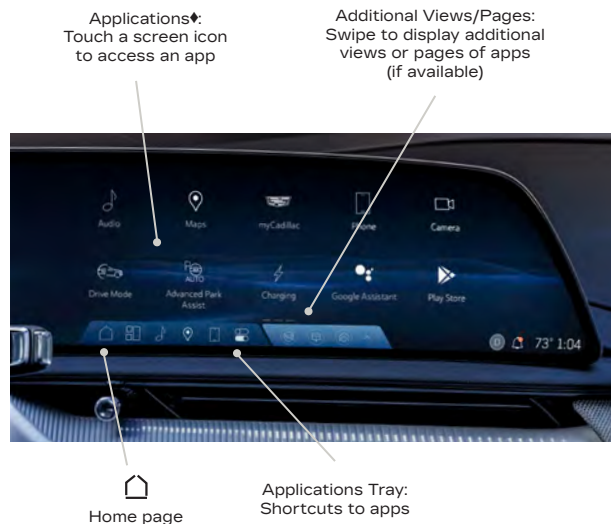

INFOTAINMENT SYSTEM FEATURES

MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Continue holding the icon and drag it to the desired position on the screen or app tray, and then release.

STORING RADIO STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[◆]) can be stored in any order. The number of favorites is displayed automatically.

1. Tune in a radio station.
2. Touch Hold to Set.

SIRIUSXM[®] WITH 360L[◆]

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

AUDIO SOURCES

Audio sources may include radio stations, a USB-C connection, or a paired Bluetooth device.

1. From the Home page, select the Audio icon.
2. Touch the Source icon.
3. Select the desired audio source.

GOOGLE BUILT-IN*

Google built-in provides access to some of your favorite apps, including Google Assistant, Google Maps and Google Play.

- Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google in your compatible Cadillac to get hands-free help to call or text friends, listen to music, set reminders, or even control the temperature in your vehicle.

- To start, say “Hey Google,” tap the Google Assistant icon on the Home page, or press and release the  Push to Talk button on the steering wheel.

Google Maps – Use Google Maps to find your fastest route, get updates on traffic, find the nearest coffee shop and know how much range/mileage you have left when you select a destination. Sign in to your Google Account for personalized maps with home/recent locations.

When vehicle data is shared with Google, map features may include battery charge level at arrival and estimated minimum charging time. Charging stations also may be added to a route.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

See Infotainment System in your Owner's Manual.

*Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play, and Google Maps are trademarks of Google LLC.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

To use a Bluetooth-enabled device, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The vehicle must be stopped to pair a device.

PAIR A PHONE

1. Press and hold the  Push to Talk button to start the pairing process on the infotainment screen (if a phone is not connected).
To use the infotainment screen, select the Phone icon > Manage Phones > +Add Phone.
 2. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
 3. Follow the pairing instructions.
 4. When pairing is complete, the phone screen is displayed.
- Additional phones also can be paired by going to Settings > Connections > Phones.

FIRST TO CONNECT

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect.

- To set the First to Connect phone, go to Settings > Connections > Phones > Options.

BLUETOOTH VOICE CONTROL

- To use your paired phone's compatible voice assistant, such as Siri or Google Assistant, press and hold the  Push to Talk button (long press) on the steering wheel.

See Infotainment System in your Owner's Manual.

WI-FI® HOTSPOT

With the vehicle's available built-in 5G Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed Internet. For information on use and system limitations, visit cadillac.com/support.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen.

See Infotainment System in your Owner's Manual.

TEEN DRIVER

Teen Driver allows multiple Remote Keyless Entry transmitters (key fobs) to be registered for beginning drivers. When active, the system automatically activates certain safety systems, allows setting of some features, and limits the use of others. An in-vehicle Report Card records vehicle data about driving behavior. When the vehicle is started with a registered key fob, a Driver Information Center message displays that Teen Driver is active.

BUCKLE TO DRIVE

When enabled, Buckle to Drive prevents the vehicle from shifting out of Park if the brake pedal is pressed and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park after several seconds.

- To create a Personal Identification Number, register a key fob, change Teen Driver settings, or access the Report Card, go to Settings > Vehicle > Teen Driver.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The wireless phone charging system is located in the center console. To check device compatibility, visit cadillac.com/support. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pocket.
3. Place the phone, screen facing up, in the pocket.
4. The ⚡ battery charging symbol will display on the infotainment screen. If not charging, remove the phone for 3 seconds and rotate it 180 degrees before reinserting it in the charging pocket.

See Instruments and Controls in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the infotainment screen enables your vehicle to control multiple devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off and customized using the Settings menus on the infotainment screen, including Remote Start, Power Liftgate, Auto Heated/Ventilated Seats, Safety Alert Seat, Mirror Folding, Wipers and others.

1. Touch Settings or Controls on the Home page.
2. Select the desired menu.
3. Select the desired feature and setting.
4. Touch < Back to exit each menu.

See Infotainment System in your Owner's Manual.

GLOVE BOX

There are several ways to open the glove box.

- ▶ Select the Glove Box Release icon on the Controls page (A) of the infotainment screen.
- ▶ With the vehicle stopped, select the Glove Box Release icon (B) on the Home page of the infotainment screen.
- ▶ With the vehicle off, press the Volume control or Rotary Infotainment Controller on the center console to display the infotainment screen. Select the Glove Box Release icon (B).
- ▶ To close the glove box, push up the door until it latches.



See Storage in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL/SUPER CRUISE

Note: Refer to the Super Cruise Convenience & Personalization Guide, and Driver Assistance Systems on page 16, for more information.

On/Off

SET– Set Speed

With Cruise Control on, press the switch down to set a speed.

RES+ Resume Speed

With Cruise Control on, press the switch up to resume the set speed.

Adjust Speed

 
With a cruise speed set, press the switch up or down to the detent to increase (+) or decrease (–) the set speed by 1-mph increments; fully press the switch past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

Cancel

Press to cancel Cruise Control without erasing the set speed from memory. Press and hold to switch between  Cruise Control and  Adaptive Cruise Control.

Follow Distance Gap (Adaptive Cruise Control)

Press to select a targeted gap setting of Far, Medium, or Near — the time between your vehicle and a vehicle detected directly ahead.

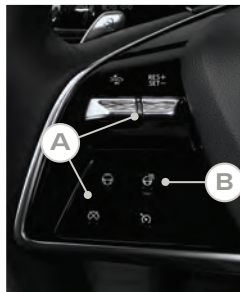

Super Cruise

Press to engage/disengage Super Cruise (Adaptive Cruise Control must be set).

Note: Always pay attention while driving and when using Super Cruise. Do not use a handheld device. Visit cadillac.com/supercruise for full details.

See Driving and Operating in your Owner's Manual.

B. HEATED STEERING WHEEL



On/Off

See Instruments and Controls in your Owner's Manual.

C. VOICE CONTROL



Push to Talk

Press to start voice control. Press and hold to use your paired phone's compatible voice assistant (Siri or Google Assistant).

See Infotainment System in your Owner's Manual.



D. AUDIO/PHONE CONTROLS

+ – Volume

Press the switch up  + or down  – to adjust the volume.

Next/Previous

Press  or  to go to the next or previous favorite station or media track.

Audio

Press to view the audio source.



Phone

Press to answer an incoming call.



End Call/Mute

Press to end or decline a call. Press to mute/unmute the vehicle speakers.

See Infotainment System in your Owner's Manual.

E. DRIVER INFORMATION CENTER CONTROLS

Select/ Scroll

Press the switch up or down to move through the active menu.

Press the switch to open a menu, select or reset an item, or clear a message.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



- ON/OFF
Power
On-Off
- AUTO
Automatic
Operation
- Airflow
Delivery
- Driver's
Temperature
Control
(lift up/press
down)
- Fan Speed
(lift up/press
down)
- Passenger's
Temperature
Control
(lift up/press
down)
- A/C / Air Conditioning
On-Off/Heat
On-Off
- Recirculation
Mode
- Max Defrost/Rear
Defog, Heated
Outside Mirrors,
Heated Wiper Park

AUTOMATIC OPERATION

- ▶ Press the AUTO switch. The system automatically controls the fan speed, air delivery and recirculation to reach the set temperature.

CLIMATE DISPLAY

- ▶ Select the Climate icon on the infotainment screen to view and adjust the fan, air delivery, temperature, air conditioning, heat and Sync (synchronized temperature) settings.

CLIMATE SETTINGS

- ▶ Use the fan only to distribute air through the cabin without active electric heating/cooling (Heat and A/C indicators are off) for increased efficiency.
- ▶ Select Heat or A/C (Heat or A/C indicator is on) for active electric heating/cooling. This setting uses more energy.
- ▶ Use the heated or ventilated seats instead of the climate control system to use less energy.

See Climate Controls in your Owner's Manual.

 
SEAT FEATURES

FRONT-SEAT ADJUSTMENTS

A. Seatback Recline

B. Seat Adjustment

C. Lumbar Support/ Seat Massage

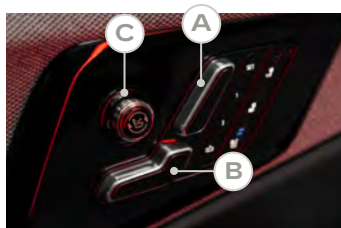

FRONT-SEAT MASSAGE

- ▶ Rotate the feature select knob (C) on the door panel to view massage settings on the infotainment screen. Move the knob (up, down, left, right) to adjust the selected setting.
- ▶ Press the feature select knob (C) on the door panel to activate the most recent massage setting or turn off the active massage.

SET FRONT-SEAT MEMORY POSITIONS

With the vehicle powered on or in Accessory mode:

1. Adjust the driver's seat and power outside mirrors or the front-passenger's seat to the desired positions.
 2. Press and release the SET button on the driver's door or front-passenger's door.
 3. Immediately press and hold button 1 or 2 until two beeps sound. For the driver's seat, use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- ▶ To store a seat position for exiting the vehicle, repeat the steps using the Exit button.

RECALL FRONT-SEAT MEMORY POSITIONS

- ▶ Press and hold button 1, 2 or Exit until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

RECLINE THE REAR SEAT

- ▶ To recline the seatback, pull the lever (A) on top of the seatback and move the seatback to the desired position. Release the lever.



FOLDING REAR SEAT

- ▶ Pull the lever (A) on the top of the seatback and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To fold a rear seat from the cargo area, press and hold the left or right Seat Release button on the side trim of the cargo area.
- ▶ To raise the seatback, lift it up until it locks in place.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the Remote Keyless Entry transmitter (key fob) twice to open or close.
- ▶ Press the  Power Liftgate button (A) on the driver's door panel to open or close.
- ▶ Press the lower part of the rear Cadillac Crest to open.
- ▶ Press the button (B) next to the liftgate latch to close.



AUTOSENSE POWER LIFTGATE

With Autosense hands-free operation, the liftgate will open automatically after approximately 5 seconds when the key fob is within 3 feet of the rear of the vehicle. A series of warning chirps sound before the liftgate opens. Move the key fob more than 3 feet away from the vehicle to cancel automatic opening.

- ▶ To enable hands-free operation, go to Settings > Vehicle > Comfort and Convenience on the infotainment screen.

POWER LIFTGATE

PROGRAMMING THE LIFTGATE HEIGHT

1. Open the liftgate. Adjust it manually to the desired height.
2. To save the setting, press and hold the button (B) next to the liftgate latch until the turn signals flash and a beep sounds.

See Keys, Doors and Windows in your Owner's Manual.

GLASS ROOF

The power sunshade controls for the glass roof are located on the overhead console.

- ▶ Press and release the   Sunshade Open switch to express-open the sunshade. Press the switch again to stop the sunshade.
- ▶ Press and release the   Sunshade Close switch to express-close the sunshade. Press the switch again to stop the sunshade.

See Keys, Doors and Windows in your Owner's Manual.

HOOD OPENING

The hood-release handle is located under the left side of the instrument panel.

1. With the driver's door open, pull and release the handle, and then pull the handle again to open the hood.
2. Lift the hood at the front of the vehicle.

See Vehicle Care in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather and road conditions may affect feature performance. Read your Owner's Manual for important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

- To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

SAFETY ALERT SEAT – The driver's seat cushion pulses – left, right, or both sides – to alert you of the direction of potential hazards. Audible alerts may be selected instead.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator on the cluster display is green when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  **Forward Collision Alert** button on the steering wheel to set the timing to Far, Medium, or Near.

FRONT PEDESTRIAN BRAKING WITH BICYCLIST

DETECTION – During daytime driving, the system detects pedestrians and bicycles directly ahead and displays an amber  indicator on the cluster display. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

AUTOMATIC EMERGENCY BRAKING/INTERSECTION AUTOMATIC EMERGENCY BRAKING

– The system can help you to help avoid or reduce the severity of front-end collisions with a detected vehicle you're following or a

crossing vehicle detected approaching from the right or left at an intersection. Radar and camera technology are used to automatically provide hard emergency braking or enhance the driver's hard braking.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING –

The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may gently turn the steering wheel to help prevent lane departure and display an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected). The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

BLIND ZONE STEERING ASSIST – The system works to help you avoid a potential collision with a detected vehicle in an adjacent lane. While driving, a  warning symbol is displayed on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The  warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side. If a vehicle is detected in the adjacent lane that you are entering, the system provides a brief, firm steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green  Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror. The steering correction will occur even when using the turn signal in the lane departure direction.

DRIVER ASSISTANCE SYSTEMS

HD SURROUND VISION ♦ – Rear, front or side high-definition camera views, along with a view of the area surrounding the vehicle, are displayed on the infotainment screen when the vehicle is in Reverse or Drive below 8 mph. Camera view buttons are on the screen.

- ▶ HD Surround Vision also can be activated by selecting the Camera icon on the infotainment screen.

SIDE BICYCLIST ALERT – If a detected bicyclist is approaching a side blind zone, the Safety Alert Seat may pulse or beeps may sound (if selected). The feature is available for a short time after the vehicle is turned off.

REVERSE AUTOMATIC BRAKING – In detected, potentially imminent collision situations with some objects behind your vehicle when in Reverse, the system provides alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber pedestrian indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

REAR CROSS TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected). The system may automatically provide hard emergency braking, if you have not already done so.

DRIVER ASSISTANCE SYSTEMS

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the cluster display and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or continuous beeps sound (if selected).

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.



A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. ◀ ▶ Adjustment

Press and release either button to adjust the selected setting.

- ▶ Rotate the Rear Camera control band on the turn signal lever to spray washer fluid on the Rear Camera Mirror lens.

See Keys, Doors and Windows in your Owner's Manual.

CHARGING

VEHICLE INFORMATION

- ▶ Touch the  Vehicle Status icon on the infotainment screen to view details about the vehicle's energy use and how to maximize efficiency.

CHARGING APP

- ▶ Touch the Charging icon on the infotainment screen to open the Charging app. Select the Next Charge, Charge Assist, Schedule or Settings tab.

Next Charge – Select Charge Now to begin charging immediately upon plug-in, or Charge Later for delayed charging. Options include setting the target charge level, time selector, and cabin pre-conditioning.

Charge Assist – View nearby charging stations, download saved routes from the myCadillac mobile app to your built-in Google Maps, and manage charge provider accounts.

Schedule – Set options for the charge level and a schedule for when to charge each day. With a schedule set, charging can occur during off-peak times at a lower cost. On unscheduled days, the vehicle will charge immediately upon plug-in.

Settings – Customize settings for several features, including Home Charge Location, DC Fast Charge Prep and Cabin Pre-Conditioning Temperature.

CHARGING STATUS

The charging status indicator shows the current charging status of the vehicle.

Solid blue indicator – Successful initial plug-in connection.

Flashing green indicator and single tone – Vehicle is plugged in; battery is charging. Flashes indicate the current percentage of battery charge. As the vehicle charges, the flashes will be longer, showing a higher state of charge.

Slow (long pulse) flashing blue indicator with double tone – Vehicle is plugged in; battery charging is delayed.

Solid green indicator – Vehicle is plugged in; battery is charged to set charge level.

Flashing red indicator – Vehicle is plugged in; not charging. Check the charge cord connection.

No light – Vehicle is not plugged in OR there is an issue with the charger or outlet.

No light and three tones – The charge port door is open.

DUAL-LEVEL CHARGE CORD

The included dual-level charge cord features 120-volt and 240-volt attachment plugs that can charge the vehicle at either Level 1, 120 volts, or Level 2, 240 volts, up to 32 amps. For 240-volt charging, a NEMA 14-50 outlet is required. When changing attachment plugs, make sure to fully insert the attachment plug into the charger body so that the connector is flush to the charger body.



CHARGING

START CHARGING

1. With the vehicle in Park, select the Charging icon on the infotainment screen to review the selected charge mode and charge cord limit.



The 8-amp charge cord limit should be used until a qualified electrician inspects the electrical circuit capacity, or if the electrical circuit or outlet capacity is not known.

Note: If a home charge location is not set, the Level 1 cord limit returns to the 8-amp setting each time the vehicle is driven.

2. If using the dual-level charge cord, plug it into an electrical outlet. DO NOT PLUG INTO AN EXTENSION CORD. Charge cord indicators should be green.
3. Press the Cadillac Crest on the charge port door, located just behind the driver-side front wheelhouse, to open the door.
4. Plug the charge cord into the charge port.
5. When charging begins, the charging status indicator will flash green and a single tone sounds. If the charging status indicator flashes red, check the cord connection and power supply.

Note: To change the vehicle chirp settings, go to Charging > Settings on the infotainment screen.

6. Periodically check the electrical outlet/plug while charging. Discontinue use if the electrical outlet/plug is hot, and have the outlet serviced by a qualified electrician.

To temporarily override a delayed charge event, remove and reconnect the charge cord to the vehicle within 5 seconds. It will begin charging immediately.

END CHARGING

1. When the charging status indicator is solid green, charging is complete.
2. Unlock the charge cord from the vehicle by pressing the top latch button and then unplug the charge cord.
3. Press the power charge port door button at the upper-rear corner of the charge port housing to close the door.
4. If using the dual-level charge cord, unplug it from the electrical outlet and stow the charge cord in the vehicle..

DC FAST CHARGING

DC Fast Charging, available at certain public charging stations, provides quick charging of the vehicle's battery while traveling away from home. DC Fast Charging works best to quickly add miles of range to your vehicle when its charge is below 80%. Several factors impact how fast your vehicle charges, including the charging station's capability, current battery charge level, battery temperature and outside temperature.

- To find a DC Fast Charging station, search the area or along your route using the myCadillac mobile app.
- Follow the charging station instructions to perform a DC vehicle charge.
- When charging is complete, the DC charge plug unlocks. Manually stop charging using the button on the charge plug, the charging station controls or the Charging page on the infotainment screen.

See Driving and Operating in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400
TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starting, lockout service and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue OnStar button or red Emergency button (emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-333-4223

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac mobile app to your compatible device today. Within the app, you can set up charge notifications, customize charge settings, and view mileage range, battery status and state of charge. The app's Energy Assist features help to find charging stations with real-time availability, and to initiate a charge session at participating stations.

The app is available on select Apple® and Android™ devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CADILLAC ACCOUNT

Create an account at cadillac.com/owners to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active account required); and more.



We recommend always using ACDelco or GM Genuine Parts.

85510386 A

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



85510386