



XT4

CONVENIENCE & PERSONALIZATION GUIDE

2025


[cadillac.com](https://www.cadillac.com)



Review this quick reference guide for an overview of some important features in your Cadillac XT4. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at [cadillac.com/owners](https://www.cadillac.com/owners).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions.

INSTRUMENT PANEL

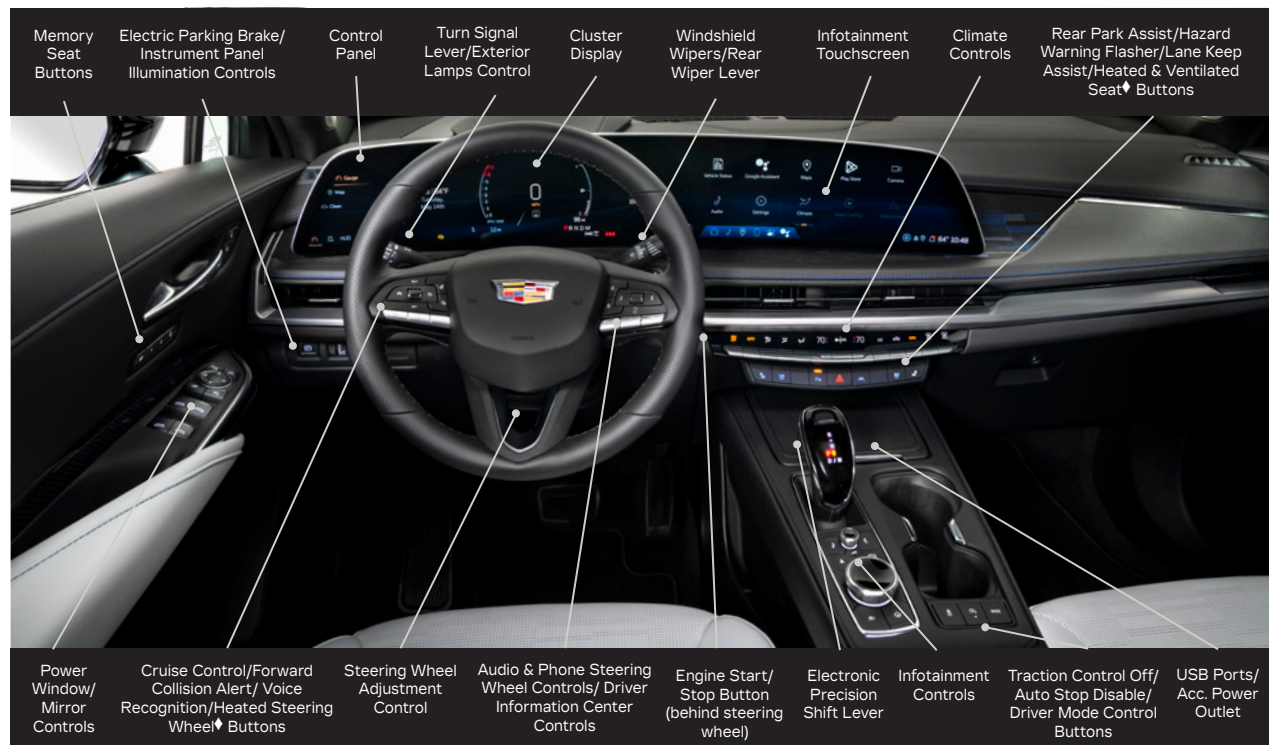

Certain features shown have limited or late availability, or are no longer available. See the window label or your dealer regarding the features on an individual vehicle.

See Introduction in your Owner's Manual.

CADILLAC INFOTAINMENT SYSTEM



TOUCH CONTROLS

Use simple gestures to interact with the Control Panel and the Infotainment Screen.

- ▶ Swipe left/right to view the available menus and options.
- ▶ Scroll up/down to view menu items.
- ▶ Tap to select or adjust the displayed item.
- ▶ Press and hold some icons to reset the information.

MULTICOLOR HEAD-UP DISPLAY (HUD)◆

1. Select HUD on the Control Panel.
 2. Touch the controls to adjust the angle, height and brightness of the image.
- ▶ To turn the HUD on/off, select the On/Off icon.

CLUSTER DISPLAY CONFIGURATION

1. Select Cluster Layout on the Control Panel.
2. Select the desired layout.

SELECT VEHICLE INFORMATION (GAUGE VIEW - LEFT RECONFIGURABLE ZONE)

1. Press the Vehicle Status button on the multifunction controller on the center console or on the Infotainment Screen to view all available vehicle information.
2. Select the desired feature.
3. Select Add to Driver Display to display an item in the left reconfigurable zone. Select Remove from Display to remove an item, or select another item.

See Instruments and Controls in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door. Press again to unlock all doors.

Press and hold to open all windows (if enabled in the Vehicle Settings).

Note: To have the power mirrors fold/unfold when the vehicle is locked/unlocked using the key fob, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.



Remote Start

Press twice to start the engine from outside the vehicle.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn chirps 3 times.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.



Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.

Door/Glove Box Key

Press the button (A) on the side of the key fob to pull out the door/glove box key. Refer to your Owner's Manual for instructions to remove the key cylinder cap on the driver's door handle.

Note: To change or enable some Remote Lock and Unlock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the door being unlocked/locked or within 3 feet of the liftgate.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle and all doors closed:

- ▶ Press the button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the Keyless Unlocking and Locking settings, go to Settings > Vehicle > Remote Lock, Unlock, Start.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

START

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the ENGINE START/STOP button to start the engine. The green indicator on the button will illuminate.



Note: If the key fob battery is weak, place the key fob in the forward cupholder in the center console to enable the engine to start. Replace the key fob battery as soon as possible.

STOP/OFF

- ▶ Shift to Park and then press the ENGINE START/STOP button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof until any door is opened.

ACCESSORY

- ▶ With the engine off and the brake pedal NOT depressed, press the ENGINE START/STOP button to place the ignition system in the Accessory mode. The amber indicator on the button will illuminate.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if operating conditions are met. In Auto Stop mode, the (A) symbol will appear on the Cluster Display. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.

The engine may remain running when the vehicle is stopped if:

- A minimum vehicle speed was not reached prior to stopping.
- The engine or transmission is not at the required operating temperature.
- The outside temperature is not in the required operating range.
- The shift lever is in any gear other than Drive (D).
- The battery charge is low.
- The climate control system requires the engine to run based on the current settings.
- The Auto Stop has reached the maximum allowed time.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the (A) Auto Stop button (A) on the center console to turn off the stop/start system. The button indicator is not illuminated when the system is off.




The system automatically turns on each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

ELECTRONIC PRECISION SHIFT

The automatic transmission shift pattern is displayed on the shift lever with the selected gear position illuminated in red. The shift lever always starts in the center position and, after shifting, returns to the center position.

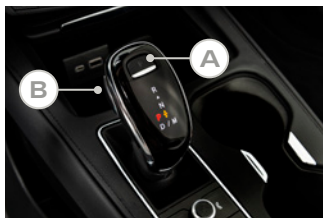

Park – Press the button (A) on top of the lever to shift into Park.

Reverse – Press and hold the shift-lock button (B) on the side of the lever and move the lever forward completely (past the detent) to shift into Reverse.

Neutral – Move the lever forward (to the detent) to shift into Neutral.

Note: The transmission will not stay in Neutral for an extended period. It may automatically shift into Park. See Automated Car Wash Mode.

Drive – Move the lever rearward to shift into Drive. If the vehicle is in Park, press and hold the shift-lock button (B) while moving the lever rearward.

TAP SHIFT MODE

- ▶ With the transmission in Drive, pull back on the shift lever to activate Manual mode. Pull the left steering wheel paddle to downshift and the right steering wheel paddle to upshift. Pull back on the shift lever again to return to Drive.

AUTOMATED CAR WASH MODE

There are different procedures for placing the transmission in Neutral with the engine on or off, and if the driver exits the vehicle. Refer to your Owner's Manual for each procedure.

See Driving and Operating in your Owner's Manual.

DRIVER MODE CONTROL

Driver Mode Control automatically adjusts the steering, suspension and powertrain tuning in real time. Pressing the MODE button on the center console displays the mode menu on the Infotainment Screen and activates the next available mode.



ALL-WHEEL-DRIVE (AWD) OPERATION

On all-wheel-drive models, the vehicle can operate in front-wheel drive or all-wheel drive.

- ▶ Press the MODE button (A) to select Tour (front-wheel drive), AWD, Sport, or Off-Road mode.



If the vehicle is turned off in any mode other than AWD mode, it defaults to Tour mode the next time the vehicle is started.

FRONT-WHEEL-DRIVE (FWD) OPERATION

- ▶ Press the MODE button (A) on the center console to select Tour, Snow/Ice, or Sport mode.

The vehicle defaults to Tour mode each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

STEERING WHEEL CONTROLS

A. CRUISE CONTROL/ ADAPTIVE CRUISE CONTROL

 On/Off

SET- Set Speed

With Cruise Control on, rotate the thumbwheel down to set a speed.

RES+ Resume Speed

With Cruise Control on, rotate the thumbwheel up to resume the set speed.

Adjust Speed

With a cruise speed set, rotate the thumbwheel up or down to the detent to increase or decrease the set speed by 1-mph increments; rotate past the detent to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel Cruise Control without erasing the set speed from memory.

Press and hold to switch between  Cruise Control and  Adaptive Cruise Control.



Follow Distance Gap (Adaptive Cruise Control)

Press to select a targeted gap setting (the time between your vehicle and a vehicle detected directly ahead) of Far, Medium or Near.

See Driving and Operating in your Owner's Manual.

B. VOICE RECOGNITION

 **Push to Talk**

Press to answer an incoming call or to use Google Assistant. Press and hold to use voice recognition with a paired, compatible phone..

 **End Call/Mute**

Press to end/decline a call or mute/unmute the audio system.

See Infotainment System in your Owner's Manual.



C. HEATED STEERING WHEEL ♦

 On/Off

See Instruments and Controls in your Owner's Manual.

D. AUDIO/PHONE CONTROLS

  **Volume**

Press  or  to adjust the volume.

  **Next/Previous**

Press  or  to go to the next or previous favorite radio station or track.

 **Audio**

Press to view the audio source menu.

 **Phone**

Press to view the phone menu.

See Infotainment System in your Owner's Manual.

E. DRIVER INFORMATION CENTER CONTROLS

   **Select/Scroll**


Rotate the thumbwheel up or down to scroll through the active menu. Press the thumbwheel to select an item or clear a message.

See Instruments and Controls in your Owner's Manual.

INFOTAINMENT SYSTEM CONTROLS

Read your Owner's Manual for important information about using the infotainment system while driving.

Your XT4 offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the screen or use the rotary infotainment controller and buttons on the center console to access an item. You can use simple gestures on the touch screen, such as tap, drag, pinch and spread, to interact with the infotainment system. Link a compatible smartphone or portable audio player/iPod® to the infotainment system using a Bluetooth or USB connection. Visit cadillac.com/support for assistance.

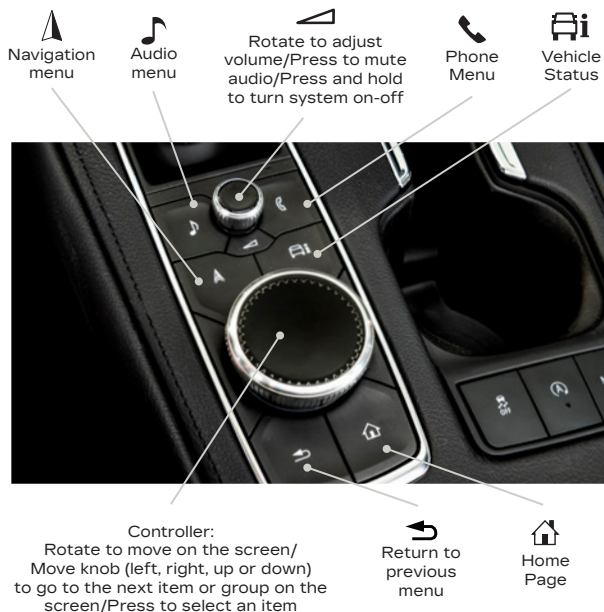

INFOTAINMENT SYSTEM FEATURES

MANAGING HOME PAGE ICONS

1. Press the  Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Continue holding the icon and drag it to the desired position on the screen, and then release.

STORING RADIO STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[◆]) can be stored in any order. The number of favorites is displayed automatically.

1. Tune in a radio station.
2. Touch Hold to Set.



AUDIO SOURCES

Audio sources may include radio stations, a USB connection, or a paired Bluetooth device.

1. From the Home page, select the Audio icon.
2. Touch the Source icon.
3. Select the desired audio source.

GOOGLE BUILT-IN*

Google built-in provides access to some of your favorite apps, including Google Assistant, Google Maps and Google Play.

Google Assistant – Talk to Google in your compatible Cadillac to get hands-free help to call or text friends, listen to music, set reminders, or even control the temperature in your vehicle.

- To start, say “Hey Google,” tap the Google Assistant icon on the Home page, or press and release the  Push to Talk button on the steering wheel.

Google Maps – Use Google Maps to find your fastest route, get updates on traffic, find the nearest coffee shop and know how much range/mileage you have left when you select a destination. Sign in to your Google Account for personalized maps with home/recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

- Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

*Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play and Google Maps are trademarks of Google LLC.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM FEATURES

SIRIUSXM® WITH 360L♦

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

APPLE CARPLAY AND ANDROID AUTO†

Apple CarPlay or Android Auto capability is available through a compatible smartphone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection while parked:
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with the phone. Aftermarket USB cables may not work.
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
2. Follow the instructions on the Infotainment Screen and the phone.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To exit Apple CarPlay or Android Auto, press the  Home button. To return to Apple CarPlay or Android Auto, press and hold the  Home button.
 - ▶ To disconnect wireless projection, go to Settings > Connections > Phones > Options.

VOICE RECOGNITION

Control the music source and navigation♦ destination, and make phone calls hands-free, using the natural voice recognition system and Google Assistant.

1. Press the  Push to Talk button on the steering wheel.
2. The system will play a prompt.
3. After the prompt, say what you want it to do.
 - Example hands-free calling command: "Call Dave" or "Dial 555-1212."
 - Example connected music device search command: "Play artist [name]" or "Play song [name]."
 - Example radio control command: "Tune to 99.5 FM."
 - Help: Say "Help" for voice recognition assistance.



BLUETOOTH VOICE RECOGNITION

Bluetooth Voice Recognition allows access to the voice recognition commands on a compatible, paired phone; e.g., Siri or Google Assistant.

- ▶ To activate Bluetooth Voice Recognition, press and hold the  Push to Talk steering wheel button for a few seconds.

See Infotainment System in your Owner's Manual.

†Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc. User terms and privacy statements apply.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The vehicle must be stopped to pair a device. For more information, visit cadillac.com/support.

PAIR A PHONE

1. Press the  Push to Talk button and say "pair my phone" to start the pairing process on the Infotainment Screen (if a phone is not connected).
To use the Infotainment Screen, select the Phone icon > Manage Phones > +Add Phone.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the Infotainment Screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect.

- To set the First to Connect phone, go to Settings > Connections > Phone > Options.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located under the center console armrest. To check phone compatibility, visit cadillac.com/support. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The  charging symbol will display on the Infotainment Screen. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before placing it on the charging pad again.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off or customized using the Settings menus on the Infotainment Screen, including Rear Seat Reminder, Remote Start, Safety Alert Seat, Mirror Folding, Wipers and others.



1. Touch Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Touch <Back to exit each menu.

See Infotainment System in your Owner's Manual.

WI-FI® HOTSPOT

With the vehicle's available built-in 5G Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit cadillac.com/support.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the Infotainment Screen.

See Infotainment System in your Owner's Manual.

ULTRAVIEW SUNROOF

OPEN/CLOSE THE SUNSHADE

- Press the rear or front of the  Sunshade switch to express-open or express-close the sunshade.



OPEN/CLOSE THE SUNROOF

- Press the rear of the  TILT switch to vent the sunroof. Press the front of the switch to close the sunroof.
- Press the rear of the  SLIDE switch to express-open the sunroof. Press the front of the switch to express-close the sunroof.

See Keys, Doors and Windows in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



AUTOMATIC OPERATION

- Press the AUTO button. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. If a function is manually adjusted, the auto indicator turns off and automatic operation for that function is disabled. Functions that have not been adjusted remain in auto mode.

CLIMATE DISPLAY

- Select the Climate icon on the Home page of the Infotainment Screen to view the current operation of the Climate Controls and adjust the settings.

See Climate Controls in your Owner's Manual.



SEAT FEATURES

SET FRONT SEAT MEMORY POSITIONS

With the ignition On or in Accessory mode:

1. Adjust the driver's seat and power outside mirrors to the desired positions.
 2. Press and release the SET button on the driver's door. A beep will sound.
 3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- To store a seat position for more clearance when exiting the vehicle, repeat the steps using the  Exit button instead of button 1 or 2.



RECALL FRONT SEAT MEMORY POSITIONS

- Press and hold button 1, 2 or  Exit until the set position is reached.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off. For exit recall, the driver's door must be opened.

- To set the automatic recall options, go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

FRONT SEAT LUMBAR MASSAGE◆

- With the ignition On, press the  Massage button (A) on the side of the seat to select the massage setting.

- Use the Feature Select knob (B) to display seat adjustment features on the Infotainment Screen and adjust the massage type and intensity.



AUTOMATIC HEATED/VENTILATED FRONT SEATS◆

When the vehicle is started, the heated or ventilated front seats will automatically activate based on the vehicle's interior temperature. The seat button indicators will illuminate when the heated or ventilated seats are on. You may manually turn off the heated or ventilated seats using the  Heated or  Ventilated Seat button.

- To turn the automatic heated or ventilated front seats feature on or off, go to Settings > Vehicle > Climate and Air Quality > Cooled/Ventilated Seats on Startup or Heated Seats on Startup.

FOLDING THE REAR SEATBACK

1. Press the button (C) on the side of the head restraint. It will fold rearward automatically.
2. Pull the lever (D) on top of the seatback and fold the seatback forward.



See Seats and Restraints in your Owner's Manual.

EXTERIOR LIGHTING



Rotate the control band to activate the exterior lamps.

 **Off/On**

AUTO Automatic Headlamp System

Automatically activates the exterior lamps depending on outside light conditions.

 **Parking Lamps**

 **Headlamps**

 **IntelliBeam System**

The IntelliBeam system automatically turns the high-beam headlights on/off based on traffic conditions at night.

With the lamp control in the AUTO or  Headlamps position, press the  button on the end of the lever to turn the system on or off. The  indicator displays on the Cluster Display when the system is on.

Note: The IntelliBeam system activates the high-beam headlights only when driving more than 25 mph.

See Lighting in your Owner's Manual.

WINDSHIELD WIPERS



Move the lever up or down to activate the windshield wipers.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes/AUTO Rainsense™ Sensitivity

Rotate the band up for more frequent wipes or down for less frequent wipes. To turn Rainsense on/off, go to Settings > Vehicle > Comfort and Convenience > Rainsense Wipers.

OFF

1x Single Wipe



Washer Fluid

Pull the lever to spray washer fluid on the windshield.

REAR WIPER



OFF-INT-ON

Rotate the end of the lever to activate the rear wiper.



Rear Washer Fluid

Push the lever to spray washer fluid on the rear window and the rear camera lens♦, if equipped.

See Instruments and Controls in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather and road conditions may affect feature performance. Read your Owner's Manual for important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

- To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the Infotainment Screen.

SAFETY ALERT SEAT – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards. Audible alerts may be selected instead of seat-pulsing alerts.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  Forward Collision Alert button on the steering wheel to set the alert timing to Far, Medium or Near. This is also the Adaptive Cruise Control Following Gap setting.



ENHANCED AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

INTERSECTION AUTOMATIC EMERGENCY BRAKING – The system can help you avoid or reduce the severity of an intersection collision with a detected cross-traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

LANE CHANGE ALERT WITH BICYCLE DETECTION – The system works to help you avoid a potential collision with a detected vehicle or bicycle in an adjacent lane. While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The symbol flashes if a turn signal is activated when a vehicle has been detected on the same side. If a bicycle is detected, the Safety Alert Seat may pulse or beeps may sound (if selected). Bicycle Detection is available for a short time after the vehicle is turned off.

DRIVER ASSISTANCE SYSTEMS

BLIND ZONE STEERING ASSIST

– The system can help you avoid a potential collision with a detected vehicle in an adjacent lane. If a vehicle is detected in the adjacent lane that you are entering, the system provides a brief, firm steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green / \ Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- ▶ To turn on or off, press the  Lane Keep Assist button (A) on the center of the instrument panel.

FRONT PEDESTRIAN BRAKING WITH BICYCLE DETECTION

– During daytime driving below 50 mph, the system can detect pedestrians and bicycles directly ahead and displays an amber  indicator. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the Infotainment Screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.



REVERSE AUTOMATIC BRAKING –

In detected, potentially imminent collision situations with some objects behind your vehicle while in Reverse, the system can provide alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Cluster Display and

the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

- ▶ Press the  Park Assist button (B) on the center of the instrument panel to turn Reverse Automatic Braking and Rear Park Assist on or off.

REAR CROSS TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic approaching in either direction by displaying a red triangle with directional arrow alert on the Infotainment Screen and the left or right side of the Safety Alert Seat pulses or beeps sound (if selected). The system may automatically provide hard emergency braking, if you have not already done so.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

HD SURROUND VISION – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the Infotainment Screen. The system operates when the vehicle is in Reverse or Drive while moving less than 8 mph. Camera view controls are on the screen.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR ♦ – The Rear Camera Mirror provides a wider, less obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

TRACTION CONTROL

The Traction Control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  Traction Control button (A) on the center console to turn Traction Control off or on again. The  Traction Control Off light will illuminate on the Cluster Display when the system is off.



See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the  Parking Brake switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal and then press the  switch.



Note: The parking brake will automatically release if the vehicle is running, placed into gear, and an attempt is made to drive away.

See Driving and Operating in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the Remote Keyless Entry (RKE) transmitter (key fob) twice.
- ▶ Press the  Power Liftgate knob (A) on the driver's door.
- ▶ Press the touchpad under the liftgate handle to open the liftgate.
- ▶ Press the  button (B) next to the pull handle to close the liftgate.

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob (A) to the 3/4 mode position.
2. Open the liftgate. Adjust it manually to the desired height.
3. To save the setting, press and hold the button (B) next to the pull handle for 3 seconds. The turn signals flash and a beep sounds when the setting is saved.
4. With the knob in the 3/4 mode, the liftgate will open to the saved position.



POWER LIFTGATE

HANDS-FREE OPERATION

- ▶ To open or close the liftgate hands-free, kick your foot straight under the left corner of the rear bumper, indicated by the Cadillac logo projected on the ground.



The projected logo is shown for 1 minute, depending on operating conditions. The key fob must be within 3 feet of the liftgate for hands-free operation.

Note: To change hands-free liftgate settings, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Exterior Storage Access.

See Keys, Doors and Windows in your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM

The  Low Tire Pressure warning light on the Cluster Display illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the Infotainment Screen.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. The horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

OWNER PRIVILEGES™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump starts, lockout service, fuel delivery and flat-tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

OnStar® Roadside Assistance

If you have a current OnStar Safety & Security plan, press the blue OnStar button or red Emergency button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue OnStar button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

CUSTOMER ASSISTANCE

1-800-333-4223

Cadillac Customer Assistance is available anytime to answer questions or provide additional information.

myCADILLAC MOBILE APP

Download the myCadillac app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

MY CADILLAC ACCOUNT

Create an account at cadillac.com/owners to access personalized information, including an online Owner's Manual and helpful how-to videos; track your service history and warranty status; manage your OnStar and Connected Services vehicle plans; review your current Vehicle Diagnostics report (active service account required); and more.



We recommend always using ACDelco or GM Genuine Parts.

85649706 A

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



85649706