



GETTING TO KNOW YOUR **2025 BLAZER EV**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Blazer EV. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



Preproduction model shown throughout. Actual production model may vary.

INSTRUMENT PANEL

Power Locks/
Driver's Memory
Seat Controls

Electric Parking Brake/
Lane Keep Assist/Auto
Hold/Instrument Panel
Illumination Controls

Turn Signal Lever/
Windshield Wipers/
Rear Wiper Lever

Regen on
Demand
Paddle

Driver
Display

Electronic
Precision
Shift Lever



Power Window/
Power Mirror
Controls

Power
Liftgate
Button

Cruise Control/
Super Cruise/
Forward Collision
Alert Buttons

Audio Favorite
Station Controls
(back of steering
wheel)

Audio Volume
Controls (back of
steering wheel)

Driver Information
Center/Audio/Voice
Control/Heated
Steering Wheel
Buttons

SYMBOLS



Service Vehicle Soon



Traction Control Off

BRAKE

Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



Electric Parking Brake



Electric Parking Brake Service



Lights On Reminder



Airbag Readiness



IntelliBeam Lighting



Pedestrian Ahead



Lane Keep Assist



Blazer EV SS shown

- | | | | |
|--|-----------------------|--|------------------------------|
| | Vehicle Ahead | | Seat Belt Reminder |
| | Antilock Brake System | | Passenger Seat Belt Reminder |
| | Low Tire Pressure | | Vehicle Ready |
| | Door Ajar | | High-Voltage Battery Fault |
| | 12V Charging System | | |

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators of the cluster display.

See Introduction in your Owner's Manual.

HANDS-FREE START

The vehicle is equipped with Hands-Free Start, which will automatically start the vehicle. The Remote Keyless Entry transmitter (key fob) must be in the passenger cabin to power on the vehicle.

STARTING THE VEHICLE – POWER ON

- ▶ With the key fob in the vehicle, press the brake pedal or close the driver's door to power on the vehicle. If a key fob was left in the vehicle after the last power cycle, the brake pedal must be applied to power on the vehicle.

When the vehicle is ready to be driven, the

 **READY** icon will appear on the cluster display.

Note: If the key fob battery is weak, place the key fob on the key icon in the front center-console storage compartment to enable the vehicle to start. Replace the key fob battery as soon as possible.

STOPPING THE VEHICLE – POWER OFF

- ▶ After driving the vehicle, shift into Park, unbuckle the seat belt and open the driver's door. After exiting the vehicle and closing the door, the vehicle will power off automatically.
- ▶ To turn off the vehicle manually, with the vehicle in Park, select the OFF icon on the infotainment screen below the Volume knob.

Note: If the vehicle was powered on, but never shifted out of Park, the vehicle must be turned off manually.

POWER ON AFTER DRIVER EXIT

- ▶ To keep the vehicle on after a driver exit, shift to Park and then select the Extend Mode icon on the infotainment screen. The vehicle will remain on for a set time displayed on the infotainment screen.

See *Driving and Operating* in your Owner's Manual.



ELECTRONIC PRECISION SHIFT

The drive unit is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and on the cluster display. The driver's seat belt must be buckled to shift the drive unit.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.


Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See *Car Wash Mode* in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

See *Driving and Operating* in your Owner's Manual.



INSTRUMENT CLUSTER

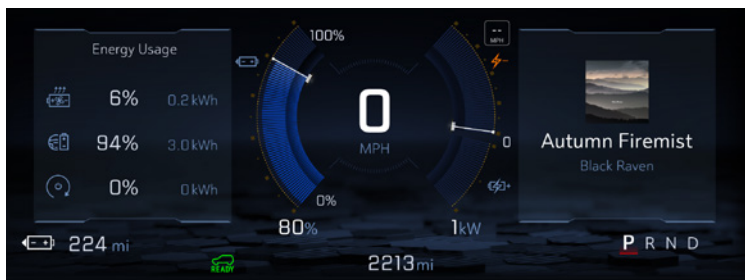

The reconfigurable cluster can display a variety of messages and vehicle information, including energy efficiency, trip information, the audio source, driver assistance information and more.

CLUSTER DISPLAY CONTROLS

- ▶ Press the **Display** button to view and scroll through the cluster display layouts.
- ▶ Press the or switch to scroll through the active menu.
- ▶ Press the switch to select an item or clear a message.



VEHICLE INFORMATION

- ▶ Press the Vehicle Status icon on the infotainment screen to view all available vehicle information.
- ▶ When viewing an item, select Add to Driver Display to display an item or Remove from Display to remove an item on the driver display.



BATTERY GAUGE

The battery gauge (A) displays the propulsion battery state of charge and an estimated range of the remaining charge.

POWER INDICATOR GAUGE

The power indicator gauge (B) displays instantaneous charge and consumption power to help track energy use and extend battery range. A green power indicator gauge indicates energy regeneration through braking. Avoid driving that turns the gauge amber, indicating excessive power use.



See Instruments and Controls in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER

Lock

Press to lock all doors and liftgate.

Unlock

Press to unlock the driver's door or all doors and liftgate.

Vehicle Locator/ Panic Alarm

Press and release to locate your vehicle. Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.



Power Liftgate

Press twice to open or close the power liftgate. Press once to stop power operation.

Remote Start

Press twice to power on the vehicle and condition the cabin temperature.

To cancel a remote start, press and hold the  button until the parking lamps turn off.

Note: It's *RECOMMENDED* to remote start the vehicle when it is plugged in to use energy from the electrical outlet to assist in getting the cabin to a comfortable temperature and to leave more battery energy for driving.

See *Keys, Doors and Windows* in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the liftgate or door being unlocked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad above the license plate to open the liftgate.

KEYLESS LOCKING

With the key fob within range:

- ▶ Press the button on any door handle to lock all doors immediately.

PASSIVE LOCKING/UNLOCKING

- ▶ To have all doors and liftgate lock automatically after a short delay when the vehicle is off, the key fob is removed from the vehicle, and all doors are closed, go to Settings > Vehicle > Remote Lock, Unlock and Start > Passive Door Lock.
- ▶ To have the driver's door or all doors and liftgate unlock when using the driver's door, go to Settings > Vehicle > Remote Lock, Unlock and Start > Passive Door Unlock.

See *Keys, Doors and Windows* in your Owner's Manual.



DRIVER MODE CONTROL

The Drive Mode settings automatically adjust various vehicle systems based on driving preferences, weather and road conditions.

- ▶ Select the Drive Modes icon on the infotainment screen to change the drive mode.


Available modes may include:

Tour – Use in normal driving for a smooth ride.

Sport – Use for enhanced responsiveness.

Snow/Ice – Use for enhanced traction on snowy roads.

My Mode – Use to personalize settings for acceleration feel, brake feel, steering, motor sound and other systems.

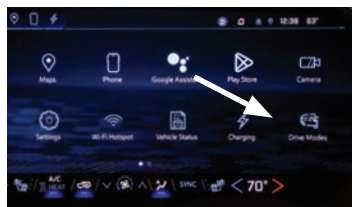

See Driving and Operating in your Owner's Manual.

AUTOMATIC VEHICLE HOLD

Automatic Vehicle Hold will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The Auto Hold indicator illuminates in green on the cluster display when the system is holding the vehicle.

- ▶ To turn the system on or off, press the **AUTO HOLD** button (A) on the left side of the instrument panel.

Note: Automatic Vehicle Hold is not active under all conditions. Do not rely on the system to hold the vehicle.



See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) Parking Brake button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the vehicle, press the brake pedal, and then press the (P) button.

The parking brake will release automatically if the vehicle is placed in Drive or Reverse and an attempt is made to drive away.

The parking brake may apply automatically under some conditions, including parking on certain grades.

See Driving and Operating in your Owner's Manual.

REGEN ON DEMAND

Regen on Demand regenerates some energy from the vehicle's momentum and stores it in the propulsion battery for later use.

- ▶ To activate Regen on Demand, pull and hold the paddle on the back of the left side of the steering wheel.

While pulling the paddle, the vehicle will begin to decelerate using regenerative braking. Use the brake pedal for additional braking or panic stops. Regen on Demand is deactivated once the paddle is released.

Note: Regenerative braking may be limited under certain conditions, including when the propulsion battery is near full charge or cold.

See Driving and Operating in your Owner's Manual.



ONE-PEDAL DRIVING

- ▶ Go to Controls > Drive & Park > One-Pedal Driving to enable and customize the One-Pedal Driving features.
- ▶ To quickly turn One-Pedal Driving on or off, press the quick access button on the left side of the infotainment display.

When active, the  One-Pedal Driving symbol will illuminate on the cluster display. When the accelerator pedal is released, regenerative braking will slow the vehicle without using the brake pedal, which can help increase energy efficiency. Use the brake pedal for additional braking or panic stops.

See Driving and Operating in your Owner's Manual.



DRIVING EFFICIENTLY

MAXIMIZING RANGE

A number of factors influence energy use and driving range, including:

Technique – Avoid rapid acceleration or braking. Higher speeds use more energy and significantly reduce range.

Terrain – Varying road conditions, such as hills, rain, snow, and wind, impact range.

Climate Settings – The energy needed to warm or cool the vehicle's cabin and propulsion battery can cause range to decline. Turning off the Heat and A/C settings will increase efficiency.

Outside Temperature – Hotter or colder air has an effect on vehicle aerodynamics and range.

See Driving and Operating in your Owner's Manual.

HEAD-UP DISPLAY◆

The Head-Up Display (HUD) projects some operating information on the windshield. Temporary information and vehicle messages also may be displayed.

- ▶ Select Controls > HUD on the infotainment screen to turn the HUD on/off and to adjust the display brightness and position.



See Instruments and Controls in your Owner's Manual.

SEAT FEATURES

MANUAL FRONT-SEAT ADJUSTMENTS

Seat Adjustment – Lift the front handle to slide the seat forward/rearward.

Seat Height – Ratchet the side handle to raise/lower the seat.

Seatback Recline – Lift the side lever to adjust the seatback.

POWER FRONT-SEAT ADJUSTMENTS◆

A. Seat Adjustment

B. Seatback Recline

C. Lumbar Support



SET FRONT-SEAT MEMORY POSITIONS◆

1. With the vehicle on, adjust the driver's seat and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door.
 3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2.
- ▶ To store a seat position for exiting the vehicle, repeat the steps using the  **Exit** button.



RECALL FRONT-SEAT MEMORY POSITIONS◆

- ▶ Press and hold button 1, 2 or  **Exit** until the set position is reached.
- ▶ To enable the memory positions to be recalled automatically when the vehicle is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory.

See Seats and Restraints in your Owner's Manual.

CLIMATE CONTROLS

Dual-zone Climate Controls shown; Single-zone Climate Controls similar.



Driver's
Temperature
Control

ON/OFF
Power
On-Off

AUTO
Automatic
Operation

Fan
Speed

MAX
Defrost

REAR
Rear Defog, Heated
Outside Mirrors, Heated
Wiper Park

Passenger's
Temperature
Control♦

AUTOMATIC OPERATION

- Press the AUTO switch. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature.

CLIMATE DISPLAY

- Select the Climate icon on the infotainment screen to view and adjust various settings and to synchronize (Sync) driver and passenger settings.

CLIMATE SETTINGS


- Use the fan only to distribute air through the cabin without active electric heating/cooling (Heat and A/C indicators are off) for increased efficiency.
- Select Heat or A/C (Heat or A/C indicator is on) for active electric heating/cooling. This setting uses more energy.

See Climate Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Many vehicle features can be turned on/off and customized using the Settings and Controls menus on the infotainment screen.


1. Touch Settings or Controls on the Home page.
2. Select the desired menu.
3. Select the desired feature and setting.
4. Touch < Back to exit each menu.

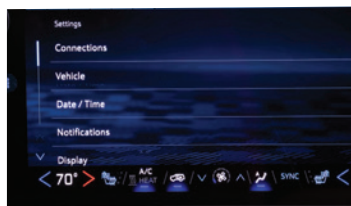

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

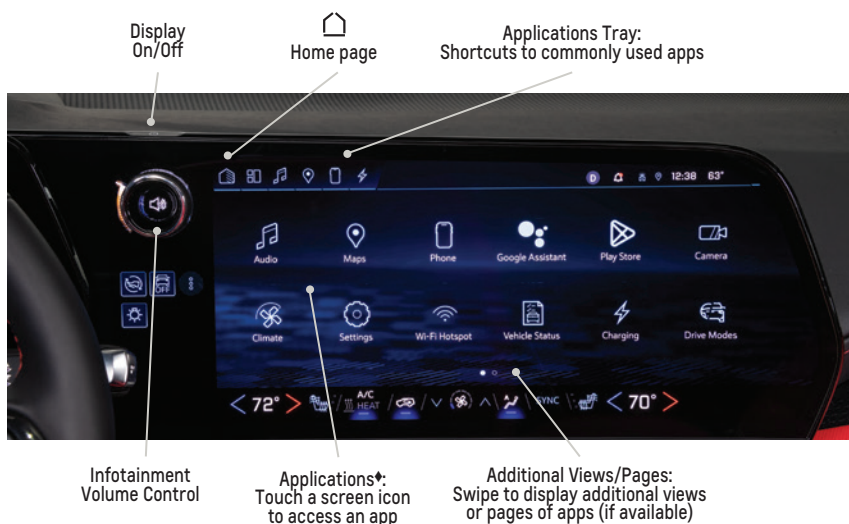

The infotainment system comes with Google built-in[†] compatibility, which offers a variety of entertainment, communication and vehicle options. Touch an application icon on the infotainment touchscreen to access an item. You can use simple gestures on the touchscreen, such as tap, drag, pinch and spread, to interact with the system. Link a compatible phone or portable audio player to the system using a Bluetooth or USB connection. For additional information, or visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the Home button.
2. To enter edit mode, touch and hold the icon to move.
3. Continue holding the icon and drag it to the desired position on the screen or app tray, and then release.

STORING RADIO STATION FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[♦]) can be stored in any order. The number of favorites is displayed automatically.

1. Tune in a radio station.
2. Touch Hold to Set.

[†]Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play, and Google Maps are trademarks of Google LLC.

INFOTAINMENT SYSTEM

AUDIO SOURCES

Audio sources may include radio stations, a USB connection, or a paired Bluetooth device.

1. From the Home page, select the Audio icon.
 2. Touch the Source icon to change the audio source.
- ▶ Press the  Audio button on the steering wheel to view the audio source on the cluster display.

GOOGLE BUILT-IN

Google built-in provides access to some of your favorite apps, including Google Assistant, Google Maps and Google Play.

- ▶ Sign in to your Google Account for the best experience, including getting your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google to get hands-free help to call or text friends, listen to music, set reminders, or even control the temperature in your vehicle.

- ▶ To start, say “Hey Google,” tap the Google Assistant icon on the Home page, or press and release the  Push to Talk button on the steering wheel.

Google Maps – Use Google Maps to find your fastest route, get updates on traffic, find the nearest coffee shop or know how much range/mileage you have left when you select a destination. Sign in to your Google Account for personalized maps with home/recent locations. When vehicle data is shared with Google, map features may include battery charge level at arrival and estimated minimum charging time. Charging stations also may be added to a route.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

WI-FI® HOTSPOT

With the vehicle's available built-in 5G Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed Internet. For information on use and system limitations, visit chevrolet.com/support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING♦

The wireless phone charging system is located in the center console. To check device compatibility, visit chevrolet.com/support. See your phone retailer for required phone accessories or charging adapters.

1. The vehicle must be on.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The  battery charging symbol will display on the infotainment screen.



See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

BLUETOOTH SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

A Bluetooth-enabled device must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The vehicle must be stopped to pair a device.

PAIR A PHONE

1. Press the  **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected). After the prompt, say, "Pair my phone." To use the infotainment screen, select the Phone icon > Manage Phones > +Add Phone.
 2. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
 3. Follow the pairing instructions.
 4. When pairing is complete, the phone screen is displayed.
- Additional phones also can be paired by going to Settings > Connections > Phones.

ANSWERING A CALL

Phone

Press the switch up to answer an incoming call.

End Call/Mute

Press the switch down to end or decline a call.
Press to mute/unmute the vehicle speakers.



See Infotainment System in your Owner's Manual.

ADAPTIVE CRUISE CONTROL

The system enhances regular Cruise Control to maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- Use the **RES+** and **SET-** switch to set/adjust Cruise Control or Adaptive Cruise Control.
- With Adaptive Cruise Control active, press down and release the  **Following Gap** switch to select a targeted gap setting of Far, Medium or Near.



See Driving and Operating in your Owner's Manual.

LIGHTING SYSTEMS

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night.

1. To view the exterior lamp controls, go to Controls > Lights on the infotainment screen.
2. Select Auto High Beams to activate the IntelliBeam system. The headlights must be set to Auto or On. The  indicator illuminates on the cluster display when either system is on.

Note: The IntelliBeam system activates the high-beam headlamps only when driving more than 25 mph.




See *Lighting in your Owner's Manual*.

AUTOSENSE POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice to open or close.
- ▶ Press the  **Power Liftgate** button (A) on the driver's door panel to open or close.
- ▶ Press the button above the license plate to open.
- ▶ Press the button (B) next to the liftgate latch to close.

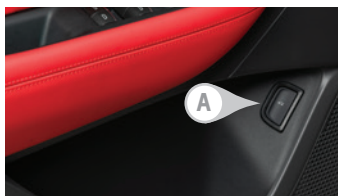

HANDS-FREE OPERATION

If equipped with hands-free operation, the liftgate will open automatically after approximately 5 seconds when the key fob is within 3 feet of the rear of the vehicle after a series of warning chirps. Automatic operation can be disabled under the Vehicle Settings on the infotainment screen.

PROGRAMMING THE LIFTGATE HEIGHT

1. Open the liftgate. Adjust it manually to the desired height.
2. To save the setting, press and hold the button (B) next to the liftgate latch until the turn signals flash and a beep sounds.

See *Keys, Doors and Windows in your Owner's Manual*.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Visibility, weather and road conditions may affect feature performance. Read your Owner's Manual for important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

- To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

SAFETY ALERT SEAT – The driver's seat cushion pulses – left, right or both sides – to alert you of the direction of potential hazards. Audible alerts may be selected instead.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green on the cluster display when a vehicle is detected and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.

AUTOMATIC EMERGENCY BRAKING – When traveling from 5 mph up to highway speeds, the system can help you avoid or reduce the severity of a collision with a detected vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

INTERSECTION AUTOMATIC EMERGENCY BRAKING – The system can help you avoid or reduce the severity of an intersection collision with a detected cross traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

BLIND ZONE STEERING ASSIST – The system works to help you avoid a potential collision with a detected vehicle in an adjacent lane. While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

If a vehicle is detected in the adjacent lane that you are entering, the system provides a brief, firm steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green / \ Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror.

The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- To turn on or off, press the  **Lane Keep Assist** button on the left side of the instrument panel.

DRIVER ASSISTANCE SYSTEMS

FRONT PEDESTRIAN AND BICYCLIST BRAKING – During daytime driving between 5 and 50 mph, the system detects pedestrians and bicycles directly ahead and displays an amber  indicator on the cluster display. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

HD SURROUND VISION – Rear, front or side high-definition camera views, along with a view of the area surrounding the vehicle, are displayed on the infotainment screen when the vehicle is in Reverse or Drive below 8 mph. Camera view buttons are on the screen.

► HD Surround Vision also can be activated by selecting the Camera icon on the infotainment screen.

REVERSE AUTOMATIC BRAKING – In detected, potentially imminent collision situations with some objects behind your vehicle when in Reverse, the system provides alerts and hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

REAR CROSS TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected). The system may automatically provide hard emergency braking, if you have not already done so.

FRONT AND REAR PARK ASSIST – During low-speed parking maneuvers, the system provides “distance to closest object” information on the cluster display and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or 5 beeps sound (if selected).

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR – The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

CHARGING

CHARGING APP

- ▶ Touch the Charging icon on the infotainment screen to open the Charging app. Select the Next Charge, Charge Assist, Schedule or Settings tab to display the desired charging information.

Next Charge – Select Charge Now to begin charging immediately upon plug-in, or Charge Later for delayed charging. Options include setting the target charge level, time selector and cabin pre-conditioning.

Charge Assist – View nearby charge stations, download saved routes from the myChevrolet app to your built-in Google Maps, and manage charge provider accounts. Charge Assist requires a myChevrolet mobile app account.

Schedule – Set options for the charge level and a schedule for when to charge each day of the week. With a schedule set, charging can occur during off-peak times at a lower cost. On unscheduled days, the vehicle will charge immediately upon plug-in.

Settings – Enable custom settings for several features, including Home Charge Location, Notifications (including turning off the headlight charging indicator), DC Fast Charge Prep, Cabin Pre-Conditioning Temperature and Preferred Charge Times.



HOME CHARGE LOCATION

With a Home Charge Location set, the vehicle's GPS location is used to determine if it is plugged in at home. The vehicle will automatically charge according to any existing schedules or other customized charge settings when parked at its home location.

TARGET CHARGE LEVEL

The target charge level sets the maximum level the battery will charge to when plugged in. It will be set to 80% when the vehicle is new. It's important to charge your battery to 80% for daily use. This helps promote battery health and optimal regenerative braking performance, which helps increase efficiency. For longer trips, adjust charging above 80% for extended range by sliding the indicator to the desired charge level. Slide the indicator back to 80% when additional charging is no longer needed.



DUAL-LEVEL CHARGE CORD♦

The available dual-level charge cord features 120-volt and 240-volt attachment plugs that can charge the vehicle at either Level 1 (120 volts) or Level 2 (240 volts) up to 32 amps. For 240-volt charging, a NEMA 14-50 outlet is required. When changing attachment plugs, make sure to fully insert the attachment plug into the charger body so that the connector is flush to the charger body.



CHARGING

CHARGING STATUS

The charging status indicator on the top of the instrument panel shows the current charging status of the vehicle.

Solid blue indicator – Successful initial plug-in connection.

Flashing green indicator and single tone – Vehicle is plugged in; battery is charging. Flashes indicate the current percentage of battery charge. As the vehicle charges, the flashes will be longer, showing a higher state of charge.

Slow (long pulse) flashing blue indicator with double tone – Vehicle is plugged in; battery charging is delayed.

Solid green indicator – Vehicle is plugged in; charging complete.

Flashing red indicator – Vehicle is plugged in; not charging. Check the charge cord connection.

No light – Vehicle is not plugged in OR there is an issue with the charger or outlet.

No light and three tones – The charge port door is open.

START CHARGING

1. With the vehicle in Park, select the Charging icon on the infotainment screen to review the selected charge mode and charge cord limit.

If using a standard 120-volt household outlet, the 8-amp charge cord limit should be used until a qualified electrician inspects your facility's electrical circuit capacity, or if the electrical circuit or outlet capacity is not known.

Note: If a home charge location is not set, the charge level selection returns to the 8-amp setting each time the vehicle is driven.

2. Plug the charge cord into an electrical outlet. **DO NOT PLUG INTO AN EXTENSION CORD.**

3. Press the upper-front portion of the charge port door (A), located just behind the driver-side front wheelhouse, to open the door.

4. Plug the charge cord into the charge port.

5. When charging begins, the charging status indicator will flash green and a single tone sounds. If the charging status indicator flashes red, check the charge cord connection and power supply.

Note: To change the vehicle chirp settings, go to *Charging > Settings* on the infotainment screen.

6. Periodically check the electrical outlet/plug while charging. Discontinue use if the electrical outlet/plug is hot, and have the outlet serviced by a qualified electrician.

To temporarily override a delayed charge event, remove and reconnect the charge cord to the vehicle within 5 seconds. It will begin charging immediately.



CHARGING

END CHARGING

1. When the charging status indicator is solid green, charging is complete.
2. Unplug the charge cord from the vehicle by pressing the top latch button on the charge cord.
3. Press the power charge port door button (B) on the charge port housing to close the charge port door.
4. Unplug the charge cord from the electrical outlet.



DC FAST CHARGING

DC Fast Charging, available at certain public charging stations, provides quick charging of the vehicle's battery while traveling away from home. DC Fast Charging works best to quickly add miles of range to your vehicle when its charge is below 80%. Several factors impact how fast your vehicle charges, including the charging station's capability, current battery charge level, battery temperature and outside temperature. To find a DC Fast Charging station, search the area or along your route using Google built-in on the infotainment screen or the myChevrolet mobile app.

See Driving and Operating in your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet mobile app today. Within the app, you can set up charge notifications, customize charge settings, and view mileage range, battery status and state of charge. The app's Energy Assist features help to find charging stations with real-time availability, and to initiate a charge session at participating stations.

Additional features include a map with an estimate of how far you can travel on your current charge. An intelligent route planner can suggest charging stops along your route, and even show how long to charge at each stop, taking into account many variables, such as temperature, elevation and driving speed.

When your phone is connected to your vehicle, the app will monitor energy usage during your trip. 2025 Blazer EV owners receive up to 8 years of EV Access features to stay connected to your vehicle while on the go.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from your compatible mobile device's app store.

ROADSIDE ASSISTANCE

1-888-811-1926

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ROADSIDE ASSISTANCE AND ONSTAR®

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MY CHEVROLET ACCOUNT

Get to know your vehicle as well as view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **chevrolet.com/owners**.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



87861129

**We recommend always using
ACDelco or GM Genuine Parts.**



87861129 B