



Getting to know your **2025 BrightDrop**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet BrightDrop. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at **chevrolet.com/owners**. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Storage Compartment Cruise Control/Forward Collision Alert Controls Turn Signal/Windshield Wipers Lever Instrument Cluster Driver Information Center/Audio/Voice Recognition/Heated Steering Wheel Controls Electronic Transmission Shift Control



Electric Parking Brake Switch Delivery Mode/Lane Keep Assist/Door Lock & Unlock/Park Assist/Dome, Interior Cargo & Exterior Cargo Lamp Buttons Power Mirror/Window Controls (behind steering wheel) Instrument Panel Lighting Control (behind steering wheel) Steering Wheel Adjustment Lever Power Button

Symbols

BRAKE Brake System



Seat Belt Reminder



Airbag Readiness



IntelliBeam Lighting



Low State of Charge



Charge Cord Connected



12V Charging System



Vehicle Ahead



Lane Keep Assist



Security



Service Vehicle Soon



Electric Parking Brake Set



Service Electric Parking Brake



Automatic Emergency Braking Disabled



Cruise Control



Door Ajar



Antilock Brake System



Lights On Reminder



Pedestrian Ahead



Low Tire Pressure



StabiliTrak/Traction Control



Traction Control Off



StabiliTrak Off



Vehicle Ready

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

The Remote Keyless Entry transmitter (key fob) performs several remote functions and must be present to start the vehicle.

Lock

Press to lock the driver's door, curbside door and cargo door.

Unlock

Press to unlock the driver's door. Press again to unlock the curbside door and cargo door.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.

Press and hold for 3 seconds to activate the alarm. Press again to cancel the alarm.

Power Curbside Door ♦

Press twice to open or close the curbside door.

Power Bulkhead Door ♦

Press twice to open or close the bulkhead door.



Remote Start

Press twice to start the vehicle.

After entering the vehicle, press the brake pedal and then press the  **POWER** button before driving.

- During a remote start, the vehicle will remain on for 60 minutes. After 60 minutes, or multiple shorter remote starts totaling 60 minutes, the vehicle must be started and then turned off before remote start can be used again.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.
- It's RECOMMENDED to remote start the vehicle when it is plugged in to allow energy from the electrical outlet to assist in conditioning the cabin to a comfortable temperature and to leave more battery energy for driving.

Note: To change the remote settings, go to *Settings > Vehicle > Remote Lock, Unlock, Start* on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS/DOOR LOCKS

Keyless Access enables operation of the doors without removing the key fob from your pocket. The key fob must be within 3 ft. (1 m) of the door being unlocked/locked.

DRIVER'S DOOR/CURBSIDE DOOR

- ▶ Press the button (A) on the driver's door to unlock the driver's door only; press again within 5 seconds to also unlock the curbside door.
- ▶ Press the button on the curbside door to unlock the driver's door and curbside door.
- ▶ When unlocked, press the button on the driver's door or curbside door to lock both side doors.
- ▶ If equipped with the Power Door Package, ♦ press the button on the curbside door to unlock the driver's door and curbside door, and to open the curbside door.



See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS/DOOR LOCKS

BULKHEAD DOOR – CABIN


- ▶ Press the button (B) on the cabin-side bulkhead wall to unlock the bulkhead door. The door will relock after 15 seconds or immediately upon closing.

Note: For added security, the bulkhead door can be unlocked only when the key fob is in the vehicle.




BULKHEAD DOOR – CARGO AREA

- ▶ Push the unlock lever (C), located on the cargo-side bulkhead wall, to the right to unlock the bulkhead door. Hold the unlock lever while pulling the door handle (D). The door will relock after 15 seconds or immediately upon closing.

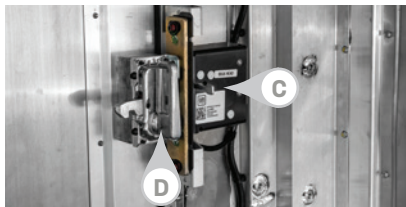

DOOR LOCKS – STEERING WHEEL CONTROLS

- ▶ Press the top or bottom button behind the right side of the steering wheel to lock or unlock the driver's door and curbside door.
- ▶ Press the top or bottom button behind the left side of the steering wheel (E) to lock or unlock the bulkhead door.

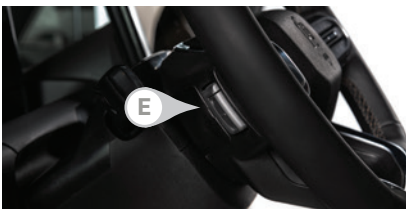

POWER DOOR PACKAGE♦

- ▶ Press the top or bottom button behind the right side of the steering wheel to close or unlock and open the curbside door.
- ▶ Press the button (B) on the cabin-side bulkhead wall or the top or bottom button behind the left side of the steering wheel (E) to close and lock or unlock and open the bulkhead door.



Note: To immediately lock a closed, unlocked curbside door, press the Lock button on the key fob or instrument panel.

CARGO DOOR – INTERIOR

- ▶ Press the button on the interior curbside wall (F) next to the cargo door to unlock the cargo door.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS/DOOR LOCKS

CARGO DOOR — EXTERIOR

- Press the button on the exterior of the vehicle (G) to unlock the cargo door. The key fob must be within 3 ft. (1 m) of the door being unlocked/locked. The cargo door will relock after 7 seconds.

Note: In case of vehicle power loss, the cargo door can be opened using the key cylinder (H).



See Keys, Doors and Windows in your Owner's Manual.

DRIVING EFFICIENTLY

MAXIMIZING RANGE

There are a number of factors that influence energy use and electric range. Here are a few tips that help improve driving range:

Driving Technique

- Accelerate smoothly to help increase range. Rapid acceleration can drain battery energy more quickly.
- Use regenerative braking, which can help charge the battery, instead of making rapid stops.
- Drive at posted speed limits. Higher speeds use more energy and reduce range.


Climate Settings

- Keep exterior doors closed to maintain cabin temperature.
- Use open windows or fan-only settings to cool the cabin.
- Avoid continuous use of the climate control system. Use the heated seat feature instead of the cabin heating system when possible. The energy needed to warm or cool the cabin can cause range to decline significantly.

POWER INDICATOR GAUGE

The Power Indicator Gauge (A) displays instantaneous charge and consumption power to help track energy use and extend battery range.

- A green Power Indicator Gauge indicates energy regeneration through braking.
- Avoid driving that turns the Power Indicator Gauge amber, indicating excessive power use.

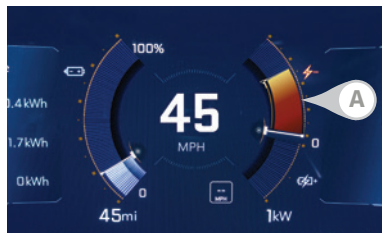

ENERGY INFO

- To view current Energy Efficiency and Energy Usage data, go to Vehicle Status > Energy Info on the infotainment screen.

See Driving and Operating in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

POWER ON-OFF

The Remote Keyless Entry transmitter (key fob) must be in the cabin to start the vehicle.

STARTING THE VEHICLE – POWER ON

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press the  **POWER** button.

When the vehicle is ready to be driven, an active battery gauge will display on the instrument cluster and the  Ready icon will appear.

Note: If the key fob battery is weak, place the key fob in the upper instrument-panel storage compartment, behind the infotainment display, to enable the vehicle to start. Replace the key fob battery as soon as possible.



STOPPING THE VEHICLE – POWER OFF

- ▶ Shift to Park and then press the  **POWER** button.

ACCESSORY MODE

- ▶ With vehicle power off and the brake pedal not depressed, press the  **POWER** button to place the vehicle in Accessory Mode. This power mode allows use of some electrical accessories. After 30 seconds, vehicle power will turn off to prevent 12V battery rundown.

See Driving and Operating in your Owner's Manual.

SEAT/STEERING WHEEL ADJUSTMENTS

Before driving, adjust the steering wheel and seat to a comfortable position.

- Pull down the lever to unlock the steering wheel and adjust its position in or out and up or down. Push up the lever to lock the steering wheel.
- Lift the handle under the front of the seat to slide the seat forward or rearward.
- Ratchet the side lever up or down to raise or lower the seat.
- Lift the rear lever to adjust the seatback.



See Seats and Restraints in your Owner's Manual.

BUCKLE TO DRIVE

Buckle to Drive prevents the vehicle from shifting out of Park if the vehicle is on, the brake pedal is pressed, and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park after 20 seconds. Shifting from Park is prevented once each time the vehicle is started.

- ▶ To turn on or off, go to Settings > Vehicle > Buckle to Drive.

See Seats and Restraints in your Owner's Manual.

INSTRUMENT CLUSTER DISPLAY



The Driver Information Center (DIC) displays a variety of vehicle messages and system information. Controls are on the right side of the steering wheel.

DIC CONTROLS

Display

Press to change the cluster display layout.

Phone

Press the switch up or down to answer or end a call on a paired phone.

Audio

Press to view the audio source.

Scroll

Press the switch up or down to move through the active menu.

Select

Press the switch to open a menu, select an item, or clear a message.

VEHICLE INFORMATION

- ▶ Press the  Vehicle Status icon on the infotainment screen to view all available vehicle information.
- ▶ When viewing an item, select Add to Driver Display to display an item or Remove from Display to remove an item on the cluster display.
- ▶ To reset the current trip odometer, select Reset under the Trip Information option.



See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

ELECTRONIC TRANSMISSION SHIFT CONTROL

The drive unit is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.



ONE-PEDAL DRIVING

With One-Pedal Driving, the vehicle can be slowed or stopped under certain conditions using only the accelerator pedal, which can help maximize driving range while reducing the need to switch between the accelerator and brake pedals in heavy traffic. When the accelerator pedal is not applied, regenerative braking will be active to help slow the vehicle. Compared with a traditional vehicle that begins to coast when not applying the accelerator pedal, One-Pedal Driving offers two rates of deceleration. One-Pedal Driving does not operate in Reverse. Use the brake pedal for additional braking or emergency braking.



- ▶ To change settings, go to Controls > More Controls > Drive & Park > One-Pedal Driving on the infotainment screen. Settings include Off, On (moderate braking) and High (strong braking). Select Show on Home screen for easy access to the settings.

Note: Feature may be limited when the battery temperature is extremely cold or hot, or when the battery is near full charge.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) **Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the vehicle, press the brake pedal, and then press the (P) switch.

See Driving and Operating in your Owner's Manual.



CLIMATE CONTROLS

Air Delivery Controls:



Climate
ON/ OFF

Defrost

Heated
Seat

Temperature
Control



Heated
Mirrors

AUTO
Automatic
Operation

Fan
Controls

Recirculation

HEAT
Heat

A/C
Air Conditioning

CLIMATE SETTINGS

Optimal efficiency is achieved with the climate system off (Climate ON indicator is off). Each mode setting impacts the vehicle's electric range.

- ▶ Use only the fan to distribute air through the cabin without active electric heating/cooling (Heat and A/C indicators are off).
- ▶ Select Heat or A/C (Heat or A/C indicator is on) for active electric heating/cooling. This setting uses more energy.

AUTOMATIC OPERATION

1. Press AUTO.
2. Set the temperature.

Allow time for the system to reach the set temperature. If fan speed, air delivery, air conditioning, electric heating or recirculation is manually adjusted, automatic operation for that function is turned off.

MAXIMUM DEFROST

- ▶ Press the **Defrost** button to quickly clear the windshield (uses the most energy).

HEATED SEAT

- ▶ Press the **Heated Seat** button instead of the Heat button to reduce demand (uses less energy).

See Climate Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.



INFOTAINMENT TOUCHSCREEN

- ▶ Touch an icon on the infotainment system touchscreen to access Audio (radio and USB sources), Energy Controls, Phone, Settings and other features.
- ▶ Press the Home icon on the touchscreen to return to the Home page of the infotainment system.

MANAGING HOME PAGE ICONS

1. Press the Home icon.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

BLUETOOTH® SYSTEM – PHONE PAIRING

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

- ▶ To pair a Bluetooth phone using voice recognition, press the **Push to Talk** button on the steering wheel; after the prompt, say "Pair my phone." If a phone has not been connected, select the Phone icon > Manage Phones > Add Phone on the infotainment screen. If a phone has been added previously, select Settings > Connections > Phones > Add Phone. Follow the pairing instructions.
- ▶ Using the steering wheel controls, press the switch up to answer an incoming call. Press the switch down to end or decline a call.

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

APPLE CARPLAY™ AND ANDROID AUTO™†

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 2. Follow the instructions on the infotainment screen and the phone.
 3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- ▶ To exit Apple CarPlay or Android Auto, press the  Home icon.


†Android and Android Auto are trademarks of Google LLC.; Apple CarPlay is a trademark of Apple Inc.

See Infotainment System in your Owner's Manual.

EXTERIOR/INTERIOR LAMPS

EXTERIOR LAMP CONTROLS

- ▶ Select the  Automatic Light Control icon (A) at the top of the infotainment screen to turn the auto headlamps on/off and access other lighting controls.
- ▶ To operate the exterior lamp controls, go to Controls > More Controls > Lights > Headlights on the infotainment screen.

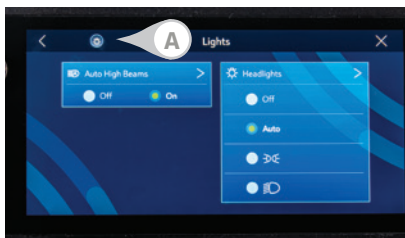

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions while driving at night. The  indicator displays on the instrument cluster when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ Select Auto High Beams to activate the system. The headlights must be set to Auto or On.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

INTERIOR/CARGO LIGHTING

 **Dome Lamps**

 **Interior Cargo Lamps**

 **Exterior Cargo Lamp**



See Lighting in your Owner's Manual.

DELIVERY MODE

Delivery Mode is intended to speed the delivery process by automating repetitive tasks for the driver.

- ▶ Press the  **Delivery Mode** button to have the cabin lights turn on automatically and for the bulkhead door to unlock for 15 seconds when the vehicle is shifted into Park. Once the vehicle is shifted out of Park, the cabin lights turn off and the horn sounds to alert those nearby that the vehicle is about to depart.



Note: When in Delivery Mode, if the vehicle is not shifted out of Park after a set period of time, the cabin lights will automatically turn off to preserve battery life.


- ▶ With the Power Door Package,  the power bulkhead door and power curbside door automatically open after the vehicle is shifted into Park, and the power bulkhead door automatically closes after a set period of time. Once the vehicle is shifted out of Park, the power curbside door and power bulkhead door, if still open, will automatically close.
- ▶ To change the Delivery Mode settings, go to Settings > Vehicle > Delivery Mode.

See Driving and Operating in your Owner's Manual.

VEHICLE CUSTOMIZATION

The Controls and Settings menus on the infotainment screen enable some features to be turned on/off or customized, including door locking, lighting, One-Pedal Driving and others.

1. Select Controls or Settings on the Home page.
2. Select the desired menu.
3. Select the desired feature and setting.
4. Select <Back to exit each menu.

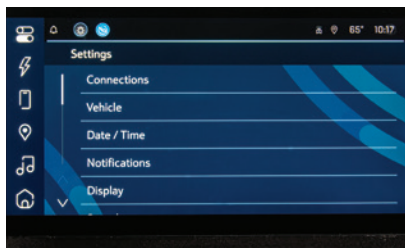

See Infotainment System in your Owner's Manual.

WINDSHIELD WIPERS

OFF/Wiper Speed

Rotate the Wiper control band to turn the wipers on/off and to adjust the sensitivity setting of the Rainsense moisture sensor, which controls the wiper speed.

Single Wipe

Press the button on the end of the lever to the detent to activate the wipers for a single wipe.

Washer Fluid

Press the button on the end of the lever fully to wash the windshield.

See Instruments and Controls in your Owner's Manual.



CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the switch down to the **—SET** position to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

+RES Resume/Accelerate

Press up to resume a set speed. When active, press up to increase speed.

—SET Set/Coast

When active, press down to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel Cruise Control without erasing the set speed. The set speed is erased when Cruise Control or the vehicle power is turned off.

ADAPTIVE CRUISE CONTROL*

The system enhances regular Cruise Control to maintain a driver-selected following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press and hold the  **Cancel** button to switch between  regular Cruise Control and  Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near.

See Driving and Operating in your Owner's Manual.

**Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.*

DRIVER ASSISTANCE*

- ▶ To turn some of the following systems on/off or to change some settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

SAFETY ALERT SEAT – The driver's seat pulses (left, right, or both sides) to alert you of the direction of potential hazards. Audible alerts may be selected instead of pulsing alerts.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator on the instrument cluster is green when a vehicle that you're following is detected ahead and is amber when following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).


- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near. The setting is displayed on the instrument cluster.

ENHANCED AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following when traveling from 5 mph up to highway speeds. Radar and camera technology are used to automatically provide hard emergency braking or enhance the driver's hard braking.

INTERSECTION AUTOMATIC EMERGENCY BRAKING – The system can help you avoid or reduce the severity of an intersection collision with a detected cross-traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle detected ahead is indicated in seconds on the instrument cluster. If no vehicle is detected ahead, dashes are displayed.

FRONT PEDESTRIAN BRAKING WITH BICYCLIST DETECTION – During daytime driving at speeds between 5 and 50 mph, the system detects pedestrians and bicycles directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may enhance driver braking or automatically apply hard emergency braking. Nighttime and low-visibility performance are limited.

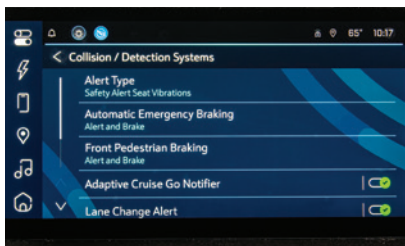

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE*

TRAFFIC SIGN RECOGNITION — The system displays detected speed limit signs on the instrument cluster using the vehicle's embedded navigation system. An active, eligible OnStar plan[†] is required.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING — The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle unintentionally approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and the Safety Alert Seat may pulse or beeps may sound (if selected) on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.



- To turn on or off, press the  **Lane Keep Assist** button (A) on the left side of the instrument panel.

BLIND ZONE STEERING ASSIST — The system works with Lane Keep Assist to help you avoid a potential collision with a detected vehicle in an adjacent lane. While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

If a vehicle is detected in the adjacent lane that you are entering, the system provides a brief, firm steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green  Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

- To turn on or off, press the  **Lane Keep Assist** button (A) on the left side of the instrument panel.

FRONT AND REAR PARK ASSIST — During low-speed parking maneuvers, the system provides “distance to closest object” information on the instrument cluster and the Safety Alert Seat pulses or a beep sounds (if selected). When an object is very close, the Safety Alert Seat pulses or continuous beeps sound (if selected).



- To turn on or off, press the  **Park Assist** button (B) on the left side of the instrument panel.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE*

AUTOMATIC VEHICLE HOLD – The system will hold the vehicle stationary after the brake pedal has been released and until the accelerator pedal is pressed. The Auto Hold indicator illuminates in green when the system is holding the vehicle. If the accelerator pedal is not pressed within a few minutes, the parking brake will apply.

REVERSE AUTOMATIC BRAKING – When in Reverse, the system warns of detected, potentially imminent collision situations with some objects behind your vehicle by pulsing the Safety Alert Seat or sounding beeps from the rear (if selected), and may apply hard braking to help reduce the severity or help avoid collisions at very low speeds.

REAR CROSS TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected). The system may automatically provide hard emergency braking, if you have not already done so.

HD SURROUND VISION – The system uses multiple cameras to display a high-resolution image of the area around the vehicle along with front- and rear-camera views on the infotainment screen.

- ▶ Select the Camera icon on the infotainment screen to view the camera display.
- ▶ Touch one of the camera view buttons on the screen to change the current view.
- ▶ Touch the Guidelines button on the screen to display the guidelines.



See Driving and Operating in your Owner's Manual.

**Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.*

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The (ⓘ) Low Tire Pressure light on the instrument cluster illuminates when one or more of the vehicle's tires are significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located on the curbside bulkhead wall. Current tire pressures can be viewed on the infotainment screen.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended tire pressure. With the vehicle on, the horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

CHARGING

CHARGING APP

- ▶ Touch the ⚡ Charging icon on the infotainment screen to open the Charging app. Select the desired tab to adjust the charging functions and settings.

Next Charge – Select Charge Now to begin charging immediately upon plug-in, or Charge Later for delayed charging. Options include setting the target charge level, time selector and cabin preconditioning.

Schedule – Provides options for setting a charge level and a schedule for when to charge each day of the week. With a schedule set, charging can occur during off-peak times at a lower cost. Cabin preconditioning also can be set to heat or cool the cabin using minimal battery power. On days a schedule is not set, the vehicle will charge immediately upon plug-in.

Settings – Enables custom settings for several features, including:

- Home Charge Location – Set charging times for your Home Charge Location, allowing charging at a lower cost during your electrical provider's off-peak period.
- Notifications – Select on/off preferences for multiple notifications triggered during a charging session.
- Fast Charge Prep – Adjust the vehicle's battery to the proper temperature for quicker DC Fast Charging. Start battery conditioning up to an hour before reaching the DC Fast Charging station. Battery conditioning uses battery energy, which may reduce driving range.
- Preconditioning Temperature – Set the desired temperature for the cabin before you start your drive.

TARGET CHARGE LEVEL

The target charge level sets the maximum level the battery will charge to when plugged in. It will be set to 80% when the vehicle is new. It's important to charge the battery to 80% for daily use to help promote battery health and optimal regenerative braking performance, which helps increase efficiency. For longer trips, adjust charging to above 80% for extended range. Change the setting back to 80% when additional charging is no longer needed.



See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

CHARGING

START CHARGING

1. With the vehicle in Park, select the ⚡ Charging icon to review the selected charge mode and charge cord limit.

The 8-amp charge cord limit should be used until a qualified electrician inspects your facility's electrical circuit capacity, or if the electrical circuit or outlet capacity is not known.

Note: If a Home Charge Location is not set, the charge level selection returns to the 8-amp setting each time the vehicle is driven.

2. Plug the charge cord into an electrical outlet. **DO NOT PLUG INTO AN EXTENSION CORD.**
 3. Press and release the rear edge of the charge port door, located just behind the driver-side rear wheelhouse, to open it.
 4. Plug the charge cord into the charge port. The charge port indicator will illuminate blue when connected.
 5. When charging begins, the charge port indicator will flash green and the vehicle will chirp once. If the charge port indicator flashes red, check the charge cord connection and power supply.
 6. Periodically check the electrical outlet/plug while charging. Discontinue use if the electrical outlet/plug is hot and have the outlet serviced by a qualified electrician.
- To temporarily override a delayed charge event, remove and reconnect the charge cord to the vehicle within 5 seconds. It will begin charging immediately.

END CHARGING

1. When the charge port indicator is solid green, charging is complete.
2. Unlock the charge cord from the vehicle by pressing the top latch button, and unplug the charge cord.
3. Close the charge port door.
4. Unplug the charge cord from the electrical outlet.



See Driving and Operating in your Owner's Manual.

DC CHARGING

START DC CHARGING

1. With the vehicle in Park, press and release the rear edge of the charge port door, located just behind the driver-side rear wheelhouse, to open it.
2. Plug the DC charge cord into the vehicle's charge port.
3. Follow the steps on the charging station to start charging. The DC plug will be locked and cannot be disconnected while charging is active.
4. When charging begins, the charge port indicator will flash green and the vehicle will chirp once.



END DC CHARGING

1. When charging is complete, the DC plug will be unlocked. To stop charging at any time, use the controls on the charging station or touch the Stop button on the Charging screen on the vehicle's infotainment screen.
2. When the charging Indicator is solid green or off, unplug the DC charge cord from the vehicle.
3. Close the charge port door.

See Driving and Operating in your Owner Manual.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC.. All rights reserved.



85814495

**We recommend always using
ACDelco or GM Genuine Parts.**



85814495 A