



GETTING TO KNOW YOUR **4500 HD / 4500 XD / 5500 XD DIESEL LOW CAB FORWARD**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Low Cab Forward. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide with your Owner's Manual in your glove box.


Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



Preproduction model shown throughout. Actual production model and feature availability may vary.

OVERVIEW



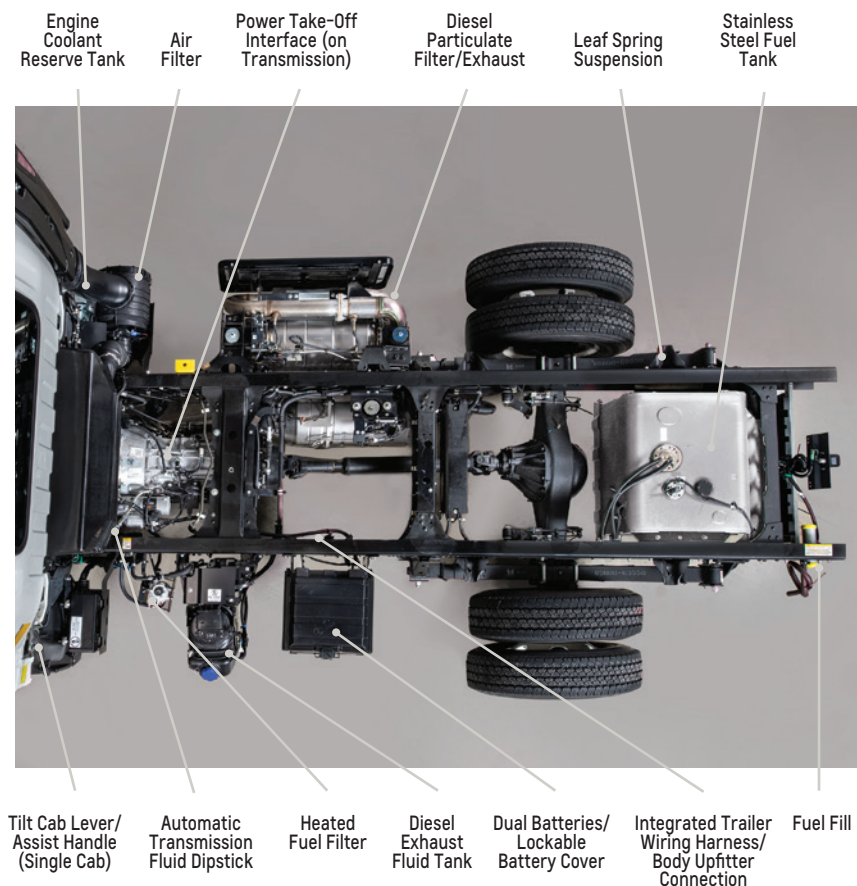

Single cab model shown

See Introduction in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

INSTRUMENT PANEL

Brake Fluid Fill (Behind Panel Cover) Turn Signal Lever/Exterior Lamps Control Fog Lamps/Cargo Lamp Buttons Driver Information Center Windshield Wipers Lever Infotainment System Climate Controls/Hazard Warning Flashers Button



PTO Switches♦/Instrument Panel Illumination Control (on Instrument Panel) Driver Information Center Controls Cruise Control/Following Distance Switches♦ Diesel Particulate Filter/Heated Outside Mirror Buttons♦ Accessory Power Outlet Traction Control/Lane Departure Warning Control♦ Fuse/Relay Box (Under Instrument Panel)

SYMBOLS

	Cruise Control Status		Wait to Start (Glow Plug)		Engine Oil Pressure
	Adaptive Cruise Control Status♦		Automatic Transmission Fluid Temperature Warning		Brake System
	Check Engine		Cab Tilt Warning		Brake Booster
	Daytime Running Lamps		Idle Stop		Exhaust Brake
			Service Vehicle Soon		Diesel Exhaust Fluid
					Reduced Engine Power

INSTRUMENT CLUSTER



DRIVER INFORMATION CENTER (DIC)

The DIC controls are located on the left side of the steering wheel.

- Use the four arrow controls to move through the menus.
- Press the **Enter** button to select an item.
- Press the **Back** button to go to the previous menu page.



See Instruments and Controls in your Owner's Manual.

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument panel.

ASR OFF	Traction Control Off	ABS	Antilock Brake System	Engine Oil Level
OFF	Stability Control Off	Seat Belt Reminder		Service Transmission
Engine Shutdown		Engine Coolant Temperature		OFF
Charging System		Overdrive Off		OFF
High-Beam Headlamps				

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB) ♦

Lock

Press for 1 second to lock all doors.

Unlock

Press for 1 second to unlock the driver's door. Press twice within 3 seconds to unlock all doors.

Note: If a door is not opened within 30 seconds after pressing the Unlock button, the doors will lock again to help prevent theft.

See Keys, Doors and Windows in your Owner's Manual.

KEYED IGNITION SYSTEM

STARTING THE VEHICLE

- ▶ With the vehicle in Park or Neutral, rotate the key clockwise to the On position.
- ▶ Observe the Wait-to-Start light. If the light is not on, rotate the key to the Start position.

TURNING OFF THE VEHICLE

- ▶ Shift to Park. Allow the engine to idle for approximately 3 minutes.
- ▶ Push the key all the way in (1) and then rotate the key counterclockwise to the Lock/Off position (2).



See Driving and Operating in your Owner's Manual.

SEATS

DRIVER'S SEAT

A. Seat Adjustment

Lift the lever under the front of the seat to slide the seat forward or rearward.

B. Seatback Adjustment

Lift the side lever to recline or raise the seatback.

PASSENGER'S SEAT/CENTER SEAT

C. Seatback Adjustment

Pull the side lever to fold the seatback.

See Seats and Restraints in your Owner's Manual.



STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, pull up the lever on the left side of the steering column to unlock the column. The steering wheel can be adjusted up or down and forward or rearward. Push down the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



POWER DOOR LOCKS

DOOR LOCK BUTTON

- ▶ To lock or unlock all doors, press the door lock switch on the driver's door.

See Keys, Doors and Windows in your Owner's Manual.



HEATED MIRRORS◆

- ▶ Press the  **Outside Mirror Heater** switch on the instrument panel to defog the outside mirrors. Press the switch again to turn off operation when defogging is complete.

See Keys, Doors and Windows in your Owner's Manual.



POWER OUTLET

Use the accessory power outlet on the center of the instrument panel to power electrical equipment.

When inserting or removing the plug of any equipment, turn off the equipment or place the ignition in the Lock position. Total maximum electrical load must not exceed 120W. Turn off any electrical equipment when not in use for extended periods to avoid draining the battery.

See Instruments and Controls in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROLS

Rotate the end of the lever to activate the exterior lamps.

○ Off

AUTO Automatic Operation

Automatically turns on the exterior lights, depending on outside lighting conditions.

☛ Parking Lamps

☛ Headlamps

Note: The Daytime Running Lamps will turn on when the engine is started in the daytime with the lamp control off and the parking brake released.

☛ Fog Lamps

Press the button (A) to turn the fog lamps on or off.

REAR BODY INTERIOR LIGHT

☛ Rear Body Interior Light

Press the button (B) to turn the rear body interior light on or off. The button indicator illuminates when the light is on.

INSTRUMENT PANEL LIGHTING

☛ Instrument Panel Brightness

Rotate the thumbwheel (C) to adjust the instrument panel lighting.



See Lighting in your Owner's Manual.

WINDSHIELD WIPERS

Rotate the end of the lever to activate the wipers.

○ OFF

☛ Intermittent Wipes


Rotate the band up for more frequent wipes or down for less frequent wipes.

— Slow Wipes

== Fast Wipes

☛ Washer Fluid

Pull the lever to wash the windshield.

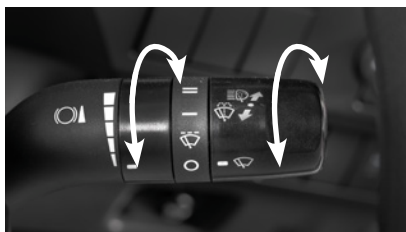

See Instruments and Controls in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

CLIMATE CONTROLS



MAXIMUM HEATING/COOLING

- Select the  Recirculation Mode, the desired temperature and the maximum fan speed to quickly heat or cool the air inside the vehicle. Selecting the Recirculation Mode also prevents dusty air or outside odors from entering the cab.

Note: Extended use of the Recirculation Mode increases air humidity and may cause the windows to fog.

PASSENGER COMPARTMENT AIR FILTERS


The in-cab air filter is located behind the cover on the right side of the instrument panel. It filters outside air of dust and dirt. Do not use the heater or air conditioning with the filter removed.

- To clean the filter, remove the filter cover from the lower part of the right side of the instrument panel. Pull out the filter and use a vacuum cleaner to remove any dust and dirt.

See Climate Controls in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

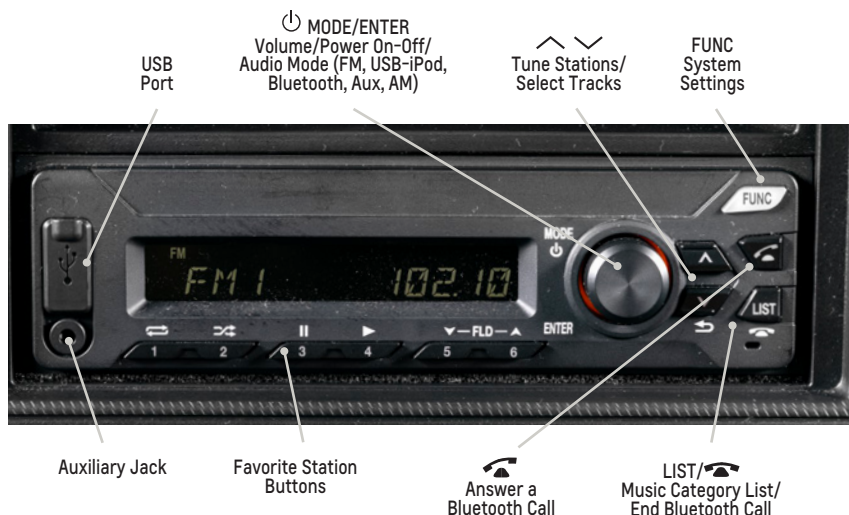

Note: The audio system will mute the volume automatically when the vehicle is shifted into Reverse.

SETTING THE TIME

1. Press the **FUNC** button.
2. Turn the **MODE** knob to display Clock. Press ENTER (press the knob).
3. Turn the **MODE** knob to display Set. Press ENTER.
4. Turn the **MODE** knob to adjust the hour and minutes. Press ENTER.

TUNING STATIONS

- For manual tuning, press the $\wedge$ or $\vee$ button. Press the $\wedge$ or $\vee$ button again to view the next or previous station.
- For automatic tuning, press the $\wedge$ or $\vee$ button for more than 1 second to seek the next or previous station. Press and hold the $\wedge$ or $\vee$ button for more than 2 seconds to continue seeking stations. To cancel, press the button again.

STORING FAVORITES (PRESET)

Up to 30 radio stations (12 AM, 18 FM) can be stored on up to 5 pages.

1. Press the **MODE** knob, and then turn the knob to display the desired favorite page (FM1, FM2, FM3, AM1, AM2). Press ENTER.
2. Tune in the desired radio station.
3. Press and hold one of the Favorite buttons until the station is displayed.

See Infotainment System in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

INFOTAINMENT SYSTEM

PORTABLE AUDIO DEVICES

- ▶ Connect an iPod®, iPhone®, MP3 Player or a USB flash drive to the USB port or auxiliary jack.
 - ▶ Press the **MODE** knob, and then turn the knob to display USB or AUX. Press ENTER.
- For additional information, visit chevrolet.com/support.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit chevrolet.com/support for more information.

PAIR A PHONE

1. Press **FUNC**.
2. Turn the **MODE** knob to display Bluetooth. Press ENTER. (Press the knob).
3. When Pairing is displayed, press ENTER. If the device has been paired previously, turn the **MODE** knob to display Pairing. Press ENTER.
4. Start the pairing process on your phone. A 4-digit code is displayed on the infotainment system.
5. Follow the pairing instructions.
6. When pairing is complete, Connected is displayed.



MAKING/ANSWERING A PHONE CALL

- ▶ To make a call, press the  **Off Hook** button to talk hands-free. Use the **MODE** knob to enter a phone number or use your phone book. Press ENTER. Calling is displayed.
- ▶ When a call is received, Incoming is displayed. Press the  **Off Hook** button to talk hands-free. To end the call, press the  **On Hook/List** button.

See Infotainment System in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **MODE** button on the steering wheel.  Cruise Control will illuminate in the instrument cluster.
2. When traveling at the desired speed, press either **SET** button on the steering wheel to set the speed. The set speed will display in the instrument cluster.



ADJUSTING CRUISE CONTROL

RES Resume

Press the RES button to resume a set speed.

SET +/- Accelerate/Coast

When active, press the SET/+ button or SET/- button to increase or decrease speed.

Cancel

Press the **CANCEL** button or press the brake pedal to cancel Cruise Control without erasing the set speed from memory. The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL ♦

This system enhances regular Cruise Control to maintain a driver-selected following gap – the distance between your truck and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer. The  symbol will display in the Driver Information Center when a vehicle is detected.


- ▶ Press and hold the  **Mode** button on the steering wheel to switch between regular Cruise Control and Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the left  **Following Distance** button or right  **Following Distance** button on the steering wheel to select a targeted gap setting ranging from Near to Far. The selected setting will be displayed in the Driver Information Center.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE ♦

- ▶ To apply the parking brake, pull the  Parking Brake switch next to the driver's seat.
- ▶ To release the parking brake, depress the brake pedal, and then press the  switch.

See Driving and Operating in your Owner's Manual.

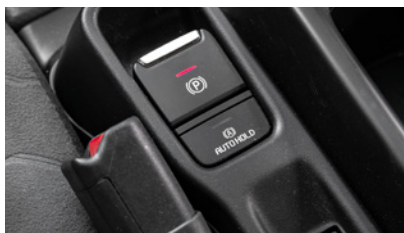

AUTOMATIC TRANSMISSION

Use the selector lever to select the gear or the range of gears desired for the current driving conditions.

P – Park

R – Reverse

N – Neutral

D – Drive

2 – Second: Use on downhill roads or when engine braking is required. Select the 2 position at speeds below 22 mph.

1 – Low: Use on steep downhill roads or when strong engine braking is required.

Overdrive: Press to turn Overdrive on or off. Overdrive provides increased road speed, lower running noise and enhanced fuel economy.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS ♦

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

- ▶ To turn some of the following systems on/off or to adjust system settings, go to Vehicle Settings using the Driver Information Center (DIC) controls on the steering wheel.

LANE DEPARTURE WARNING

When approaching or crossing a detected lane marking without using a turn signal in that direction, the  indicator displays on the DIC and beeps sound.

- ▶ To turn on or off, press and hold the  **Lane Departure Warning** button on the instrument panel.

FOLLOWING DISTANCE WARNING

When approaching a detected vehicle directly ahead too rapidly, a warning message appears in the DIC and beeps sound.

- ▶ Press the left  **Following Distance** button or right  **Following Distance** button on the steering wheel to adjust the following distance.

AUTOMATIC EMERGENCY BRAKING

In detected, potentially imminent collision situations with objects directly ahead, a warning message appears in the DIC, rapid beeps sound and the system automatically applies braking to help reduce the severity of or help avoid collisions.

MIS-ACCELERATION MITIGATION

At very low speeds, if an object is detected ahead and the driver attempts to accelerate too quickly, a warning message appears in the DIC, a warning buzzer sounds and engine output will be restricted to help reduce the severity of or help avoid a collision.


See Driving and Operating in your Owner's Manual.

TRACTION CONTROL/STABILITY CONTROL

The traction control system, also known as Anti-Slip Regulation (ASR), limits wheelspin in difficult driving conditions. The electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically each time the vehicle is started.

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/Stability Control Off** button on the instrument panel for approximately 1 second to turn traction control off or on again.  will illuminate on the instrument cluster when traction control is off.

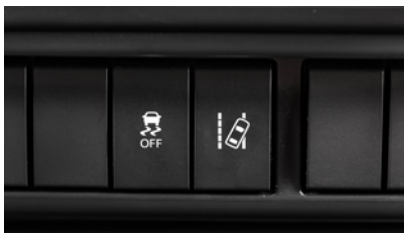

See Driving and Operating in your Owner's Manual.


DIESEL ENGINE FEATURES

DIESEL EXHAUST FLUID (DEF)

DEF reduces the amount of regulated emissions produced by the diesel engine. The DEF level must be maintained for the vehicle to run properly. The DEF gauge (A) on the instrument cluster indicates the approximate quantity of DEF remaining in the tank. The DEF level also can be checked by viewing the sight tube (B) on the side of the DEF tank.

As the DEF level becomes low, warnings are displayed on the instrument cluster. As the tank nears empty, vehicle speed will be limited in a series of steps. Refill the DEF tank to release the speed limitation.

The DEF fill port (blue cap) is located behind the cab on the driver's side of the vehicle.

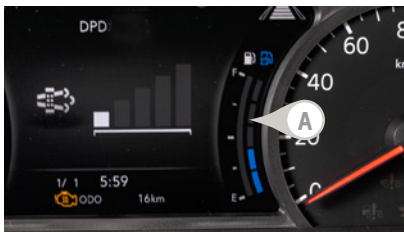

DIESEL PARTICULATE FILTER (DPF)

The DPF filters the diesel exhaust gas to reduce emissions. Occasionally, the DPF goes through a cleaning process as part of normal operation as the vehicle is driven. The DPF status is displayed on the instrument cluster.

If driving conditions do not allow the DPF cleaning to take place, the Selectable Regen Required or Regeneration Required message is displayed.

- ▶ Press the  **DPF** switch on the instrument panel to complete DPF regeneration when the Selectable Regen Required or Regeneration Required message is displayed.

See Driving and Operating in your Owner's Manual.

ENGINE OIL

Check the engine oil regularly. The engine oil dipstick is located on the driver's side of the engine. The oil fill is located on the passenger's side of the engine.

- ▶ On single cab models, tilt the cab to access the dipstick.
- ▶ On crew cab models, the dipstick is located under the sub-cover beneath the driver's seat. Pull the red lock lever under the seat cushion to access the cover.




See Vehicle Care in your Owner's Manual.

TILT-CAB OPENING (SINGLE CAB)

TILT THE CAB

1. Follow all precautions before tilting the cab, including removing or securing all loose items in the cab.
2. On the driver's side of the vehicle, behind the cab, pull and hold the metal lever (A) by the assist handle (B), and then pull up the lock handle (C).
3. Hold the assist handle (B) to prevent the cab from lifting and pull up the safety hook (D) to release the cab.
4. Raise the cab fully while holding the assist handle (B) until the cab support locks (E).

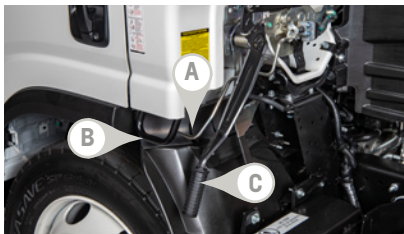

LOWER THE CAB

1. Hold the assist handle (B) and, while pressing the support lock lever (E), pull the cab support rearward.
2. Lower the cab until the safety hook is engaged and then push down the lock handle (C).



See Vehicle Care in your Owner's Manual.

POWER TAKE-OFF CONTROLS

A Power Take-Off (PTO) device can be used to power add-on equipment. The vehicle must be in Park or Neutral and the parking brake must be set to use the PTO mode. The PTO switches are located on the left side of the instrument panel.

- ▶ Press the  PTO main switch to activate the PTO mode. Idle speed will increase to the preset speed.
- ▶ Use the PTO +/- engine speed control switch to adjust idle speed.

◆ Optional equipment

See *Driving and Operating* in your Owner's Manual.

REFUELING THE VEHICLE

The fuel-fill port(s) is located on the driver's side of the vehicle.

1. Remove the fuel cap by turning it counterclockwise.
2. Fully insert the fuel pump nozzle before starting to fill the tank.
3. Replace the fuel cap and turn it clockwise fully until tight.

See *Driving and Operating* in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-899-1327

As the owner of a new medium-duty Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for the duration of the vehicle's powertrain warranty, which is up to 3 years/unlimited miles, at no expense to you.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump starts, flat tire and lockouts) or make arrangements to tow your vehicle to the nearest Chevrolet Medium-Duty Dealer for any repairs.

CHEVROLET OWNER CENTER

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online Owner's Manual, track your service history and warranty status, and more. Create an account today at chevrolet.com/owners.

Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions, and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



85089518

**We recommend always using
ACDelco or GM Genuine Parts.**



85089518 A