



GETTING TO KNOW YOUR **2025** **SILVERADO 2500 HD/3500 HD**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Silverado HD. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Memory Seat Buttons♦ HUD Controls♦ Cruise Control/ Forward Collision Alert/Heated Steering Wheel♦ Buttons Turn Signal/ Windshield Wipers Lever/IntelliBeam Control Driver Information Center Driver Information Center Controls♦/ Voice Recognition Buttons



Power Mirror♦/ Window Controls Electric Parking Brake Switch 4WD Controls♦/ Driver Mode Control♦ Exterior/ Instrument Panel/ Cargo Lamp Controls Audio Next/ Previous Favorite Station Controls (on back of steering wheel) Steering Wheel Adjustment Lever (on steering column) Audio Volume Controls (on back of steering wheel)

SYMBOLS

	Low Fuel		StabiliTrak Off		Lights On Reminder
	Traction Control Off		Forward Collision Alert		Airbag Readiness
	Brake System		Security		Engine Oil Pressure
	Cruise Control		Electric Parking Brake		Check Engine
	StabiliTrak Active		Electric Parking Brake Service		Vehicle Ahead

Certain features shown have limited or late availability, or are no longer available. See the window label or your dealer regarding the features on an individual vehicle.

Infotainment
System Power-
Volume Control/
Home Page Button

Infotainment
System
Touchscreen

Diesel Exhaust Brake♦/Lane
Departure Warning/Park Assist♦/
Power Tailgate♦/Hazard Warning
Flashers Buttons

Traction Control-StabiliTrak Off/
Hill Descent Control♦/
Express-Down Power
Windows♦ Buttons



Engine
Start/Stop
Button

Integrated
Trailer Brake
Control♦

Climate Controls/Driver's &
Front Passenger's Heated &
Ventilated♦ Seat Buttons

USB
Ports

High Country Diesel model shown

(ABS) Antilock Brake System

(!) Low Tire Pressure

Engine Coolant
Temperature

Charging System

Driver Seat Belt Reminder

Front-Passenger Seat
Belt Reminder

4WD Modes

*Read your Owner's Manual to
learn about the information being
relayed by the lights, gauges
and indicators on the instrument
cluster.*

**See Introduction in your
Owner's Manual.**

♦ *Optional equipment*

Some equipment shown may not be included in your vehicle.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)♦

Lock

Press to lock all doors and tailgate.

Unlock

Press to unlock the driver's door or all doors and tailgate.

Remote Windows♦

Press and hold the  button until the windows are fully open. To enable, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

Remote Mirror Folding♦

To turn the automatic mirror folding on or off, go to Settings > Vehicle > Comfort and Convenience on the infotainment screen.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
Press and hold to activate the alarm.
Press again to cancel the alarm.



Power Release♦/Power Tailgate♦

Press twice to lower the tailgate.
To raise the power tailgate, press once and then press again and hold until the tailgate is fully closed.



Remote Vehicle Start♦

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the **ENGINE START/STOP** button.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM♦

The Keyless Access System enables operation of the front doors and tailgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the tailgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and tailgate.
- ▶ Press the button on the front passenger's door handle to unlock all doors and tailgate.
- ▶ Press the button on the tailgate to lower the standard tailgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any front door handle to lock all doors and tailgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors will lock automatically after a short delay.

Note: To change the door lock and unlock settings, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE/ON

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the pocket in the center storage compartment (under the bench seat) or in the pocket next to the center console cupholders (bucket seats) to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine. The green button indicator will turn off.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof* until any door is opened.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in Accessory Mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.

UNIVERSAL REMOTE SYSTEM*

The Universal Remote System on the overhead console enables your vehicle to control 3 different devices, ranging from garage doors and gates to home lighting. Go to homelink.com for detailed videos and instructions on how to program the Universal Remote System. For additional assistance, call 1-800-355-3515.

See Instruments and Controls in your Owner's Manual.



DRIVER INFORMATION CENTER

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle messages and system information.

BASE DIC CONTROL

- ▶ Use the trip odometer reset stem on the instrument cluster to access the DIC menu. Turn the stem to scroll through the menu. Press and hold the stem to reset an item.


UPELVEL DIC CONTROLS+

Use the controls on the right side of the steering wheel to view the various menus.

- ▶ Press the ◀ or ▶ button to view the menu options.
- ▶ Rotate the thumbwheel up or down to move through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.



Uplevel DIC Controls+ shown

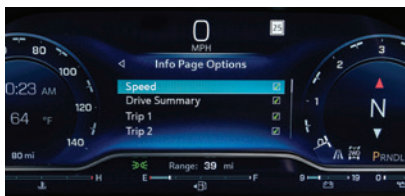

SELECT INFO PAGES+

1. Use the controls to open the Options menu.
2. Scroll to Info Page Options. Press the thumbwheel to enter the menu.
3. Use the thumbwheel to select or deselect an item to display in the Info menu.

SELECT DISPLAY LAYOUT+

1. Use the controls to select the Options menu.
2. Select Display Layout, Left Side Info, Right Side Info or Lower Gauges.
3. Use the thumbwheel to select or display an item.

See Instruments and Controls in your Owner's Manual.

MULTICOLOR HEAD-UP DISPLAY+

The Head-Up Display (HUD) projects some operating information on the windshield. The HUD controls are on the left side of the instrument panel.

HUD Position

Lift up or press down to adjust the position of the image. It cannot be adjusted side to side.

INFO

Press to select from four displays: Speed View, Active Safety View, Navigation View or Off-Road View.

Brightness

Lift up to brighten or press down to dim the display. Hold down to turn off the display.



See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS/VEHICLE CONTROLS

Dual automatic climate controls shown

 Diesel Exhaust Brake On/Off

 Lane Departure Warning On/Off

 Park Assist On/Off

 Press to lower/ Press and hold to raise the power tailgate

 Hazard Warning Flashers On/Off

 Traction Control/ StabiliTrak On/Off

 Hill Descent Control

 Express-Down Power Windows



Driver's Heated/Ventilated Seat Controls

Driver's Temp. Control

AUTO/Air Delivery Modes/SYNC Automatic Operation/Defog, Vent, Floor Modes/Synchronize Settings

 Defrost Mode/Rear Window-Heated Outside Mirror Defog

 Fan Speed/On/Off

A/C/Air Conditioning/Recirculation Mode

Passenger's Temp. Control


Passenger's Heated/Ventilated Seat Controls

See Introduction in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen, including Rain Sense Wipers, Auto Heated/Ventilated Seats, Mirror Folding and others.

1. Select Settings on the Home page.
2. Select the desired menu.
3. Select the desired feature and setting.
4. Press ◀Back to exit each menu.

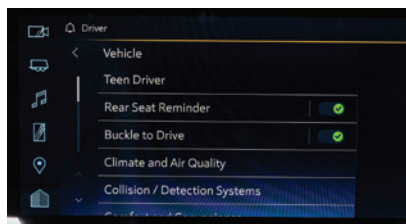

See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM[◆]

Read your Owner's Manual for important information about using the infotainment system while driving.



Uplevel infotainment system[◆] shown

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player/iPod®, and offers hands-free voice control. For additional information, visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the Home button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[◆]) can be stored in any order.

1. Tune in a radio station. The sources menu is at the top of the Audio page.
2. Select a desired page of favorite buttons.
3. Touch and hold one of the favorite buttons to save the station.

INFOTAINMENT SYSTEM†

SIRIUSXM WITH 360L†

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

GOOGLE BUILT-IN†

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

Google Assistant – Talk to Google to get hands-free help. Easily get directions, play media, control vehicle functions and more.

- ▶ To start, say “Hey Google,” tap the Google Assistant icon on the Home page, or press the  **Push to Talk** button on the steering wheel.



Google Maps – Reach destinations faster with real-time traffic information, automatic rerouting and voice control. Sign in for personalized maps with home/recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

- ▶ Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Note: Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply.

APPLE CARPLAY® AND ANDROID AUTO™†

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection:
 - **Wireless Connection** – Pair your phone to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
 2. Follow the instructions on the infotainment system and the phone.
 3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
- ▶ To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the **Home** button.

See Infotainment System in your Owner's Manual.

†Android, Android Auto, Google, Google Play and Google Maps are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc.; SiriusXM is a trademark of Sirius XM Radio Inc.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE

1. To use voice recognition, press the **Push to Talk** button; after the prompt, say "Pair my phone." To use the infotainment screen, select the Phone icon > Manage Phones > Add Phone.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT PAIRED PHONES

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set as First to Connect.

- To set the First to Connect phone, select Settings > Connections > Phone > Options for the connected phone > First to Connect.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The wireless charging system for smart-phones is located on the center console. To check device compatibility, visit chevrolet.com/support. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen up, on the pad.
4. The **charging symbol** will appear on the infotainment screen when charging.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon or go to Settings > Connections > Wi-Fi Hotspot on the infotainment screen.

See Infotainment System in your Owner's Manual.

POWER FRONT SEATS

SET MEMORY POSITIONS

1. With the vehicle in Park, adjust the driver's seat and power outside mirrors.
2. Press and release the **SET** button on the driver's door. A beep will sound.
3. Immediately press and hold button 1 or 2 until two beeps sound. Use the button that matches the Driver Information Center welcome message indicating driver 1 or 2 (key fob 1 or 2).

To store a seat position for more clearance when exiting the vehicle, repeat these steps using the  **Exit** button instead of button 1 or 2.

RECALL MEMORY POSITIONS

- ▶ Press and hold button 1 or 2 or  **Exit** until the set position is reached.
- ▶ To enable the memory positions to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position > Seat Entry Memory and Seat Exit Memory on the infotainment screen.



See Seats and Restraints in your Owner's Manual.

ADAPTIVE CRUISE CONTROL

The system enhances regular Cruise Control to maintain a driver-selected following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- ▶ Use the RES+ and SET- controls to set/adjust Cruise Control or Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near.



TOWING

When towing a trailer, the Adaptive Cruise Control following gap, acceleration rates and braking rates may be modified. The following gap setting displayed on the Driver Information Center will indicate when a connected trailer is detected.

See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

- To turn the following driver assistance systems on/off or to change system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

SAFETY ALERT SEAT ♦ – The driver's seat pulses – left side, right side or both sides – to alert the driver of the direction of potential hazards. Audible alerts may be selected instead.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected and is amber when you're following a vehicle ahead much too closely. When approaching a vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat ♦ pulses (if selected).

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.


FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds under the Info menu on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. The system works at speeds below 50 mph. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an  amber indicator. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound or the Safety Alert Seat ♦ pulses (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

LANE DEPARTURE WARNING – The  indicator (Work Truck/Custom) or  indicator (uplevel models) illuminates in white when the system is on and illuminates in green when available to assist. When crossing a detected lane marking without using a turn signal in that direction, the system flashes an amber  or  indicator on the instrument cluster and rapid beeps sound or the Safety Alert Seat ♦ pulses (if selected) on the side of the lane departure direction.

- To turn on or off, press the  **Lane Departure Warning** button on the center of the instrument panel.

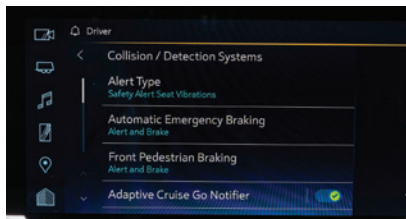

DRIVER ASSISTANCE SYSTEMS

LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT[◆]/TRAILER SIDE BLIND ZONE

ALERT[◆] – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. When towing, the side blind zone is extended along the side of a trailer.* The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

FRONT AND REAR PARK ASSIST[◆] – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center and a beep sounds or the Safety Alert Seat[◆] pulses (if selected). When an object is very close, a continuous beep sounds or the Safety Alert Seat[◆] pulses (if selected).



► To turn on or off, press the  Park Assist button on the instrument panel.

REAR CROSS TRAFFIC ALERT[◆] – When in Reverse, the system warns of detected cross traffic approaching in either direction by displaying a red alert on the infotainment screen and beeps sound or the left or right side of the Safety Alert Seat[◆] pulses (if selected).

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL[◆]

Hill Descent Control sets and maintains vehicle speed from 1–14 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the center of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The  symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal, or use the Cruise Control +/- controls on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes to maintain vehicle speed.

See Driving and Operating in your Owner's Manual.

ELECTRIC PARKING BRAKE

- To apply the parking brake, press the  **Parking Brake** button on the left side of the instrument panel.
- To release the parking brake, turn on the ignition, press the brake pedal, and then press the  button.

See Driving and Operating in your Owner's Manual.



DRIVER MODE CONTROL ♦ /FOUR-WHEEL DRIVE ♦

DRIVER MODE CONTROL

The Driver Mode Control settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the Driver Information Center.

- ▶ Rotate the control knob (A) to select a mode. Modes may include:

 **Normal** – Use for normal driving.

 **Snow/Ice (2WD only)** – Use for enhanced traction during slippery conditions.

 **Off-Road (4WD only)** – Use for enhanced control on unpaved roads or trails at moderate speeds.

 **Tow/Haul** – Press the  button to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills or busy parking lots.



FOUR-WHEEL DRIVE

Use the four-wheel-drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive. The Driver Information Center displays the current status of the transfer case.

AUTO Automatic Four-Wheel Drive High –

Use when traction conditions vary for automatic shifting between 2WD and 4WD. Shift into this mode at any speed except when shifting from **4↓**.

2↑ Two-Wheel Drive High – Use for most streets and highways. Shift into this mode at any speed except when shifting from **4↓**.

4↑ Four-Wheel Drive High – Use when extra traction is needed or in most off-road driving. Shift into this mode at any speed except when shifting from **4↓**.

4↓ Four-Wheel Drive Low ♦ – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral.

N Neutral – Use to dolly or dinghy tow the vehicle behind an RV. Refer to your Owner's Manual for the shift procedure.



See Driving and Operating in your Owner's Manual.

LIGHTING

LAMP CONTROLS

Rotate the control knob to activate the exterior lamps.

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

 **Fog Lamps**♦

Press to turn the fog lamps on/off.

 **Instrument Panel Brightness**

Press and hold the +/- buttons to adjust the instrument panel lighting.

 **Task Lighting**♦

Press to turn the forward-facing outside mirror lamps on/off.

 **Cargo Lamp**♦

With the vehicle in Park, Reverse or Neutral, press to turn the cargo bed/hitch lamps and/or rear-facing mirror lamps♦ on/off.



INTELLIBEAM SYSTEM♦

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions at night when the lamp control is in the AUTO or  position and the system is activated, indicated by a green  on the instrument cluster. A blue  appears when the high-beam headlamps are on.

- ▶ To turn the IntelliBeam system on or off, press the  button on the end of the turn signal lever with the lamp control in the AUTO or  position.

Note: The fog lamps must be off to activate the IntelliBeam system. IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

TRUCK TIRE PRESSURE MONITORING SYSTEM♦

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed on the Driver Information Center.**

The Tire Fill Alert provides visual and audible alerts to help with inflating a tire (does not apply to spare tire). When the recommended pressure is reached, the horn sounds and the turn signals change from flashing to solid.

Note: Refer to your Owner's Manual for accessory trailer tire-pressure monitoring system information.

See Vehicle Care in your Owner's Manual.

CAMERA SYSTEM FEATURES

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

The available camera systems feature up to 8 cameras* with up to 14 views* to help make it easier to hitch a trailer and provide better visibility while towing.

REAR VISION CAMERA

When the vehicle is in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen. Camera view buttons* are at the bottom of the screen.

- ▶ Touch the  **Guidance Lines/  Hitch Guidance*** button to change guidelines.
- ▶ Touch the  **Hitch View*** button for a zoomed-in view of the hitch area.

SURROUND VISION*

The system uses multiple cameras to display a high-resolution image of the area around your vehicle on the infotainment screen. Camera view buttons* are at the bottom of the screen.

- ▶ Touch the  **Guidance Lines/  Hitch Guidance** button to change guidelines.
- ▶ Touch the  **Bed View** button to check cargo or to view guidelines to help when hitching a 5th wheel or gooseneck trailer. Zoom functionality also available.
- ▶ To display available camera views when in Drive above 8 mph, touch the Camera icon on the infotainment screen and select the desired view. Touch X to exit the view.



Surround View screen



Bed View screen

ADDITIONAL TRAILER CAMERA VIEWS*

Multiple views to aid in trailering are shown on the infotainment screen using the vehicle cameras and up to two additional wired Chevrolet accessory cameras* mounted on the rear or interior of the trailer.

- ▶ Touch the  **Rear Side View** button for a biased split view of each side of the trailer (more of the left or right side will be shown based on trailer position).
- ▶ Touch the  **Transparent Trailer View** button for a view behind the trailer.

Note: Requires accessory camera system.*



Transparent Trailer View screen

Jack-Knife Alert** – The Jack-Knife Alert displays a warning symbol when the truck/trailer angle is in a possible jack-knife position and there is a potentially imminent collision situation. Beeps may sound or the Safety Alert Seat* may pulse (if selected). To adjust trailering settings, go to Settings > Vehicle > Trailering.

See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR♦

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom, or tilt setting.

C. ◀ ▶ Adjustment

Press and release either button to adjust the selected setting.



See Keys, Doors and Windows in your Owner's Manual.

POWER MIRRORS♦/TRAILERING MIRRORS♦

POWER MIRROR ADJUSTMENT

- ▶ Press the  **Mirror Selector** button to select the driver- or passenger-side mirror; use the four-way control pad to adjust the mirror.



POWER FOLDING MIRROR

- ▶ Press the  **Folding Mirror** button to fold or unfold the mirrors.

TRAILERING MIRRORS

The mirrors can be extended for better visibility when towing a trailer. The lower wide-field view mirror adjusts manually.

Manual Extension♦

- ▶ To extend the manual mirror, grasp the mirror housing and pull back and rearward in one motion. The housing extends on a curved arc. Push in the housing to return the mirror to its original position.



Power Extension♦

- ▶ Press the  **Power Extend** button to extend or retract the power mirror.

Note: Reset the power mirrors if they are adjusted manually by using the power controls to fold/unfold or extend/retract the mirrors to their normal position.

See Keys, Doors and Windows in your Owner's Manual.

MULTI-FLEX TAILGATE OPERATION*

The tailgate has 6 functional positions to improve access to the cargo box. To operate the tailgate, it must be unlocked or the key fob must be within 3 feet of the tailgate.

1. Primary Gate

Open the primary gate for access to the cargo box.

2. Primary Gate Load Stop

With the primary gate open, the load stop helps keep longer items secure in the cargo box.

3. Easy Access

The inner gate folds down for easier reach into the cargo box to access items near the cab.

4. Full-Width Step

With the primary gate open, the inner gate folds into a sturdy step (up to 375 lbs.) with a convenient handle for easy cargo box entry and exit.

5. Inner Gate Load Stop

With the primary gate closed, fold the inner gate for two-tier storage and open the load stop to help keep longer items secure.

6. Inner Gate Work Surface

With the primary gate closed, fold the inner gate for two-tier storage or for use as a standing-height work surface.

OPEN THE INNER GATE

- Press the upper button (A) on the tailgate.

Note: Do not lower the inner gate with the primary gate open if a hitch ball or trailer is attached.

ENABLE/DISABLE THE INNER GATE

The inner gate can be disabled to prevent it from being opened when a hitch or other equipment is installed.

- To disable or enable inner gate operation, with the key fob within range, press and hold the upper button (A) for 7 seconds.



OPEN THE PRIMARY GATE

- Press the lower button (B) on the tailgate.
- Press the  **Power Tailgate** button twice on the key fob.
- Press the  **Power Tailgate** button on the center of the instrument panel.



MULTI-FLEX TAILGATE OPERATION[✦]

OPEN THE PRIMARY GATE AND INNER GATE

- ▶ Press the lower button and then upper button (B, then A) on the tailgate consecutively.

OPEN THE LOAD STOP OR STEP

- ▶ Press the release bar (C).




See Keys, Doors and Windows in your Owner's Manual.

ADVANCED TRAILERING SYSTEM[✦]

IN-VEHICLE TRAILERING APP[✦]

The in-vehicle Trailering App on the infotainment screen allows customized trailer profiles with a variety of helpful towing assistance features, including a hitching and setup checklist, trailer tire pressure and temperature monitoring[✦], trailer light testing, trailer theft detection and more. Trailering App information also is available with the myChevrolet mobile app.

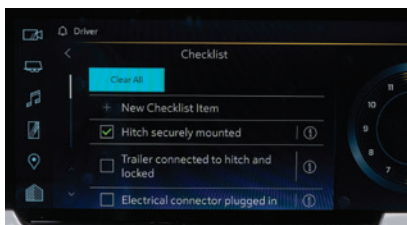

Note: The Trailering App will monitor trailer presence, even while the vehicle is off, by periodically checking the trailer lighting circuits. On trailers equipped with LED lights, these periodic checks may cause the trailer lights to flash. This flashing will become more frequent if Theft Alert is enabled.

HITCH AREA LIGHTING

- ▶ Press the  **Cargo Lamp** button on the left side of the instrument panel to turn the cargo bed lamp or conventional hitch lamp on/off.

TRAILERING INFORMATION LABEL

The Trailering Information Label, located on the pillar between the driver and rear-passenger doors, provides vehicle-specific weight and capability ratings.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the power output, or Trailer Gain, to the trailer brakes. The control panel is on the center console. ITBC information is displayed on the ITBC page on the Driver Information Center.

- ▶ Squeeze the control together to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons.



See Driving and Operating in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA 1-800-243-8872

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump starts, flat tire and lockouts) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.*

MY CHEVROLET ACCOUNT

Get to know more about your vehicle as well as view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **chevrolet.com/owners**.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



87855251

We recommend always using
ACDelco or GM Genuine Parts.



87855251 A