



GETTING TO KNOW YOUR **2025 TRAILBLAZER**



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Trailblazer. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Cruise Control/
Forward Collision
Alert /Heated Steering
Wheel Buttons

Turn Signal
Lever/IntelliBeam
Control

Digital Driver
Information
Center

Driver Information
Center Controls/
Voice Recognition
Buttons

Windshield
Wipers
Lever



Exterior Lamps/
Instrument
Panel Lighting
Controls

Power
Liftgate
Control

Audio Favorite
Station Controls
(behind steering
wheel)

Steering Wheel
Adjustment Lever
(under steering
column)

Audio Volume
Controls
(behind
steering wheel)

Engine Start/
Stop Button
(on instrument
panel)

SYMBOLS



Low Fuel



Traction Control Off

BRAKE



Brake System



Cruise Control



StabiliTrak Active



StabiliTrak Off



Forward Collision Alert



Security



Electric Parking Brake



Service Electric Parking Brake



Lights On Reminder



Airbag Readiness



Engine Oil Pressure



Check Engine



Lane Keep Assist



Shift Lever
Manual Mode
Buttons

Electric
Parking
Brake
Switch

Auto Stop-Start Disable/Lane
Keep Assist/Traction Control &
StabiliTrak/Sport Mode*/Snow
Mode*/AWD* Buttons

Wireless
Phone
Charging
Pad*

USB Ports/
Accessory
Power Outlet



Vehicle Ahead



Charging System



Pedestrian Ahead



Antilock Brake System



Low Tire Pressure



Door Ajar



Driver Seat Belt
Reminder



Passenger Seat Belt
Reminder



Following Distance

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



Power Liftgate

Press twice to open or close the liftgate.
Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
The horn sounds and lights flash 3 times.

Press and hold to activate the alarm. Press again to cancel the alarm.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.



Remote Vehicle Start

Press and release the Lock button and then press and hold the button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 15 minutes. Repeat the steps for an additional 15 minutes.
- To cancel a remote start, press and hold the button until the parking lamps turn off.

Key Release

In case of loss of vehicle power, press the button on the side of the key fob to pull out the door lock key. Remove the cap on the rear part of the driver's door handle to access the lock.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from a pocket or bag. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- Press the button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- Press the button on the front passenger's door handle to unlock all doors.
- Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob out of the vehicle, and all doors closed:

- Press the button on any door handle to lock all doors immediately.
- If Passive Locking is turned on, all doors will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press and hold the brake pedal and then press the **ENGINE START/STOP** button to start the engine. The green button indicator will illuminate.

Note: If the key fob battery is weak, place the key fob in the pocket at the back of the small storage compartment in the center console to enable the engine to start. Replace the key fob battery as soon as possible.

STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode to operate the radio, windows and other accessories with the engine off. The amber button indicator will illuminate.

See *Driving and Operating* in your Owner's Manual.



AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the (A) symbol displays on the Driver Information Center. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.

AUTO ENGINE STOP/START DISABLE

- ▶ Press the (A) **Auto Stop** button (A) on the center console to turn off the automatic engine stop/start system. The button indicator is illuminated when the system is off. The system turns on each time the vehicle is started.

See *Driving and Operating* in your Owner's Manual.



STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.

POWER FRONT SEATS◆

POWER SEAT ADJUSTMENTS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



See Seats and Restraints in your Owner's Manual.

REAR SEATS

FOLDING THE 40/60 REAR SEATBACKS

1. Press the button on the head restraint. The head restraint will fold automatically.
 2. Make sure the seat belt is in the retainer hook.
 3. Pull the lever on top of the seatback (A) and fold the seatback forward. A red tab near the lever is visible when the seatback is unlatched.
- ▶ To raise each seatback, lift it up until it locks in place.



See Seats and Restraints in your Owner's Manual.

FOLDING FRONT PASSENGER SEATBACK

The front passenger seatback can be folded flat for additional cargo space.

 
- ▶ With the head restraint lowered and the seat moved as far back as possible, lift the seatback adjustment lever at the base of the seatback to fold the seatback forward.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE◆

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  **Power Liftgate** knob (A) on the driver's door.
- ▶ Press the touchpad (B) above the license plate to open the liftgate.
- ▶ Press the  button (C) on the bottom edge of the liftgate to close the liftgate.

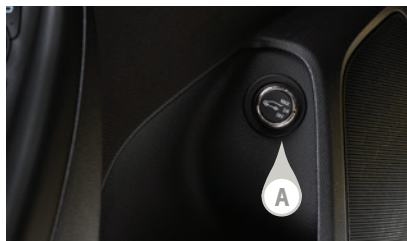

PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the Power Liftgate knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the  button (C) on the bottom edge of the liftgate until the turn signals flash and a beep sounds.

HANDS-FREE OPERATION◆

- ▶ To open or close the liftgate hands-free, kick your foot straight under the driver's side of the rear bumper, left of center. The key fob must be within 3 feet of the liftgate. The Chevrolet logo is projected on the ground to indicate the kicking motion location. The logo is shown for 1 minute, depending on operating conditions.



See Keys, Doors and Windows in your Owner's Manual.

ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, pull the (P) **Parking Brake** switch on the center console.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) switch.

Note: The parking brake will release automatically if the vehicle is running, placed into gear, and an attempt is made to drive.

See Driving and Operating in your Owner's Manual.

 
DIGITAL DRIVER INFORMATION CENTER

The Driver Information Center (DIC) displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view and select Vehicle, Audio and Phone information.

- ▶ Rotate the thumbwheel up or down to scroll through the menus.
- ▶ Press the thumbwheel to open a menu, or to select or reset an item.

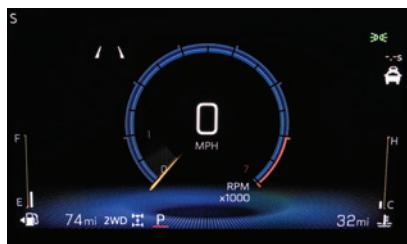

Color DIC shown

 
CLUSTER DISPLAY GAUGES

1. Press and hold the thumbwheel for 2 seconds to view the cluster display menu.
2. Use the thumbwheel to scroll through the available display layouts.
3. Press the thumbwheel to select the desired display layout.



VEHICLE INFORMATION

1. Press the  Vehicle Status icon on the infotainment screen to view all available vehicle information.
2. Select the Maintenance (tire pressure, engine oil life, engine air filter life) Gauges (battery voltage, coolant temperature) or Trip (trip information, fuel economy) tab.
3. When viewing an item, select the  icon to view additional information or to reset an item.
4. To display the item on the DIC, select Show in Cluster. Select Remove from Cluster to remove an item from the DIC.

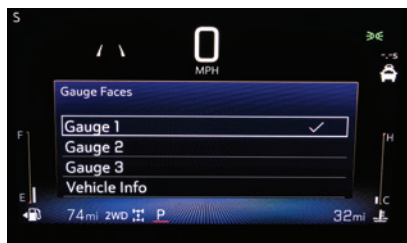

See Instruments and Controls in your Owner's Manual.

CLIMATE CONTROLS



AUTOMATIC OPERATION

- Press AUTO.
- Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

CLIMATE DISPLAY

- Select the Climate icon on the Home page of the infotainment screen to view the current operation of the Climate Controls and adjust the settings.

See Climate Controls in your Owner's Manual.



WIPERS AND WASHERS

WINDSHIELD WIPERS

Raise or lower the wiper lever.

HI Fast Wipes

LO Slow Wipes

INT Intermittent Wipes

Rotate the band up or down for more or less frequent wipes.

OFF

1x Single Wipe

Washer Fluid

Pull the lever to wash the windshield.

REAR WINDOW WIPER

Turn the end of the wiper lever.



OFF

INT Intermittent Wipes

ON

Rear Washer Fluid

Push the lever to wash the rear window.

See Instruments and Controls in your Owner's Manual.

AUDIO STEERING WHEEL CONTROLS

Push to Talk

Press to use natural voice recognition with the Bluetooth system of a paired, compatible phone.

End Call/Mute

Press to end or decline a call.

Press to mute/unmute the speakers.

Audio

Press to display the Audio menu on the Driver Information Center.

Phone

Press to answer an incoming call or to display the Phone menu for a paired, compatible phone on the Driver Information Center.

Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (behind left side of steering wheel)

 
Press the top or bottom button to go to the next or previous favorite radio station or media track.



See Infotainment System in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

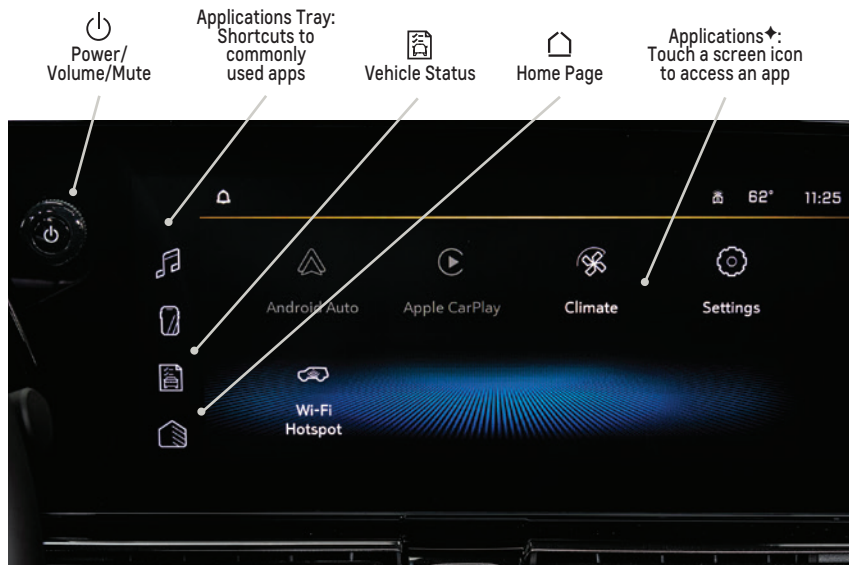

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. You can use simple gestures on the touchscreen, such as tap, drag, and swipe, to interact with the system. For additional information, visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the  **Home** button.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position on the screen or app tray, and then release.

INFOTAINMENT SYSTEM

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[®]) can be stored in any order.

1. Tune in to the desired radio station.
2. Select the desired page of favorite screen buttons.
3. Touch and hold one of the favorite screen buttons until a beep is heard.

AUDIO SOURCES

1. Select the current Source (icon with  arrow) at the top of the Audio page.
2. Select the desired audio source or radio band.



NATURAL VOICE RECOGNITION[†]

Control the music source, make phone calls hands-free and perform other tasks using the natural voice recognition system after pairing your Bluetooth-enabled phone.

1. Press the  **Push to Talk** button on the steering wheel.
2. After the prompt, say what you want it to do using natural speech.

APPLE CARPLAY[®] AND ANDROID AUTO^{™†}

Apple CarPlay or Android Auto capability is available through a compatible phone using the Apple CarPlay or Android Auto icon on the Home page.

1. There are two ways to set up device projection while parked:
 - **Wireless Connection** – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
2. Follow the instructions on the infotainment system and the phone.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.
 - ▶ To exit Apple CarPlay or Android Auto, press the  **Home** button. To return to Apple CarPlay or Android Auto, press and hold the  **Home** button.

SIRIUSXM[®] WITH 360L[†]

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

[†]Android and Android Auto are trademarks of Google LLC; Apple CarPlay is a trademark of Apple Inc.

INFOTAINMENT SYSTEM

PORTABLE AUDIO DEVICES

USB ports (Type A and Type C) for data and charging are located near the front of the center console. Connect an iPod®, iPhone®, MP3 Player, or a USB flash drive to a USB data port.

- Touch Audio and then touch the Source icon to select the USB device.

USB ports♦ on the rear of the center console are for charging only.



See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING♦

The Wireless Phone Charging system is located at the front of the center console. Visit chevrolet.com/support to check device compatibility. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the charging pad. There should not be any objects between the phone and the charging pad.
3. Place the phone, screen up, on the charging pad.
4. The ⚡ charging symbol will appear on the infotainment screen when charging.



See Instruments and Controls in your Owner's Manual.

4G LTE WI-FI® HOTSPOT

With the vehicle's available 4G LTE Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit chevrolet.com/support.

- To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen or go to Settings > System > Wi-Fi Hotspot.

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE

1. Press the **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected) or select the Phone icon > Manage Phones > Add Phone+ on the infotainment screen.
2. Start the pairing process on the phone. From your phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT

Multiple phones can be paired to the Bluetooth system. The system connects to the paired phone that is set as First to Connect.

- ▶ To set the First to Connect phone, select Settings > System > Phone > Options for the connected phone > First to Connect.



See Infotainment System in your Owner's Manual.

DRIVER MODE CONTROL

The Driver Mode Control automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions on Front-Wheel Drive (FWD) and All-Wheel Drive (AWD) models. The Driver Mode Control buttons are located on the center console.

FWD MODELS

Snow – Provides more progressive throttle input for improved acceleration on snow- and ice-covered roads.

Sport – Modifies steering effort and shifting for a sportier feel and response.

AWD MODELS

AWD All-Wheel Drive – Adds unique calibrations for more rear-wheel torque at lower speeds to improve the driving experience on moderately steep and unpaved surfaces.

Sport – Modifies steering effort and shifting for a sportier feel and response.



AWD model shown

See Driving and Operating in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the Driver Information Center.
2. When traveling at the desired speed, press the switch down to the SET- position to set the speed. The  symbol will illuminate in green on the Driver Information Center.



ADJUSTING CRUISE CONTROL

RES+ Resume/Accelerate

Press up to resume a set speed. When active, press up to increase speed.

SET- Set/Coast

When active, press down to decrease speed.

Cancel

Press the  button, or press the brake pedal, to cancel the Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL+

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  Cancel button to switch between  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.

AUTOMATIC TRANSMISSION MANUAL MODE

Manual mode allows you to choose the top gear limit. It can be used to limit the vehicle's speed when driving downhill or towing a trailer.

1. Move the shift lever to L (Low).
2. Press the + (plus) or - (minus) button on the shift lever to increase or decrease the gear range available. The current gear will be displayed on the Driver Information Center.

If vehicle speed is too high or low for the requested gear, the shift will not occur.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS

Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

CHEVY SAFETY ASSIST PACKAGE

- To turn some of the following systems on/off or to change some settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

FORWARD COLLISION ALERT – The

Vehicle Ahead Indicator is green on the Driver Information Center when a vehicle that you're following is detected, and it is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound.

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds above the  icon on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

 
AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator on the Driver Information Center. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  Lane Keep Assist indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and beeps may sound on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- To turn on or off, press the  **Lane Keep Assist** button (A) on the center console.

Note: IntelliBeam automatic high-beam headlamps are included with the Chevy Safety Assist Package. See Lighting on page 18.

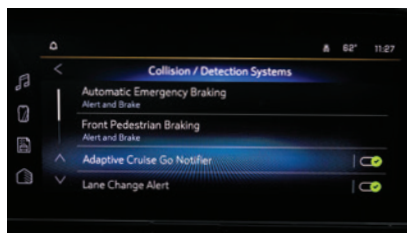

DRIVER ASSISTANCE SYSTEMS

TRACTION CONTROL AND STABILITRAK –

The full-time traction control system limits wheelspin and the StabiliTrak electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Traction control should be turned off if the vehicle is stuck and rocking the vehicle is required.

- ▶ To turn on or off, press the  **Traction Control/StabiliTrak Off** button (B) on the center console. The  Traction Control Off light will illuminate on the Driver Information Center when the system is off.



 
LANE CHANGE ALERT WITH SIDE BLIND ZONE ALERT ♦ – While driving, the system displays a  warning symbol on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side.

REAR CROSS TRAFFIC ALERT ♦ – When in Reverse, the system warns of detected cross-traffic approaching in either direction by displaying a red alert on the infotainment screen and sounding beeps.

REAR PARK ASSIST ♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information on the Driver Information Center. A beep sounds when an object is detected and 5 beeps sound when an object is very close.

HD REAR VISION CAMERA – When in Reverse, a view of the area directly behind the vehicle displays on the infotainment screen.

- ▶ To turn the guidelines on or off, touch the Guidelines button at the bottom of the infotainment screen.

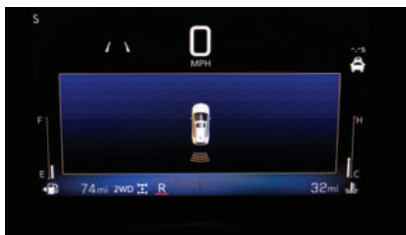

See Driving and Operating in your Owner's Manual.

LIGHTING

EXTERIOR LAMP CONTROLS

Rotate the knob (A) to change the exterior lamps setting.

 **Off/On**

AUTO

Automatically activates the exterior lamps depending on outside lighting conditions.

 **Parking Lamps**

 **Headlamps**

INSTRUMENT PANEL LIGHTING

 **Instrument Panel Illumination**

Press and release the knob (B) to extend it. Turn the knob to adjust the instrument panel lighting.

INTELLIBEAM SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions to provide enhanced visibility while driving at night. The  indicator displays on the Driver Information Center when the system is on; a blue  indicator displays when the high-beam headlamps are on.

- ▶ With the lamp control in the AUTO or  Headlamps position, press the  button (C) on the turn signal lever to turn the IntelliBeam system on or off.

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.



VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen, including Rear Seat Reminder, Lighting, Wipers, Door Locks, Driver Assistance and others.

1. Select Settings on the Home page.
2. Select the desired menu tab.
3. Select the desired feature and setting.
4. Press  Back to exit each menu.



See Infotainment System in your Owner's Manual.

Some equipment shown may not be included in your vehicle.

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The (!) Low Tire Pressure light on the Driver Information Center illuminates when one or more of the vehicle's tires is significantly underinflated (excluding the spare tire). Fill the tires to the recommended pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the information screen.

 
The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended cold tire pressure (excluding the spare tire). The horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

See Vehicle Care in your Owner's Manual.

CARGO STORAGE

ADJUSTABLE CARGO FLOOR

- ▶ Lift up the cargo floor for access to additional storage space.
- ▶ Remove and reinstall the cargo floor on the upper or lower floor brackets (A) to adjust the height of the floor. Use the upper brackets to create a flat load floor when folding the rear seat.

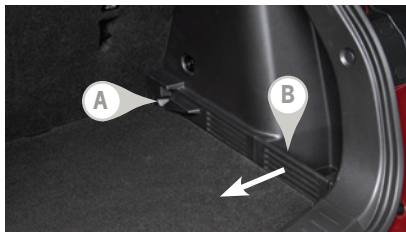

REVERSIBLE CARGO FLOOR

- ▶ Turn over the cargo cover floor for a rugged, easy-to-clean surface that provides convenient storage for dirty or damp items.

CARGO SIDEWALL STORAGE

- ▶ Detach the lower storage dividers (B) on either side of the cargo area for additional storage space for longer items. To remove a storage divider, pull outward to unsnap the tabs securing the divider.

See Storage in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security Plan, press the blue **OnStar** button or red **Emergency button** (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit **onstar.com**, call 1-888-4-ONSTAR (1-888-466-7827), or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can start or turn off your engine, lock or unlock your doors, view key diagnostic information, see parking information and more.

*The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit **onstar.com** for more details. Download the mobile app from your compatible mobile device's app store.*

MY CHEVROLET ACCOUNT

Get to know more about your vehicle and view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at **chevrolet.com/owners**.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



85602512

**We recommend always using
ACDelco or GM Genuine Parts.**



85602512 A