



GETTING TO KNOW YOUR 2025 TERRAIN



gmc.com

Review this quick reference guide for an overview of some important features in your GMC Terrain. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle.

All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at gmc.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL



Symbols

	Low Fuel		Traction Control/ StabiliTrak Active		Stability Control Off
	BRAKE Brake System Warning		Airbag Readiness		Lights On Reminder
	Cruise Control Set		High-Beam Headlamps		Antilock Brake System
	Security		Check Engine		Charging System
	Forward Collision Alert		Traction Control Off		Low Tire Pressure
	Fog Lamps				Lane Keep Assist

Color
Reconfigurable
Display Off Button

Color
Reconfigurable
Display

Color Reconfigurable
Display Volume Control



Driver's Heated
Seat Control

USB Ports/
Accessory Port

Climate
Controls

Front-
Passenger's
Heated Seat
Control



Pedestrian Ahead



Engine Oil Pressure



Engine Coolant
Temperature Warning



Auto Stop



Door Ajar

PARK Parking Brake Set



Vehicle Ahead



Service Electric Parking
Brake



Driver Seat Belt
Reminder

Read your Owner's Manual to
learn about the information being
relayed by the lights, gauges and
indicators on the instrument cluster.

See Introduction in your
Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)



Lock

Press to lock all doors.



Unlock

Press to unlock the driver's door.

Press again to unlock all doors and liftgate.



Power Liftgate[◆]

Press twice to open or close the liftgate.
Press once to stop power liftgate operation.



Vehicle Locator/Panic Alarm

Press and release to locate your vehicle.
Press and hold to activate the alarm.
Press again to cancel the alarm.



Remote Vehicle Start

Press twice to start the engine from outside the vehicle. After entering the vehicle, press the **ENGINE START/STOP** button.

- The engine will run for 15 minutes. Repeat the steps to extend the remote start an additional 15 minutes.
- To cancel a remote start, press the  button until the parking lamps turn off.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and liftgate without removing the key fob from your pocket or bag. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again within 5 seconds to unlock all doors and liftgate.
- ▶ Press the button on the front passenger's door handle to unlock all doors and liftgate.
- ▶ Press the touchpad above the license plate to open the liftgate.



KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle, and all doors closed:

- ▶ Press the button on any door handle to lock all doors and liftgate immediately.
- ▶ All doors will lock automatically after a short delay once all doors are closed if Passive Locking is turned on in the Settings menu.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS (PUSH-BUTTON) START

The key fob must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the transmission in Park or Neutral, press the brake pedal and then press the **ENGINE START/STOP** button. The button indicator will be green.

Note: If the key fob battery is weak, place the key fob in the left cupholder to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in accessory mode. The button indicator will be amber.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving stop/start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is applied and the vehicle is at a complete stop, if certain operating conditions are met. In Auto Stop mode, the  symbol displays in the Driver Information Center. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.

AUTO STOP DISABLE

- ▶ To turn off the system, press the  **Auto Stop** button on the left side of the instrument panel. The button indicator will turn off when the system is off.

The Auto Engine Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.



DIGITAL DRIVER INFORMATION CENTER



The reconfigurable Driver Information Center (DIC) displays a variety of vehicle messages and system information.

DIC CONTROLS

Use the controls on the right side of the steering wheel to view and select Vehicle, Audio and Phone information.

- ▶ Press the **Display** button to view and scroll through the cluster display layouts.
- ▶ Press the switch up or down to scroll through the active menu.
- ▶ Press the switch to select an item.



VEHICLE INFORMATION

1. Press the Vehicle Status icon on the infotainment screen to view all available vehicle information.
2. Select the Maintenance, Gauges, or Trip tab.
3. Select an item to view additional information or to reset an item.
4. When viewing an item, select Add to Driver Display to display an item or Remove from Display to remove an item on the driver display.



See Instruments and Controls in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The automatic transmission is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

Manual Mode – With the transmission in Drive, press the L (Low) button on the steering wheel to shift manually. Press the top-left (-) button (on the back of the steering wheel) to downshift and the top-right (+) button (on the back of the steering wheel) to upshift. Press the L button again to return to Drive.

See Driving and Operating in your Owner's Manual



ELECTRIC PARKING BRAKE

- ▶ To apply the parking brake, press the (P) **Parking Brake** button on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the (P) button.

See Driving and Operating in your Owner's Manual.



STEERING WHEEL ADJUSTMENT

- ▶ With the vehicle parked, push down the lever under the left side of the steering column to adjust the steering wheel. The steering wheel can be moved up or down and in or out. Pull up the lever to lock the steering wheel in place.

See Instruments and Controls in your Owner's Manual.



BUCKLE TO DRIVE

Buckle to Drive prevents the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed, and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park once the Driver Information Center message turns off after several seconds. Shifting from Park is prevented once each ignition cycle.

- To turn off or on again, go to Settings > Vehicle > Buckle to Drive on the infotainment screen. The vehicle may need to be restarted to register the setting change.

See Seats and Restraints in your Owner's Manual.

POWER FRONT SEATS

A. Seat Adjustment

Move the horizontal control to move the seat forward or rearward and to tilt, raise or lower the seat.

B. Seatback Recline Adjustment

Move the vertical control to recline or raise the seatback.

C. Lumbar Support Adjustment

Press and hold the round control to adjust the lumbar support.



See Seats and Restraints in your Owner's Manual Reminder

REAR SEATS

FOLD THE REAR SEAT

1. Pull the lever on the top of the seatback (A) and fold the seatback forward. A red tab is visible when the seatback is unlatched.
2. To raise the seatback, lift it up until it locks in place.



See Seats and Restraints in your Owner's Manual.

REAR SEAT REMINDER

A Rear Seat Reminder message may display on the Driver Information Center when the vehicle is turned off. Always check the rear seat before exiting the vehicle. The system does not actually detect people or items in the rear seat; instead, under certain conditions, it detects when a rear door has been opened, indicating that there may be something in the rear seat.

See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE ♦

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  Power Liftgate button on the key fob twice.
- ▶ Press the  Power Liftgate button (A) on the driver's door.
- ▶ Press the touchpad on the exterior liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the interior liftgate pull handle to close the liftgate.
- ▶ To change the power liftgate settings, go to Settings > Vehicle > Comfort and Convenience > Power Rear Gate Opening on the infotainment screen.



AUTOSENSE POWER LIFTGATE

The liftgate will open automatically when the key fob is within 3 feet of the rear of the vehicle for 3 seconds. Four beeps sound before the liftgate will open. Move the key fob more than 3 feet away from the vehicle to cancel an automatic opening.

- ▶ To enable hands-free operation, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Exterior Storage Access on the infotainment screen.


PROGRAMMING THE LIFTGATE HEIGHT

1. Open the liftgate and adjust it manually to the desired position.
2. To save the setting, press and hold the button (B) next to the interior liftgate pull handle until the turn signals flash and a beep sounds.

See Keys, Doors and Windows in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

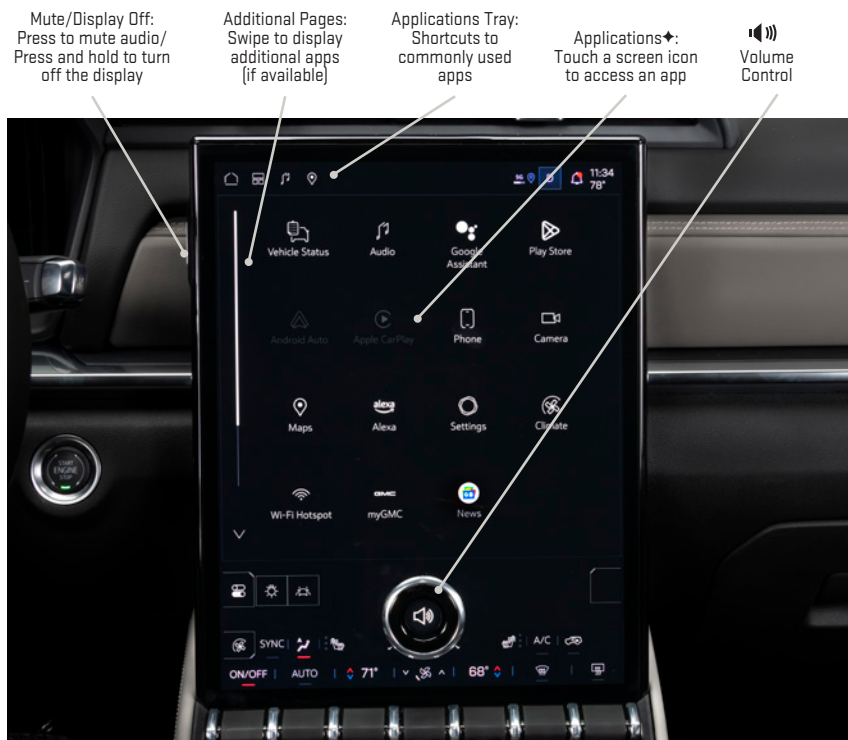

The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. Use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For additional information, visit gmc.com/support.

MANAGING HOME PAGE ICONS

1. Press the  Home icon.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM[♦]) can be stored in any order.

1. Tune in a radio station. The sources menu is at the top of the Audio page.
2. Select the desired page of favorite buttons.
3. Touch and hold one of the favorite buttons.

INFOTAINMENT SYSTEM

SIRIUSXM WITH 360L™◆

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

GOOGLE BUILT-IN†

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

- Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google to get hands-free help. Easily get directions, play media, control vehicle functions and more.

- To start, say "Hey Google," tap the Google Assistant icon on the Home page, or press the  **Push to Talk** button on the steering wheel.

Google Maps – Reach your destination faster with real-time traffic information, automatic rerouting and voice control. Sign in for personalized maps with home and recent locations.

Google Play – Download some of your favorite apps in your vehicle, just as you would on your phone, to listen to music, podcasts, audiobooks and more.

†Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play and Google Maps are trademarks of Google LLC.

APPLE CARPLAY® AND ANDROID AUTO™

1. There are two ways to connect to Apple CarPlay or Android Auto:
 - **Wireless Connection** – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - **Wired Connection** – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
2. Follow the instructions on the infotainment screen and the phone.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.

PORTABLE AUDIO DEVICES

An iPod®, iPhone®, MP3 player or a USB flash drive can be connected to a USB data port located at the front of the center console.

- Touch Audio and then touch Source to select the USB device.

The USB ports◆ on the rear of the center console are for charging only.

PHONE VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice-recognition system.

1. Press and hold the  **Push to Talk** button on the steering wheel.
2. After the prompt, say what you want it to do using natural speech. Ex.: "Call Dave."

See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions. Visit gmc.com/support for more information.

PAIR A PHONE

1. Press and hold the  **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected) or select the Phone icon > Manage Phones > Add Phone on the infotainment screen.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT PAIRED PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the paired phone that is set as First to Connect.

- To set the First to Connect phone, select the Phone icon > Settings > Connected Phone > Options > First to Connect

See Infotainment System in your Owner's Manual.

WI-FI® HOTSPOT♦

With the vehicle's available built-in Wi-Fi hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. Visit onstar.com for more details.

- To retrieve the name and password for the hotspot, select Wi-Fi Hotspot on the infotainment screen.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING♦

The wireless charging pad for smartphones is located at the front of the center console. To check device compatibility, visit gmc.com/support. See your phone retailer for details on required phone accessories.

1. The vehicle must be On, or Retained Accessory Power must be active.
2. Remove all objects from the pad.
3. Place the phone horizontally on the pad with the screen facing up.
4. The  charging symbol will appear on the infotainment screen when charging. If not charging, remove the phone for 3 seconds, and rotate it 180 degrees, before placing it on the pad again



See Instruments and Controls in your Owner's Manual.

AUDIO/PHONE STEERING WHEEL CONTROLS

Push to Talk

Press to use Google Assistant.

Press and hold to use natural voice recognition with the Bluetooth system of a paired, compatible phone.

Answer/End Call

Press up to answer an incoming call and down to end a call. Press down to mute the audio system.

Audio

Press to display the Audio source on the Driver Information Center.

Volume (back of right side of steering wheel)

Press the top or bottom button to adjust the volume.

Next/Previous Favorite Station (back of left side of steering wheel)

Press the top or bottom button to go to the next or previous favorite radio station or track (on a connected device).





See Infotainment System in your Owner's Manual

VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Controls and Settings menus on the infotainment screen, including Buckle to Drive, Exterior Lamps, Driver Assistance and others.

1. Select Controls or Settings on the Home page.
2. Select the desired menu item.
3. Select the desired feature and setting.
4. Press <Back to exit each menu.

See Infotainment System in your Owner's Manual.

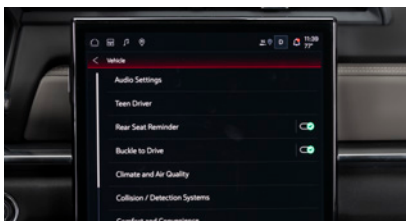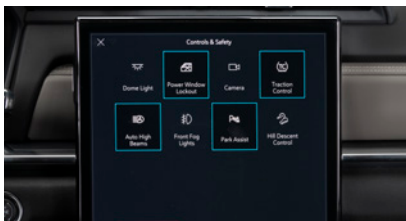

CLIMATE CONTROLS

Dual Automatic Climate Controls ♦ shown



- Climate Display/
Synchronize Settings/
Airflow Delivery
- ON/
OFF
- AUTO
Automatic
Operation
- Driver
Temperature
Control
- Fan
Speed
- Pass.
Temperature
Control ♦
- Windshield
Defrost
- Rear Window/
Heated Mirrors
Defog
- Air
Conditioning/
Recirculation
Mode

CLIMATE DISPLAY

- ▶ Select the Climate Display icon or the Climate app on the infotainment screen to view and adjust the current operation of the Climate Controls.

AUTOMATIC OPERATION

- ▶ Press AUTO.
- ▶ Set the temperature.

The system automatically controls the fan speed, air delivery, air conditioning and recirculation functions. Allow time for the system to reach the set temperature. If a function is manually adjusted, the Auto indicator light turns off and automatic operation for that function is disabled.

See Climate Controls in your Owner's Manual.

SUNROOF ♦

- ▶ Press or pull the  SLIDE switch to express-open or express-close the sunroof. Press or pull again to stop operation.
- ▶ Press the  TILT switch to vent the sunroof. Pull to close the sunroof.
- ▶ Press or pull the  Sunshade switch to express-open or express-close the sunshade. Press or pull again to stop operation.



See Keys, Doors and Windows in your Owner's Manual.

WIPERS AND WASHERS

Rotate the outer band to activate the windshield wipers.

OFF

 **INT Intermittent Wipes/Rainsense**

Rotate the band up for more frequent wipes or down for less frequent wipes.

Note: To enable the Rainsense feature, go to Settings > Vehicle > Comfort and Convenience on the infotainment screen.

LO Slow Wipes

HI Fast Wipes

Single Wipe

Push the button on the end of the lever to the first stop for a single wipe. Hold the button for additional wipes.

 **Washer Fluid**

Push the button on the end of the lever fully to wash the windshield.

Rear Window Wiper


Rotate the inner band to activate the rear wipers and wash the rear window.



See Instruments and Controls in your Owner's Manual.

EXTERIOR LIGHTING

- ▶ Select the  Automatic Light Control icon on the infotainment screen to turn the auto headlamps on/off.
- ▶ To operate the exterior lamp controls, go to Controls > More Controls > Lights > Headlights on the infotainment screen. Select the Auto setting to have the exterior lamps turn on or off automatically, depending on outside lighting conditions.
- ▶ To enable the IntelliBeam system, which automatically turns the high-beam headlamps on/off based on traffic conditions when it is dark enough, go to Controls > Auto High Beams. The exterior lamps must be in the Auto setting. The  symbol on the instrument cluster indicates the system is on. The  symbol appears when the high-beam headlamps are on.

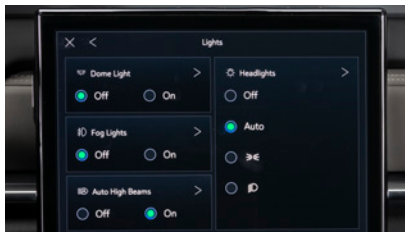

Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

CRUISE CONTROL

SETTING CRUISE CONTROL

1. Press the  **On/Off** button. The  Cruise Control symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press down the switch to the SET position to set the speed. The  symbol will illuminate in green on the instrument cluster.

ADJUSTING CRUISE CONTROL

+RES Resume/Accelerate

Press up to resume a set speed. When active, press once to increase speed 1 mph; press and hold to continue increasing speed.

-SET Set/Coast

When active, press down once to decrease speed 1 mph; press and hold to continue decreasing speed.

Cancel

Press the  button, or press the brake pedal, to cancel Cruise Control without erasing the set speed from memory.

The set speed is erased when Cruise Control or the vehicle ignition is turned off.

ADAPTIVE CRUISE CONTROL

The system enhances regular Cruise Control to automatically maintain a driver-selected following gap — the time between your vehicle and a vehicle detected directly ahead — by accelerating or braking automatically while you continue to steer.

- ▶ Press the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near. This is also the Forward Collision Alert setting.
- ▶ Press and hold the  **Cancel** button to switch between regular  regular Cruise Control and  Adaptive Cruise Control.

See Driving and Operating in your Owner's Manual.



DRIVER MODE CONTROL/AWD[♦]

The Driver Mode Control system automatically adjusts various vehicle control systems based on driving preferences, weather and road conditions. Controls are on the left side of the instrument panel.

- ▶ Press the **MODE** button (A) to activate each available drive mode.
- ▶ Press the **AWD** button[♦] (B) to select the All-Wheel-Drive mode.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS


Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.

Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.

- To turn some of the following systems on/off or to change some settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.

FORWARD COLLISION ALERT – The  Vehicle Ahead Indicator is green on the instrument cluster when a vehicle that you're following is detected, and it is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and rapid beeps sound (if selected).

- Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.

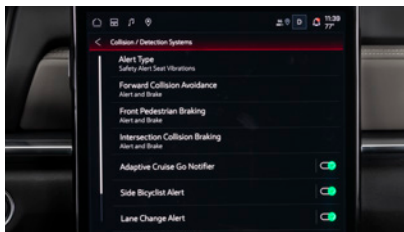

FOLLOWING DISTANCE INDICATOR – The following distance to the vehicle ahead is indicated in seconds on the Driver Information Center. If no vehicle is detected ahead, dashes are displayed.

AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of front-end collisions with a detected vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FRONT PEDESTRIAN BRAKING – During daytime driving below 50 mph, the system can detect pedestrians directly ahead and displays an amber  indicator on the instrument cluster. When approaching a detected pedestrian too quickly, a red alert flashes on the windshield and rapid beeps sound. The system may also automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

LANE KEEP ASSIST WITH LANE DEPARTURE WARNING – The system may help you avoid collisions due to unintentional lane departures. The  **Lane Keep Assist** indicator is green if the system is available to assist. If the vehicle approaches a detected lane marking, the system may assist by gently turning the steering wheel to help prevent lane departure and displays an amber . If active driver steering is not detected, the amber  may flash and beeps may sound on the side of the departure direction as the lane marking is crossed. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle. Alerts do not occur when using the turn signal in the lane departure direction or intentional lane departure is detected.

- To turn on or off, press the  **Lane Keep Assist** button on the infotainment screen.

DRIVER ASSISTANCE SYSTEMS

SAFETY ALERT SEAT – The driver's seat pulses — left, right or both sides — to alert the driver of the direction of potential hazards. Audible alerts or seat-pulsing alerts may be selected.

BLIND ZONE STEERING ASSIST – The system can help you avoid a potential collision with a detected vehicle in an adjacent lane. If a vehicle is detected in the adjacent lane that you are entering, the system provides a brief, firm steering wheel turn to alert you to take action and the Safety Alert Seat may pulse or beeps may sound (if selected). The green / \ Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror. The system does not continuously steer the vehicle; the driver needs to steer and be in complete control of the vehicle.

INTERSECTION AUTOMATIC EMERGENCY BRAKING – The system can help you avoid or reduce the severity of an intersection collision with a detected cross-traffic vehicle. It provides alerts and may automatically provide hard emergency braking or enhance the driver's hard braking.

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low visibility performance are limited.

REAR PARK ASSIST WITH BRAKING – During low-speed parking maneuvers, the system provides "distance to closest object" information on the instrument cluster and a beep sounds (if selected). When an object is very close, 5 beeps sound (if selected). The system may apply hard emergency braking, if you have not already done so, to help reduce the severity or help avoid collisions at very low speeds.

REAR CROSS-TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic approaching in either direction and provides alerts and hard emergency braking to help reduce the severity or help avoid collisions at very low speeds.

HD SURROUND VISION[◆] – The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. It works at low speeds and can help when parking.

- ▶ Touch one of the Camera View buttons on the screen to change the view.
- ▶ With the vehicle in gear, touch the Guidance Lines button on the screen to turn the guidelines on or off.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR[◆]

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull/push the lever at the bottom of the mirror to turn the video display on/off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.




See Keys, Doors and Windows in your Owner's Manual.

TRACTION CONTROL & STABILITRAK SYSTEMS

The traction control system limits wheel-spin and the StabiliTrak[®] electronic stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- To turn traction control or electronic stability control (ESC) on or off, go to Controls > More Controls > Drive & Park on the infotainment screen.

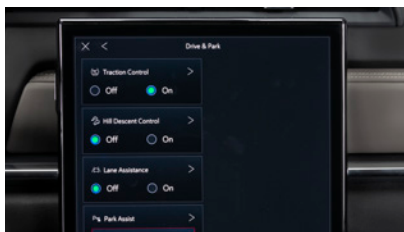

See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated (excluding the spare tire). Fill the tires to the recommended pressures listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed on the infotainment screen.

The Tire Fill Alert provides visual and audible alerts to help when inflating a tire to the recommended cold tire pressure (excluding the spare tire). The horn sounds and the turn signals change from flashing to solid when the recommended pressure is reached.

Note: Refer to your Owner's Manual for additional information about routine tire maintenance.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-888-881-3302

TTY Users: 1-888-889-2438

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The GMC Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs..

ONSTAR® ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827) or refer to your Owner's Manual.

MYGMC MOBILE APP

Download the myGMC app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from the App Store or Google Play Store.

MY GMC ACCOUNT

Get to know more about your vehicle and review your plans, services and rewards with your GMC account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Scan the QR code or go to gmc.com/owners to create an account today.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



86524308

We recommend always using
ACDelco or GM Genuine Parts.



86524308 A