



2025
QX55

QUICK REFERENCE GUIDE

To view detailed instructional videos, go to
www.infinitiquickguide.com/2025/qx55
or snap this QR code with an appropriate QR
code reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

• VEHICLE OWNER'S MANUAL

• INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your Infiniti retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

• INFINITI CONNECTION TO ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)

As part of the Infiniti Total Ownership Experience®, Connection to Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

• INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200

Infiniti Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.

• INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-866-456-4124

For client support with your Infiniti Financial Services loan or lease.

• INFINITI FINANCIAL SERVICES www.infinitifinance.com

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

• OWNER PORTAL 1-855-444-7244

www.owners.infinitiUSA.com/iowners

Your Infiniti Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

• INFINITI INTOUCH® 1-855-444-7244 www.infinitiusa.com/intouch

This suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.

• SIRIUSXM® RADIO 1-877-447-0011

For support with your SiriusXM® subscription.

• INFINITIUSA.COM www.infinitiUSA.com/bluetooth

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

• INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(Use the Quick Response (QR) code or URL on this page or on the back cover).

• GENUINE INFINITI ACCESSORIES www.infiniti-techinfo.com

Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.

Table of Contents

Cockpit Overview.....	1	Clock Set/Adjustment	17
Instrument Panel.....	3	Console Box.....	18
Meters and Gauges	5	USB Connection Port Interface.....	18
Remote Engine Start.....	7	Apple CarPlay®.....	19
Electronic Shift Lever.....	8	Android Auto™.....	20
Electronic Parking Brake.....	9	Navigation System (if so equipped).....	21
Memory Seat (if so equipped).....	9	INFINITI InTouch® Services.....	22
Outside Mirror Control Switch.....	10	Voice Recognition.....	23
HomeLink® Garage Door Opener.....	11	Wireless Charging.....	23
Heater and Air Conditioner (automatic).....	12	ProPILOT Assist.....	24
Wiper and Washer Switch	13	INFINITI Drive Mode Selector.....	26
High Beam Assist.....	14	Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI) ..	26
Opening and Closing the Liftgate	15	Lane Departure Warning (LDW) and Lane Departure	
Motion-Activated Liftgate (if so equipped).....	16	Prevention (LDP).....	27
Connecting Your Cellular Phone or Device via Bluetooth®.....	16	Forward Emergency Braking (FEB) with	
Bluetooth® Streaming Audio.....	17	Pedestrian Detection	27
		Head Up Display (HUD) (if so equipped).....	28

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch® Owner's Manual at www.InfinityUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the “**Safety – Seats, seat belts and supplemental restraint system (section 1)**”, the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and the “**Starting and driving (section 5)**” of your Owner's Manual.

Cockpit Overview



Cockpit Overview

- 1 Turn signal switch
- 2 Bluetooth®/Center display multi-function control switches
- 3 Wiper and washer switch
- 4 ProPILOT Assist/Intelligent Cruise Control (ICC) switches
- 5 Vehicle information display switches

Instrument Panel



1

3

2

2

8

4

7

5

6

3

Instrument Panel

- ❶ Upper display/Navigation System (if so equipped)
- ❷ Automatic heater and air conditioner controls
 - Heated seat
 - Climate controlled seat (if so equipped)
- ❸ Lower display
- ❹ Audio control panel
- ❺ Electronic Shift lever
- ❻ Push-button ignition switch
- ❼ Hood latch release
- ❽ Lower switch bank
 - Instrument brightness control
 - Front and rear sonar switch (if so equipped)
 - Steering assist switch
 - Power liftgate switch
 - Headlight control switch
 - Fog light switch
 - Head Up Display (HUD) switch (if so equipped)

Meters and Gauges



Meters and Gauges

- 
- ❶ Engine coolant temperature gauge
 - ❷ Odometer/Trip A/Trip B
 - ❸ Shift lever indicator
 - ❹ Vehicle information display
 - ❺ Speedometer
 - ❻ Fuel gauge

Remote Engine Start

The remote engine start system must be enabled in the vehicle settings within the lower display. To start your vehicle remotely:

1. Press the lock button ① to lock the vehicle.
2. Press and hold the remote engine start button ② within 5 seconds of pressing the lock button ① and the engine will start.

To start driving, depress the brake pedal and push the ignition switch **START/STOP** button to the ON position.

State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Electronic Shift Lever

TO PUT THE VEHICLE IN N (NEUTRAL):

The ignition switch must be in the ON position and the brake must be depressed.

From P (Park) to N (Neutral) and D (Drive) to N (Neutral):

Without pressing the shift lever button, push the shift lever forward from the home position and hold for 0.5 seconds.

From R (Reverse) to N (Neutral):

Without pressing the shift lever button, pull the shift lever backward from the home position (1 notch) and hold for 0.5 seconds.

After operating the shift lever, the shift lever returns to the home position by releasing your hand from the shift lever.

While in the **N (Neutral)** position, the **P (Park)** position is automatically engaged if the ignition is turned off or the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

TO PUT THE VEHICLE IN R (REVERSE):

Press the button ①, and make sure the brake pedal is depressed, then push the shift lever forward past the point of resistance and release the shift lever.

TO PUT THE VEHICLE IN D (DRIVE):

Make sure the brake pedal is depressed, then pull the shift lever back past the point of resistance and release the shift lever. Use this position for all normal forward driving.

TO PUT THE VEHICLE IN P (PARK):

Make sure the vehicle is completely stopped and press the **P (Park)** button ②. If you switch the ignition off with the transmission in **D (Drive)** or **R (Reverse)**, the transmission automatically shifts into the **P (Park)** position. The **P (Park)** position is automatically engaged if the ignition is turned off or the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Electronic Parking Brake



To apply the parking brake, pull the electric parking brake switch (1) **up**, located below the instrument panel, regardless of the ignition switch position.

 
To release the parking brake, depress the brake pedal and push the electric parking brake switch (1) **down** while the ignition is on. The parking brake will be automatically released when you depress the accelerator pedal as long as certain conditions are met, such as having your seatbelt fastened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Memory Seat (if so equipped)

Two positions for the driver's seat, steering column and outside mirrors can be stored in the memory seat system. To set a memory position:

1. Place the ignition switch in the ON position. (The vehicle should be stopped while setting the memory.)
2. Adjust the driver's seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
3. Push the **SET** switch (1), and within 5 seconds, push the memory switch (1 or 2) (2). The indicator light for the memory switch you select will illuminate for approximately 5 seconds and a chime will sound when the memory is stored.

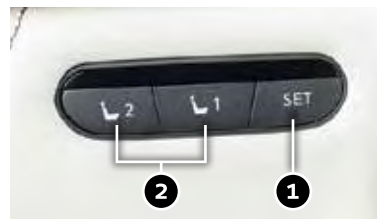

The driver's seat and steering column will automatically move when the driver's side door is opened, to allow the driver to get in and out of the driver's seat more easily. "Lift Steering upon Exit" and "Slide Driver Seat Back on Exit" can be adjusted in the lower touch-screen display under "Comfort & Convenience."

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Outside Mirror Control Switch

- To select the right or left side mirror, slide the control switch ① right or left.
- To adjust the mirror angle, move the directional control switch ② up, down, right or left.
- To prevent accidentally moving the mirror, turn and set the control switch ① to the center (neutral) position.

POWER FOLDING OUTSIDE MIRRORS

- To fold the mirrors, push the  switch ③.
- To open the mirrors, push the  switch ④.
- If mirrors are manually operated or bumped, the mirror can become loose at the pivot point. To correct electronic mirror operation, cycle the mirrors by pushing  switch ③ until completely closed, then push  switch ④ until the mirrors are in the open position.

AUTOMATIC FOLDING OUTSIDE MIRRORS

Push the  switch ④ to enable this feature.

- The outside mirrors fold automatically when the vehicle is locked with the Intelligent Key or by using the request switch.
- The outside mirrors unfold automatically when the vehicle is unlocked with the Intelligent Key, by using the request switch or when the ignition switch is placed in the ON position.

Push the  switch ③ to disable this feature.

REVERSE TILT-DOWN FEATURE

The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle when the mirror control switch is in either the L or R position. The mirrors automatically return to their original position when you shift out of **R (Reverse)**.

The outside mirror surfaces will return to their original position when one of the following conditions has occurred:

- The shift lever is moved to any position other than **R (Reverse)**.
- The outside mirror control switch is set to the neutral or center position.
- The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



HomeLink® Garage Door Opener

To complete HomeLink® programming, you can download the HomeLink app or read the instructions below.

Before you start programming HomeLink, park outside and within range of your garage. Then, clear the area around your garage door, place the ignition switch in the ON or Auto ACC position (without starting the engine) and locate the remote control transmitter, ensuring a fresh battery is installed. Please note, a ladder and another person may be needed.

To program HomeLink:

1. Position the handheld transceiver within 3 in (8 cm) from the HomeLink surface.
2. Press and hold the desired HomeLink ① and garage door opener button. Release both when the indicator ② flashes rapidly.

Before proceeding to the next steps, be sure your garage door is not moving.

- Press the HomeLink button ① for 2 seconds up to 3 times. If the garage door responds, training is complete.

 
If the garage door doesn't respond:

- Press the "learn" or "set" button ③ on the garage opener until an indicator illuminates. Within 30 seconds, press the HomeLink button ① in your vehicle for 2 seconds up to 3 times.

If the garage door doesn't respond, please see your owner's manual, go to www.HomeLink.com/infiniti or call **1-800-355-3515**.

To view a detailed instructional video, go to www.infinitiquickguide.com/2025/qx55 or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door."

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

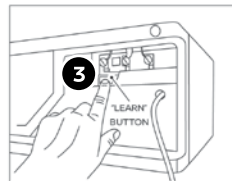

Heater and Air Conditioner (automatic)

The climate controls can be adjusted using the buttons on either side of the lower display and through the "Climate" screen ① on the lower display.

- To access the "Climate" screen ①, press the **CLIMATE** button ② below the lower display.

HEATED STEERING WHEEL (if so equipped)

To turn the heated steering wheel on or off, touch the "Steering Heater" key ③ on the lower display.

REAR CONTROLS (if so equipped)

- Adjust the temperature up or down using the temperature buttons ④.

SYNC MODE SETTING

The driver's, passenger's and rear (if so equipped) temperature set points can be synchronized touching the "SYNC" key ⑤ on the lower display. If the feature is engaged, the rear temperature settings will synchronize with the driver's and passenger's side settings. The temperature can then be controlled by using the temperature control buttons ⑥.

CLIMATE CONTROLLED SEATS (if so equipped)

The climate-controlled seat warms up or cools down the front seat by a built-in heater or ventilates air into the seat. Press the heated seat switch ⑦ to heat the seat or seat cooling switch ⑧ to cool the seat.

DEFROSTING THE OUTSIDE MIRRORS AND REAR WINDOWS

- Push the rear window defroster ⑨ window glass and outside mirrors switch. Push the switch again to turn the defroster off. The rear window defroster automatically turns off after approximately 15 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Wiper and Washer Switch



Move the lever ① up or down to one of the following positions to operate the windshield wipers:

MIST One sweep operation

OFF Wipers are OFF

AUTO Speed-sensing and rain-sensing automatic wipe (if so equipped)

LO Continuous wipe, slow

HI Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the control ring ②. Pull the lever ① toward you to operate the windshield washer.

REAR WIPER AND WASHER

Turn the rear wiper switch ③ to one of the following positions to operate the rear wiper:

OFF Wiper is OFF

— Intermittent wipe

— Continuous wipe

Push the lever ① forward to operate the rear windshield washer.

To turn the rain sensor function (if so equipped) on and off:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Comfort & Convenience" key ④ on the display.
3. Touch the "Rain Sensor" key (if so equipped) ⑤ to toggle the feature ON and OFF.

When the rain-sensing function is disabled, the **AUTO** position on the wiper stalk will work in conventional intermittent mode.

WIPER BLADE REPLACEMENT PROCEDURE

The windshield wipers must be in the service position in order to replace the wiper blades.

To move the wiper blades to the service position:

- When the ignition switch is in the ON position or within 60 seconds of placing the ignition switch in the OFF position, lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically, and the wiper blades can now be replaced.

To move the wiper blades back to the original position:

- Place the wiper arm in the down position and lift the wiper and washer lever up for more than 1 second to operate at any wiper speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



High Beam Assist

The High Beam Assist function automatically switches the headlights from the high beam to the low beam setting when an oncoming or leading vehicle appears in front of your vehicle.

The system can be activated at speeds above approximately 25 mph (40 km/h).

 
1. Turn the light switch to AUTO ①.
2. Push the lever beyond the pressure point ② in this direction to activate the High Beam Assist.
3. When activated, the High Beam Assist Indicator light illuminates on the instrument panel.

If the vehicle drops below approximately 16 mph (25 km/h), the headlight switches to low beam.


4. Move the lever back to its normal position ③ to deactivate the High Beam Assist.
5. The indicator light turns off.

The ambient light sensor used by the High Beam Assist function is located in front of the inside rearview mirror. To ensure proper function of the system, keep the windshield clean and do not attach stickers or other such materials near the ambient light sensor.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

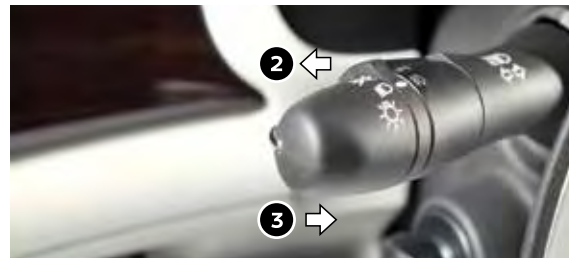

Opening and Closing the Liftgate

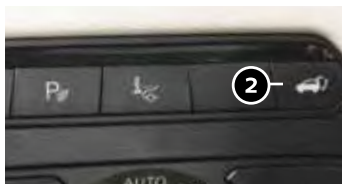 

The power liftgate operation can be turned on or off by the power liftgate main switch ① inside the glove box.

To open the liftgate, perform one of the following procedures:

- Push and hold the power liftgate switch ② on the instrument panel.
- Push the liftgate opener switch ③; the liftgate must be unlocked, or you must have the Intelligent Key® with you (that is, in your pocket or purse).
- Press the  button ④ on the INFINITI Intelligent Key for longer than 1 second.

 
To close the liftgate, perform one of the following procedures:

- Push the power liftgate switch ② on the instrument panel.
- Press the  button ④ on the INFINITI Intelligent Key for longer than 1 second.
- Push the liftgate close switch ⑤ on the liftgate. You must have the Intelligent Key® with you (that is, in your pocket or purse).
- Push the liftgate lock switch ⑥ on the liftgate. The liftgate will begin to close and all doors will lock. If the switch is pushed while the liftgate is closing, the door will stop. Push the switch again to continue closing the liftgate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Motion-Activated Liftgate (if so equipped)

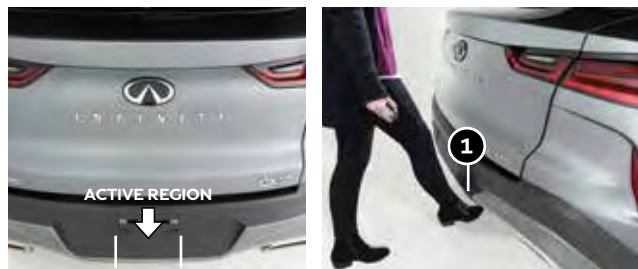


To operate the liftgate hands-free:

- Ensure you have the Intelligent Key within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper ①. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 Connecting Your Cellular Phone or Device via Bluetooth®*

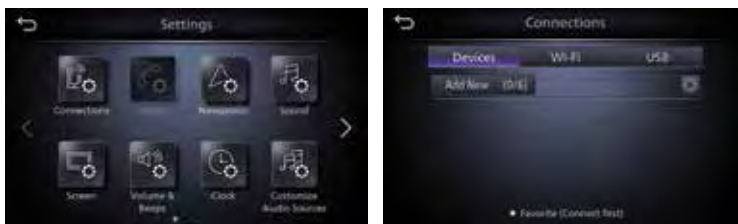

Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Press the **MENU** button below the lower display.
2. Touch "Connections".
3. Touch "Add New (X/6)".
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Bluetooth® Streaming Audio*



If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

 
After connecting your Bluetooth® device, press the **MEDIA** button ① on the control panel to switch to Bluetooth® Streaming Audio.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment

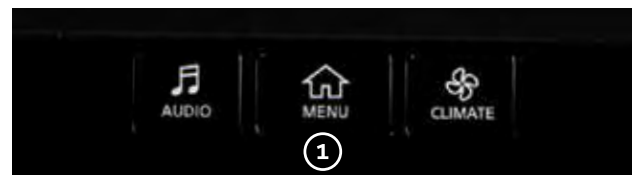

To adjust the time and the appearance of the clock on the display:

1. Press the **MENU** button ① below the lower display. Then select the "Settings" key on the lower display.
2. Locate and select the "Clock" key to adjust "On-Screen Clock", "Daylight Savings Time", "Clock Format (24h)" and "Time Zone".

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Console Box



To open the console box, press down the latch ①. The latch will release.

To close, push the lid down until the lock latches.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

USB Connection Port Interface



Your vehicle is equipped with two USB connection ports ① (USB Type-C/USB Type-A), located under the control panel, to which you can connect compatible devices (cellular phones, iPod®, other compatible audio devices, USB memory sticks, etc.).

After connecting your device through one of the USB connection ports, press the **MEDIA** button on the control panel to select audio playback from the device connected through the USB connection ports.

A second device can be connected for charging. In order to switch to the second device for audio playback, both devices will need to be removed and the second device reconnected first.

There are also USB charging ports located in the second row on the back of the center console. These ports will charge compatible devices.

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Apple CarPlay®

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display. The display may be different based on iOS software version.

Connect your compatible iPhone via bluetooth for Wireless Apply CarPlay or by the USB cable connected to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

There are two ways to start a Siri session:

1. Press and hold the  button on the steering wheel.
2. Touch and hold the  key ① or  key ② on the lower left corner of the Apple CarPlay screen.

 
 
Press the  button on the steering wheel or touch the  key ① or  key ② on the lower left corner of the Apple CarPlay screen to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

When Siri finishes responding the session will automatically end and return to the home screen.

Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

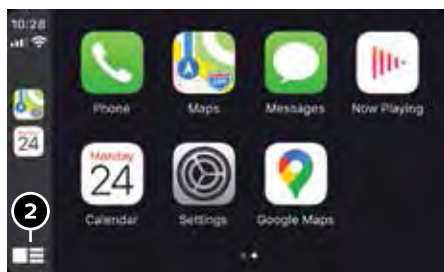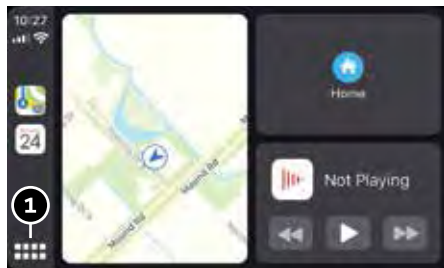

Android Auto™

Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO

To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the upper display.
- Touch "Yes" then "OK" to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Touch the  key ① on the Launch Bar.
3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).

To return to the Android Auto home screen after operation, touch the  key ② on the Launch Bar.

To exit the Android Auto screen, touch the  key ② on the Launch Bar and then touch the exit key.

To return to the Android Auto home screen from the main menu:

1. Press the **MENU** button and touch the  key ③, or
2. Touch the "Information" key ④, touch the "Apps" key, and then select the "Android Auto" key.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Navigation System (if so equipped)

Use the INFINITI controller ①, touch-screen and **OK** button ② to navigate through the upper display screens.

- Press the  button ③ to return to the previous screen.
- Press the **MAP/VOICE** button ④ to display the map.

SETTING A ROUTE

To set a route, first ensure that the correct region is selected on the upper display.

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Destination" key ⑥ on the lower display.
3. Select the preferred destination setting method.
4. Enter the address number, street name, and city as prompted by the screen.

SETTING A ROUTE WHILE DRIVING USING VOICE RECOGNITION

1. Press the  button on the steering wheel. Wait for the prompt and say "Navigation".
2. Then, say a command from the list, such as "Street Address", and follow the prompts until your route is calculated.

CANCELING A ROUTE

1. Press the **MENU** button ⑤ below the lower display.
2. Touch the "Cancel Route" key ⑦ on the lower display.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.



INFINITI InTouch® Services

Your vehicle may include INFINITI InTouch® Services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth and more. For complete information about your INFINITI InTouch® Services, please visit www.infinitiusa.com/intouch.html or call **1-855-444-7244**. For frequently asked questions, please visit www.infinitiusa.com/intouch/faq.

To access INFINITI InTouch Services:

 
1. Press the **MENU** button ① under the lower display.
2. Select the "InTouch Services" key ② on the lower display.

In case of an emergency, press and release the **SOS** button lid ③, located above the rearview mirror, and press the in-vehicle telematics **SOS** button ④.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account. (<https://owners.infinitiusa.com/iowners/>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch Services.
3. Download the INFINITI InTouch Services companion app from the App store and log in using your INFINITI Owner Portal ID and password.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

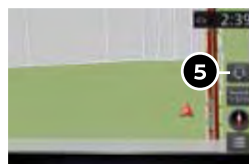

Available services may include:

- Automatic Collision Notification
- Emergency Calling
- Stolen Vehicle Locator
- Alarm Notification
- Maintenance Alert
- Vehicle Health Report
- Scheduled Maintenance Notification
- Remote Door Lock/Unlock
- Remote Horn & Lights
- Remote Engine Start/Stop
- Maximum Speed Alert
- Valet Alert
- Curfew Alert
- Destination Send-to-Vehicle
- Connected Search

The following services can also be accessed by touching the headset icon ⑤:

- INFINITI Personal Assistant
- Connection to Roadside Assistance

Voice Recognition



SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button (1) on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button (1) on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button (1) on the steering wheel.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Wireless Charging

The wireless charger is located on the lower part of the instrument panel. Ensure the smartphone is positioned horizontally and fully seated on the center of the charging pad over the "Qi" logo (1). Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position.

- The  indicator (2) will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange for 8 seconds and then turn off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



 
ProPILOT Assist

The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction.

PROPILOT ASSIST DISPLAY

- ❶ Set vehicle speed indicator: Displays the speed set by the driver.
- ❷ Steering Assist indicator: Shows whether steering assist is active or inactive (green-active, grey-standby, orange-malfunction).
- ❸ Lane marker indicator: Appears green on the display when lane lines are detected and steering assist is active.
- ❹ ProPILOT Assist status indicator: Displays whether ProPILOT Assist is engaged or not.
- ❺ Vehicle ahead detection indicator: Appears on the display when a vehicle is detected ahead.
- ❻ Set distance indicator: Displays the gap amount between the vehicle and the preceding vehicle as set by driver (1 bar - shortest gap, 3 bars - longest gap).

To set ProPILOT Assist, push the ProPILOT Assist switch ❷ on the steering wheel. The ProPILOT Assist status ❹ will appear on the vehicle information display. When the desired cruising speed is reached push the **SET-** switch ❸ and release it.

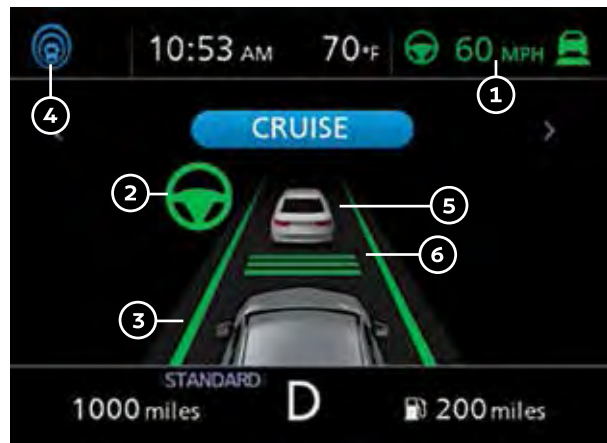

PROPILOT INTELLIGENT CRUISE CONTROL

To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch (9) or **SET-** switch (8) and release it.

When a vehicle is detected in the lane ahead, the Intelligent Cruise Control system controls the vehicle speed based on the distance set by the driver.

To cancel a set speed, push the **CANCEL** switch (10) on the steering wheel or tap the brake pedal.

To turn the system off, push the ProPILOT Assist switch (7).

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL

To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch (7) for longer than approximately 1.5 seconds.

STOP-HOLD FEATURE

When the vehicle ahead decelerates to stop, your vehicle decelerates to a standstill if the ProPILOT Assist is activated. Once the vehicle stops, the system will keep the vehicle stopped.

If the vehicle is stopped for less than 3 seconds, and the vehicle ahead begins to move, your vehicle will start moving again automatically.

If the vehicle is stopped for more than 3 seconds, and the vehicle ahead begins to accelerate, push and release the **RES+** switch (9) or the accelerator pedal. This will resume the last set cruising speed.

ProPILOT Assist does not provide approach warnings, automatic braking, or steering assist in the conventional (fixed speed) cruise control mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



INFINITI Drive Mode Selector

Four driving modes can be selected by using the Drive Mode Selector switch ①:

- **Standard Mode:** Recommended for normal driving.
- **Sport Mode:** Adjusts the engine and transmission to enhance performance.
- **Personal Mode:** Used for adjusting the steering mode and driving modes.
- **Eco Mode:** Adjusts the engine and transmission to enhance fuel economy.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Blind Spot Warning (BSW) and Blind Spot Intervention® (BSI)

The Blind Spot Warning (BSW) can help alert the driver of other vehicles in the blind spot area when changing lanes.

The Blind Spot Intervention (BSI) system helps alert the driver of other vehicles in adjacent lanes when changing lanes and helps assist the driver to return the vehicle to the center of the traveling lane.

TURNING BLIND SPOT WARNING AND BLIND SPOT INTERVENTION ON OR OFF

- BSW and BSI can be turned on or off through the "Driver Assistance" section of the lower display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Lane Departure Warning (LDW) and Lane Departure Prevention (LDP)

Lane Departure Warning (LDW) and Lane Departure Prevention (LDP) can help warn you if the vehicle is beginning to leave the traveling lane.

- LDW and LDP are activated at speeds of approximately 37 mph (60 km/h) and above and when the lane markings are clear.
- If a front wheel passes over a lane marking, LDW and LDP will warn you through a visual alert ① and an intermittent vibration in the steering wheel.
- LDP can help assist the driver to return the vehicle to the center of the traveling lane by applying the brakes to the left or right wheels individually (for a short period of time).



TURNING LANE DEPARTURE WARNING ON OR OFF

- LDW and LDP can be turned on or off through the "Driver Assistance" section of the lower display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Forward Emergency Braking (FEB) with Pedestrian Detection

- The Forward Emergency Braking (FEB) system can assist the driver when there is a risk of a forward collision with the vehicle ahead in the traveling lane or with a pedestrian.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light ① will illuminate. If the driver applies the brakes after the warning and the FEB detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB will issue a second flashing visual warning ②, an audible warning and also apply partial braking.



TURNING FORWARD EMERGENCY BRAKING WITH PEDESTRIAN DETECTION ON OR OFF

- The FEB with Pedestrian Detection can be turned on or off through the "Driver Assistance" section of the lower display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Head Up Display (HUD) (if so equipped)



The Head Up Display (HUD) can show Vehicle Speed, Driving Aids, Navigation and Traffic Sign Recognition on the center of the windshield. Push the HUD switch (1) on the instrument panel to turn the system on and off.

To adjust the HUD settings, when the system is on:

1. Press the **MENU** button below the lower display.
2. Touch the "Settings" key and then the "Head Up Display" key (2).
3. Adjust the positioning of the HUD on the windshield by touching the arrows (3), and the brightness by touching the brightness keys (4).

To change what items are shown in the HUD, touch the "Display items" key (5).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Memo

Memo



Printing March 2025
QR25EO FJ55U1
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **<https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>**. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).

The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.



To view detailed instructional videos, go to **www.infinitiquickguide.com/2025/qx55** or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download in the smartphone app.



I N F I N I T I