



 
QUICK REFERENCE GUIDE

2025 **ALTIMA**



COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light 
- 2** Vehicle Information Display
- 3** Headlight and Turn Signal Switch 
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio Control/Vehicle Information Display/Navigation
- 6** Cruise Control/Bluetooth®/ProPilot Assist Switches (if so equipped)
- 7** Steering Assist Switch  (if so equipped)
- 8** Trunk Release Switch 
- 9** Instrument Brightness Control
- 10** Trip Computer Reset Switch
- 11** Tilt/Telescopic Steering Column

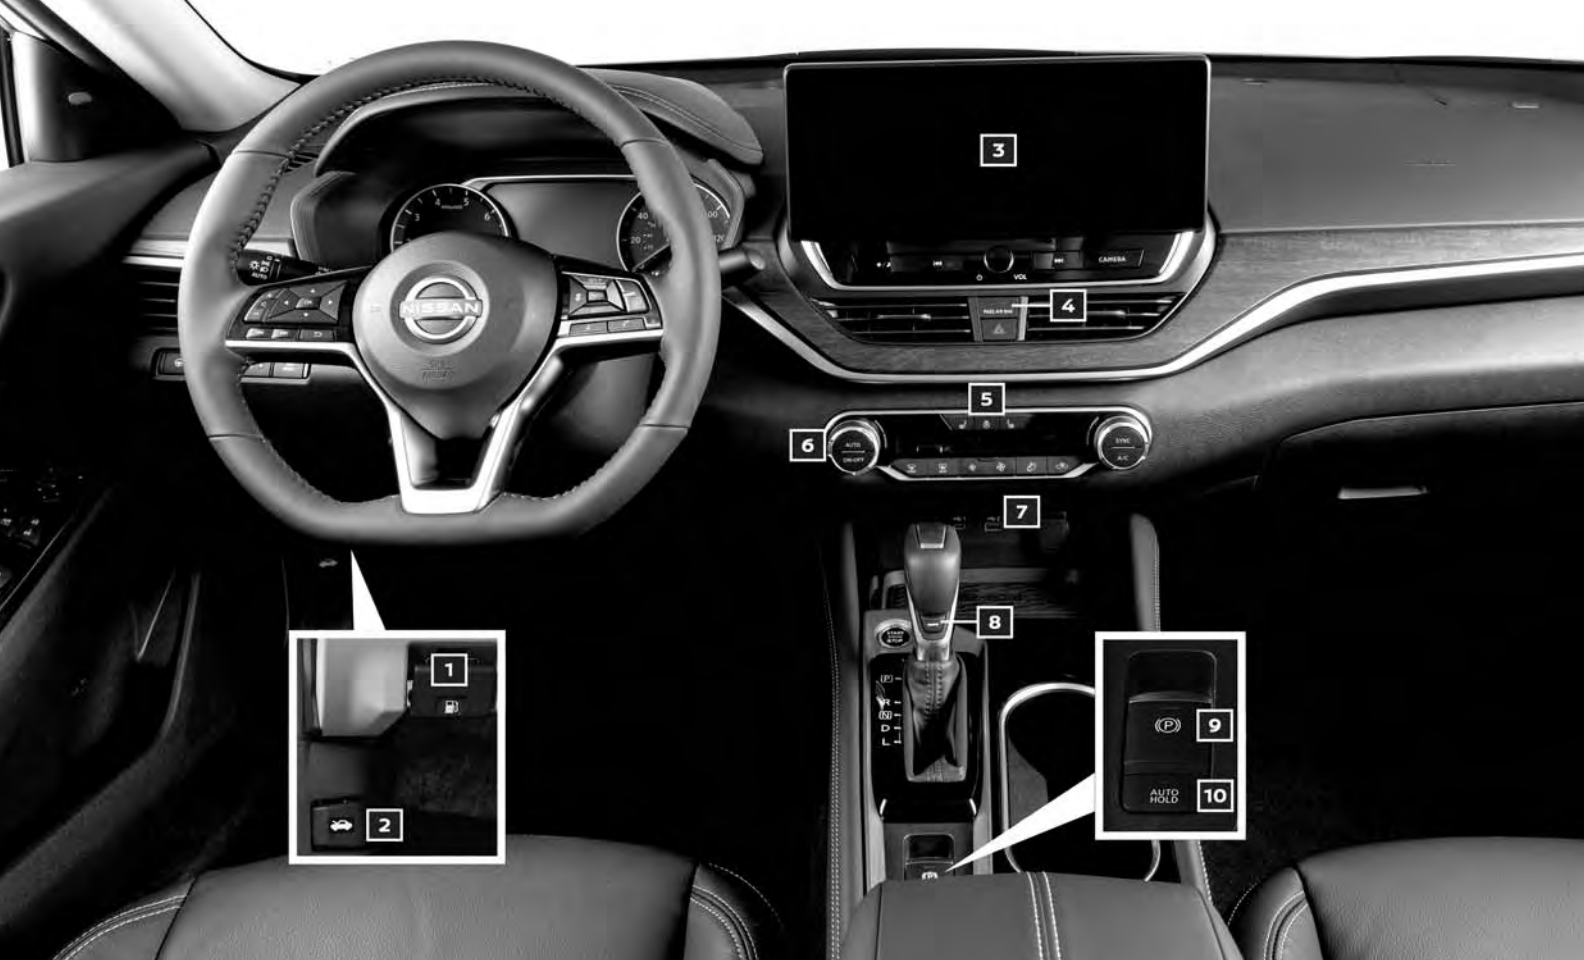

INSTRUMENT PANEL

- 1** Fuel-filler Door Release 
- 2** Hood Release 
- 3** Control Panel Display Screen
- 4** Front Passenger Air Bag Status Light
- 5** Heated Seats   /Heated Steering Wheel Switch  (if so equipped)
- 6** Heater and Air Conditioner (automatic) (if so equipped)
- 7** USB Connection Port Interface
- 8** Ds Button
- 9** Electronic Parking Brake Switch  (if so equipped)
- 10** Automatic Brake Hold Switch (if so equipped)

TABLE OF CONTENTS

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM	2
SEAT ADJUSTMENTS	5
STARTING/STOPPING THE ENGINE	6
TILT AND TELESCOPIC STEERING WHEEL	6
OUTSIDE MIRROR CONTROL SWITCH	7
EMERGENCY CALL (SOS) BUTTON (if so equipped)	7
HEATER AND AIR CONDITIONER (automatic) (if so equipped)	8
HEATED STEERING WHEEL AND SEATS (if so equipped)	9
HEADLIGHT CONTROL SWITCH	10
WIPER AND WASHER SWITCH	12
SUN VISORS	12
VEHICLE INFORMATION DISPLAY	13
TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT	15

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES	16
CLOCK SET/ADJUSTMENT	18
USB CONNECTION PORT INTERFACE	18
BLUETOOTH® HANDS-FREE PHONE SYSTEM*	19
FM/AM/SiriusXM® Radio	21
WIRELESS APPLE CARPLAY® (if so equipped)	22
WIRELESS ANDROID AUTO™ (if so equipped)	23
WIRELESS CHARGING (if so equipped)	24
NAVIGATION SYSTEM (if so equipped)	25
NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)	26
SiriusXM® TRAVEL LINK and SiriusXM® TRAFFIC (if so equipped)	28

DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)	29
FORWARD DRIVING AID SENSORS (if so equipped)	30
PROPILOT ASSIST (if so equipped)	31
CRUISE CONTROL (if so equipped)	35
AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM	36
TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)	37
REAR AUTOMATIC BRAKING (RAB)	38



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Safety—Seats, seat belts and supplemental restraint system (section 1)**", the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" and the "**Starting and driving (section 5)**" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
 - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10 minute period.
 - After two Remote Engine Starts, the ignition switch must be cycled before Remote Engine Start can be used again.
- To start driving, depress the brake pedal and push the ignition switch.



GETTING STARTED

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the **i** button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 60 seconds; all other doors will unlock, or
 - Press the **i** button **4** on the key fob to unlock the driver's side door. Press the **i** button **4** again, all other door will unlock.



TRUNK LID RELEASE

- To open the trunk, press and hold the trunk lid release  button **5** for more than 0.5 seconds.
- The trunk lid release button will not operate when the ignition switch is in the ON position.

 
PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or push the door request switch if the key is in range.

GETTING STARTED

INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged and the indicator **8** appears in the vehicle information display, or if environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key near, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

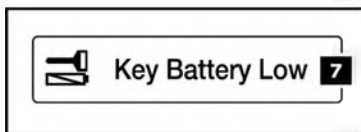

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

GETTING STARTED

SEAT ADJUSTMENTS

FRONT MANUAL SEAT ADJUSTMENTS (if so equipped)

- To slide the front seat forward or backward, pull up on and hold the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull the lever up **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.



FRONT POWER SEAT ADJUSTMENTS (if so equipped)

- To slide the seat forward or backward, push the switch **3** forward or backward.
- To adjust the angle of the seatback, push the switch **4** forward or backward.



SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **3** up or down.

LUMBAR SUPPORT (if so equipped for driver's seat)

- To adjust the lumbar area, push the front or back end of the switch **5**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

GETTING STARTED

STARTING/STOPPING THE ENGINE

TURNING THE ENGINE ON

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- The shift lever must be in the **P (Park)** or **N (Neutral)** position. Depress the brake pedal.
- Push the ignition switch to the ON position.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position and push the ignition switch to the OFF position.

AUTO ACCESSORY

- With the vehicle in the **P (Park)** position, the Intelligent Key with you (that is, in your pocket or purse) and the ignition switch placed from ON to OFF, the radio can still be used for a period of time or until the driver's door is opened.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.

Lock the steering wheel in place by pushing the lock lever up firmly.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED

OUTSIDE MIRROR CONTROL SWITCH

- The ignition switch must be in the ON position. To select the right or left side mirror, move the control switch **1** right or left.
- To adjust the mirror angle, push the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **1** to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the cover once to expose the **SOS** button **1** on the overhead console and then press the button.
- For additional information, or to enroll your vehicle, refer to **www.NissanUSA.com/connect** or call **855-426-6628**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

GETTING STARTED

HEATER AND AIR CONDITIONER (automatic) (if so equipped)



1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

2 SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial to the left for cooler air or to the right for warmer air.

3 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn on the system. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **6** to their maximum settings.

4 REAR WINDOW DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

5 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

6 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

GETTING STARTED

7 AIR FLOW CONTROL BUTTON

- Press the air flow control button to cycle through the following air flow outlets:



Air flows from center and side vents.



Air flows from center and side vents and foot outlets.



Air flows mainly from the foot outlets.



Air flows from defroster and foot outlets.

8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode , or foot and front defroster mode .

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HEATED STEERING WHEEL AND SEATS (if so equipped)

HEATED STEERING WHEEL (if so equipped)

- Push the  heated steering wheel switch **1**.
- The heated steering wheel automatically turns on and off to maintain a temperature above 68°F (20°C).
- Push the  heated steering wheel switch **1** to turn off the heated steering.
- If the temperature of the steering wheel is above 122°F (50°C), the system will not heat the wheel.



GETTING STARTED

HEATED SEATS (if so equipped)

- With the ignition switch in the ON position, push the  or  heated seat switch **2** to heat the seats.
- Two lights illuminated represent the high setting and one light represents the low setting.
- To turn the heated seats off push the  or  heated seat switch **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition in the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

HEADLIGHT BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the meter. Pull the headlight switch back to the original position to select the low beam. The indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



GETTING STARTED

HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light  in the meter will illuminate while the headlights are turned on.



- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **6** or select the low beam position by placing the lever in the neutral position.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual.

GETTING STARTED

WIPER AND WASHER SWITCH

- The ignition switch must be in the ON position. Move the lever to one of the following positions to operate the windshield wipers:

 
1 Mist  — One sweep operation of the front wipers.

2 Intermittent  — Wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease the wiper speed.

4 Low  — Wipers operate at a continuous low-speed.

5 High  — Wipers operate at a continuous high-speed.

6 Washer  — Pull the lever towards you to activate the washer. The wipers will operate several times.

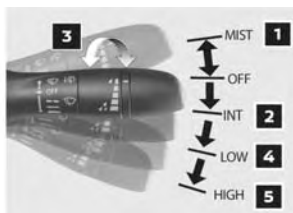

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

SUN VISORS

- Pull down the sun visor **1** to block glare from the front.
- Remove the sun visor from the center mount **2** by lifting it slightly and swing it to the side to block glare from the side window.



SLIDING FUNCTION

- Slide the sun visor out from the mount **3** to further extend the visor location.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Indicators and warnings
- Information/warning messages
- Tire pressure information
- Drive computer information
- Driving Aids (if so equipped)
- ProPILOT Assist (if so equipped)
- NISSAN Intelligent Key® operation information
- Cruise control system information
- Audio information
- Shift position
- Distance to empty
- Odometer/twin trip odometer
- Clock and outside temperature
- Compass and navigation information (if so equipped)

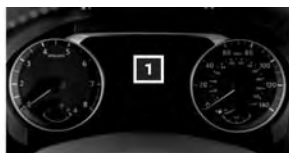

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2**, the **▲** or **▼** buttons **3** and the **↶** button **4** located on the steering wheel.



RESETTING THE DRIVE COMPUTER

1. Press the **▲** and **▼** buttons **3** on the steering wheel until you reach the desired drive computer mode.
2. Press and hold the **OK** button **2** to reset the selected mode.
3. Select one of the following items:
 - "Cancel" — returns to the previous screen without resetting.
 - Drive computer value (varies according to the currently displayed drive computer mode):
 - "Average Speed" — resets the average speed of the selected drive computer.



GETTING STARTED

- “Distance & Time” — resets the distance and time of the selected drive computer.
 - “Fuel Economy” — resets the average economy of the selected drive computer.
 - “All” — resets all linked values for selected drive computer.
- To reset **TRIP A** or **TRIP B**, go to the desired mode by pressing the **TRIP RESET** button **5** and press and hold the **TRIP RESET** button **5** for more than 1 second.

The Settings menu allows you to change the information displayed in the vehicle information display such as:

- | | | |
|---------------------|---|--------------------|
| ■ VDC Settings | ■ Driver Assistance | |
| ■ Clock | ■ Maintenance | ■ Unit/Language |
| ■ TPMS Setting | ■ Factory Reset | ■ Vehicle Settings |
| ■ Customize Display | ■ Key-Linked Settings
(if so equipped) | |

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual.

GETTING STARTED

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **3** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Move the shift lever to the **P (Park)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

 
- **Yes** — Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- **Later** — Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.
- **No** (display may vary) — Skips the software update, the pop-up message is hidden and will be shown again at a later date.

You can trigger the software update manually in the event that “Later” or “No” was unintentionally pressed.

- To manually update the software to the latest version:
 1. Touch the  on the **Launch Bar**.
 2. Touch the  Settings key on the home page.
 3. Touch “System Updates” and then touch “Software Update”.
 4. Touch “Start Software Update” and then “Download”.
- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power cycle.

Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposures to hazardous fumes.

- To connect to your Wi-Fi network:
 1. Touch the  on the **Launch Bar**.
 2. Touch the  Settings key on the home page.
 3. Touch “Connections” and then touch “Wi-Fi”.
 4. Touch “Wi-Fi” to turn it on.
 5. Select your Wi-Fi network and enter the password when prompted. A message will appear under the network name when your vehicle is successfully connected.

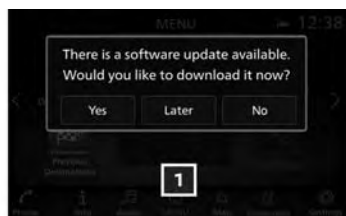

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To manually update your software using Wi-Fi:
 1. Touch the  key on the **Launch Bar**.
 2. Touch the  Settings key on the home page.
 3. Touch "System Updates" and then touch "Software Update".
 4. Touch "Start Software Update" and then "Download".
- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.



- To turn on automatic updates of map software (if so equipped):
 1. Touch the  key on the **Launch Bar**.
 2. Touch the  Settings key on the home page and then touch "System Updates".
 3. Touch "Map Update" and then touch "Map Update Settings".
 4. Touch "Auto" to turn automatic updates on or off.
- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.
- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.
- To manually update the map software via Wi-Fi:
 1. Connect the vehicle to an available Wi-Fi network.
 2. Touch the  key on the **Launch Bar**.
 3. Touch the  Settings key on the home page and then touch "System Updates".
 4. Touch "Map Update" and then touch "Update by Wi-Fi".
 5. Select an area to be updated and touch "Start".



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Touch the  key on the **Launch Bar**.
 2. Touch the  Settings key **1** on the home page.
 3. Touch the "Clock" key **2**.
- Select "Set the clock manually" to manually adjust the time displayed.
- Touch the  key **3** to return to the previous screen.

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" of your NissanConnect® Owner's Manual.



USB CONNECTION PORT INTERFACE

- The USB ports/AUX jack (if so equipped) **1** (USB Type-C **3** /USB Type-A **4**) are located below the climate control system. The vehicle is equipped with both a standard and quick charge port.
- There are also USB charging ports located in the second row on the back of the center console (if so equipped) **2** (USB Type-C **3** / USB Type-A **4**). These ports will charge compatible devices.

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A or USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your **Owner's Manual** for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" and the "**Hands-free phone (section 4)**" of your Nissan Connect Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  or  button on the steering wheel, or  on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL** (volume) control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Touch the  key on the **Launch Bar**.
2. Touch the  key **1** on the home page.
3. Touch the "Connections" key **2**.
4. Touch the "Bluetooth" tab **3** and touch "Add Device".
5. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

 
VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  key on the launch bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Touch the  key on the **Launch Bar**. The "Phonebook" screen **4** will appear on the display.
2. Select one of the options to make a call.

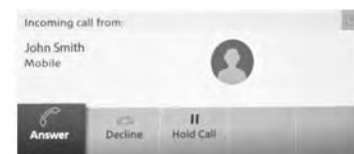

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.

SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

FM/AM/SiriusXM® Radio



Touch the Audio key on the **Launch Bar** to display the current audio source, and then touch the “Source” key to access the source selection screen.

1 PUSH **ON-OFF BUTTON/VOL (volume) CONTROL KNOB**

- Press the  (ON-OFF) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 (SEEK and CAT/TRACK) BUTTONS

- Press the  button or the  button to seek up or down to the next receivable station.
- For satellite radio to switch the first channel of the previous or next category, press the  button or the  button.

3 **AUDIO (SOURCE)**

 
- Touching this button will give access to the AM, FM, SXM, USB1, USB2, BT Audio or AUX (if so equipped) audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in the preset, you must first select a radio band by touching the “AM” key, “FM” key, or “SiriusXM” key, then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual and to the “**Audio system (section 3)**” of your NissanConnect® Owner’s Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

WIRELESS APPLE CARPLAY® (if so equipped)

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- There are two ways to start a Siri® session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available while driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the  **MENU** button on the **Launch Bar**.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **2** on the **Launch Bar**.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.

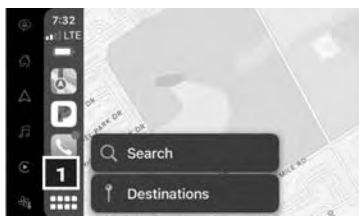

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started (section 2)” and the “Information (section 5)” of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

WIRELESS ANDROID AUTO™ (if so equipped)

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto™.
 - After the cellular phone is connected, the Android Auto™ home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the microphone key **1** on the **Launch Bar**.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto™ screen, touch the  key **2** on the **Launch Bar**.
- To exit the Android Auto™ screen, touch the  key **2** on the **Launch Bar** and then touch the exit key.
- To return to the Android Auto™ home screen from the main menu:
 - Touch the  key **3** on the **Launch Bar**, or
 - Touch the  settings key **4**, touch the “Connections” key, and then touch the “Android Auto” key.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

 
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.

WIRELESS CHARGING (if so equipped)

The wireless charger is located below the climate control system. Ensure the smartphone is positioned horizontally and fully seated on the center of the charging pad over the "Qi" logo **1**. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly. Phone cases may impact charging condition.

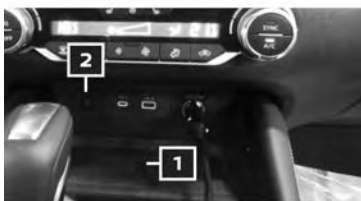

- The  indicator **2** will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange for 8 seconds and then turn off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

NAVIGATION SYSTEM (if so equipped)



- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and key for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle is not in motion. Voice commands may be available for some of the restricted functions. For more information, refer to the "Voice recognition (section 7)" of your NissanConnect® Owner's Manual.

- 1** Touch-screen
- 2** Map Menu — Touch to access different navigation options such as "Save Location", "Points of Interest", "Map Icons" and "Cancel Route".
- 3** Navigation Options Bar — Bar with personally selected options to choose from.
- 4** Navigation key — Press to display the map.
- 5** ⚙ Settings — Touch to display the system settings.
- 6** 🔍 Search POI or Address — Touch to search for a destination.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SETTING A DESTINATION

You can set a destination with your Navigation System using the touch-screen display or Voice Recognition.

■ Touch-screen Display

- Touch the “Search POI or Address” icon **6** and type in a nearby location name or the street address of the desired location.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone, say “Directions to ____ (desired location).”

SETTING A DESTINATION USING POINTS OF INTEREST (POI)

■ Touch-screen Display

- Use the Lower Menu Bar **3** to select POI shortcuts.

■ Voice Recognition

- Press the  button on the steering wheel, and after the tone say “Navigation”. Next, say “Nearby” or “POI by category”. The system will give you the options available for setting a POI.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Navigation (section 6)**” of your NissanConnect® Owner's Manual.

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the NissanConnect® Services app on your compatible iPhone® or Android smartphone and log into it using your Nissan Owner Portal ID and password.
- For additional information about your NissanConnect® features and services:
 - Consult your vehicle's NissanConnect® Owner's Manual at <https://www.NissanUSA.com/owners/ownership/manuals-guides>
 - Visit <https://www.NissanUSA.com/connect/support-faqs> for frequently asked questions.
 - Visit <https://www.NissanUSA.com/connect>, scan the QR code on the back of this book, or call **855-426-6628**.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

Some of the available NissanConnect® services may include:

- **Automatic Collision Notification** - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- **Connection to Roadside Assistance** — Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance in non-emergency situations. Connection to Roadside Assistance can be accessed by touching “Call Nissan Assistance” under the NissanConnect® Services. You may also add the  (Connect to Operator) key to the Lower Menu Bar **1**.
- **Stolen Vehicle Locator** — A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock** — For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- **Remote Engine Start** — Start your engine remotely using the NissanConnect Services companion app or website.
- **Alarm Notification** — This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** — Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Connected Search** — Select “Connected Search” from the Destination menu on the vehicle’s Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle’s location.
- **Valet Alert** — Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect® Services companion app or website.
- **Curfew Alert** — Specify curfew limits via the NissanConnect Services companion app or website and you will be notified via a selected method if curfew is violated.
- **Journey Planner** — A feature that allows you to send a route with a destination and up to five way points directly to the vehicle.
- **Boundary Alert** — A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect® Services web portal or companion app.



 
AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To access these features in your vehicle.

- From the Home Screen **1**, swipe the screen to the left.
- Touch the “All Apps” key **2**.
- Touch the “NissanConnect Services” key **3**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Information (section 5)” of your NissanConnect® Owner's Manual.

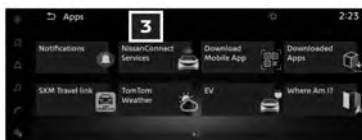

SiriusXM® TRAVEL LINK and SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- SiriusXM® Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM® Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Information (section 5)” and the “Navigation (section 6)” of your NissanConnect® Owner's Manual.



DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- If the turn signal is turned on with a vehicle in the detection zone the side indicator light will flash.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support forward driving aids for your vehicle. The camera sensor is located above the **1** inside mirror and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Cruise Control (ICC) (for vehicles with ProPILOT Assist)
 - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.



Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual **3**



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

PROPILOT ASSIST (if so equipped)



ProPILOT Assist is a combination of Intelligent Cruise (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a “hands-on” driver assistance system and is intended for use on expressways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM

1. To set ProPILOT Assist, push the ProPILOT Assist  switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
2. Push the **SET-** switch **2** when at the desired speed.
3. Push the distance switch **3** to select the following distance.



PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

- 4** Set vehicle speed indicator
 - Displays the speed set by the driver.
- 5** Steering Assist Indicator
 - Shows whether Steering Assist is active or not (green-active, gray-standby).
- 6** Lane marker indicator
 - Appears green on display when lane lines are detected and Steering Assist is active.
- 7** ProPILOT Assist status indicator
 - Displays whether ProPILOT Assist is engaged or not.
- 8** Vehicle ahead detection indicator
 - Appears on display when a vehicle is detected ahead.
- 9** Set distance indicator
 - Displays the selected distance set by driver.

DRIVING FEATURES

CANCELLING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **10** on the steering wheel.
 - Tap the brake pedal.
 - Push the ProPILOT  switch **1** on the steering wheel.

PROPILOT ICC

- ICC can be engaged when the vehicle speed is between 20 and 90 mph (32 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES+** switch **11** or **SET-** switch **2** and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

VEHICLE AHEAD DECELERATES AND/OR STOPS

- The system will not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone, the driver must control the vehicle to prevent a collision.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.
- When the vehicle ahead accelerates, push and release the **RES+** switch **11** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.

DRIVING FEATURES

STEERING ASSIST

- The Steering Assist system assists the steering operation to help keep the vehicle within the traveling lane.
 - Lane markers must be clear and consistent on both sides of the vehicle.
 - This feature will operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- Steering Assist is cancelled or temporarily goes into standby mode under the following conditions:
 - The turn signals are activated.
 - Both hands are not detected on the steering wheel. To prevent standby mode, simply apply more pressure or a tighter grip on the steering wheel.
 - The wipers are in the LO or HI speed position.
 - Steering Assist will not activate if the system does not detect lane markers.
- To turn off Steering Assist:
 - Push the  Steering Assist switch **12** on the instrument panel.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.
- If the driver lightly touches (instead of firmly gripping) the steering wheel, the steering torque sensor may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again, the warnings turn off.
- If the driver's hands remain off the steering wheel and the system remains on, the vehicle will eventually come to a stop.



DRIVING FEATURES

ELECTRONIC PARKING BRAKE (if so equipped)

- To apply the parking brake, pull the (P) electronic parking brake switch **13**, located below the center console. The electronic parking brake indicator light **14** will illuminate red when applied.
- To release the parking brake, with the ignition switch in the ON position and while the electronic parking brake indicator **14** is illuminated red, depress the brake pedal and push the (P) switch **13** down. The electronic parking brake indicator light **14** will turn off.



AUTOMATIC BRAKE HOLD (if so equipped)

- Automatic Brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the **AUTO HOLD** switch **15** to activate the automatic brake hold function. The indicator light will illuminate.
- To use the automatic brake hold function, the following conditions need to be met:
 - The driver's seat belt is fastened.
 - The electronic parking brake is released.
 - The shift lever is not in the **P (Park)** position.
 - The vehicle is not parked on a steep hill.
- To cancel the automatic brake hold function push the **AUTO HOLD** **15**. To deactivate while the brake force has been maintained, depress the brake pedal and push the **AUTO HOLD** switch **15**.

SWITCHING TO CONVENTIONAL CRUISE CONTROL

- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist  switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

DRIVING FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn off the system.
- To activate the cruise control, push the  cruise control switch **1** on the steering wheel. The **CRUISE** indicator light will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. A  indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CANCEL** switch **4** on the steering wheel. The  indicator light in the instrument panel will turn off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the vehicle ahead detection indicator **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror. Detected road signs are displayed in the vehicle information display **1**.

- To turn the TSR system on and off:
 1. Press the ◀▶ buttons until "Settings" displays in the vehicle information display. Use the ⬆⬇⬆ buttons to select "Driver Assistance", then press the OK button.
 2. Select "Speed Limit Sign" and press the OK button to turn the system on or off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.



DRIVING FEATURES

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.
- The RAB system can be turned on and off through the "Driver Assistance" screen in the vehicle information display.
 1. Press the ◀▶ buttons until "Settings" displays in the vehicle information display. Use the ⬆⬇⬆ buttons to select "Driver Assistance", then press the **OK** button.
 2. Select "Emergency Brake" and press the **OK** button.
 3. To set the RAB system to on or off, use the **OK** button to check the box for "Rear". When the RAB system is turned off, the RAB system warning light **1** illuminates.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2025/altima or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

