



QUICK REFERENCE GUIDE

2025 **SENTRA**



1

2

3

4

5

6

7



11

COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light 
- 2** Vehicle Information Display
- 3** Headlight and Turn Signal Switch
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio/Vehicle Information Display
- 6** Cruise Control/Intelligent Cruise Control (if so equipped)/Bluetooth® Switches
- 7** Trunk Lid Release Switch 
- 8** ECO Mode Switch
- 9** Instrument Brightness Control
- 10** Trip Computer Reset Switch
- 11** Tilt/Telescopic Steering Column



1

2

3

4

5

6

7

8

9

INSTRUMENT PANEL

- 1** Power Mirror Switch
- 2** Fuel-filler Door Release
- 3** Hood Release
- 4** Audio System
- 5** Front Passenger Air Bag Status Light
- 6** Heated Seats  /Heated Steering Wheel Switch (if so equipped) 
- 7** Heater and Air Conditioner (automatic) (if so equipped)
- 8** Idling Stop OFF Switch 
- 9** USB Connection Port Interface

TABLE OF CONTENTS

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM	2
FRONT POWER SEAT ADJUSTMENTS (if so equipped for driver's seat)	4
STARTING/STOPPING THE ENGINE	4
OUTSIDE MIRROR CONTROL SWITCH	5
EMERGENCY CALL (SOS) BUTTON (if so equipped)	5
HEATER AND AIR CONDITIONER (automatic) (if so equipped)	6
HEATED STEERING WHEEL AND SEATS (if so equipped)	8
HEADLIGHT CONTROL SWITCH	8
WIPER AND WASHER SWITCH	10
VEHICLE INFORMATION DISPLAY	10
TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT	11
LOOSE FUEL CAP	12
FUEL-FILLER DOOR	13
TRUNK LID RELEASE SWITCH	13

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT	14
USB CONNECTION PORT INTERFACE	14
BLUETOOTH® HANDS-FREE PHONE SYSTEM*	15
FM/AM/SiriusXM® Radio (if so equipped)	17
APPLE CARPLAY®	18
ANDROID AUTO™	19
HANDS-FREE TEXT MESSAGING ASSISTANT*	20
BLUETOOTH® STREAMING AUDIO	21
SIRI® EYES FREE	22
NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)	22
WI-FI (if so equipped)	23

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)	25
IDLING STOP SYSTEM	25
BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)	26
REAR AUTOMATIC BRAKING (RAB)	27
LANE DEPARTURE WARNING (LDW)	27
INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)	28
CRUISE CONTROL (if so equipped)	29
AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM	29
REARVIEW MONITOR	30
INTELLIGENT AROUND VIEW® MONITOR (if so equipped)	30
DRIVE MODES	33



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety—Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.
- Automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 10 minutes and then turn off.
 - You must wait at least 6 seconds before remotely starting the engine again.
- Repeat steps 1 and 2 to extend the time for an additional 10 minute period.
 - The vehicle needs to be driven at speeds of 4 mph (7 km/h) before the remote engine start procedure can be used again.
- To start driving, depress the brake pedal and push the ignition switch.

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.



GETTING STARTED

- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle switch **3** once; the corresponding door will unlock. Push the door handle request switch **3** again within 60 seconds; all other doors will unlock, or
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again, all other door will unlock.

TRUNK LID RELEASE

 
- To open the trunk, press and hold the trunk lid release  button **5** for more than 0.5 seconds.
- The trunk lid release button will not operate when the ignition switch is in the ON position.

PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press the  button **4** on the key fob to turn the panic alarm off, or push the door request switch if the key is in range.

INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged and the indicator **8** appears in the vehicle information display, or if environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key near, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

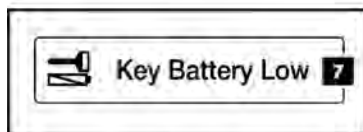

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**", the "**Starting and driving (section 5)**" and the "**Do-it-yourself (section 8)**" of your Owner's Manual.

GETTING STARTED

FRONT POWER SEAT ADJUSTMENTS (if so equipped for driver's seat)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

SEAT LIFTER

- Push the end of the switch **1** up or down to adjust the height of the seat cushion.

POWER LUMBAR SUPPORT

- To adjust the lumbar area, push the front or back end of the switch **3**.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

STARTING/STOPPING THE ENGINE

TURNING THE ENGINE ON

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Move the shifter lever to the **P (Park)** position.
- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the AUTO ACC mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the ON mode.
- Push the ignition switch to start the engine.



TURNING THE ENGINE OFF

- Apply the brake pedal, move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

GETTING STARTED

OUTSIDE MIRROR CONTROL SWITCH

- The ignition switch must be in the ON position. To select the right or left side mirror, move the control switch **1** right or left.
- To adjust the mirror angle, push the control switch **2** up, down, right or left.
- To prevent accidentally moving the mirror, set the control switch **1** to the center (neutral) position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the cover once to expose the **SOS** button **1** on the overhead console and then press the button.
- For additional information, or to enroll your vehicle, refer to **www.NissanUSA.com/connect** or call **855-426-6628**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual or refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

GETTING STARTED

HEATER AND AIR CONDITIONER (automatic) (if so equipped)



1 AUTO BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- The automatic mode may be used year-round. Press the **AUTO** button to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Turn the driver's side temperature control dial to the left for cooler air or to the right for warmer air.

2 SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side temperature controls on or off. This will allow the passenger's side temperature to be adjusted independently from the driver's side by turning the passenger's side temperature control dial.
- Turn the passenger's side temperature control dial to the left for cooler air or to the right for warmer air.

3 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the front defroster button  to turn on the system. This feature removes humidity from the air.
- To defrost the front and side windows, set the temperature control **1** and fan speed control **6** to their maximum settings.

4 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the rear window defroster switch  to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

5 ON-OFF BUTTON

- Press the **ON-OFF** button to turn the climate control system on or off.

6 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

GETTING STARTED

7 AIR FLOW CONTROL BUTTON

- Press the air flow control button to cycle through the following air flow outlets:



Air flows from center and side vents.



Air flows from center and side vents and foot outlets.



Air flows mainly from the foot outlets.



Air flows from defroster and foot outlets.

8 A/C BUTTON

- Press the **A/C** button to turn the air conditioner on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

9 AIR RECIRCULATION BUTTON

- Press the air recirculation button  to recirculate interior air inside the vehicle. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode , or foot and front defroster mode .

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

GETTING STARTED

HEATED STEERING WHEEL AND SEATS (if so equipped)

HEATED STEERING WHEEL (if so equipped)

- Push the  heated steering wheel switch **1**.
- The heated steering wheel automatically turns on and off to maintain a temperature above 68°F (20°C).
- Push the  heated steering wheel switch **1** to turn off the heated steering.
- If the temperature of the steering wheel is above 68°F (20°C) when the switch is turned on, the system will not heat the wheel. This is normal operation.



HEATED SEATS (if so equipped)

- With the ignition switch in the ON position, push the  or  heated seat switch **2** to heat the seats.
- Two lights illuminated represent the high setting and one light represents the low setting.
- To turn the heated seats off push the  or  heated seat switch **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3** then place the ignition in the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

GETTING STARTED

HEADLIGHT BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the meter. Pull the headlight switch back to the original position to select the low beam. The indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the lever forward **4**. The High Beam Assist indicator light  in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, turn the headlight switch to the  position **6** or select the low beam position by placing the lever in the neutral position.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

GETTING STARTED

WIPER AND WASHER SWITCH

- The ignition switch must be in the ON position. Move the lever to one of the following positions to operate the windshield wipers:

 
1 Mist  — One sweep operation of the front wipers.

2 Intermittent  — Wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease the wiper speed.

4 Low  — Wipers operate at a continuous low-speed.

5 High  — Wipers operate at a continuous high-speed.

6 Washer  — Pull the lever towards you to activate the washer. The wipers will operate several times.

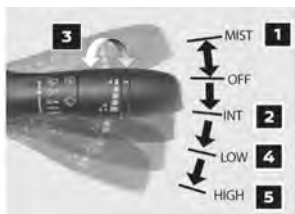

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Vehicle settings
- Drive computer information
- Drive system warnings and settings
- Cruise control information
- Nissan Intelligent Key® operation information
- Indicators and warnings
- Tire pressure information
- Audio information
- Bluetooth® Hands-free Phone information



GETTING STARTED

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the **OK** button **2**, the **▲** or **▼** buttons **3** and the **↶** or **↷** buttons **4** located on the steering wheel.



RESETTING THE DRIVE COMPUTER

1. Press the **▲** and **▼** buttons **3** on the steering wheel until you reach the desired drive computer mode.
 2. Press and hold the **OK** button **2** to reset the selected mode.
- To reset **TRIP A** or **TRIP B**, go to the desired mode by pressing the **TRIP RESET** button **5** and select the desired odometer.



SETTINGS

The Settings menu allows you to change the information displayed in the vehicle information display such as:

- | | | |
|---------------------|---------------------|--------------------|
| ■ VDC Setting | ■ Driver Assistance | |
| ■ Clock | ■ Maintenance | ■ Unit/Language |
| ■ TPMS Setting | ■ Factory Reset | ■ Vehicle Settings |
| ■ Customize Display | ■ ECO Mode Setting | |

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **3** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).

To view detailed instructional videos regarding these and other features, please go to www.nissanquickguide.com.

GETTING STARTED

- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Move the shift lever to the **P (Park)** position and apply the parking brake.
 2. Place the ignition switch in the **ON** position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)", the "In case of emergency (section 6)", the "Do-it-yourself (section 8)" and the "Technical and consumer information (section 10)" of your Owner's Manual.

LOOSE FUEL CAP

- A **Loose Fuel Cap** warning message will appear in the vehicle information display **1** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will turn off when the vehicle detects the fuel-filler cap is properly tightened and the **OK** button **2**, located on the steering wheel, is pressed.
- If the cap is not properly tightened, the Malfunction Indicator Light  may illuminate.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

GETTING STARTED

FUEL-FILLER DOOR

- The fuel-filler door release **1** is located to the left of the steering wheel below the instrument panel.
- To open the fuel filler door, pull the fuel-filler door release **1**.
- The fuel-filler door is located on the passenger's side at the rear of the vehicle.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

TRUNK LID RELEASE SWITCH

Use one of the following methods to unlatch the trunk lid then raise the lid to open the trunk:

- Push the trunk opener request switch **1**, located under the trunk handle in the center, for more than 1 second. The doors must be unlocked or the Nissan Intelligent Key® must be with you (that is, in your pocket or purse).
- Press the  button **2** on the key fob for more than 0.5 seconds.
- Push the trunk lid release switch **3** down. The trunk lid release switch **3** is located to the left of the steering wheel.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

 


AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:

1. Press the  **MENU** button on the control panel.
2. Touch the  Settings key on the Launch Bar.
3. Touch the "Clock" key.
4. Touch "Select Clock Manually" to manually adjust the time displayed on the clock.

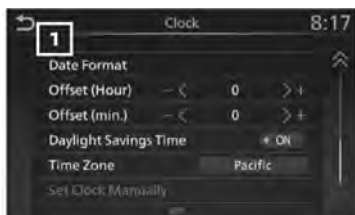

- Touch the  key **1** to return to the previous screen.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-A/USB Type-C (if so equipped)) are located beneath the heater and air conditioning controls.
- When a compatible USB memory device or auxiliary device is plugged into the USB port/AUX jack (if so equipped), compatible audio files stored on the device can be played through the vehicle's audio system.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A or USB Type-C (if so equipped) adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Nissan Voice Recognition session, press and hold the  or  button on the steering wheel, or  on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL** (volume) control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Select the "Menu" key on the Launch Bar.
2. Select the  key **1** on the **Launch Bar**.
3. Touch the "Connections" key **2**.
4. Touch the "Bluetooth" tab **3** and touch "Add New".
5. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.



VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  button on the steering wheel or touch the  key on the launch bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



MAKING A CALL

1. Press the  button on the **Launch Bar**. The "Phone" screen **5** will appear on the display.
2. Select one of the options to make a call.



RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch “Use Handset” on the screen to use the handset (cellular phone).

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Hands-free phone (section 4)” of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

FM/AM/SiriusXM® Radio (if so equipped)



Touch the Audio key on the **Launch Bar** to display the current audio source, and then touch the “Source” key to access the source selection screen.

1 **PUSH ON-OFF BUTTON/VOL (volume) CONTROL KNOB**

- Press the  (ON-OFF) button to turn the audio system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 **PUSH SOUND BUTTON/TUNE-SCROLL KNOB**

- Press the **PUSH SOUND** button to cycle through the audio settings individually and use the **TUNE-SCROLL** knob to adjust the current setting.
- Touch the  Settings key on the Launch Bar and then touch the “Sound” key to view all audio settings.

3 **AUDIO (SOURCE) BUTTON**

- Pressing this button will give access to the AM, FM, SXM, USB1, USB2, BT Audio or AUX audio source.
- Twelve memory stations can be set for the FM band, six for the AM band and 18 for satellite radio. These appear at the bottom of the screen when one of these sources is selected.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To store a station in the preset, you must first select a radio band by touching the "AM" key, "FM" key, or "SiriusXM" key, then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select key.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems (section 4)**" of your Owner's Manual and to the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual.

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- There are two ways to start a Siri® session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple Carplay screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple Carplay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available while driving.
- For functions that can be used with Siri, please refer to the Apple® website.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To exit the Apple CarPlay screen, press the  **MENU** button on the **Launch Bar**.

- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **2** on the **Launch Bar**, or
 - Touch the  Info key **3** on the **Launch Bar**, touch the "Smartphone Connection" key, and then select "Apple CarPlay" key.



- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch "Yes" then "OK" to use Android Auto™.
 - After the cellular phone is connected, the Android Auto™ home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- There are three ways to start Google Assistant™:

1. Press and hold the  button on the steering wheel until a beep is heard.
2. Touch the microphone key **1** on the **Launch Bar**.
3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).



- To return to the Android Auto™ screen, touch the  key **2** on the **Launch Bar**.



- To exit the Android Auto™ screen, touch the  key **2** on the **Launch Bar** and then touch the exit key.

- To return to the Android Auto™ home screen from the main menu:

- Touch the  key **3** on the **Launch Bar**, or
- Touch the  Info key **4** on the Launch Bar, touch the "Smartphone Connection" key, and then touch the "Android Auto" key.

- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Hands-Free Phone (section 4)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.



- A cellular phone should not be used while driving so full attention may be given to vehicle operation.
- If the device needs to be connected, refer to the connecting procedure within this guide.
- To use Bluetooth® streaming audio:
 - Touch the  Audio key **1** on the Launch Bar, then touch the "Bluetooth® Audio" key.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system (section 3)" of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone to the Siri Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual, the "Information (section 5)" of your NissanConnect® Owner's Manual and visit www.NissanUSA.com/bluetooth.

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

If equipped, your vehicle may include NissanConnect connected features and services such as Emergency SOS Calling, Automatic Collision Notification, Wi-Fi Hotspot, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle's NissanConnect Owner's Manual at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. For frequently asked questions, please visit www.nissanusa.com/connect/support-faqs.

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the NissanConnect® Services app on your compatible iPhone® or Android smartphone and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit www.NissanUSA.com/connect.

Some of the available NissanConnect® services may include:

- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- **Emergency Call** - Which connects you to a live response specialist who will assist in the dispatch of emergency services to the vehicle location. To use this feature, press the SOS button on the overhead console. The SOS button should only be used in emergency situations or in conjunction with the Roadside Assistance feature, if warranted.
- **Wi-Fi Hotspot** (if so equipped) - Enables you to connect up to seven devices to the vehicle and access the Internet when a service provider's subscription is active.
- **To access these features in your vehicle.**
 - Press the  **MENU** button **1** on the control panel.
 - Touch the  **Info** key **2**.
 - Touch the "NissanConnect Services" key **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Information (section 5)" of your NissanConnect® Owner's Manual.

WI-FI (if so equipped)

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch the  **Settings** key on the Launch Bar.
 2. Touch the "Connections" key.
 3. Touch the "Wi-Fi" tab **1**.
 4. Touch the name of the device you wish to connect.
 5. Enter a password and touch the "OK" key. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.
- To change the Wi-Fi settings, touch the  **Settings** key **2** and then the preferred item.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

TO DELETE A WI-FI DEVICE:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" tab .
4. Touch the  key by the name of the device you wish to delete.
5. Touch the "Delete" key and then touch "Yes" key when a message appears.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Getting started (section 2)**" of your NissanConnect® Owner's Manual.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support forward driving aids for your vehicle. The camera sensor is located above the **1** inside mirror and the radar sensor is located on the front of the vehicle **2**.



- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:

- Automatic Emergency Braking (AEB) with Pedestrian Detection
- Intelligent Cruise Control (ICC)
- Intelligent Forward Collision Warning (I-FCW)



- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.



- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.

- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).

- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

IDLING STOP SYSTEM

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- The system is active while waiting at a stop light, etc. When the vehicle is stopped for long periods of time, turn off the engine.



- When the engine is stopped by the Idling Stop system, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop system by pushing the Idling Stop OFF switch **1**.

DRIVING FEATURES

- The status of the Idling Stop System can be checked in the vehicle information display.
 - This indicator **2** is displayed when the Idling Stop System is activated.
 - The indicator **2** blinks when the Idling Stop System is malfunctioning.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- If the turn signal is turned on with a vehicle in the detection zone the side indicator light will flash.
- The indicator **2** will illuminate after the ignition switch is in the ON position and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The BSW with RCTA system can be turned on or off through the "Driver Assistance" screen in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.
- The RAB system can be turned on and off through the “Driver Assistance” screen in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving (section 5)” of your Owner's Manual.

LANE DEPARTURE WARNING (LDW)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will alert the driver through the steering wheel (vibration) and the LDW indicator **1** on the instrument panel will blink orange to alert the driver.
- The LDW system can be turned on and off through the “Driver Assistance” screen in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the “Instruments and controls (section 2)” and the “Starting and driving (section 5)” of your Owner's Manual.

DRIVING FEATURES

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the ICC **1** switch on the steering wheel. The ICC indicators **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  distance switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- This indicator **5** indicates the ICC system status depending on a color:



- ICC system ON indicator (gray): Indicates that the ICC switch is on.
- ICC system SET indicator (green): Indicates that the cruising speed is set.
- ICC system warning (orange): Indicates that there is a malfunction in the ICC system.
- To reset at a faster cruising speed, push and hold the **RES+** switch **6** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **7** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **8** will turn off.
- To turn off ICC, push the ICC switch **1** on the steering wheel. The ICC indicators **2** in the instrument panel will turn off.

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push the ICC switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

DRIVING FEATURES

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn off the system.
- To activate the cruise control, push the  cruise control switch **1** on the steering wheel. The **CRUISE** indicator light will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the **SET-** switch **2** on the steering wheel and release. A  indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **RES+** switch **3** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **4** on the steering wheel.
- To turn off cruise control, push the **CANCEL** switch **4** on the steering wheel. The  indicator light in the instrument panel will turn off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the vehicle ahead detection indicator **1** in the vehicle information display and providing an audible alert.



DRIVING FEATURES

- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

REARVIEW MONITOR

- When the shift lever is shifted into the **R (Reverse)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.


INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.

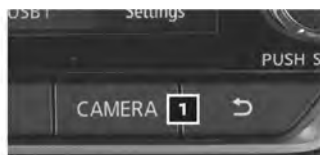


DRIVING FEATURES

 - When the shift lever is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

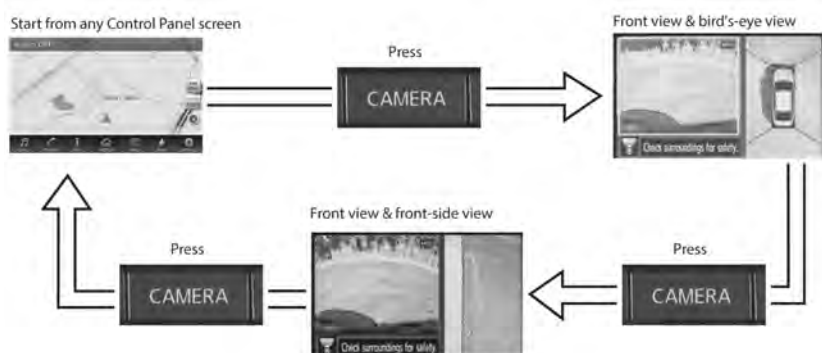

 
- When the shift lever is in the **R (Reverse)** position and the **CAMERA** button is pressed, the following views will display in order:

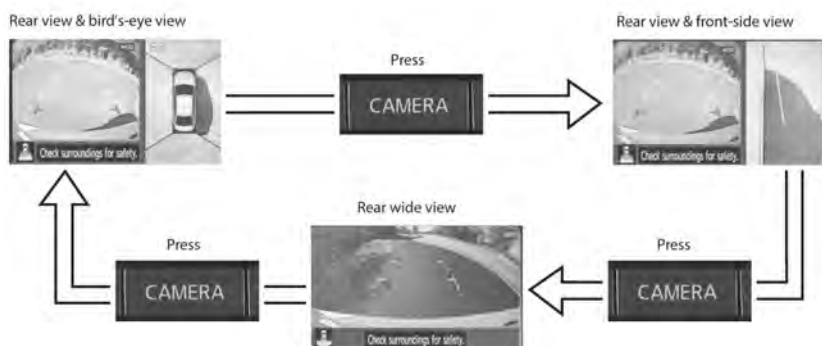

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Yellow 3 ft (1 m)
 - Green 7 ft (2 m)
 - Green 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.

DRIVING FEATURES

 - There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.

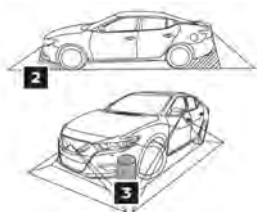

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 6 mph (10 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Blue MOD icon **4**; the system is active.
 - Gray MOD icon; the system is not active.
 - No MOD icon; the system is off.
- The MOD system will not operate if the trunk is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

DRIVING FEATURES

DRIVE MODES

NORMAL

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
 - Push the **ECO** mode switch **1** on the instrument panel to activate.
 - The ECO mode indicator light will illuminate in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2025/sentra or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

