

## Scheduled Maintenance

### Scheduled Maintenance (U.S.A., Canada, and Puerto Rico)

#### Vehicles utilizing the vehicle status monitor feature:

The vehicle status monitor feature alerts you of maintenance needs by turning on the wrench indicator light or displaying a message in the instrument panel, or both.

Every maintenance must be done when the display/wrench indication comes on.

The display/wrench indication will come on before reaching the maximum interval of 16,000 km (10,000 miles), or 12 months (after the previous maintenance).

If you drive your vehicle under any of the following conditions, follow the Severe Driving Scheduled Maintenance and replace the engine oil and filter every 8,000 km (5,000 miles) or 6 months, whichever comes first.

Otherwise, follow the Normal Driving Scheduled Maintenance intervals.

1. The vehicle is idled for long periods or driven at low speeds, such as with police cars, taxis, or driver's education school car.
2. The vehicle is driven mainly on unpaved road.
3. The vehicle is driven mainly on mountain roads or uphill roads.

If you are following the Severe Driving Scheduled Maintenance (8,000 km (5,000 miles) or 6 months oil replacement interval), set the vehicle status monitor manually. Refer to the Information section in the Mazda Connect Owner's Manual. Please contact an Authorized Mazda Dealer if necessary.

## ◆Scheduled Maintenance

### USA, Canada and Puerto Rico Residents (Normal Driving Scheduled Maintenance):

| Maintenance Item                                                    |           | Number of times, maintenance was performed.                                                                         |   |   |   |   |   |   |   |
|---------------------------------------------------------------------|-----------|---------------------------------------------------------------------------------------------------------------------|---|---|---|---|---|---|---|
|                                                                     |           | 1                                                                                                                   | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Engine oil & filter* <sup>1</sup>                                   |           | R                                                                                                                   | R | R | R | R | R | R | R |
| Spark plugs                                                         |           | Replace every 64,000 km (40,000 miles).                                                                             |   |   |   |   |   |   |   |
| Air filter                                                          |           |                                                                                                                     |   | R |   |   | R |   |   |
| Fuel lines and hoses* <sup>2</sup>                                  |           |                                                                                                                     | I |   | I |   | I |   | I |
| Hoses and tubes for emission* <sup>2</sup>                          |           |                                                                                                                     |   |   | I |   |   |   | I |
| Drive belts                                                         |           | I                                                                                                                   | I | I | I | I | I | I | I |
| Exhaust system and heat shields                                     |           |                                                                                                                     |   |   | I |   |   |   | I |
| Coolant level                                                       |           | I                                                                                                                   | I | I | I | I | I | I | I |
| Coolant* <sup>3</sup>                                               | Engine    | Replace at first 192,000 km (120,000 miles) or 120 months; after that, every 96,000 km (60,000 miles) or 60 months. |   |   |   |   |   |   |   |
|                                                                     | EV system | Replace at first 192,000 km (120,000 miles) or 180 months; after that, every 96,000 km (60,000 miles) or 60 months. |   |   |   |   |   |   |   |
| Brake lines, hoses and connections                                  |           |                                                                                                                     | I |   | I |   | I |   | I |
| Brake and clutch fluid level                                        |           | I                                                                                                                   | I | I | I | I | I | I | I |
| Brake fluid                                                         |           |                                                                                                                     | R |   | R |   | R |   | R |
| Disc brakes                                                         |           | I                                                                                                                   | I | I | I | I | I | I | I |
| Steering operation and linkages                                     |           |                                                                                                                     | I |   | I |   | I |   | I |
| Front and rear suspension, ball joints and wheel bearing axial play |           |                                                                                                                     | I |   | I |   | I |   | I |
| Body condition inspection for rust, corrosion and perforation       | Canada    | I                                                                                                                   | I | I | I | I | I | I | I |
| Driveshaft dust boots                                               |           |                                                                                                                     | I |   | I |   | I |   | I |
| Bolts and nuts on chassis and body                                  |           |                                                                                                                     | T |   | T |   | T |   | T |
| Cabin air filter                                                    |           | Replace every 48,000 km (30,000 miles) or 24 months.                                                                |   |   |   |   |   |   |   |
| Tire rotation                                                       |           | Rotate every 12,000 km (7,500 miles).                                                                               |   |   |   |   |   |   |   |
| Tire inflation pressure and tire wear* <sup>4</sup>                 |           | Inspect every 12,000 km (7,500 miles) or 12 months.                                                                 |   |   |   |   |   |   |   |
| Emergency flat tire repair kit (if equipped)* <sup>5</sup>          |           | Inspect annually.                                                                                                   |   |   |   |   |   |   |   |
| Function of all lights                                              |           | I                                                                                                                   | I | I | I | I | I | I | I |

**Chart symbols:**

**I:** Inspect: Inspect and clean, repair, adjust, fill up, or replace if necessary.

**R:** Replace

**T:** Tighten

**Remarks:**

- \*1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- \*2 According to state / provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage / kilometer period to ensure long-term reliability.
- \*3 Use of FL-22 is recommended when replacing coolant. Using coolant other than FL-22 may cause serious damage to the engine and cooling system.
- \*4 Inspect a spare tire if equipped.
- \*5 Check the tire repair fluid expiration date every year when performing the periodic maintenance. Replace the tire repair fluid bottle with new one before the expiration date.

**USA, Canada and Puerto Rico Residents (Severe Driving Scheduled Maintenance):**

| Number of months or kilometers (miles), whichever comes first.                  |   |     |    |     |    |     |    |     |
|---------------------------------------------------------------------------------|---|-----|----|-----|----|-----|----|-----|
| Months                                                                          | 6 | 12  | 18 | 24  | 30 | 36  | 42 | 48  |
| × 1000 km                                                                       | 8 | 16  | 24 | 32  | 40 | 48  | 56 | 64  |
| × 1000 miles                                                                    | 5 | 10  | 15 | 20  | 25 | 30  | 35 | 40  |
| Engine oil & filter* <sup>1</sup>                                               | R | R   | R  | R   | R  | R   | R  | R   |
| Maintenance Interval (other than engine oil & filter replacement)* <sup>2</sup> |   | 1st |    | 2nd |    | 3rd |    | 4th |

**Chart symbols:**

**R:** Replace

**Remarks:**

- \*1 Reset the engine oil data whenever replacing the engine oil regardless of the message/wrench indicator light display.
- \*2 Follow Maintenance Interval listed in Normal Driving Scheduled Maintenance.