



2026
QX60

QUICK REFERENCE GUIDE

To view detailed instructional videos, go to
www.infinitiquickguide.com/2026/qx60
or snap this QR code with an appropriate
QR code reader.



Helpful Resources

BELOW IS A LIST OF HELPFUL RESOURCES THAT CAN BE USED TO LEARN MORE ABOUT THE VEHICLE'S SYSTEMS AND FEATURE OPERATIONS.

• VEHICLE OWNER'S MANUAL

• INFINITI CLIENT SUPPORT 1-800-662-6200

Support is always available if your INFINITI retailer cannot assist you or you would like to provide INFINITI directly with comments or questions.

• INFINITI CONNECTION TO ROADSIDE ASSISTANCE 1-800-662-6200 (option 1)

As part of the INFINITI Total Ownership Experience®, Connection to Roadside Assistance is available to you, 24 hours a day 365 days a year, for emergency roadside assistance.

• INFINITI ELITE® EXTENDED PROTECTION PROGRAM 1-800-662-6200

INFINITI Elite® Assurance Products provide you with quality long-term protection and enhanced peace of mind.

• INFINITI FINANCIAL SERVICES CLIENT SUPPORT 1-866-456-4124

For client support with your INFINITI Financial Services loan or lease.

• INFINITI FINANCIAL SERVICES www.infinitifinance.com

Use the IFS Online Account Manager to check your account status, schedule recurring payments and access important forms.

• OWNER PORTAL 1-855-444-7244

<https://www.infinitiusa.com/owners>

Your INFINITI Owner Portal account contains your personal preferences, vehicle information and links to key vehicle features and services.

• INFINITI INTOUCH® 1-855-444-7244 www.infinitiusa.com/intouch

This suite of digital alerts and remote services is your direct link to personal security, convenience and confidence.

• SiriusXM® RADIO 1-877-447-0011

For support with your SiriusXM® subscription.

• INFINITIUSA.COM www.infinitiUSA.com/bluetooth

Reference this site for a list of compatible cellular phones and instructions on how to pair your cellular phone to your vehicle.

• INFINITI ELECTRONIC QUICK REFERENCE GUIDE

(Use the Quick Response (QR) code or URL on this page or on the back cover).

• GENUINE INFINITI ACCESSORIES www.infiniti-techinfo.com

Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.

Table of Contents

Cockpit Overview.....	1	myQ Connected Garage.....	20
Instrument Panel.....	3	Google Built-in.....	20
Meters and Gauges	5	Apple Carplay®	21
INFINITI Intelligent Key System.....	7	Android Auto™	22
Shift Lever.....	8	Wireless Charging.....	23
Heater and Air Conditioner (automatic)	9	Navigation System.....	23
Front Power Seat Adjustment.....	10	INFINITI InTouch® Services.....	24
2 nd Row Seat Adjustment.....	10	Forward Emergency Braking (FEB) with Pedestrian Detection... 25	
Opening the Liftgate.....	11	Rear Automatic Braking (RAB)	25
Motion-Activated Liftgate (if so equipped).....	11	Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA) .. 26	
Rear Door Alert.....	12	Predictive Forward Collision Warning (PFCW).....	26
HomeLink® Universal Transceiver (if so equipped).....	13	Lane Departure Warning (LDW) and Lane Departure	
Smart Rear View Mirror (if so equipped).....	14	Prevention (LDP) (if so equipped).....	27
Capless Fuel-Filler and Fuel-Filler Door.....	15	Intelligent Cruise Control (ICC) (for vehicles with ProPILOT	
Wiper and Washer Switch	15	Assist) (if so equipped)	28
USB Connection Port Interface.....	16	ProPILOT Assist (if so equipped)	29
Connecting your Cellular Phone or Device via Bluetooth®	17	INFINITI Drive Mode Selector	32
Bluetooth® Streaming Audio	17	Head Up Display (HUD) (if so equipped).....	32
FM/AM/SiriusXM® Radio	18	Idling Stop System	33
Clock Set/Adjustment	19	3D Around View Monitor (if so equipped).....	34
INFINITI Voice Recognition	19		

Additional information about your vehicle is also available in your Owner's Manual, INFINITI InTouch® Owner's Manual at www.InfinitiUSA.com.

PLEASE SEE YOUR OWNER'S MANUAL FOR IMPORTANT SAFETY INFORMATION AND SYSTEM OPERATION LIMITATIONS.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.



For more information, refer to the **"Safety – Seats, seat belts and supplemental restraint system (section 1)"**, the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** and the **"Starting and driving (section 5)"** of your Owner's Manual.

Cockpit Overview



1

2

3

4

5

Cockpit Overview

- 
- ❶ Vehicle information display
 - ❷ Headlight / turn signal switch
 - ❸ Wiper and washer switch
 - ❹ Vehicle information display and audio control switches
 - ❺ Cruise control / Bluetooth® / Navigation / ProPILOT Assist switches (if so equipped)

Instrument Panel



1

2

3

10

4

6

7

3

9

8

5

Instrument Panel

- ❶ Multi-function control touch-screen / RearView Monitor display (if so equipped)/ 3D Around View® Monitor display (if so equipped)
- ❷ AUTO (automatic) climate control button / Temperature control dial (driver's side)
- ❸ ON-OFF button
- ❹ Shift lever
- ❺ INFINITI controller
- ❻ Lower instrument panel switches
 - Steering assist switch (if so equipped)
 - Head Up Display (HUD) switch (if so equipped)
 - Power liftgate switch
- ❼ Hood release
- ❽ USB connection port interface
- ❾ Heated steering wheel switch
- ❿ Push-button ignition switch

Meters and Gauges



Meters and Gauges

- 
- ❶ Tachometer
 - ❷ Engine coolant temperature gauge
 - ❸ Vehicle information display
 - ❹ Shift lever indicator
 - ❺ Speedometer
 - ❻ Fuel gauge

INFINITI Intelligent Key System

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each door handle lock or capacitive sensor.
- To lock the vehicle, push any door handle lock sensor ① once, press the  button ② on the Intelligent Key or enter **D (Drive)** and reach a low speed for the doors to lock automatically.
- To unlock the vehicle, perform one of the following procedures:
 - Wrap your hand around the door handle to activate the capacitive unlock sensor ⑤. When unlocking from the driver's door handle, the driver's door will unlock. Touch the lock sensor ① within 60 seconds to unlock all doors. When unlocking from the front passenger door, rear doors or liftgate, all vehicle doors will unlock. To allow driver and passenger doors to unlock at the same time from the driver's door handle, turn off the Selective Unlock feature in the vehicle settings menu.



- Press the  button ③ on the Intelligent Key to unlock the driver's side door. Press the  button ③ again within 60 seconds; all other doors and liftgate will unlock.

APPROACH UNLOCK FUNCTION

- When you approach the vehicle with the Intelligent Key, the vehicle will be unlocked automatically by the approach unlock function. This function is disabled by the default setting. You can enable this function by the vehicle information display.

WALK AWAY LOCK FUNCTION

- When you walk away from the vehicle with the Intelligent Key, the vehicle will be locked automatically by the walk-away lock function. This function is disabled by the default setting. You can enable this function by the vehicle information display.

REMOTE ENGINE START (if so equipped)

To start your vehicle remotely:

1. Aim the Intelligent Key at the vehicle.
2. Press the  button ② to lock the vehicle.
3. Press and hold the  button ④ within 5 seconds of pressing the  button ② and the engine will start.

To start driving, depress the brake pedal and push the ignition switch to the ON position.

State laws may apply, review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Shift Lever

TO PUT THE VEHICLE IN N (NEUTRAL):

The ignition switch must be in the ON position and the brake must be depressed.

From P (Park) to N (Neutral) and D (Drive) to N (Neutral):

Without pressing the shift lever button, push the shift lever forward from the home position and hold for 0.5 seconds.

From R (Reverse) to N (Neutral):

Without pressing the shift lever button, pull the shift lever backward from the home position (1 notch) and hold for 0.5 seconds.

After operating the shift lever, the shift lever returns to the home position by releasing your hand from the shift lever.

While in the **N (Neutral)** position, the **P (Park)** position is automatically engaged if the ignition is turned off or if the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

TO PUT THE VEHICLE IN R (REVERSE):

Press the button ①, then push the shift lever forward past the point of resistance and release the shift lever.

TO PUT THE VEHICLE IN D (DRIVE):

Pull the shift lever back past the point of resistance and release the shift lever. Use this position for all normal forward driving.

 
TO PUT THE VEHICLE IN P (PARK):

Make sure the vehicle is completely stopped and press the **P (Park)** button ②. If you switch the ignition off with the transmission in **D (Drive)**, **N (Neutral)** or **R (Reverse)**, the transmission automatically shifts into the **P (Park)** position. The **P (Park)** position is automatically engaged if the ignition is turned off or if the driver's seat belt is unfastened, the driver's side door is opened and the vehicle is stationary or driving at a very low speed.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Heater and Air Conditioner (automatic)

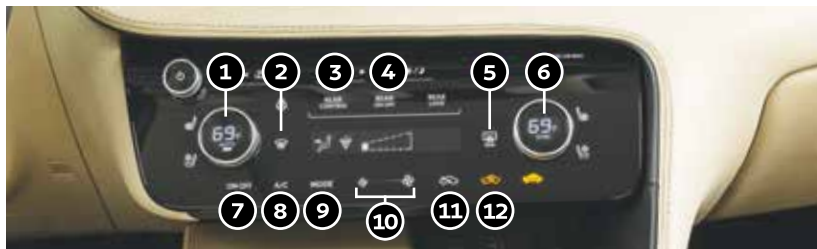

- 1** **AUTO** button/Driver's side temperature control dial: turns on automatic mode
- 2** Front defroster button
- 3** **REAR CONTROL** button: Enables and disables rear passenger climate controls
- 4** **REAR ON OFF** button: Turns the rear climate control system on and off
- 5** **REAR WINDOW AND OUTSIDE MIRROR DEFROSTER** button: Defrosts the rear window and outside mirrors. After 15 minutes, the defroster will turn off.
- 6** **SYNC** button/Passenger side temperature control dial: Turns on sync mode
- 7** **ON-OFF** button: Turn the system on and off
- 8** **A/C** button: Press to turn the air conditioner on or off
- 9** **MODE** button: Cycles through air flow modes
- 10** Fan speed control buttons
- 11** Fresh air intake button
- 12** Air recirculation button: Recirculates interior air inside of the vehicle.



REAR CLIMATE CONTROLS

- 13** Rear fan speed control buttons
- 14** Rear temperature control buttons
- 15** Rear **AUTO** button: turns on automatic mode
- 16** Air flow control buttons
- 17** **ON-OFF** button: turns on and off rear climate control system

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Front Power Seat Adjustment



To slide the seat forward or backward, push the switch ① forward or backward.

To recline the seatback, push the recline switch ② forward or backward.

SEAT LIFTER

To raise or lower the front portion or height of the seat, push the front or back end of the switch ① up or down.

POWER LUMBAR SUPPORT

Move the switch up or down to adjust the height of the lumbar. Move the switch forward to increase the lumbar support or rearward to decrease the lumbar support ③.

MASSAGING FRONT SEATS (if so equipped)

To use the massaging front seats, with the vehicle on, push the massaging seat switch ④.

- If the front passenger's door is open, the passenger's seat massage switch will not operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

2nd Row Seat Adjustment

Forward and backward adjustment:

- Pull the center of the bar ① up and hold it while you slide the seat forward or backward to the desired position until it latches.



Seat angle adjustment:

- Pull up on the lever ② and lean back until the seat latches. To bring the seatback forward, pull the lever up and lean your body forward until it latches.

CHILD SEAT ACCESS MODE

The 3rd row can be accessed without removing a child seat installed in the 2nd row.

- Press the seatback release button on the side of the 2nd row seats ③ or on the back of the 2nd row seats ④ and slide the entire seat forward.
- To return the seat to a locked position, push the upper seatback rearward until the seatback and track are locked.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Opening the Liftgate



To open the liftgate, perform one of the following procedures:

- Push and hold the power liftgate switch (1) on the instrument panel.
- Push the liftgate opener switch (2); the liftgate must be unlocked to open it and without the Intelligent Key in range of the liftgate.
- Press the  button (3) on the INFINITI Intelligent Key for longer than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Motion-Activated Liftgate (if so equipped)



To operate the liftgate hands-free:

- Ensure you have the INFINITI Intelligent Key within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper (1). After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Rear Door Alert

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes of the vehicle being driven.

REAR DOOR ALERT (ACTIVE)

- When the system is active, an audible horn will sound and a **Check Back Seat for All Articles** warning ① will appear on the display when the driver exits the vehicle without opening and closing a rear door within a short period of time.
- To activate Rear Door Alert in your vehicle information display:
 - Press the ◀▶ buttons on the steering wheel until the "Settings" menu screen appears and press the scroll/OK button.
 - Using the scroll/OK button, on the steering wheel to select "Vehicle Settings", "Rear Door Alert" and press the scroll/OK button.
 - Choose from the following options: "Horn & Alert", "Alert Only", or "OFF", and then press the scroll/OK button.
 - To dismiss the warning, use the scroll/OK button on the steering wheel to select "Dismiss Message" ②. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the scroll/OK button on the steering wheel to select "Disable Alert" ③ and press the scroll/OK button.

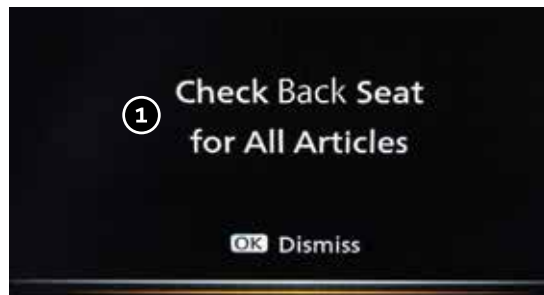

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

HomeLink® Universal Transceiver (if so equipped)

 
To complete HomeLink® programming, you can download the HomeLink app or read the instructions below.

Before you start programming HomeLink, park outside and within range of your garage. Then, clear the area around your garage door; your vehicle's engine should be turned off while programming Homelink. Locate the remote control transmitter, ensuring a fresh battery is installed. Please note, a ladder and another person may be needed.



To program HomeLink:

1. Press and release the desired HomeLink button ①. The indicator light will flash and "TRAINING" will be displayed on the mirror.
2. Position the hand-held transceiver 1-3 in (2-8 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
3. While the indicator light is flashing, press and hold the hand-held transmitter button. DO NOT release until the HomeLink indicator light changes "TRAINED" is displayed on the mirror. When the indicator light illuminates, the hand-held transmitter button may be released.

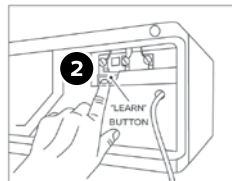

If the garage door doesn't respond:

- Press the "learn" or "set" button ② on the garage opener until an indicator illuminates. Within 30 seconds, press the HomeLink button ① in your vehicle for 2 seconds up to 3 times. Do not press the HomeLink® button rapidly.

If the garage door doesn't respond, please see your owner's manual, go to **www.HomeLink.com/infiniti** or call **1-800-355-3515**.

To view a detailed instructional video, go to **www.infinitiquickguide.com/2026/qx60** or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door."

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Smart Rear View Mirror (if so equipped)

You can switch between the conventional rearview mirror mode and Smart Rearview Mirror mode (camera view mode) by using the mode select lever ①.

- When the Smart Rearview Mirror mode is on, the settings menu can be selected by pressing the menu button ②.
- Press the adjustment buttons ③ to adjust the following settings:
 - Brightness
 - Indication
 - Dimming Mirror
 - Down/Up
 - Language
 - Left/Right
 - Rotation



To view a detailed instructional video, go to www.infinitiquickguide.com/2026/qx60 or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "Homelink" or "Garage Door".

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Capless Fuel-Filler and Fuel-Filler Door

FUEL-FILLER DOOR

The fuel-filler door ① is located on the driver's side of the vehicle.

CAPLESS FUEL FILL

The fuel tank is not equipped with a fuel-filler cap. After opening the fuel-filler door, insert the fuel pump nozzle directly into the fuel-filler opening. When the fuel pump nozzle is pulled out, the fuel-filler opening will be sealed.



REFUELING FROM A PORTABLE FUEL CONTAINER

- If you need to refuel from a portable fuel container, use the funnel ② stored in the storage space under the luggage board.
- Be sure to insert the funnel into the fuel-filler opening slowly and fully. Insert the nozzle of the portable fuel container into the opening along the funnel and fill the fuel tank.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Wiper and Washer Switch

Move the lever ① up or down to one of the following positions to operate the windshield wipers:

- MIST** One sweep operation
OFF Wipers are off
AUTO Speed-sensing and rain-sensing automatic wipe
LO Continuous wipe, slow
HI Continuous wipe, fast

To adjust the wiper sensitivity for the **AUTO** setting, twist the lever ②. The rain-sensing function can be disabled in the vehicle information display under "Vehicle Settings". Pull the lever ① toward you operate the windshield washer.

REAR WIPER AND WASHER

Turn the rear wiper switch ③ to one of the following positions to operate the rear wiper:

- OFF** Wiper is OFF
INT Intermittent wiping
ON Continuous wipe, slow

Push the lever ① forward to operate the rear windshield washer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



USB Connection Port Interface

The USB connection ports ① (USB Type-C) are located below the climate controls.

- Compatible audio files stored on a USB memory device can be played over the vehicle's audio system when plugged into one of the USB ports.
- These ports will also charge compatible devices.

USB CHARGING PORTS

- There are USB ports located in the 2nd row on the back of the center console ② and a port in the 3rd row by the cup holders ③. These ports will charge compatible devices using Type C USB connections.

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Connecting your Cellular Phone or Device via Bluetooth®*

Using Bluetooth® technology, you can connect (pair) your cellular phone with the in-vehicle system for hands-free use of your cellular phone.

1. Touch the settings key and touch the "Connections" key.
2. Touch "Devices" and then "Add Device". A message is displayed.
3. Operate as guided by the system. (Operations may differ depending on the device.)

The paired cellular phone will be added to the list on the "Connections" screen.

 
For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Bluetooth® Streaming Audio

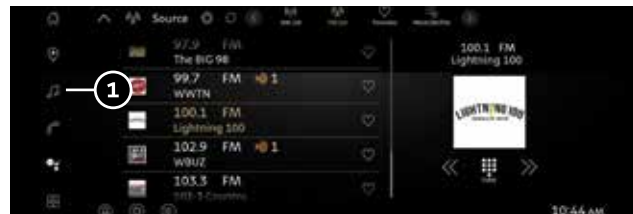

If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up a wireless connection between your Bluetooth® device and the in-vehicle audio system, enabling you to listen to the audio from your device through the vehicle's audio system.

After connecting your Bluetooth® device, press the audio button ① on the launch bar, then select the source to switch to Bluetooth® Streaming Audio.

When streaming audio and receiving a phone call, the music will continue on the speakers in the vehicle, but the call can be heard through speakers in your headrest to provide continuous music playback.

For any Bluetooth® connectivity issues, reboot your cellular phone or device.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

FM/AM/SiriusXM® Radio

1 POWER BUTTON/VOLUME CONTROL KNOB

- To turn the system on or off, press the power  button.
- Turn the volume control dial to the right or left to increase or decrease the volume.

2 SEEK TRACK KEYS

- To tune and stop at the previous or next broadcast station, touch the  SEEK  TRACK  keys.

3 TUNE FOLDER KEYS

- To manually tune the radio, touch the  TUNE  FOLDER keys.

 
4 STATION PRESET KEYS

- Up to 18 stations/channels of AM/FM radio and/or SiriusXM® Audio can be registered in the preset list.
- To store a station in a preset, you must first select a radio band by pressing the **AUDIO** button (5) on the INFINITI controller, or touch the "Station Information" key (6) on the audio screen then tune to the desired AM, FM or satellite radio station.
- Next press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then come on, and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).



Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Clock Set/Adjustment

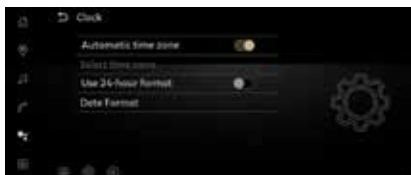

To adjust the time and the appearance of the clock on the display:

1. Touch the "Settings" key on the launch bar.
2. Touch the "General" key.
3. Touch the "Clock" key.

Touch the  key to return to the previous screen.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

INFINITI Voice Recognition

This system offers Google Assistant as the Voice Recognition system. To select a Voice Recognition system use the center touch-screen and press "Settings", "Apps & Notifications" and finally select "Active Voice Assistance."

SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used.

USING THE VOICE RECOGNITION SYSTEM

- Press the  button ① on the steering wheel, the icon on the Launch Bar depending on the Voice Recognition selection, or using the voice prompts (voice permissions required).
- After the tone sounds, speak a command.
- To cancel the command, press and hold the  button ① on the steering wheel.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.



myQ Connected Garage

myQ Connected Garage allows for remote monitoring, opening and closing of myQ compatible garage doors. This can be accessed through the touch-screen display. Download the myQ app on your smartphone using the QR code displayed on the touchscreen display.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Google Built-in

Drivers can use Google built-in features on the built in-vehicle system.

- Google Assistant™:
 - You can voice control various functions such as playing music, setting destinations with Google Maps, etc.
- Google Maps:
 - Navigation functions such as getting driving directions, finding nearby facilities, etc. can be used.
- Google Play:
 - Various apps can be downloaded and used on the in-vehicle system.
- For some of the functions, an internet connection and/or signing into your Google account are required for full use.
- For details of the Google Automotive Services, refer to **<https://built-in.google/cars/>**.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Apple CarPlay®

Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display. The display may be different based on iOS software version.

Connect your compatible iPhone via Bluetooth® or to the USB connection port located under the control panel.

- Depending on the setting, the startup information screen will appear on the display.
- Touch "Yes" then "OK" to use Apple CarPlay.
- After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

While connected to Apple CarPlay, Siri® operation can be accessed.

Press and hold the  button on the steering wheel to start a Siri session.

Press the  button on the steering wheel to end the Siri session.

Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.

When Siri finishes responding, the session will automatically end and return to the home screen.

Some Siri functions may not be available during driving. For functions that can be used with Siri, please refer to the Apple® website.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Android Auto™

Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

USING ANDROID AUTO

Connect your Android phone to the in-vehicle system via Bluetooth® or to the USB connection port located under the control panel.

 
- Depending on the setting, the startup information screen will appear on the touch-screen display.
- Touch "Yes" then "OK" to use Android Auto.
- After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system. When connected to Android Auto, Google Assistant™ can be accessed. There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard to start a Google Assistant session.
 2. Touch the microphone key .
 3. Say "OK Google" (requires appropriate permissions enabled via cellular device).

To return to the Android Auto home screen after operation, touch the  key  on the Launch Bar.

To exit the Android Auto screen, touch any key on the Launch Bar.

If you have difficulties with connection or performance, try a different USB cable.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

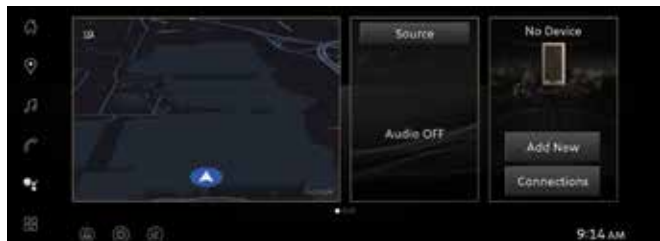

Wireless Charging

The wireless charger is located on the front of the center console, below the climate control system. If your vehicle is equipped with a non-magnetic wireless charger, ensure the smartphone is positioned vertically and fully seated on the center of the charging pad ①. Charging will start automatically.



If your vehicle is equipped with a magnetic wireless charger, place your phone on the center of the charging pad ①. To optimize the charging performance, use a Qi2 compatible phone or phone case equipped with a magnetic ring. This will help the phone properly attach and align on the magnetic charger. Charging will start automatically.

 
The smartphone will be charged continuously while the ignition switch is in the ON position. Some phone cases, including those not equipped with magnetic ring, may impact charging conditions.

- The  indicator ② will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange for 8 seconds and then turn off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Navigation System

- ① Touch-screen display
- ②  – Touch this key to access Map Settings.
- ③ **AUDIO** – Push to operate the audio system.
- ④ **MAP/VOICE** – Push to display the current location map screen. Push and hold to repeat the voice guidance for a guide point.

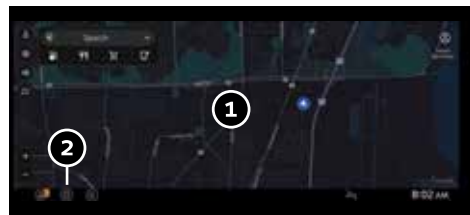

- ⑤ INFINITI controller:
 - /OK button – Press to select the highlighted item on the screen. If this button is pressed while a map is displayed, the map menu screen is displayed.
 - Main directional buttons – Press to move across the map, highlight an item on the screen or adjust a setting.
 - Additional directional buttons – Press to move across the map or highlight an item on the character input screen.
 - Center dial – Turn the dial to highlight an item on the screen, adjust a setting or adjust the map scale.
- ⑥  – Press to return to the previous screen. In a settings screen, this button can also be used to apply the setting. In a character input screen, this button can also delete the characters that have been entered.



Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

INFINITI InTouch® Services

INFINITI InTouch® Services combine personalized convenience settings and personal security features to compliment the Total Ownership Experience®. For more details on INFINITI InTouch Services or to enroll your vehicle, please visit www.infinitiusa.com/intouch or call **1-855-444-7244**. For frequently asked questions, please visit www.infinitiusa.com/intouch/faq.

To access INFINITI InTouch Services:

1. Touch the **MENU** button ① on the INFINITI controller.
2. Select the "InTouch Services" key ② on the display.
 - In case of an emergency, press and release the in-vehicle telematics **SOS** button ③, located above the rearview mirror. A Response Specialist will provide assistance based on the situation described by the vehicle's occupant.

INFINITI INTOUCH SERVICES ENROLLMENT

1. Create an INFINITI Owner Portal account.
(<https://www.infinitiusa.com/owners>)
2. From your INFINITI Owner Portal account, enroll in INFINITI InTouch Services.
3. Download the INFINITI InTouch Services companion app from the App store and log in using your INFINITI Owner Portal ID and Password.



Available services include, but are not limited to:

- Automatic Collision Notification
- Alarm Notification
- Maintenance Alert
- Scheduled Maintenance Notification
- Stolen Vehicle Locator
- Emergency Call
- Remote Door Lock/Unlock
- Remote Engine Start/Stop
- Remote Horn & Lights
- My Schedule
- Destination Send to Car
- Connected Search
- Drive Zone
- Maximum Speed Alert
- Mobile Information Service
- Valet Alert

The following services can also be accessed:

- Destination Assistance
- Roadside Assistance

This service allows subscribers to receive assistance for a non-emergency incident, such as towing, or a third party response.

Please see your INFINITI InTouch® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Forward Emergency Braking (FEB) with Pedestrian Detection

- The Forward Emergency Braking (FEB) system can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane, a pedestrian or a cyclist.
- The FEB operates at speeds greater than 3 mph (5 km/h).
- Intersection assist helps the driver when there is a risk of a forward collision when turning right or left.
- Intersection assist operates between 6-16 mph (10-25 km/h) when the turn signal is active.
- If there is a risk of a forward collision, an audible tone will sound and the vehicle ahead detection indicator light ① will illuminate. If the driver applies the brakes after the warning and the FEB with Pedestrian Detection detects that there is still the possibility of a forward collision, the system will automatically increase the braking force. If the driver does not take action, the FEB with Pedestrian Detection will issue a second flashing visual warning ②, an audible warning and also apply partial braking.



TURNING FORWARD EMERGENCY BRAKING WITH PEDESTRIAN DETECTION ON OR OFF

- The FEB with Pedestrian Detection system can be turned on or off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Rear Automatic Braking (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator ① will flash in the vehicle information display.
- A red frame will appear in the center display ② (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and braking will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING THE RAB SYSTEM ON/OFF

- The RAB system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.
- The RAB system can be temporarily turned on or off by touching the RAB temporary ON/OFF key on the touch screen display.
- When the RAB system is turned off, and the vehicle is in the **R (Reverse)** position, the RAB system warning light ① illuminate.
- When TOW mode (if so equipped) is selected, the RAB system cannot be turned on.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Blind Spot Warning (BSW) with Rear Cross Traffic Alert (RCTA)

 
- The Blind Spot Warning (BSW) system helps to alert the driver of other vehicles in adjacent lanes when changing lanes.
- If the turn signal is turned on with a vehicle in the detection zone, the system will chime twice and the indicator light will flash.
- The indicator ① will temporarily illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.
- The indicator light ① located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- The Rear Cross Traffic Alert (RCTA) system helps to alert the driver ② of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The BSW system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Predictive Forward Collision Warning (PFCW)

- The Predictive Forward Collision Warning (PFCW) system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The PFCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the PFCW system will warn the driver with the vehicle ahead detection indicator light ① and an audible warning tone will be heard.
- The PFCW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

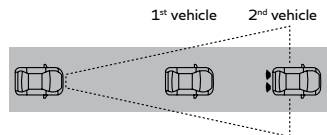

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Lane Departure Warning (LDW) and Lane Departure Prevention (LDP) (if so equipped)

Lane Departure Warning (LDW) and Lane Departure Prevention (LDP) can help warn you if the vehicle is beginning to leave the traveling lane.

- LDW and LDP are activated at speeds of approximately 37 mph (60 km/h) and above and when the lane markings are clear.
- If a front wheel passes over a lane marking, LDW and LDP will warn you through a visual alert ① and an intermittent vibration in the steering wheel.
- LDP can help assist the driver to return the vehicle to the center of the traveling lane by applying the brakes to the left or right wheels individually (for a short period of time).



TURNING LANE DEPARTURE WARNING ON OR OFF

 
- LDW and LDP can be turned on or off through the "Driver Assistance" section of the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Intelligent Cruise Control (ICC) (for vehicles with ProPILOT Assist) (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the ProPILOT Assist switch (1) on the steering wheel for less than 1.5 seconds. The CRUISE ON/OFF indicator light (2) will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch (3) on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Press the distance switch (4) on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate (5) in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate (6) in set mode.
- To reset at a faster cruising speed, push and hold the **RES+** switch (7) on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch (3) on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch (8) on the steering wheel or tap the brake pedal. The set vehicle speed indicator (5) will extinguish.
- To turn off Intelligent Cruise Control, push the ProPILOT Assist switch (1) on the steering wheel. The CRUISE ON/OFF switch indicator light (2) in the instrument panel will extinguish.

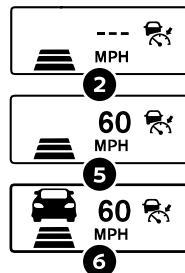



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

ProPILOT Assist (if so equipped)

The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. ProPILOT Assist includes Intelligent Cruise Control (ICC) and Steering Assist. ProPILOT Assist 1.1 includes base features along with Speed Adjust by Route, Speed Limit Assist, and Extended Stop. ProPILOT Assist 2.1 (if so equipped and subscribed) includes all previously listed features along with hands-off capability with features like Lane Change Assist, Passing Assist and Steering Assist with HD map data.

PROPILOT ASSIST DISPLAY

  - ❶ Set vehicle speed indicator: Displays the speed set by the driver.
- ❷ Steering Assist indicator: Shows whether steering assist is active or inactive (green-active, gray-standby, orange-malfunction).
- ❸ Lane Change Assist indicator (ProPILOT 2.1 if so equipped): Appears when Lane Change Assist feature is available.
- ❹ Side detection (ProPILOT 2.1 if so equipped): Indicates that a vehicle is detected in the side spot.
- ❺ Surrounding Vehicle Display (ProPILOT 2.1 if so equipped): Displays other detected vehicles.
- ❻ Vehicle ahead indicator: Appears on the display when a vehicle is detected ahead.
- ❼ ProPILOT Assist status indicator: Displays whether ProPILOT Assist is engaged or not.
- ❽ Road information indicator (if so equipped): Displays the detected road information.
- ❾ Detected road sign (speed limit) indicator (if so equipped): Displays the detected speed limit.
- ❿ Intelligent Cruise Control (ICC) Status Indicator: Displays the status of the speed control including the distance setting and detection of a lead vehicle.
- ⓫ Speed Limit Adjust indicator (if so equipped): Indicates the detected speed limit will be automatically applied to the vehicle set speed.

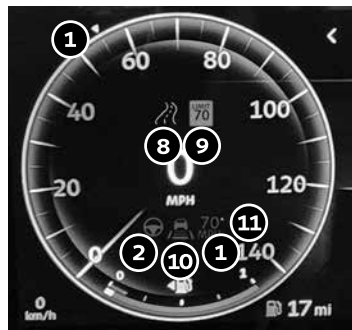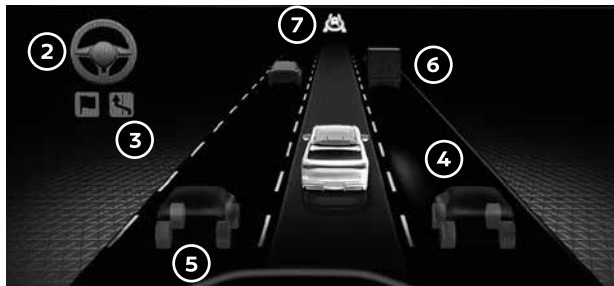

ProPILOT Assist (if so equipped)

PROPILOT INTELLIGENT CRUISE CONTROL

Press the ProPILOT Assist (14) switch to turn the system on.

To accelerate or decelerate your vehicle to the desired speed toggle up or down on the CANCEL switch (13) and release it.

When a vehicle is detected in the lane ahead, the Intelligent Cruise Control system controls the vehicle speed based on the distance set by the driver. Press the distance switch (12) to adjust the gap distance.

To cancel a set speed push CANCEL switch (13) on the steering wheel or tap the brake pedal.

To turn the system off, push the ProPILOT Assist switch (14).

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

To turn on the conventional (fixed speed) cruise control mode, push and hold the ProPILOT switch (14) for longer than approximately 1.5 seconds.

STEERING ASSIST

When the lane markers are clear and consistent on both sides of the vehicle, the Steering Assist system assists the driver to keep the vehicle within the traveling lane.

To activate Steering Assist, press the Steering Assist (16) switch on the lower switch bank.

This feature operates when the vehicle speed is above 37 mph (60 km/h). Below 37 mph (60 km/h), ProPILOT Assist

must detect a vehicle ahead in order for steering assistance to activate.

To turn off the Steering Assist system, press the Steering Assist (16) switch on the lower switch bank or turn it off in the "Driver Assistance" settings in the vehicle information display.

HANDS-OFF DRIVING (ProPILOT 2.1 if so equipped)

ProPILOT Assist 2.1 allows you to take your hands off the steering wheel when certain conditions are met as indicated by blue indicators.

- ProPILOT Assist is active and the driver's hands are detected on the steering wheel.
- The vehicle is driving on a highway or limited access freeway as defined by the HD map data.
- Camera, radar and sensors are functioning and free from obstruction or damage.
- The driver monitor system detects the driver's attention is given to the road ahead.
- All driving, road, and traffic conditions allow.
- Lane markings are clearly visible and able to be detected by the system.
- The vehicle is traveling at a speed less than 85 mph (137 km/h).

While hands are off the steering wheel, the vehicle is monitoring driver's attention to the road ahead with a driver facing camera located on the steering column. For Hands-Off driving, the vehicle must be on a highway or limited access freeway as defined by the HD map as indicated by the Hands-Off steering assist indicator and blue display.

For a detailed HD map, visit <https://www.infiniti.com/owners/propilot-assist.html>.



ProPILOT Assist (if so equipped)

LANE CHANGE ASSIST (ProPILOT 2.1 if so equipped)

When ProPILOT Assist 2.1 is active and the Lane Change Assist indicator is illuminated in blue, Lane Change Assist can help the driver with steering control during a lane change when the turn signal is activated and conditions are met.

The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

Lane Change Assist can be turned off in the Driver Assistance settings in the vehicle information display.

PASSING ASSIST (ProPILOT 2.1 if so equipped)

When ProPILOT Assist is active and the Lane Change Assist indicator is illuminated in blue, the Passing Assist feature can suggest a lane change to the left when a slower vehicle is detected ahead.

You can accept to pass the slower vehicle by pressing the lane change assist switch (15) on the steering wheel. You must place your hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

EXTENDED STOP

When the vehicle ahead decelerates to a stop on a highway, your vehicle decelerates to a standstill if the ProPILOT Assist is activated. Once the vehicle stops, the system will keep the vehicle stopped.

If the vehicle is stopped for less than 30 seconds, and the vehicle ahead begins to move, your vehicle will start moving again automatically.

If the vehicle is stopped for more than 30 seconds and the vehicle ahead begins to accelerate, push and release the CANCEL switch in either direction or press and release the accelerator. This will resume the last set cruising speed.

ProPILOT Assist does not provide approach warnings, automatic braking, or steering assist in the conventional (fixed speed) cruise control mode.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

Mode	Display Color	Steering Assist Symbol
OFF	None	None
Standby	Gray	None
Intelligent Cruise Control	White	
Hands-On mode	Green	
Hands-Off mode	Blue	

INFINITI Drive Mode Selector

Five driving modes can be selected by using the Drive Mode Selector switch (1):

- Standard (2WD)/Auto (AWD): Recommended for normal driving.
- Sport Mode: Adjusts the engine and transmission to enhance performance.
- Tow Mode: Adjusts the transmission to enhance towing capabilities.
- Eco Mode: Adjusts the engine and transmission to enhance fuel economy.
- Snow Mode: Engine output is controlled to avoid wheel spin on snowy roads.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Head Up Display (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle speed display
- Navigation
- Driving Assist
- Speed Limit Sign
- Audio
- TEL/SMS
- Message for Driver Assistance
- Warning message
- Push the Head Up Display (HUD) switch (1) on the lower instrument panel to turn the system on and off.
- To adjust the Head Up Display settings when the system is on:
 - Press the ◀▶ arrows (2) on the steering wheel until you get to the "Settings" menu in the vehicle information display. Press the scroll/OK dial (2) to select "Head-Up Display".

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



Idling Stop System

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

 
- The system is active while waiting at a stop light, etc. When the vehicle is stopped for long periods of time, turn off the engine.
- When the engine is stopped by the Idling Stop System, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop System by pushing the Idling Stop OFF switch ①.
- The status of the Idling Stop System can be checked in the vehicle information display.
 - This indicator ② is displayed when the Idling Stop System is activated.
 - The indicator ② blinks when the Idling Stop System is malfunctioning.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



3D Around View Monitor (if so equipped)

- With the ignition switch in the ON position, activate the 3D Around View® Monitor by pressing the **CAMERA** button ①, located below the front control panel or when the vehicle is in **R (Reverse)** position. The monitor displays various views of the position of the vehicle.
- Front view: A view of the front of the vehicle.
- Rear view: A view of the rear of the vehicle.
- Bird's-eye view: The surrounding view of the vehicle from above.
- Front-side view: The view around and ahead of the driver's side and the front passenger's side wheel.
- Front-wide view: A wider area view of the front view.
- Rear-wide view: A wider area view of the rear view.
- 3D view: A 360-degree view around the vehicle.
- Invisible hood view: A view of the front of the vehicle with a transparent engine hood.

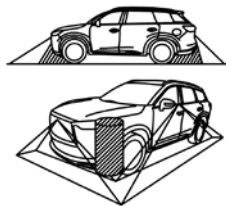


MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift selector is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
 - Green **MOD** icon ②; the system is active.
 - Gray **MOD** icon ②; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The **MOD** system will not operate if the liftgate is open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



 Memo



Printing December 2025
QR26EA0L51U3P
Printed in USA

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. INFINITI reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, INFINITI may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by INFINITI to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the INFINITI website at **<https://owners.infinitiusa.com/iowners/navigation/manualsAndGuides>**. If you have questions concerning any information in your Owner's Manual, contact INFINITI Client Support (see contact information listed above).

The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.



To view detailed instructional videos, go to **www.infinitiquickguide.com/2026/qx60** or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download in the smartphone app.



I N F I N I T I