



QUICK REFERENCE GUIDE

2026 **ARMADA**



1

4

2

3

5

7

6

10

9

8

COCKPIT OVERVIEW

- 1** Instrument Panel Brightness Control
- 2** Low Tire Pressure Warning Light 
- 3** Headlight / Fog Light (if so equipped) / Turn Signal Switch
- 4** Vehicle Information Display
- 5** Wiper and Washer Switch
- 6** Voice Recognition Control / Bluetooth® / Navigation (if so equipped) / Vehicle Information Display / Audio Control Switches
- 7** Cruise Control / ProPILOT Assist (if so equipped) / Volume Control Switches
- 8** Power Liftgate Switch (if so equipped) 
- 9** Head Up Display Switch (if so equipped) 
- 10** Steering Assist Switch



1

2

4

8

3

3

6

7

5

INSTRUMENT PANEL

- 1** Center Display
- 2** Audio System / Camera / Hazard Warning Flasher Switch
- 3** Climate Controlled   / Heated Seat Switches (if so equipped)  
- 4** Heater and Air Conditioner (automatic)
- 5** Center Console / Wireless Charger (if so equipped) / USB Connection Port Interface
- 6** Hill Descent Control Switch (if so equipped)  / Drive Mode Selector (if so equipped)
- 7** Hood Release
- 8** Four-wheel Drive / VDC Switches

TABLE OF CONTENTS

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM	3
POWER FRONT SEAT ADJUSTMENTS	5
2 ND ROW SEAT ADJUSTMENTS	5
POWER FOLDING SEATS (if so equipped)	6
MEMORY SEAT (if so equipped)	7
REAR SEAT BELT WARNING	7
STARTING/STOPPING THE ENGINE	8
OUTSIDE MIRROR CONTROL SWITCH	8
INTELLIGENT REARVIEW MIRROR (if so equipped)	9
HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)	10
EMERGENCY CALL (SOS) BUTTON	11
HEATER AND AIR CONDITIONER (automatic)	11
CLIMATE CONTROLLED SEATS (if so equipped)	13
REAR CLIMATE CONTROLS	14
HEADLIGHT CONTROL SWITCH	14
WIPER AND WASHER SWITCH	16
VEHICLE INFORMATION DISPLAY	17
TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT	18
FUEL-FILLER DOOR	19
POWER LIFTGATE (if so equipped)	19
MOTION-ACTIVATED LIFTGATE (if so equipped)	20
POWER MOONROOF (if so equipped)	20
POWER OUTLETS	21

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

GOOGLE BUILT-IN (if so equipped)	22
CLOCK SET/ADJUSTMENT	22
FM/AM/SiriusXM® Radio	23
SETTING UP YOUR USER PROFILE	24
USB CONNECTION PORT INTERFACE	24
BLUETOOTH® HANDS-FREE PHONE SYSTEM*	25
APPLE CARPLAY®	27
ANDROID AUTO™	28
NISSANCONNECT® SERVICES POWERED by SiriusXM®	28
WIRELESS CHARGING (if so equipped)	31
WI-FI	31
HANDS-FREE TEXT MESSAGING ASSISTANT*	32
BLUETOOTH® STREAMING AUDIO	33
myQ CONNECTED GARAGE	33



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system", the "Monitor, climate, audio, phone and voice recognition systems" and the "Starting and driving" of your Owner's Manual.

TABLE OF CONTENTS

DRIVING FEATURES

FORWARD DRIVING AID SENSORS	34
BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)	35
INTELLIGENT CRUISE CONTROL (ICC)	35
PROPILOT ASSIST SYSTEMS	36
DASH CAM (if so equipped)	44
AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM	45
INTELLIGENT AROUND VIEW® MONITOR (if so equipped)	46
REAR AUTOMATIC BRAKING (RAB)	49
HILL START ASSIST	49
LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)	50
INTELLIGENT FORWARD COLLISION WARNING (I-FCW)	50
FRONT AND REAR SONAR SYSTEM	51
TOWING	51
TRAILER BACK-UP ASSIST (if so equipped)	52
DRIVE MODE SELECTOR (if so equipped)	53
HEAD UP DISPLAY (HUD) (if so equipped)	54
DIFFERENTIAL LOCK MODE (if so equipped)	55
NISSAN ALL-MODE 4WD® (if so equipped)	56
AIR SUSPENSION SYSTEM (if so equipped)	57

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

This system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL*

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the Intelligent Key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the engine start  button **2** for at least two seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- To start driving, depress the brake pedal and push the ignition switch.



LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch **3**.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **3** or the liftgate switch once; the corresponding door will unlock. Push the door handle request switch **3** or the liftgate switch again within 60 seconds; all other doors will unlock, or
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again, all other doors will unlock.



GETTING STARTED

- To open the liftgate, press the  button **5** (if so equipped) for more than one second.
 - While the liftgate is in motion, the door handle request switches are disabled. To unlock or lock door, use the Intelligent Key buttons.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than one second. Once activated, the panic alarm and headlights will stay on for a period of time.

ANSWER BACK HORN

The answer back horn feature can be deactivated by using the Intelligent Key.

- To deactivate the answer back horn feature, press and hold the  button **1** and the  button **4** for at least four seconds. The hazard indicator lights will flash three times to confirm that the feature has been deactivated.
- To activate the answer back horn feature, press and hold the  button **1** and the  button **4** for at least four seconds or more. The hazard lights will flash once and the horn will sound once to confirm that the feature has been reactivated.

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Push the park button to shift to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, press the ignition switch while depressing the brake pedal and the engine will start.

APPROACH UNLOCK FUNCTION

- When you approach the vehicle with the Intelligent Key, the vehicle will unlock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

WALK AWAY LOCK FUNCTION

- When you walk away from the vehicle with the Intelligent Key, the vehicle will lock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments", "Starting and driving" and the "Do-it-yourself" sections of your Owner's Manual.

GETTING STARTED

POWER FRONT SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.



SEAT LIFTER (DRIVER'S SEAT)

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

POWER LUMBAR SUPPORT (if so equipped)

- To adjust the lumbar area, push the switch **3** up or down to adjust the height, forward to increase the lumbar support or rearward to decrease the lumbar support.

MASSAGING SEAT (if so equipped)

- Push the switch **4** to start or stop the massage function.

SIDE SUPPORT (if so equipped)

- To adjust the side support, push the front side of the switch **5** to increase side support or the rear side of the switch **5** to decrease side support.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.

2ND ROW SEAT ADJUSTMENTS

- To recline the seatback, pull up on the recline handle **1** and lean back. To bring the seatback forward, pull the handle up and lean your body forward. Release the handle to lock the seatback in position.



GETTING STARTED

TIP UP FOR EASY ENTRY/EXIT OF THE 3RD ROW

1. Lift the lever **1**.
2. Tip up the seat and slide the seat forward.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.



POWER FOLDING SEATS (if so equipped)

The controls are located in the cargo area on the passenger's side. The 2ND row seat switches **1** are located towards the front of the vehicle and the 3RD row seat switches **2** are located toward the rear of the vehicle.

- Before operating the power folding seats:
 - Make sure the 2ND row seatback is not reclined.
 - Lower the 3RD row headrest to the full down position.
 - Disconnect and secure the center seat belt and tongues into the retractor base. Always reconnect the center seat belt when the seat is returned to the upright position.
 - Make sure that there are no objects on the seatback cushion.
- To fold down the 2ND or 3RD row seats, push the front portion of the switch.
- To raise the 3RD row seats, push the rear portion of the switch.
- The power folding seats are only operational when the vehicle is stopped and the vehicle is in the **P (Park)** position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.

GETTING STARTED

MEMORY SEAT (if so equipped)

- Two positions for the driver's seat, steering wheel and outside mirrors can be stored in the Memory Seat system.
- Follow this procedure to set the memory positions:
 1. Place the ignition in the ON or ACC position and confirm the vehicle is in the **P (Park)** position.
 2. Adjust the driver's seat, steering wheel and outside mirrors to the desired position.
 3. Push the SET switch **1**, and within five seconds, push the memory switch (1 or 2) **2** for at least one second.
 4. The indicator light on the memory switch you select will illuminate for approximately five seconds and a chime will sound.
 5. The driver's seat, steering column and outside mirrors are now set to your preferences.
- These memorized positions can also be linked to your Nissan Intelligent Key®.
- To link a memorized position to your Nissan Intelligent Key®, press the unlock button on the key fob within five seconds after completing the previous step while the indicator light for the memory switch is illuminated.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

REAR SEAT BELT WARNING

- The rear seat belt warning **1** appears for a period of time after the ignition switch is placed in the ON position. This warning shows the status of the rear seat belts. The seat icon will illuminate in red to indicate which seat belt is not fastened - this message is not a malfunction.
- When a rear seat belt is changed from fastened to unfastened, this warning will display for a period of time, or until dismissed, and the seat belt warning light will turn ON.
- If the vehicle is driven above a certain speed during or after the rear passenger seat belt buckle status change, this warning will display. The seat belt warning light will blink, and the chime will sound for a period of time. During this time, the warning and chime cannot be dismissed unless the rear seat belt is fastened again. Once the seat belt warning light and chime have turned off, the display will remain until dismissed.

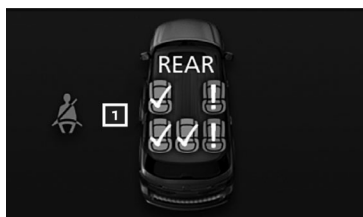

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

GETTING STARTED

 
STARTING/STOPPING THE ENGINE

TURNING THE ENGINE ON

- Make sure the vehicle is in the **P (Park)** or **N (Neutral)** position. Depress the brake pedal.
- Push the ignition switch.

TURNING THE ENGINE OFF

- Push the **P (Park)** button, apply the parking brake and push the ignition switch to turn the engine off.

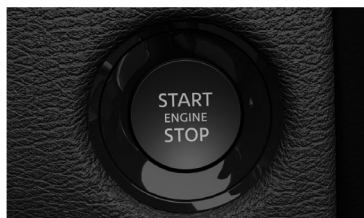

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver's side outside mirror or push the right switch **3** to select the passenger's side outside mirror.
- Adjust each mirror to the desired position using the outside mirror control switch **4**.



REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces down if either of the mirror buttons are illuminated and the vehicle is in **R (Reverse)**. This provides better rear visibility close to the vehicle.
- When in **R (Reverse)**, the reverse-tilt position is adjustable.
- The mirrors automatically return to their original position when you shift out of **R (Reverse)**.
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
 1. The transmission is in any position other than **R (Reverse)**.
 2. The selected mirror is deselected using the left switch **1** or the right switch **3**.
 3. The ignition switch is placed in the off position.

AUTOMATIC FOLDING OUTSIDE MIRRORS (if so equipped)

 
- The Automatic Folding Mirrors will automatically fold the mirrors in and out as needed by pressing the **2** switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

GETTING STARTED

INTELLIGENT REARVIEW MIRROR (if so equipped)

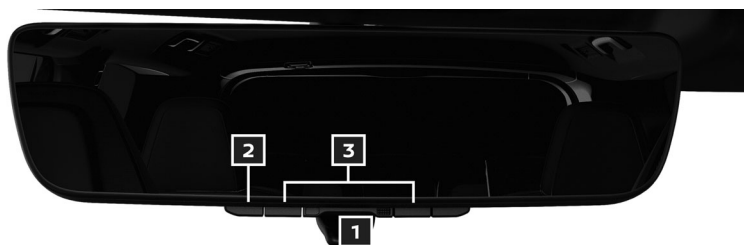

- The Intelligent Rear View Mirror provides a clear rear view from a camera located on the rear of the vehicle. Intelligent Rear View Mirror has two modes: conventional rearview mirror mode and Intelligent Rear View Mirror mode (camera view mode). Switch between these two modes using the mode select lever **1**.
- When the Intelligent Rear View Mirror mode is on, the settings menu can be selected by pressing the menu button **2**.
- Press the adjustment buttons **3** to adjust the following settings:
 - Brightness
 - Down/Up
 - Left/Right
 - Rotation
 - Indication
 - Dimming Mirror
 - Language
 - Switch Backlight
 - License

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

GETTING STARTED

HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, gates, home and office lighting, entry door locks and security systems.
- Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink®.
- To program the HomeLink® Universal Transceiver:
 1. Position the end of your hand-held transmitter 1-3 in away from the HomeLink® surface, keeping the HomeLink® indicator light **1** in view.
 2. Using both hands, simultaneously press and hold the desired HomeLink® button **2** and handheld transmitter button. DO NOT release until the HomeLink® indicator light **1** flashes slowly and then rapidly. When the indicator light flashes rapidly, both buttons may be released. (The rapid flashing indicates successful programming.)
- To verify the programming is complete, press and hold the HomeLink® button and observe the indicator light.
 - A solid, continuous light indicates the programming is complete and the HomeLink® button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink® system, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink® button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink® should now activate your device.
- To view a detailed instructional video, go to **www.nissanquickguide.com/2026/armada** or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for "HomeLink" or "Garage Door".

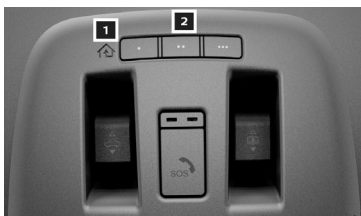

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual, the HomeLink website at www.homelink.com or call 1-800-355-3515.

GETTING STARTED

EMERGENCY CALL (SOS) BUTTON

 
- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use the feature, press the cover to open, then press the **SOS**  button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call 855-426-6628.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual or refer to the "Apps" section of your NissanConnect® Owner's Manual.

HEATER AND AIR CONDITIONER (automatic)

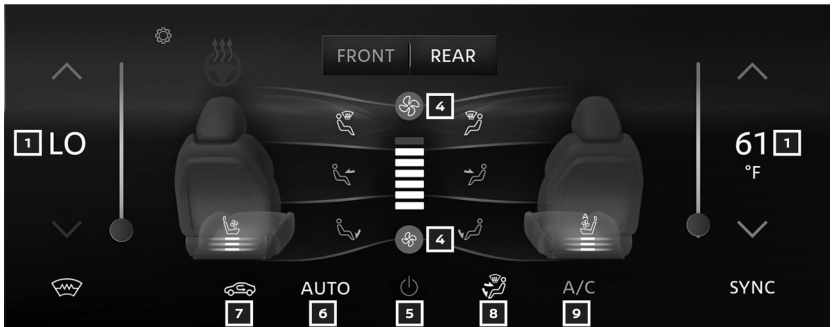

1 DRIVER/PASSENGER TEMPERATURE CONTROL SWITCHES/KEYS

- Push the temperature control switch/key **1** up for warmer air or down for cooler air.

GETTING STARTED

2 FRONT DEFROSTER BUTTON

- Press the front defroster button  **2** to turn on the system. This feature removes humidity from the air.
- Use the temperature control switches on the corresponding side to set the desired temperature.
- To quickly remove ice from the outside of the windows, use the  button **4** to set the fan speed to the maximum setting.

3 REAR WINDOW DEFROSTER BUTTON

- Push the rear window defroster switch  **3** to turn the system on or off.
- This function automatically turns off after approximately 20 minutes.

4 FAN SPEED CONTROL SWITCH/KEY

- Press the  switch/key **4** downwards to decrease fan speed or upwards  **4** to increase fan speed.

5 ON-OFF BUTTON/KEY

- Press the  **ON-OFF** button/key **5** to turn the climate control system on or off.

6 AUTO BUTTON/KEY

- Press the **AUTO** button/key **6**, and the system will automatically control air flow distribution and fan speed to achieve and maintain the temperature setting (automatic cooling and/or dehumidified heating).
- Automatic mode may be used year-round and will work to reach a comfortable temperature quickly. For example, on a very hot day, the system will initially operate at maximum air flow for a rapid cool down.

7 AIR INTAKE CONTROL BUTTON/KEY

- Press the air recirculation button/key  **7** to recirculate interior air inside the vehicle.
- The air recirculation mode cannot be activated when the air conditioner is in the front defroster mode.
- This mode helps adjust the inside vehicle temperature more effectively.
- To automatically control air intake inside the vehicle, press the air recirculation button/key  **7** to cycle through the modes. The indicator light on the button will illuminate. When the automatic control is set, the system automatically alternates between the outside air circulation and the air recirculation modes. The indicator light of the active mode will illuminate.

GETTING STARTED

8 AIR FLOW CONTROL KEY

- Press the air flow control key to cycle through the following air flow outlets:
 -  Air flows from center and side vents.
 -  Air flows mainly from the foot outlets.
 -  Air flows from defroster.

9 AIR CONDITIONER KEY

- Press the **A/C** key to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

BIOMETRIC COOLING (if so equipped)

Using infrared sensors, the biometric cooling controls air flow volume in accordance with the driver's and passenger's temperature of their faces.

- When the system detects that a passenger's surface temperature has increased, the airflow to the area will increase.

 
Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Monitor, climate, audio, phone and voice recognition systems**" section of your Owner's Manual.

CLIMATE CONTROLLED SEATS (if so equipped)

The climate-controlled seats warm up or cool down the front seats by heating or cooling the surface of the seat. To use the climate controlled seats:

- With the engine on, push the climate controlled seat switch to heat the seat **1** or to cool the seat **2**.
- Adjust the desired amount of heating or cooling by pushing the switch **1** or **2** again.
- The climate controlled seats can also be controlled from the touchscreen.
- When the vehicle's interior is warmed or cooled, or before you leave the vehicle, be sure to turn off the climate controlled seats. To turn off the climate controlled seats, push the switch until the indicator lights turn off.

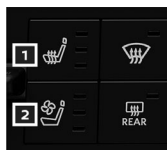

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Instruments and controls**" section of your Owner's Manual.

GETTING STARTED

REAR CLIMATE CONTROLS

The rear climate controls are only available when the rear air conditioner control lock is off.

- To activate the system press the **ON OFF** button **4**.
- Fan speed controls buttons **1** — Press the buttons to increase or decrease fan speed.
- **AUTO** button **2** — The system automatically works to keep air flow and fan speed at a constant temperature.
- Air flow control buttons **3** — Press these buttons to select the air flow mode.
- Temperature control buttons **5** — Adjusts the rear temperature up or down.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the position **2** to turn on the headlights.

INTELLIGENT AUTO HEADLIGHT SYSTEM

- This system automatically turns the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the Intelligent auto headlight system, turn the headlight control switch to the **AUTO** position **3**, then turn the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the OFF position, position **1** or position **2**.



GETTING STARTED

HEADLIGHT BEAM SELECT

- Push the headlight control switch forward **4** to select the high beam. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams  selected for the fog lights to operate.
- Turn the switch (inside collar) to the  position to turn on the fog lights.
- Turn the switch to the **OFF** position to **6** turn off the fog lights.



HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight control switch to the **AUTO** position then push the switch at the end of the headlight control switch. The high beam assist alert will appear in the vehicle information display while the headlights are turned on.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

GETTING STARTED

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

 
1 Mist (**MIST**) — One sweep operation of the front wipers.

2 Auto (**AUTO**) — Operates the rain-sensing wipers intermittently. The intermittent speed can be adjusted by twisting the time control ring **3** to increase or decrease wiper sensitivity.

4 Low (**LO**) — Front wipers operate at a continuous low-speed.

5 High (**HI**) — Front wipers operate at a continuous high-speed.

6 Front washer  — Pull the lever towards you to activate the front washer. The front wipers will operate several times.

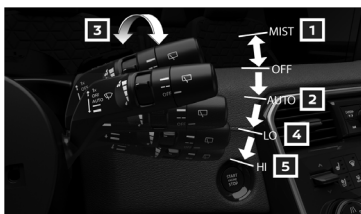

REAR WIPER AND WASHER

- Move the lever to one of the following positions to operate the rear windshield wipers:

7 Intermittent (**INT**) — Rear wiper operates intermittently.

8 Low (**ON**) — Rear wiper operates at a continuous low-speed.

9 Rear washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Do-it-yourself" sections of your Owner's Manual.

GETTING STARTED

VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Home
- Blank
- Drive Computer
- Fuel Economy
- ECO Pedal Guide
- Air suspension
- OFF Road
- Height Control
- Tire Pressures
- Idling Stop
- AWD Torque
- Navigation
- Compass
- Audio
- Driver Assistance
- ProPILOT Assist
- Speed Limit Sign
- Warnings
- Settings



USING THE VEHICLE INFORMATION DISPLAY

- The vehicle information display can be changed using the scroll/ **OK** button **2**, the **◀** buttons **4**, **▶** buttons **3** and the **↶** button **5** located on the steering wheel.

RESETTING THE TRIP COMPUTER

- Use the scroll/ **OK** button and the arrow buttons on the steering wheel to select the desired trip mode.
- Press and hold the scroll/ **OK** button for more than one second to reset the selected mode.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

GETTING STARTED

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately one minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Push the **P (Park)** button and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Starting and driving", "In case of emergency", "Do-it-yourself" and the "Technical and consumer information" sections of your Owner's Manual.

GETTING STARTED

FUEL-FILLER DOOR

- The fuel-filler door is located on the driver's side of the vehicle.
- To open the fuel-filler door, push the right side of the fuel-filler door.
- NISMO will have engine tuning that requires premium fuel. All other models, premium is only recommended unless towing.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

POWER LIFTGATE (if so equipped)

When the liftgate is closed, the liftgate will fully open automatically by:

 
- Pushing the power liftgate  switch **1** on the instrument panel.
- Push the liftgate opener switch **2** once the vehicle is unlocked.
- Pressing the  button **3** on the key fob for more than one second.

When the liftgate is open, and you are carrying your Intelligent key (that is, in your pocket or purse), the liftgate can be closed automatically by:

- Pushing the power liftgate close  switch **4** on the lower part of the liftgate for one second.
- Pushing the power liftgate lock  switch **5** on the lower part of the liftgate, also locking the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual

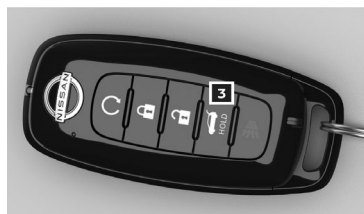

GETTING STARTED

MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Intelligent Key®.
- Use a quick kicking motion under the left side of the rear bumper **1**.
- The vehicle will beep three times and the liftgate will open.
- Do not swing your foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.



POWER MOONROOF (if so equipped)

OPENING/CLOSING THE MOONROOF

- To fully open or close the moonroof, push the switch to the open **1** or close **2** position and release it. The roof will automatically open or close; it need not be held.

TILTING THE MOONROOF

- To tilt up, first close the moonroof, then push the close **2** side of the switch and release it. To tilt down the moonroof, push the open **1** side of the switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.



GETTING STARTED

POWER OUTLETS

- The power outlets are used for powering electrical accessories such as cellular phones. The front outlet is rated at 12V, 120W (10A) and the rear outlet (if so equipped) is rated at 120 volts, 150W (1.25A) maximum.
- Power outlets are located under the center console **1**, on the rear of the center console **2**, and in the cargo area **3**.
- To use a power outlet, open the cap or pull out the plug cover.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

GOOGLE BUILT-IN (if so equipped)

Drivers can use Google built-in features on the in-vehicle system.

- Google Assistant™
 - You can voice control various functions such as playing music, and setting destinations with Google Maps, etc.
- Google Maps
 - Navigation functions such as getting driving directions, and finding nearby facilities, ect. can be used.
- Google Play
 - Various apps can be downloaded and used with the in-vehicle system.
- For some of the functions, an internet connection and/or signing into your Google account are required for full use.
- For details of the Google Automotive Services, refer to the following website: <https://built-in.google/cars/>

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

CLOCK SET/ADJUSTMENT

- Some screens may appear differently based on model and software version.
- To adjust the time and the appearance of the clock on the display:
 1. Touch the  key on the **Launch Bar**.
 2. Touch the  Settings key on the home page.
 3. Touch the "General" key.
 4. Touch the "Clock" key.
- Touch the  key to return to the previous screen.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

FM/AM/SiriusXM® Radio

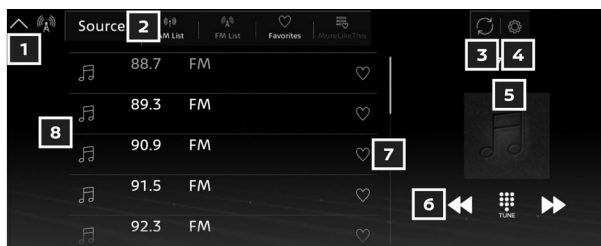

Touch the Audio key on the **Launch Bar** to display the current audio source, and then touch the “Source” key to access the source selection screen.

Touch the Audio key on the to display the current audio source, and then touch the “Source” key to access the source selection screen.

1 OPERATION SCREEN KEY

- Touch to display the AM/FM/SiriusXM® operation screen.

2 AM/FM/SiriusXM® MENU BAR

- < key — Slides the menu bar to the left.
- AM List — Displays the AM list screen.
- FM List — Displays the FM list screen.
- SiriusXM® with 360L — Displays the SiriusXM® list screen.
- Favorites — Displays a list of radio bands registered as favorites.
- MoreLikeThis — Displays a list of songs similar to the ones the user had been listening to.
- > key — Slides the menu bar to the right.

3 REFRESH KEY

- Touch to refresh the station list.

4 SETTINGS KEY

- Touch to display the radio settings screen.

5 STATION INFORMATION

- Displays the radio frequency/station currently tuned to.

6 OPERATION KEYS

- Touch corresponding keys for FM/AM/SiriusXM® radio operation.

7 FAVORITES KEY

- Touch to add the station to favorites. Touch “Favorites” on the AM/FM menu bar to display the favorite station list.

8 STATION LIST

- Select a preferred station.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems” section of your Owner's Manual and to the “Audio system” section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

SETTING UP YOUR USER PROFILE

- This feature allows three drivers to use their own registration, such as audio, settings, etc. and memorizes these custom driver profiles.
- If you have not registered your user profile to the in-vehicle system, you will be prompted to specify some of the settings and to register your profile.
- For some of the functions, an internet connection and/or signing into your NissanConnect® and Google account are required for full use.
- If you do not register the main information, some of the functions will become inoperable. Internet connection is required for full operation.
- When the vehicle is turned on with an un-registered key, a message will be displayed with a default profile name.
 1. Touch "Next".
 2. Choose your profile name.
 3. Touch "Next".
 4. Follow the prompts to complete user profile setup.

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

USB CONNECTION PORT INTERFACE

- The USB port **1** is located on the control panel and on the rear of the center console. There are two USB Type-C ports.
- There are charging ports on the 2nd row center console and by the 3rd row cupholders.
- When a compatible USB memory device is plugged into the USB port, compatible audio files stored on the device can be played through the vehicle's audio system.
- For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.

The voice recognition system can be set to Google Assistant.



 
 
 
To select which system you wish to use:

1. Touch the  settings key on the home screen.
 2. Touch "Apps & Notifications".
 3. Touch "Active Voice Assistant".
 4. Select the preferred system. The selected app icon will appear on the Launch Bar.
- Press the  button on the steering wheel to use the voice recognition system.
 - When Apple Carplay® or Android Auto™ are active, pushing and holding the  button will start a Siri® or Google Assistant session.
 - If no device is connected, pushing and holding  button opens the screen to add devices.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Touch the  key **1** on the home page.
2. Touch the “Connections” key **2**.
3. Touch the “Device” tab **3** and touch “Add Device”.
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

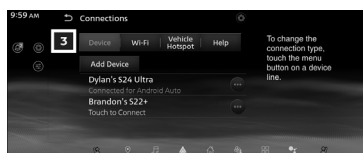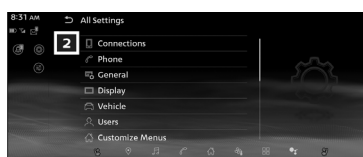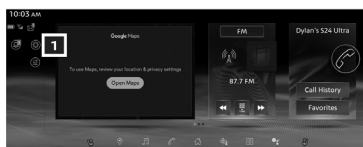

VEHICLE PHONEBOOK

 
1. Touch the  key on the Launch Bar.
2. Touch the “Phonebook” tab.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Touch the  key on the Launch Bar. The “Phonebook” screen **4** appears on the display.
2. Select one of the options to make a call.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press the  button on the steering wheel
 - Touch the  Decline key on the screen.

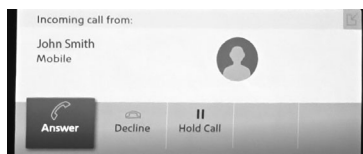

SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch “Use Handset” on the screen to use the handset (cellular phone).

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Bluetooth® Hands-Free Phone System” and the “Voice Recognition” sections of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located below the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- To start a Siri session:
 - Press and hold the  button on the steering wheel. Press the button again to end a Siri session.
 - Use the “Hey Siri” command.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available while driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the touch the Home menu key on the Launch Bar.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **1**, or
 - Touch “Apple CarPlay” on the app’s menu screen.
- NISSAN Phone menu and NISSAN Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner's Manual.

 
AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you can connect a USB cable to the USB connection port located beneath the climate controls. You can also connect via Bluetooth by touching the  key then touching "Connections" followed by "Add Device".
 - Depending on the setting, the startup information screen will appear on the center display.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed by pressing and holding the  button on the steering wheel. Press the button again to end voice operation.
- To return to the Android Auto™ home screen from the main menu:
 - Touch the  key **1** on the Launch Bar, or
 - Touch "Android Auto" on the app's menu screen.
- NISSAN Phone menu will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.

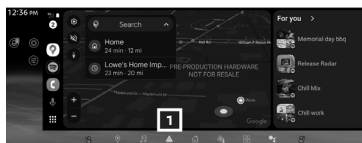

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" and the "Apps" sections of your NissanConnect® Owner's Manual.

NISSANCONNECT® SERVICES POWERED by SiriusXM®

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the MyNISSAN® app on your compatible iPhone® or Android® smartphone and log into it using your Nissan Owner Portal ID and password.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- For full details on NissanConnect® Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **1-855-426-6628**.
- Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect® features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect® features and services, please consult your vehicle's NissanConnect® Owner's Manual at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. For frequently asked questions, please visit: **www.nissanusa.com/connect/faq**.

Some of the available NissanConnect® services may include:

- Automatic Collision Notification (if so equipped) - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Connection to Roadside Assistance (if so equipped) - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle's location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching "Call Nissan Assistance".
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect® Services companion app or website or contact a NissanConnect® Services Response Specialist.
- Remote Engine Start - Start your engine remotely using the NissanConnect® Services companion app or website.
- Boundary Alert - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect® Services web portal or companion app.
- Speed Alert - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Valet Alert - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect® Services companion app or website.
- Curfew Alert - Specify curfew limits via the NissanConnect® Services companion app or website and will be notified via a selected method if curfew is violated.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- My Car Finder - This allows you to locate your vehicle en route or in a crowded lot.
- Collision Management (if so equipped) - In the event of an emergency, Collision Management is used to document any damage and set-up transportation of your vehicle to a dealership.
- Hybrid Radio (if so equipped) - Stay connected to your favorite radio station regardless of your location as you drive your vehicle.
- Connected Garage Door Opener - Open or close your compatible garage door, turn off the interior light and check the general status of your garage door.

To access these features in your vehicle:

1. Touch the apps key on the Launch Bar.
2. Touch "NissanConnect Services".
3. Select an item from the NissanConnect® Services menu screen.

DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
 - Transfer the destination from the smartphone, then transfer to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch-screen display.
 - Touch "Store" to register the destination in the address book.
 - Touch "Ignore" to cancel the transfer of the destination.
 - Touch "Start" to start route guidance.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

WIRELESS CHARGING (if so equipped)

The wireless charger is located in the center console underneath the lid. Lay the smartphone horizontally on the pad of the wireless charger **1**. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.



- Please note that phone position and phone case type can impact wireless charging.

Keeping the lid open and removing the smartphone case can improve charging efficiency, and disabling the phone's vibration function can help keep it in the ideal charging position.

If you are experiencing persistent situations where the phone won't charge, it is recommended that you contact a NISSAN dealer.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of a smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

 
TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch the  Settings key on the Launch Bar.
 2. Touch "Connections" and then touch "Wi-Fi".
 3. Turn on Wi-Fi.
 4. Touch the name of the device you wish to connect.
 5. Enter the network password and touch →. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key .
4. Touch the key next to the device name. The information and the setting options of the device will be displayed.

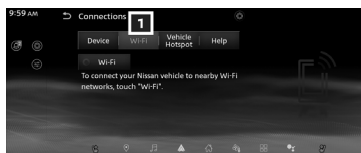


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

 - This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-Free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

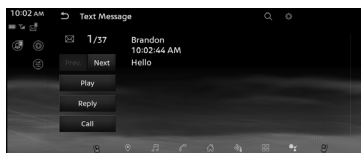

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Touch the "Settings" key **1**.
 2. Touch the "Connections" key.
 3. Touch the "Device" key **2**.
 4. Touch "Add Device".
- Once your Bluetooth® device has been connected as an audio device:
 1. Touch the  audio key **3** on the Launch Bar.
 2. Select the added device from "Source" key **4**.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

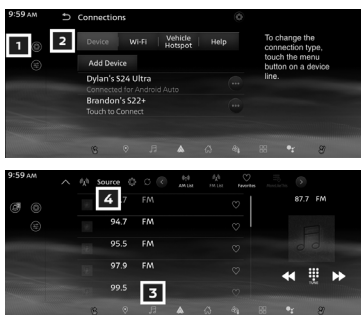

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

myQ CONNECTED GARAGE

myQ Connected Garage allows for remote monitoring, opening and closing of myQ compatible garage doors. This can be accessed through the touch-screen display. Download the myQ app on your smartphone using the QR code displayed on the touchscreen display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS

- A camera and radar sensor support forward driving aids for your vehicle. The camera is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Cruise Control (ICC) (on ProPILOT Assist system)
 - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc.).
- If the warning message appears or the warning light illuminates, stop the vehicle in a safe place, press the **P (Park)** button, and turn the engine off. Clean the radar sensor areas and restart the engine. This may mean cycling the windshield wipers and turning on the windshield defrost for a few minutes. If the message and light continue to appear after cleaning radar sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.



Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual **3**



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW system helps alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator light **1** located on the outside mirrors illuminates if the radar sensors detect a vehicle in the detection zone.
- The indicator light **1** will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.
- The BSW system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

INTELLIGENT CRUISE CONTROL (ICC)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set vehicle-to-vehicle mode, push the ProPILOT Assist  switch **1** on the steering wheel and release it. The ICC indicators will illuminate.
- Accelerate to the desired speed.
- Push the **SET** switch **2** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Push the distance  switch **3** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection indicator will illuminate **4**.
- When a vehicle is not detected ahead of you in the lane, the vehicle ahead detection indicator will turn off **5**.

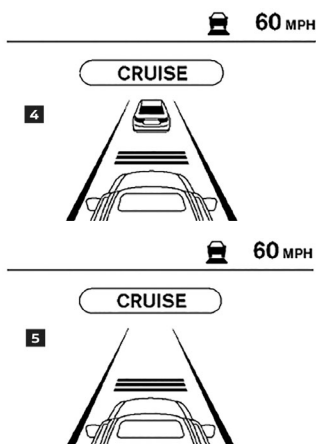

DRIVING FEATURES

- To reset at a faster cruising speed, push and hold the **RES±** switch **6** up on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **RES±** switch **6** down on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **7** on the steering wheel or tap the brake pedal. The set vehicle speed indicator will turn off.
- To turn off Intelligent Cruise Control, push the ProPILOT Assist  switch **1** on the steering wheel. The ICC indicators in the instrument panel will turn off.

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist  switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

PROPILOT ASSIST SYSTEMS

ProPILOT Assist is a hands-on driver assistance system intended for limited access expressways and is not designed to be used on city/rural streets. The system is intended to help keep the vehicle in the center of the lane and help maintain a preset distance to the vehicle ahead traveling in the same lane.

The two primary features of ProPILOT Assist include Intelligent Cruise Control (ICC) and Steering Assistance. ProPILOT Assist 1.1 equipped vehicles include Speed Adjust by Route, Speed Limit Assist and Extended Stop. ProPILOT Assist 2.1 (if so equipped and subscribed) offers features like Lane Change Assist, Passing Assist, and Steering Assist with HD map data. The driver is responsible for the driving task and must be prepared to steer and brake the vehicle at all times.

Vehicles equipped with ProPILOT Assist 2.1 will have two roof mounted antennas.

PROPILOT ASSIST OPERATION

1. Push the ProPILOT Assist  switch **1** on the steering wheel.
 - The ProPILOT Assist system display will appear on the vehicle information display.
 - Safety Shield status is temporarily displayed.



DRIVING FEATURES

2. Once the vehicle is at the desired speed, push the **SET** switch .
 - The vehicle will maintain the set speed, unless the vehicle detects a slower vehicle in the traveling lane, or Speed Limit Assist or Speed Adjust by Route is active.
3. Adjust distance setting using the distance  switch **3**, if necessary.
 - The vehicle will maintain the set speed, unless the vehicle detects a slower vehicle in the traveling lane, or Speed Limit Assist or Speed Adjust by Route is active.

TO INCREASE SPEED

- Push the **RES±** switch **2** up and hold to increase speed in 5 mph (5 km/h) increments.
- Push the **RES±** switch **2** up and quickly release the switch to increase speed by 1 mph (1 km/h).
- Accelerate to the new desired speed and press the **SET** switch.

TO DECREASE SPEED

- Push the **RES±** switch **2** down and hold to decrease speed in 5 mph (5 km/h) increments.
- Push the **RES±** switch **2** down and quickly release the switch to decrease speed by 1 mph (1 km/h).

TO CANCEL THE SYSTEM

- Push the **CANCEL** switch **4** or tap the brake pedal.
- These actions will keep the system in standby. To resume, push the **RES±** switch up or down **2** to return to the original vehicle set speed, or push the **SET** switch down to set the current vehicle speed.

UNDERSTANDING THE DISPLAY

Display color will change depending on ProPILOT Assist modes. See table; the further down the list, the higher the level of the mode. Images shown are examples - actual condition may vary slightly. Display may vary depending on vehicle and display configuration.

Color	Meaning
None	System off
Gray	Standby
White	ICC system active
Green	Hands-On mode active
Blue	Hands-Off mode active (ProPilot Assist 2.1 only)

DRIVING FEATURES

5 ProPILOT Assist indicator:

- Indicates the status of the ProPILOT Assist function.

6 Steering Assist indicator:

- Indicates the status of the Steering Assist function.

7 Vehicle Set Speed indicator:

- Indicates the vehicle set speed.

8 Intelligent Cruise Control (ICC) status indicator:

- Displays the status of the speed control including the distance setting and detection of a lead vehicle.

9 Speed Limit Adjust indicator:

- Indicates the detected speed limit. "A" indicates Auto mode.

10 Lane Change Assist indicator:

- Icon is displayed when Lane Change Assist feature is available.

11 Lane Marker indicator:

- Displays real world lane condition.

12 Blind Spot Detection:

- Indicates when a vehicle is detected in the blind spot.

13 Surrounding Vehicle Display:

 
- Displays other detected vehicles, including passenger vehicles, trucks and motorcycles. The multi-lane display is only available on HD mapped divided highways.

14 Road information indicator (if so equipped):

- Displays the detected road information.

15 Detected road sign (speed limit) indicator (if so equipped):

- Displays the detected road information.

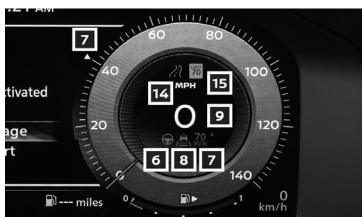

UNDERSTANDING THE FEATURES OF PROPILOT ASSIST SYSTEMS

INTELLIGENT CRUISE CONTROL

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h). Hands-off driving is only available for speeds up to 85 mph (136 km/h).
- When a vehicle is detected in the lane ahead, the ICC system helps control the vehicle speed to maintain the distance from the vehicle ahead set by the driver.

DRIVING FEATURES

- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and keep the vehicle stopped.
- When the vehicle ahead begins to move, push and release the **RES±** switch up or tap the accelerator pedal if your vehicle has been stopped for more than three seconds (and up to 30 seconds on the highway). The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system may warn the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected.

STEERING ASSIST

- When the lane markers are clear and consistent on both sides of the vehicle, the Steering Assist system assists the driver to help keep the vehicle within the traveling lane.
 - This feature can operate when vehicle speed is above 37 mph (60 km/h).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
 - With the Steering Assist active, when a curve or strong cross wind exceeds the capabilities of the system and your vehicle approaches either the left or the right side of the traveling lane, the I-LI system will flash the I-LI indicator on the vehicle information display and provide steering wheel vibration to alert the driver.
- Steering Assist is canceled or temporarily goes into standby mode under, but not limited to, the following conditions:
 - The turn signals are activated (for vehicles not equipped with ProPILOT Assist 2.1).
 - Both hands are not detected on the steering wheel. To prevent standby mode, simply apply more pressure or a tighter grip on the steering wheel.
 - The system cannot detect clear and consistent lane markers.
 - The wipers are in HIGH speed position.
 - Steering Assist will not activate if the system does not detect lane markers.

DRIVING FEATURES

 
TO TURN OFF STEERING ASSIST

- Push the  Steering Assist switch **16** on the instrument panel to the left of the steering column or turn it off in the "Driver Assistance" settings under "Lane Centering Assist" in the vehicle information display.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see the Owner's Manual.



HANDS ON DETECTION

- The vehicle uses capacitive sensors in the steering wheel to detect whether the driver has their hands placed on the wheel.
- If the driver's hands are not detected on the wheel, the warning appears **17** and a series of escalating warnings will continue. The driver must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

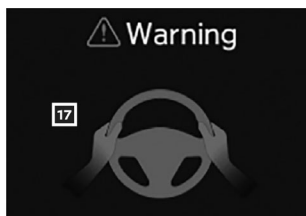

PROPILOT ASSIST 1.1 (if so equipped)

- ProPILOT Assist with 1.1 has all the same features of ProPILOT Assist and includes a link to navigation to provide new features like "Speed Limit Assist" and "Speed Adjust by Route".

SPEED LIMIT ASSIST

- When ProPILOT Assist is active and detects a change of the speed limit, the new speed limit sign value is indicated **18** (green outline around sign icon) in the display and can be applied to the vehicle set speed automatically or manually. The driver also has the option to add an offset to the posted speed limit.
- When in manual mode, to accept the new set speed, press **RES±** switch up to accept a higher speed or down to accept a lower speed. The detected speed can be rejected by pressing the **RES±** switch in the opposite direction.
- If you wish to maintain the current set speed, no action is required.
- If Speed Limit Assist is set to "AUTO" mode, the set speed will automatically change (no driver action required).



DRIVING FEATURES

TO TURN OFF SPEED LIMIT ASSIST

- Speed Limit Assist can be turned off in the “Driver Assistance” settings under “Intelligent Cruise” in the vehicle information display through:
 - Intelligent Cruise / Speed Limit Assist / Auto/Manual/OFF

SPEED ADJUST BY ROUTE

- When ProPILOT Assist is active on the freeway, the system uses road information provided by the Map locator system to help adjust the vehicle speed as indicated by the Speed Adjust by Route Icon **19**.
- When the Speed Adjust by Route system is active on limited access freeways, the system uses road information provided by the Map locator system to adjust the vehicle speed depending on road curvature in freeway interchanges and freeway curves.
- The system may not always reduce speed for all freeway interchanges and freeway curves. The driver may need to apply additional braking at any time.
- When the vehicle is through the freeway interchanges and freeway curves, the vehicle will accelerate again to the set speed.
- The driver needs to maintain vehicle control and apply braking whenever necessary. For best results, a route must be set using in-vehicle navigation.

 


TO TURN OFF SPEED ADJUST BY ROUTE

- Speed Adjust by Route can be turned off in the “Driver Assistance” settings under “Intelligent Cruise” in the vehicle information display.

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- This mode allows driving at a fixed speed between 25 to 90 mph (40 to 144 km/h). The system will not respond to vehicles ahead in your lane.
- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist  switch **1** for longer than approximately 1.5 seconds.
- When at the desired speed, push the **SET** switch.
- To accelerate or decelerate your vehicle to the desired speed, push the **RES±** switch up or down and release it.
- The conventional (fixed speed) cruise control mode display and indicators **20** are displayed in the vehicle information display.
- To use the ICC system again, press the ProPILOT Assist switch to turn off the system and then press and release the switch to turn on ProPILOT Assist ICC mode.

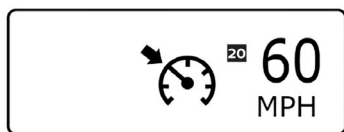

DRIVING FEATURES

STEERING ASSIST WITH HD MAP DATA (A feature of ProPILOT Assist 2.1)

- ProPILOT Assist 2.1 allows the driver to take their hands off of the steering wheel when certain conditions are met, as indicated by the Hands-Off steering assist indicator and blue display.
- For Hands-Off driving, the vehicle must be on a highway or limited access freeway as defined by the HD map data.

Mode	Display Color	Steering Assist Symbol
OFF	None	None
Standby	Gray	None
Intelligent Cruise Control	White	
Hands-On mode	Green	
Hands-Off mode	Blue	

- The system may request the driver to place their hands back on the wheel at any time if conditions are no longer met – including construction zones, tight curves, merging lanes, for example.
- Hands-off driving is only available for speeds up to 85 mph (136 km/h).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

DRIVER MONITOR

- ProPILOT Assist 2.1 uses a driver facing camera located on the steering column to monitor the driver's attention to the road ahead.
- If the system does not detect driver's attention to the road ahead, a series of escalating warnings will display in an effort to draw the driver's attention back forward.
- On ProPILOT Assist 2.1 vehicles, the driver monitor is monitoring driver attention in all driving conditions, not just when ProPILOT Assist 2.1 is active.

DRIVING FEATURES

LANE CHANGE ASSIST (A feature of ProPILOT Assist 2.1)

- When ProPILOT Assist 2.1 is active and the Lane Change Assist indicator **21** is illuminated in blue, Lane Change Assist can help the driver with steering control during a lane change when the turn signal is activated and conditions are met.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
TO TURN OFF LANE CHANGE ASSIST

- Lane Change Assist can be turned off in the "Lane Change Assist" settings under "Driver Assistance" in the vehicle information display.



PASSING ASSIST (A feature of ProPILOT Assist 2.1)

- When ProPILOT Assist is active and the Lane Change Assist indicator is illuminated in blue, the Passing Assist feature can suggest a lane change to the left when a slower vehicle is detected ahead.
- The driver can accept to pass the slower vehicle by pressing the lane change assist switch **22** on the steering wheel.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

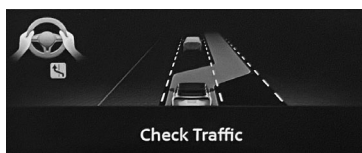

The following is shown in the vehicle information display when Lane Change Assist is assisting the lane change of the vehicle.



Setting	Lead vehicle speed
Sport	3 MPH + (5 km/h) slower
Standard	6 MPH + (10 km/h) slower
Comfort	9 MPH + (15 km/h) slower

DRIVING FEATURES

TO ADJUST SUGGESTION TIMING OR TURN OFF PASSING ASSIST

- Passing Assist can be changed or turned off in the “Driver Assistance” settings under “Lane Change Assist” in the vehicle information display.

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or certain and/or unique traffic conditions. Clean/defrost your windshield and/or clean the sensor(s) to keep this feature working properly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**”, “**Starting and driving**” and the “**Technical and consumer information**” sections of your Owner's Manual.

DASH CAM (if so equipped)

To access the in-vehicle camera:

- Touch the apps key **1** on the launch bar to display the apps menu.
- Touch “Dash Cam” to display the driving recorder screen.



Menu options:

- 2 Record Event:** touch to start recording manually.
 - 3 Take a Photo:** touch to save the image shown on the camera screen.
 - 4 Inside/Outside Camera:** touch to switch between the interior and exterior camera.
 - 5 File Menu:** touch to view or delete saved photos and recorded files.
- The companion app for the Dash Cam can be downloaded from the Google Play™ store or the App Store®. See your Owner's Manual for Wi-Fi and password information.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**” and the “**Monitor, climate, audio, phone and voice recognition systems**” sections of your Owner's Manual.

DRIVING FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle, cyclist or pedestrian ahead in the traveling lane.
- Intersection assist helps the driver when there is a risk of a forward collision when turning right or left. The turn signal must be activated for the system to detect an approaching vehicle. The system may detect a pedestrian without the turn signal activated.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian and cyclist detection function, the AEB with Pedestrian Detection system operates at speeds between 6-50 mph (10-80 km/h). Intersection assist operates between 6-16 mph (10-25 km/h) when the turn signal is active.
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert. The system also applies partial braking.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing red) **1** and audible warning. In addition, the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.
- If the warning light **2** illuminates or the "Forward Driving Aids temporarily disabled Front Sensor blocked" message or the "Unavailable Low Visibility" message appears, this indicates the camera or radar sensor may be obstructed. Use the wipers and defrost mode to help clear camera obstruction (dirt, condensation, etc.).
- The AEB with Pedestrian Detection system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

 
DRIVING FEATURES

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)


- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by selecting the **R (Reverse)** shift position. The monitor displays various views of the position of the vehicle.



- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the **CAMERA** button **1** or the screen icon at the bottom of the display to switch between the available views:

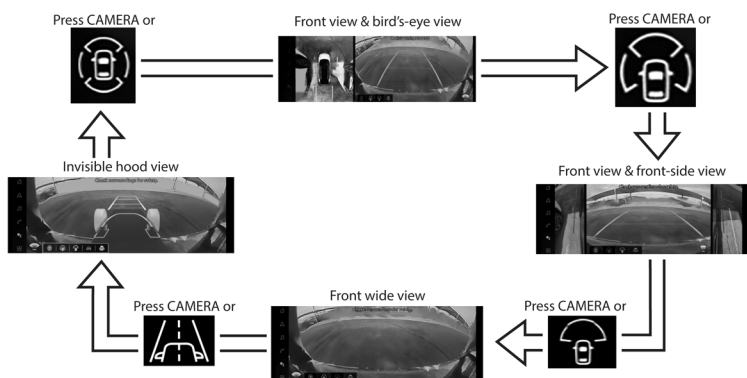


- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the icon **2** at the bottom of the display to see the 3D View **3** (if so equipped).
- The Invisible Hood View allows you to see the road surface underneath the vehicle. This may be useful for aligning the front wheels at a car wash or help to avoid hitting the side of curbs when operating at low speeds.
- The front and rear wide views show a wider area on the entire screen and allows checking of the blind corners on the right and left sides.

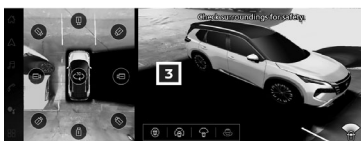 


DRIVING FEATURES

 - When the **R (Reverse)** shift position is selected, press the **CAMERA** button or the screen icon at the bottom of the display to switch between the available views:

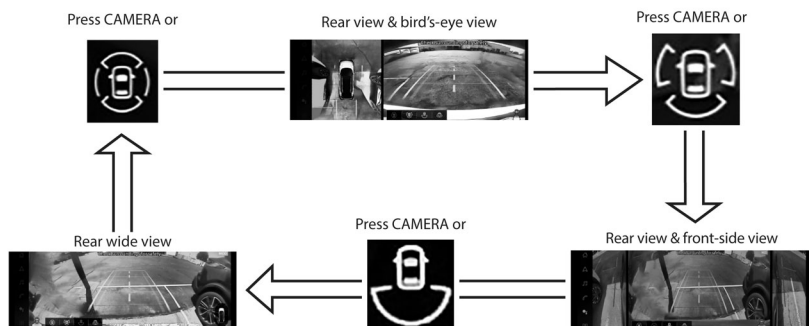

- The colored guidelines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Blue 3 ft (1 m)
 - Blue 7 ft (2 m)
 - Blue 10 ft (3 m)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects:
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **4**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **5** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.
- Objects in the bird's-eye view will appear farther than the actual distance.

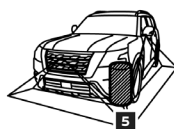 

DRIVING FEATURES

MY PARKING LOCATIONS (if so equipped)

- This system allows you to ensure that there is enough space to open the door at your usual parking spot, such as your home garage.
- To register a parking location after parking the vehicle in the correct position:
 1. Press the camera button.
 2. Touch the "Settings" key.
 3. Touch the "My Parking Locations" key.
 4. Touch your preferable parking location from the list, then touch the "Register" key.
- After registering the parking space, use the on-screen arrows to adjust the parking space frame or delete it.
- Once registered, the display view switches and the parking guide appears when the vehicle approaches the registered spot.

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the transmission is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, an orange frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Green MOD icon **6** ; the system is active.
 - Gray MOD icon; the system is not active.
 - No MOD icon; the system is off . The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

DRIVING FEATURES

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the **R (Reverse)** shift position is selected and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.

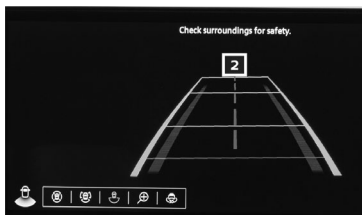

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - A forward or a reverse gear shift position is selected.
 - The vehicle is stopped completely on a hill by applying the brakes.
- Hill Start Assist will not operate when the **N (Neutral)** or **P (Park)** position is selected or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side lane marking.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side lane marking, the LDW system will vibrate the steering wheel and the orange LDW indicator **1** on the instrument panel will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane.
- The LDW and I-LI systems can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.



INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver by blinking the vehicle ahead detection indicator light **1** and an audible alert.

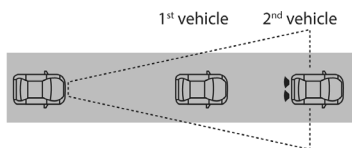

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

FRONT AND REAR SONAR SYSTEM

- The system informs with a visual and audible alert of front obstacles when the **D (Drive)** position is selected and both front and rear obstacles when the **R (Reverse)** position is selected.
- The sonar (parking sensor) system sounds a tone to inform the driver of obstacles near the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

TOWING

 
When TOW mode is selected with the drive mode selector or when the Trailer Blind Spot is turned on, multiple driver assistance features will be limited or unavailable. The Trailer Blind Spot can be turned on or off using the Shortcut Menu button on the steering wheel or through the "Driver Assistance" menu in the vehicle information display. See your Owner's Manual for more information.

TRAILER BRAKE CONTROLLER UNIT (TBCU)

The Trailer Brake Controller Unit assists with effective and smooth braking while towing a trailer.

■ Operating Modes:

- Automatic: Automatic operation of trailer brake pressure based on gain and boost settings.
- Manual: Manually applies trailer brake pressure without pressing the vehicle's brake pedal.

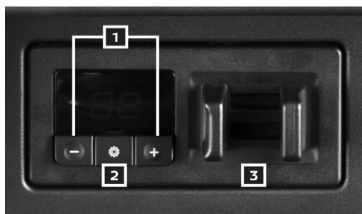

- In automatic mode, the gain controls the amount of trailer braking pressure. To set the gain:
 - Press the - or + button **1** to decrease or increase the braking force supplied to the trailer brakes. For example, a gain setting of 6.0 is a typical starting point for heavy loads.
- In automatic mode, the boost can be set to change the feel of the trailer brake when the vehicle's brake pedal is pressed. To set the boost:
 - Press the  button **2** once to display the current boost setting.
 - Press the  button **2** again to increase the boost level or continue to press the  button **2** to return the boost to the off position.

DRIVING FEATURES

- To manually apply the brake pressure to the trailer without pushing the vehicle's brake pedal, pinch the manual control levers **3** together. The amount of pinch pressure applied to the levers **3** correlates to the amount of brake pressure applied.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Starting and driving" and the "Technical and consumer information" sections of your Owner's Manual.

TRAILER BACK-UP ASSIST (if so equipped)

This feature assists in parking your trailer. Using the rear zoom view from the Intelligent Around View Monitor, this shows an enlarged portion of the rear ground area. This provides a clear limited rear view with the predictive center line, which can be useful when docking a trailer to the vehicle.

- To activate the Trailer Back-Up Assist:
 1. Press the **CAMERA** button **1**.
 2. Touch the zoom-in key  once the camera screen is displayed.
 3. Select another camera view or press the return key  to return to the normal camera view.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

DRIVING FEATURES

DRIVE MODE SELECTOR (if so equipped)

STANDARD

- STANDARD drive mode **1** is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO drive mode **2** assists the driver's ECO-driving.

SPORT

- SPORT drive mode **3** is recommended for an enhanced performance feel. Fuel economy may be reduced.

TOW

- TOW drive mode **4** should be used when you are towing a trailer behind your vehicle.

ROCK (4WD ONLY)

- ROCK drive mode **5** makes it easier to start and drive on deep gravel, moguls or rocky roads.

SAND (4WD ONLY)

- SAND drive mode **6** makes it easier to drive on sandy roads or dunes.

MUD/RUT (4WD ONLY)

- MUD/RUT drive mode **7** makes it easier to start and drive on muddy roads, muddy ruts and riverbeds.

SNOW

- SNOW drive mode **8** makes it easier to start and drive on snowy roads and frozen roads.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

 


DRIVING FEATURES

HEAD UP DISPLAY (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle speed
- Navigation
- Driving Assist
- Speed Limit Sign
- Audio
- TEL/SMS
- Message for Driver Assistance
- Warning message
- Press the Head Up Display (HUD) switch **1** on the lower instrument panel to turn the system on and off.
- To adjust the Head Up Display settings when the system is on:
 1. Press the ◀▶ arrows **2** on the steering wheel until you get to the "Settings" menu in the vehicle information display. Press the scroll/ **OK** dial to select "Head-Up Display" **3**.
 2. Adjust the positioning of the Head Up Display on the windshield by making a selection and press the scroll/ **OK** dial on the steering wheel to adjust features such as the height and brightness.

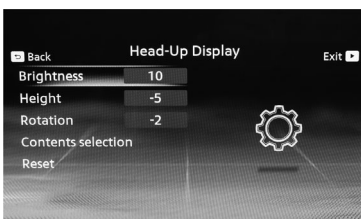

The following features can be adjusted through the "Settings" menu in the vehicle information display:

- Brightness
- Height
- Rotation
- Contents Selection
- Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

DRIVING FEATURES

DIFFERENTIAL LOCK MODE (if so equipped)

- The rear differential lock (DIFF-LOCK) is designed to transmit engine power to the left and right wheels equally.
- If your vehicle is stuck in sand, snow, mud, etc. or one wheel is off the ground and the differential lock is not on, engine power is transmitted to one wheel causing it to spin, leaving insufficient traction on the other wheel. The rear differential lock allows the left and right wheels to rotate as a unit, enabling your vehicle to free itself.
- To lock the rear differential gear, reduce the vehicle speed below 4 mph (7 km/h) and turn the 4WD shift switch to the 4L position. Then push the differential lock mode switch **1** to the "ON" position. The differential lock indicator light will blink in the meter and then stay on when the differential gear is completely locked.
- After using the rear differential lock, or during normal driving, push the differential lock mode switch **1** to the "OFF" position. The indicator light will turn off after the differential lock is released.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

 
NISSAN ALL-MODE 4WD® (if so equipped)

The all mode 4WD system provides three positions (AUTO, 4H and 4L), so you can select the desired drive mode according to the driving conditions.

The 4WD positions are linked to the Drive Mode Selector. When "SPORT" or "ECO" mode is selected in the Drive Mode Selector, you cannot select 4H and 4L position in the 4WD system. When "SAND", "ROCK" or "MUD/ RUT" mode is selected in the Drive Mode Selector, you cannot select AUTO position in the 4WD system.

1 AUTO

- Use **AUTO** for driving on paved or slippery roads.
- When the vehicle is driving straight, push the **AUTO** switch **1**. Stop the vehicle and select the shift position **N (Neutral)**, then push the **AUTO** switch **1** while depressing the foot brake pedal when changing out of 4L.

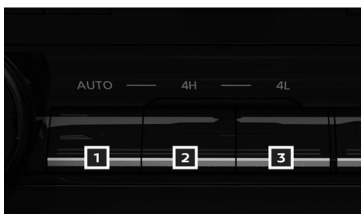

2 4H

- Use **4H** for driving on rocky, sandy or snow-covered roads.
- When the vehicle is driving straight, push the **4H** switch **2**. Stop the vehicle and select the shift position **N (Neutral)**, then push the **4H** switch **2** while depressing the foot brake pedal when changing out of 4L.

3 4L

- Use **4L** when the maximum power and traction is required (for example, on steep grades or rocky, sandy or muddy roads).
- Stop the vehicle and select the shift position **N (Neutral)**, then push the **4L** switch **3** while depressing the foot brake pedal.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

AIR SUSPENSION SYSTEM (if so equipped)

The air suspension system controls the vehicle height in accordance with the driving situations and the driver's preferences.

When the AUTO switch **1** is turned ON by pushing and holding the switch for approximately one second, the vehicle height is automatically controlled in accordance with the vehicle speed, the transmission position and the 4WD mode.

The basic vehicle height is NORMAL and can be adjusted to three other vehicle heights.

■ HIGH

- The vehicle height helps improve off-road driving performance.

■ AERO

 
- The vehicle height helps improve fuel efficiency when driving at high speeds.
- When the AUTO switch **1** is turned ON and the vehicle speed is above approximately 56 mph (90 km/h), the vehicle height is lowered to improve aerodynamics. When the vehicle speed decreases to less than approximately 43 mph (70 km/h), the vehicle height returns to the NORMAL position.

■ ACCESS

- The vehicle height improves the ease of getting in and out of the vehicle as well as the loading and unloading of cargo.
- Pressing the height level control down switch **3** lowers the vehicle height to ACCESS position.
- Pressing the height level control up switch **2** returns the vehicle to the NORMAL position.
- When the AUTO switch **1** is turned ON and the vehicle is in the **P (Park)** position the vehicle height will be lowered to the ACCESS position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

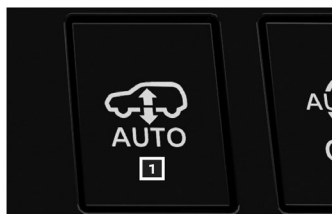



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2026/armada or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

