



QUICK REFERENCE GUIDE

2026 KICKS



1

3

2

5

6

4

8

7

COCKPIT OVERVIEW

- 1** Vehicle Information Display
- 2** Headlight and Turn Signal Switch
- 3** Low Tire Pressure Warning Light (!)
- 4** Wiper and Washer Switch
- 5** Audio Control / Vehicle Information Display Switches
- 6** Intelligent Cruise Control / Bluetooth® Switches
- 7** Hood Release 🚗
- 8** Tilt and Telescopic Steering Wheel Lever



1

3

5

2

5

4

6

7

8

INSTRUMENT PANEL

- 1** Center Display / Rearview Monitor Display / AroundView® Monitor Display (if so equipped)
- 2** Climate Control Panel for Heater and Air Conditioning/Front and Rear Window Defroster
- 3** Front Passenger Air Bag Status Light
- 4** USB Connection Port Interface
- 5** Heated Seat Switches (if so equipped)
- 6** Electronic Parking Brake / Automatic Brake Hold Switch
- 7** Heated Steering Wheel Switch (if so equipped)
- 8** Steering Assist Switch (if so equipped)

TABLE OF CONTENTS

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM	3
SEAT ADJUSTMENTS	4
2 ND ROW SEATS	5
STARTING/STOPPING THE ENGINE	5
TILT AND TELESCOPIC STEERING WHEEL	5
OUTSIDE MIRROR CONTROL SWITCH	6
EMERGENCY CALL (SOS) BUTTON (if so equipped)	6
HEATER AND AIR CONDITIONER (automatic) (if so equipped)	7
HEATED STEERING WHEEL (if so equipped)	8
HEADLIGHT CONTROL SWITCH	8
WIPER AND WASHER SWITCH	10
VEHICLE INFORMATION DISPLAY	11
OUTSIDE TEMPERATURE DISPLAY	12
TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT	13
CAPLESS FUEL FILL AND FUEL-FILLER DOOR	14
LIFTGATE RELEASE	14

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

HOW TO USE THE TOUCH-SCREEN DISPLAY	15
CLOCK SET/ADJUSTMENT	17
USB CONNECTION PORT INTERFACE	17
BLUETOOTH® HANDS-FREE PHONE SYSTEM*	18
FM/AM/SiriusXM® Radio	20
APPLE CARPLAY®	22
ANDROID AUTO™	23
NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)	24
WI-FI	26
HANDS-FREE TEXT MESSAGING ASSISTANT*	26
SIRI® EYES FREE	27
WIRELESS CHARGING (if so equipped)	28



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system", the "Monitor, climate, audio, phone and voice recognition systems" and the "Starting and driving" of your Owner's Manual.

TABLE OF CONTENTS


DRIVING FEATURES

ELECTRONIC PARKING BRAKE	29
FORWARD DRIVING AID SENSORS (if so equipped)	30
BLIND SPOT WARNING (BSW)	31
REAR CROSS TRAFFIC ALERT (RCTA)	31
AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM	32
VEHICLE DYNAMIC CONTROL (VDC)	32
HILL START ASSIST	33
INTELLIGENT AROUND VIEW® MONITOR (if so equipped)	33
REAR AUTOMATIC BRAKING (RAB)	35
LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)	36
DRIVE MODE SELECTOR	36
IDLING STOP SYSTEM (if so equipped)	37
INTELLIGENT FORWARD COLLISION WARNING (I-FCW)	38
TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)	38
INTELLIGENT DRIVER ALERTNESS (I-DA)	38
INTELLIGENT CRUISE CONTROL (ICC)	39
FRONT AND REAR SONAR SYSTEM (if so equipped)	40
PROPILOT ASSIST (if so equipped)	40

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

This system allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

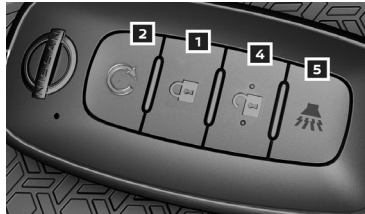


REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the Intelligent Key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. If the doors are unlocked, press the  button **1** to lock all doors.
 2. Press the  button **1** again.
 3. Within 5 seconds, press and hold the engine start  button **2** for at least two seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 20 minutes and then turn off.
 - The vehicle needs to be driven at speeds of 4 mph (7 km/h) before the remote engine start procedure can be used again.
- To start driving, depress the brake pedal and push the ignition switch.

LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch (if so equipped).
- To lock the vehicle, push the liftgate request switch (if so equipped) **3** or press the  button **1** on the key fob.
- To unlock the vehicle, press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **5** for longer than 1 second. Once activated, the headlights will flash and the panic alarm will stay on for a period of time.

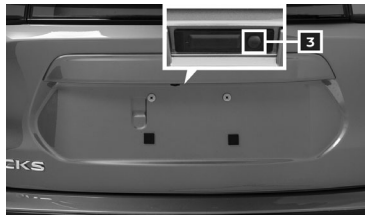

GETTING STARTED

INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 1. Move the shift lever to the **P (Park)** position.
 2. Firmly apply the foot brake.
 3. Push the ignition switch with the Intelligent Key, and a chime will sound.
 4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

APPROACH UNLOCK FUNCTION (if so equipped)

- When you approach the vehicle with the Intelligent Key, all the doors will be unlocked automatically by the approach unlock function. This function is disabled by default. You can enable this function using the vehicle information display.

WALK AWAY LOCK FUNCTION (if so equipped)

- When you walk away from the vehicle with the Intelligent Key, the vehicle will be locked automatically by the walk-away lock function. This function is disabled by default. You can enable this function using the vehicle information display.


*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Pre-driving checks and adjustments", "Starting and driving" and "Do-it-yourself" sections of your Owner's Manual.

SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever **1** under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull the lever up **2** and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

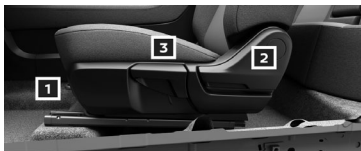

SEAT LIFTER (DRIVER'S SEAT)

- To adjust the seat height, pull up or push down on the adjusting lever **3** repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.

GETTING STARTED

2ND ROW SEATS

- To lay the seatback down:
 - Pull the release knob **1** to fold the seatback forward.
- To lay the 2nd row seats down flat:
 - Release the lock, remove the headrests **2** and stow them on the floor.
 - Fold both seatbacks forward **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.



STARTING/STOPPING THE ENGINE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- Depress the brake pedal.
- Push the ignition switch to the ON position.



TURNING THE ENGINE OFF

- Move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch to the OFF position.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

TILT AND TELESCOPIC STEERING WHEEL

Release the lock lever by pulling it down.

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.
- Lock the steering wheel in place by pushing the lock lever up firmly.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

GETTING STARTED

OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver's side outside mirror or push the right switch **2** to select the passenger's side outside mirror. The indicator light on the selected mirror switch will illuminate.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the cover once to expose the **SOS** button **1** on the overhead console and then press the button.
- For additional information, or to enroll your vehicle, refer to **www.NissanUSA.com/connect** or call **855-426-6628**.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual or refer to the "Apps" section of your NissanConnect® Owner's Manual.

GETTING STARTED

HEATER AND AIR CONDITIONER (automatic) (if so equipped)

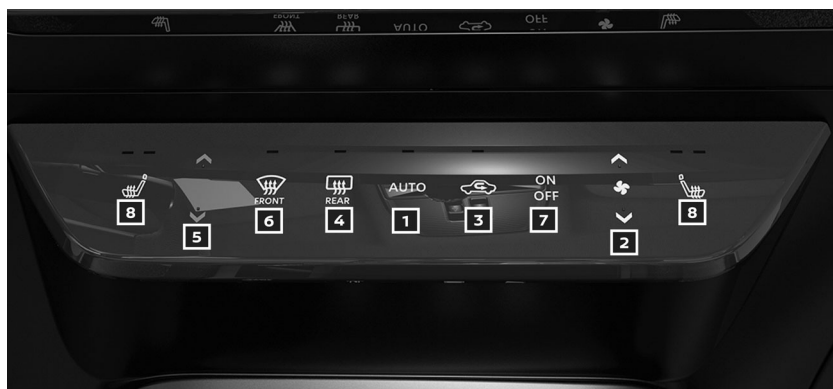

1 AUTO BUTTON

- Press the **AUTO** button **1** to turn the system on, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.
- Press the temperature control arrows **5** to set the desired temperature.

2 FAN SPEED CONTROL BUTTONS

- Press the fan speed control arrows **2** to manually control the fan speed.

3 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  to turn it on and press again to turn it off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

4 REAR WINDOW AND OUTSIDE MIRRORS (if so equipped) DEFROSTER BUTTON

- To defog/defrost the rear window glass and outside mirrors (if so equipped), push the rear window defroster  switch **4**. Push the switch again to manually turn the rear defroster off. This function turns off after approximately 15 minutes.

5 TEMPERATURE CONTROL BUTTONS

- Press the temperature control buttons to set the desired temperature.

GETTING STARTED

6 FRONT DEFROSTER BUTTON

- Press the  button.
- To set the front defroster on high, press the fan control speed buttons **2** all the way up and press the driver's side temperature control button **5** all the way up.

7 ON-OFF BUTTON

- Press the **ON/OFF** button to turn the climate controls on or off.

8 HEATED SEAT SWITCHES (if so equipped)


- Press the driver's or passenger's heated seat button to control the heat.
- Press the button one, two or three times to set the level desired.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

HEATED STEERING WHEEL (if so equipped)

- Push the switch **1** to warm the steering wheel after the engine starts. The indicator light on the heated steering wheel switch will illuminate.
- Once activated, the system will heat the steering wheel and cycle off and on to maintain a temperature above 68°F.
- When the surface temperature of the steering wheel is above 68°F (20°C) and the switch is turned on, the system will not heat the steering wheel. This does not indicate a malfunction.

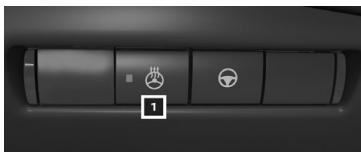

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.




GETTING STARTED

AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3**, then place the ignition in the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF position, **1** or **2**.

HEADLIGHT BEAM SELECT

- With the headlights ON (in the **1** position), push the headlight control switch forward **4** to select the high beam function. The indicator light **2** will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The indicator light will turn off.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.

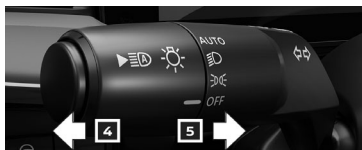

HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the switch at the end of the lever. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 13 mph (20 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, push the switch again.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

GETTING STARTED

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

1 Mist  — One sweep operation of the front wipers.

2 Intermittent  — Wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease the wiper speed.

4 Low  — Wipers operate at a continuous low-speed.

5 High  — Wipers operate at a continuous high-speed.

6 Washer  — Pull the lever towards you to activate the washer. The front wipers will operate several times.

7 The rain sensor sensitivity level can be adjusted by turning the knob toward (High) or (Low).



REAR WIPER AND WASHER

Move the lever to one of the following positions to operate the rear windshield wipers:

8 Intermittent  — Rear wiper operates intermittently.

9 Low  — Rear wiper operates at a continuous low-speed.

10 Rear Washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.



RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)


- The rain-sensing auto wiper system automatically turns on the wipers and adjusts the wiper speed depending on the rainfall and the vehicle speed by using the rain sensor located on the upper part of the windshield.
- To set the rain-sensing auto wiper system, push the lever down to the AUTO position **2**. The wiper will sweep one time while the power switch is in the "ON" position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Do-it-yourself" sections of your Owner's Manual.

GETTING STARTED

VEHICLE INFORMATION DISPLAY

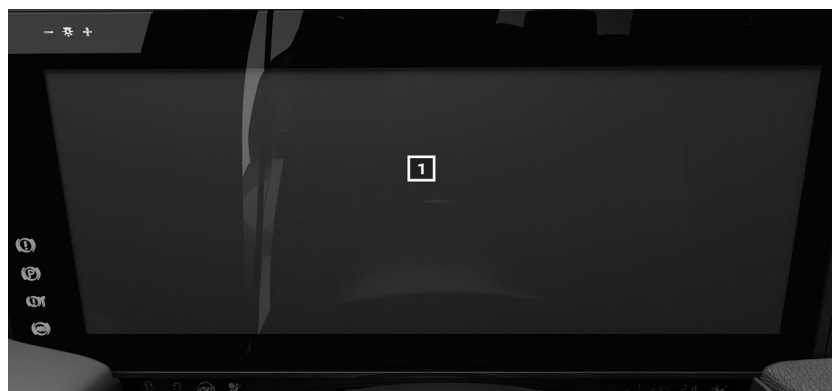

The vehicle information display is located above the steering wheel.

Press the arrows on the steering wheel to change between different screens and the tachometer.


The vehicle information display **1** displays items such as:

- Audio Information
- Fuel Economy Information
- Vehicle and Meter Display Settings
- Gear Position Indicator (P, R, N, D, L)
- Distance To Empty and Fuel Indicator
- Drive Computer Information
- Indicators and Warnings
- Odometer/twin trip odometer

USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the scroll/ **OK** dial **2** and the **◀▶** buttons **3** located on the steering wheel.

- Press the **◀▶** buttons **3** on the steering wheel to change the display mode.
- Press the scroll/ **OK** dial **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.

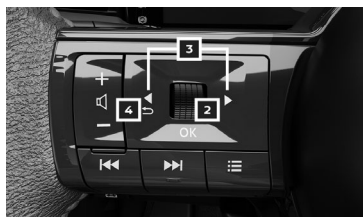

GETTING STARTED

RESETTING THE TRIP COMPUTER

1. Press the ◀▶ buttons **3** located on the steering wheel until you reach the Drive Computer screen.
2. Press the scroll/ **OK** dial to reset the selected drive computer.

SETTINGS

The Settings menu allows you to change the information displayed in the vehicle information display such as:


- | | | |
|---------------------|--------------------|-----------------|
| ■ Driver Assistance | ■ TPMS Settings | ■ Clock |
| ■ Customize Display | ■ Unit / Language | ■ Maintenance |
| ■ VDC Setting | ■ Vehicle Settings | ■ Factory Reset |

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, the outside air temperature will appear in the vehicle information display.
- If the outside air temperature is below 37°F (3°C), a snowflake displays next to the temperature **1**.

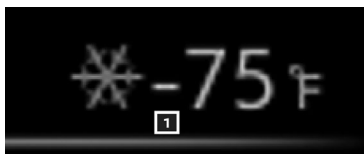

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

GETTING STARTED

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires **2** (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Move the shift lever to the **P (Park)** position and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Starting and driving", "In case of emergency", "Do-it-yourself" and the "Technical and consumer information" sections of your Owner's Manual.

GETTING STARTED

CAPLESS FUEL FILL AND FUEL-FILLER DOOR

FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the passenger's side of the vehicle.

CAPLESS FUEL FILL

- After opening the fuel-filler door, insert the fuel pump nozzle directly into the fuel-filler opening.
- When the fuel pump nozzle is pulled out, the fuel-filler opening will be sealed.



REFUELING FROM A PORTABLE FUEL CONTAINER


- If you need to refuel from a portable fuel container, use the funnel stored in the tool bag under the luggage board. Be sure to insert the funnel into the fuel-filler opening slowly and fully. Insert the nozzle of the portable fuel container into the opening along the funnel and fill the fuel tank.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Pre-driving checks and adjustments" sections of your Owner's Manual.

LIFTGATE RELEASE

- It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).
- To open the liftgate, first unlock the liftgate using one of the following methods:
 - Press the  button **1** on the Intelligent Key twice.
 - Push the liftgate request switch **2** (if so equipped).
- Then push the liftgate release switch **3** and pull the liftgate up.

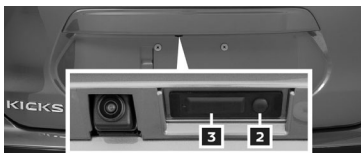


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

HOW TO USE THE TOUCH-SCREEN DISPLAY

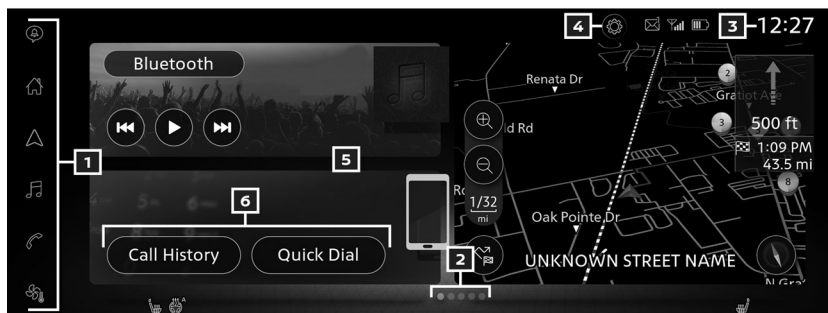

1 Launch Bar — Various functions can be accessed by touching the items on the Launch Bar, which are displayed on most of the main screens. Touching these keys will bring up the corresponding screens.

2 The white dot indicates the page you are currently on. Additional pages are indicated by the grey dots.


3 Touch the clock to bring up the clock settings.

4 This key will navigate you to the “Settings” menu, where you are able to access other features for this vehicle.

5 Widgets — Useful information from primary menu functions can be displayed as widgets.

6 Shortcuts — Icons for frequently used menu items can be placed on the Home **MENU** screens as shortcuts.

- The shortcut and widget selections can be set up in the Customize Menus screen which can be accessed by touching the **Settings** key **4** followed by the **Customize Menus** **7** key then the **Select the Customize Home Menu** **8**. This will display the **Customize Menus** screen, which allows shortcuts and widgets to be added **9**, replaced, rearranged, or deleted **10**.

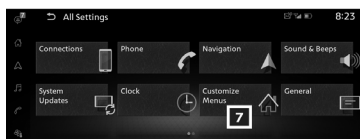

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS


QUICK SETTINGS

- Quick Settings allows you to make quick changes to the interior of your vehicle for the audio.
- The Quick Settings screen is displayed by swiping the touch screen display from top to bottom.
- The sound settings are also located by:
 1. Touch the  Settings key.
 2. Touch the "Sounds and Beeps" key.
 3. Touch the "Sound" key.



NOTIFICATIONS

- You can review notifications that you receive by touching the "Notifications" key  on the screen.
- This will show you text messages and phone calls that you have received.
- Your phone must be paired by Bluetooth® in order for this feature to work.

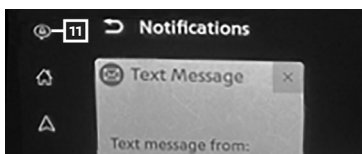

DIMMING THE TOUCH-SCREEN DISPLAY

- Press and hold the camera/day night button  for 2 seconds to adjust the brightness of the touch-screen display.
- Press the camera/day night button  to access the Around View Monitor® (if so equipped) camera views.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual and the "Getting started" section of your NissanConnect® Owner's Manual."

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
 1. Press the  button on the control panel.
 2. Touch the  Settings key on the home page.
 3. Touch the "Clock" key.
- Select "Set the clock manually" to manually adjust the time displayed.
- Touch the  key **1** to return to the previous screen.

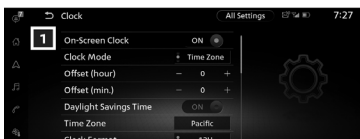

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-C) are located beneath the climate controls. There are two additional USB connection ports **2** (if so equipped) in the console in front of the backseats.
- When a compatible USB memory device are plugged into the USB connection ports **1** (USB Type-C), compatible audio files stored on the device can be played through the vehicle's audio system. The additional USB charging ports **2** (if so equipped) are for charging only.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual and the "Getting started" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



SYSTEM OPERATING TIPS





- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a NISSAN Voice Recognition session, press and hold the  or  button on the steering wheel, or  on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOLUME** control knob on the control panel while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the NISSAN Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Touch the "Settings" key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Bluetooth" tab **3** and touch "Add New". A message is displayed.
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).

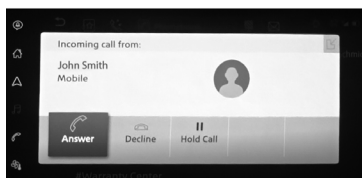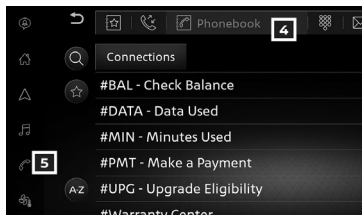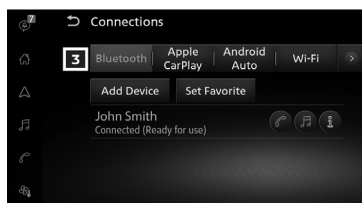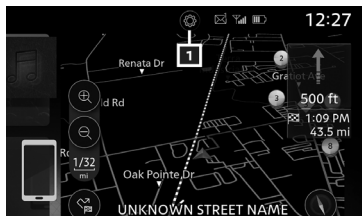

VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Press the  key on the control panel.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Press the  key on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the contacts to make a call.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press and hold the  button on the steering wheel, or
 - Touch the  Decline key on the screen.

SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

FM/AM/SiriusXM® Radio



Touch the Audio key on the to display the current audio source, and then touch the "Source" key to access the source selection screen.

1 PUSH BUTTON/VOLUME CONTROL KNOB

- Press the power  button to turn the system on or off.
- Turn the **VOL** (volume) control knob right or left to increase or decrease the volume.

2 PUSH SOUND BUTTON/TUNE-SCROLL

- To manually tune the radio, turn the **TUNE-SCROLL** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

4 STATION SELECT KEYS

- Pressing this button will give access to the AM, FM, SiriusXM® USB1, USB2, Bluetooth®, Apple CarPlay® or Android Auto™ audio source.
- 36 preset stations can be set for the FM, AM and satellite radio. These appear at the bottom of the screen when one of these sources is selected.
- To store a station in a preset, you must first select a radio band by touching the "AM" key, "FM" key or "SiriusXM" key then tune to the desired AM, FM or satellite radio station. Next, press and hold the desired station preset key until you hear a beep. The channel indicator will then display, and the sound will resume. Programming is now complete.
- Next, touch and hold the desired station select key. The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored, then touch the corresponding station select key.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems"** section of your Owner's Manual and to the **"Audio system"** section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone® apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- There are two ways to start a Siri® session:
 1. Press and hold the  button on the steering wheel.
 2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay® screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay® screen to end the Siri® session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available while driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the  **MENU** button on the **Launch Bar**.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **2**.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.

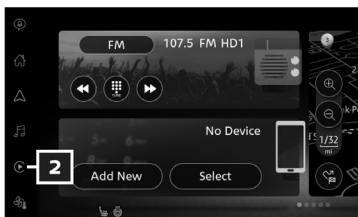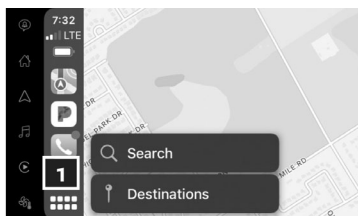

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" and the "Apps" sections of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

USING ANDROID AUTO™

- To connect your Android® phone to the in-vehicle system, you must connect a USB cable to the USB connection port located below the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Android Auto™.
 - After the cellular phone is connected, the Android Auto™ home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
 1. Press and hold the  button on the steering wheel until a beep is heard.
 2. Touch the  key **1** on the Launch Bar.
 3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto™ screen, touch the  key **2** on the Launch Bar.
- To exit the Android Auto™ screen, touch the  key on the Launch Bar and then touch the Nissan key.
- To return to the Android Auto™ home screen from the main menu:
 - Touch the  key **3** on the Launch Bar, or
 - Touch the  Info key **4** on the Launch Bar, touch the “Apps” key, and then touch the “Android Auto” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **1-855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle's NissanConnect Owner's Manual at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. For frequently asked questions, please visit **www.nissanusa.com/connect/faq**.

- Automatic Collision Notification (if so equipped) - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Connection to Roadside Assistance (if so equipped) - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle's location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching "Call Nissan Assistance".
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start - Start your engine remotely using the NissanConnect Services companion app or website.
- Boundary Alert - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- Speed Alert - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- **Maintenance Alert** - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert** - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert** - Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.
- **My Car Finder** - This allows you to locate your vehicle en route or in a crowded lot.
- **Collision Management** (if so equipped) - In the event of an emergency, Collision Management is used to document any damage and set-up transportation of your vehicle to a dealership.
- **Hybrid Radio** (if so equipped) - Stay connected to your favorite radio station regardless of your location as you drive your vehicle.
- **Connected Garage Door Opener** (if so equipped) - Open or close your compatible garage door, turn off the interior light and check the general status of your garage door.

To access these features in your vehicle:

1. Touch the app key on the Launch Bar.
2. Touch "NissanConnect Services".
3. Select an item from the NissanConnect® Services menu screen.

DOOR TO DOOR NAVIGATION (if so equipped)

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
 - Transfer the destination from the smartphone, then transfer to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch-screen display.
 - Touch "Store" to register the destination in the address book.
 - Touch "Ignore" to cancel the transfer of the destination.
 - Touch "Start" to start route guidance.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of a smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
 1. Touch the  Settings key on the Launch Bar.
 2. Touch "Connections" and then touch "Wi-Fi".
 3. Turn on Wi-Fi.
 4. Touch the name of the device you wish to connect.
 5. Enter the network password and touch →. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key .
4. Touch ... by the device name. The information and the setting options of the device will be displayed.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-Free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.

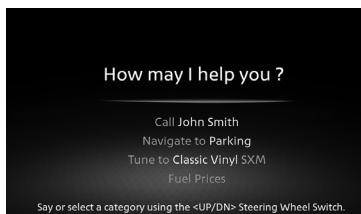

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual and the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel and Siri® will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

WIRELESS CHARGING (if so equipped)

The wireless charger is located on the lower part of the instrument panel. **1**

Ensure the smartphone is positioned face up, horizontally and fully seated on the center of the charging pad over the “Qi” logo. Charging will start automatically. The smartphone will be charged

continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.

- The indicator **2** will illuminate orange when the charging process is started.
- When the charging is complete, the indicator **2** illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator **2** blinks in orange.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**”, “**Starting and driving**” and the “**Technical and consumer information**” sections of your Owner's Manual.



DRIVING FEATURES

ELECTRONIC PARKING BRAKE

ELECTRONIC PARKING BRAKE

- To apply the parking brake, pull the electronic parking brake switch **1** up, located on the center console, behind the electronic shift lever. The electronic parking brake indicator light **2** will illuminate.



- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **1** down. The electronic parking brake indicator light **2** will turn off.

AUTOMATIC BRAKE HOLD

- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the automatic brake hold switch **3** to activate the automatic brake hold function. The indicator light will illuminate.
- To use the automatic brake hold function, the following conditions need to be met:
 - The driver's seat belt is fastened.
 - The electronic parking brake is released.
 - The shift lever is not in the **P (Park)** position.
 - The vehicle is not parked on a steep hill.
- Push the automatic brake hold switch **3** to cancel the function. To deactivate while the feature is applying the brake force, depress the brake pedal and push the automatic brake hold switch **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Cruise Control (ICC)
 - Intelligent Forward Collision Warning (I-FCW)
- The warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate if the front camera **1** is obstructed.
- The warning light **5** may illuminate if the front sensor or the camera **1** is obstructed.
- Front sensor or camera areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc.).
- If the warning message appears, stop the vehicle in a safe place, move the shift lever to the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.

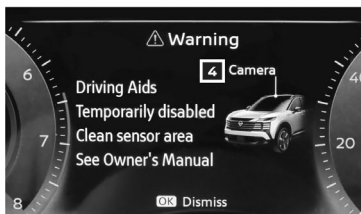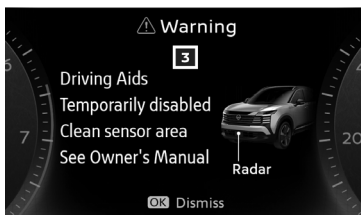

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

BLIND SPOT WARNING (BSW)

- An indicator light located on the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone when the vehicle is traveling at 20 mph (32 km/h) or faster.
- If the turn signal is turned on with a vehicle in the detection zone, the indicator light will flash.
- The BSW system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



INTELLIGENT BLIND SPOT INTERVENTION (I-BSI) (if so equipped)

- The I-BSI system helps alert the driver of other vehicles in adjacent lanes when changing lanes, and helps assist the driver to return the vehicle to the center of the traveling lane.
- The I-BSI indicator light **2** on the instrument panel will illuminate when the I-BSI system is turned on.
- The indicator on the outside mirrors **1** will illuminate when the ignition switch is ON and during system operation.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

REAR CROSS TRAFFIC ALERT (RCTA)

- The RCTA system can help alert the driver of an approaching vehicle when the driver is backing out of a parking space.
- When the shift position is in **R (Reverse)** and the vehicle speed is less than approximately 5 mph (8 km/h), the RCTA system is operational.
- If the radar detects an approaching vehicle from either side, the system chimes (once) and the side indicator light flashes on the side from which a vehicle is approaching.
- The RCTA system can be turned on or off through the Driver Assistance menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection System can assist the driver when there is a risk of a forward collision with a vehicle ahead in the traveling lane or with a pedestrian.
- Intersection assist helps the driver when there is a risk of a forward collision when turning right or left. The turn signal must be activated for the system to detect an approaching vehicle. The system may detect a pedestrian without the turn signal activated.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian and cyclist detection function, the AEB with Pedestrian Detection system operates at speeds between 6-50 mph (10-80 km/h). Intersection assist operates between 6-16 mph (10-25 km/h) when the turn signal is active.
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will firstly provide the warning to the driver by flashing the vehicle ahead detection indicator **1** (yellow) in the vehicle information display and providing an audible alert. In addition, the system applies partial braking. If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual **2** (flashing) (red and white) and an audible warning. Then the system applies partial braking. If the risk of a collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically. Partial braking will be applied, followed by harder braking if the driver fails to react.
- The AEB with Pedestrian Detection system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure VDC is on by ensuring the VDC OFF light is not on before driving the vehicle.
- The VDC should remain on when driving, except when freeing the vehicle if it is stuck in snow or mud.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.


- Hill Start Assist will operate automatically under these conditions:
 - The shift lever is shifted into a forward or a reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.


INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views display:

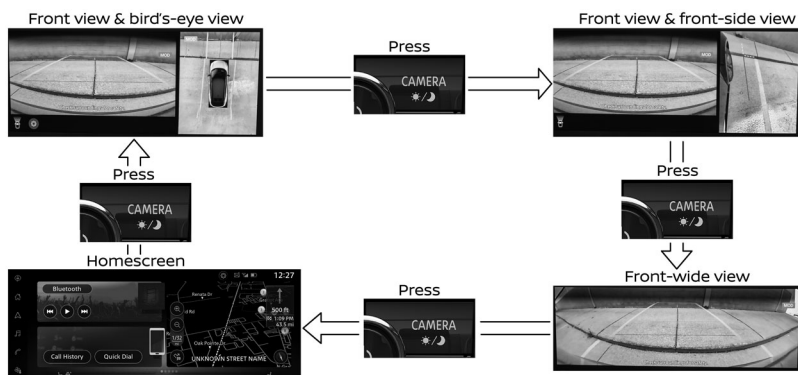


DRIVING FEATURES

- When the shift lever is in the **R (Reverse)** position and the **CAMERA** button is pressed, the following views will display in order:

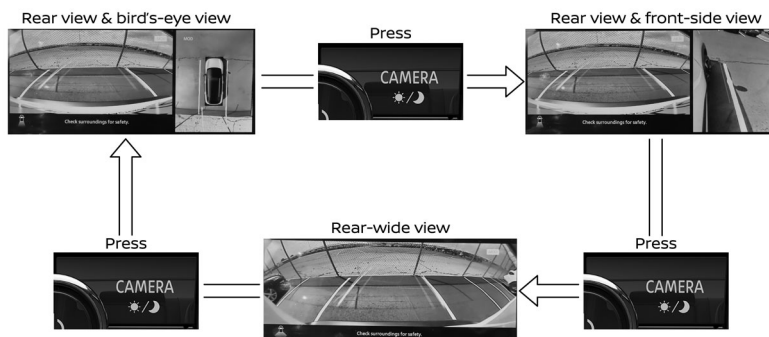

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Blue 3 ft (1 m)
 - Blue 7 ft (2 m)
 - Blue 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects:
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.

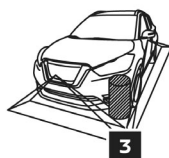

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.

DRIVING FEATURES

- When the following is displayed:
 - Green **MOD** icon **4**; the system is active.
 - Gray **MOD** icon; the system is not active.
 - No **MOD** icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the “Settings” menu.



- The MOD system will not operate if the trunk is open.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems” section of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).



- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning indicator light **1** will flash in the vehicle information display and the system will chime three times.

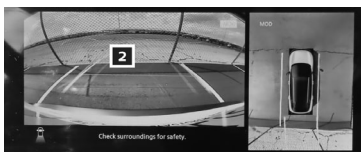

- A red frame will appear in the center display **2** for vehicles equipped with the Intelligent Around View® Monitor system. The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING THE RAB SYSTEM ON/OFF

- The RAB system can be turned on or off through the “Driver Assistance” menu in the vehicle information display.
- When the RAB system is turned off, the RAB system warning light **3** illuminates.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving” section of your Owner's Manual.

DRIVING FEATURES

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) (if so equipped)

LANE DEPARTURE WARNING (LDW)

- The LDW system warns the driver that the vehicle is beginning to leave the driving lane with an indicator and a steering wheel vibration.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings or road edges are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the orange LDW indicator **1** on the instrument panel will blink and the steering wheel will vibrate to alert the driver.



INTELLIGENT LANE INTERVENTION (I-LI)

- When a curve or strong cross wind exceeds the capabilities of the Steering Assist and your vehicle approaches either the left or the right side of the traveling lane, the I-LI indicator (orange) on the instrument panel flashes and a steering wheel vibration is provided to alert the driver. Then, the I-LI system automatically applies the brakes for a short period of time to help assist the driver to return the vehicle to the center of the traveling lane. This action is in addition to any Steering Assist actions.

TURNING THE LDW SYSTEM ON/OFF

- The LDW system can be turned on and off through the “Driver Assistance” section in the vehicle information

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” and the “Starting and driving” sections of your Owner's Manual.

DRIVE MODE SELECTOR

STANDARD

- Standard drive mode **1** is recommended for normal, everyday driving and is the default mode of your vehicle.

ECO

- ECO is recommended to help maximize fuel economy. Performance may be reduced.
 - Press the Drive Mode selector **1** to select ECO from the list on the vehicle information display and an indicator light appears



DRIVING FEATURES

SPORT

- Sport drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
 - Press the Drive Mode selector **1** to select SPORT mode from the list in the vehicle information display and an indicator light appears.

SNOW (if so equipped)

- Snow mode is recommended to help aid driving on slippery roads.
 - Press the Drive Mode selector **1** to select SNOW mode from the list in the vehicle information display and an indicator light appears.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

IDLING STOP SYSTEM (if so equipped)

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- Use this system while waiting at a stop light, etc. When the vehicle is stopped for long periods of time, turn off the engine.
- When the engine is stopped by the Idling Stop System, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop System by pushing the Idling Stop OFF switch.
- The status of the Idling Stop System can be checked in the vehicle information display.
- The status of the Idling Stop System can be checked in the vehicle information display.
 - This indicator **1** is displayed when the Idling Stop System is activated.
 - The indicator blinks when the Idling Stop System is malfunctioning.




Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver by blinking the vehicle ahead detection indicator light **1** and an audible alert.

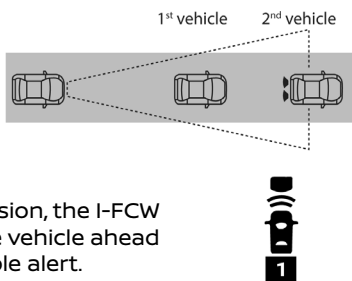

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror. Detected road signs are displayed in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.


For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

INTELLIGENT DRIVER ALERTNESS (I-DA)

- When Driver Alertness **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

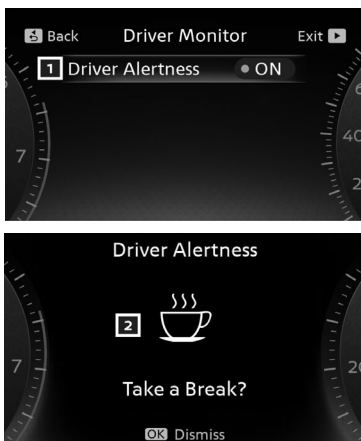


DRIVING FEATURES

INTELLIGENT CRUISE CONTROL (ICC)

VEHICLE-TO-VEHICLE MODE

- To set vehicle-to-vehicle distance control mode, push the ICC switch **1** on the steering wheel. The ICC indicators will illuminate in the vehicle information display.
- Accelerate to the desired speed.
- Push the **SET-** switch **2** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  switch **3** on the steering wheel repeatedly to change the set distance between long, middle and short **4**.
- To reset at a faster cruising speed, push and hold the **RES+** switch **5** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **2** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **6** on the steering wheel.
- To turn off ICC, push the ICC switch **1** on the steering wheel. The ICC system indicator **7** in the instrument panel turns off.

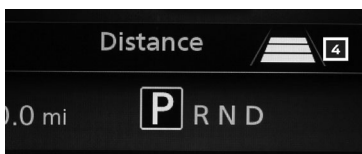

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push the ICC switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

FRONT AND REAR SONAR SYSTEM (if so equipped)

- The system informs with a visual and audible alert of front obstacles when the shift lever is in the **D (Drive)** position and both front and rear obstacles when the shift lever is in the **R (Reverse)** position.
- The sonar (parking sensor) system sounds a tone to inform the driver of obstacles near the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

PROPILOT ASSIST (if so equipped)

ProPILOT assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a "hands-on" driver assistance system and is intended for use on freeways/highways.



The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM

- To turn on ProPILOT Assist:
 - Push the ProPILOT Assist switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
 - When at the desired speed, push the toggle switch **2** down toward **SET-** to activate ProPILOT Assist.
 - Push the distance switch **3** to select the following distance.



DRIVING FEATURES

PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

When activated, the ProPILOT Assist display will override any previous display. To disable this override, go to "Settings", "Customize Display" and select **OFF** for "Transition (cruise)".



- 4** Vehicle set speed indicator
 - Displays the speed set by the driver.
- 5** Steering Assist Indicator
 - Shows whether Steering Assist is active or not (green-active, gray-standby).
- 6** Lane marker indicator
 - No lane markers displayed: Steering Assist is turned off.
 - Gray: No lane markers detected, Steering Assist in standby.
 - Green: Lane markers detected, Steering Assist active.
 - Orange: Lane departure is detected.
- 7** ProPILOT Assist indicator
 - Displays whether ProPILOT Assist is engaged or not.
 - White: Standby
 - Blue: Active
- 8** Vehicle ahead detection indicator
 - Appears on display when a vehicle is detected ahead.
- 9** Set distance indicator
 - Displays the selected distance set by driver.

CANCELLING THE PROPILOT ASSIST SYSTEM

To cancel ProPILOT Assist, do one of the following

- Push the **CANCEL** switch **10** on the steering wheel.
- Tap the brake pedal.
- Push the ProPILOT Assist switch.

PROPILOT ASSIST

- The set speed range is between approximately 20 and 90 mph (32 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the toggle switch **2** towards **RES+** or **SET-** and release it. Push and hold the toggle switch to change in increments of 5.
- When a vehicle is detected in the lane ahead, the ICC system helps control the vehicle speed to maintain the distance from the vehicle ahead set by the driver.

DRIVING FEATURES

INTELLIGENT CRUISE CONTROL


- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- When the vehicle ahead stops, the ICC system will stop your vehicle and keep the vehicle stopped.
- When the vehicle ahead begins to move, push and release the toggle switch towards **RES+** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system may warn the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.

STEERING ASSIST

- When the lane markers are clean and consistent on both sides of the vehicle, the Steering Assist system assists the driver to help keep the vehicle within the traveling lane.
 - This feature can operate when vehicle speed is above 37 mph (60 km).
 - Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
 - If the vehicle approaches a lane marker when steering assist is active, I-LI activates and vibrates the steering wheel, flash the I-LI indicator in the meter display and beep.
- Steering Assist is cancelled or temporarily goes into standby mode under the following conditions:
 - The turn signal is activated.
 - Hands are not detected on the steering wheel. Apply a firmer grip to the steering wheel.
 - The wipers are in HIGH speed position.
 - Steering Assist will not activate or may deactivate if the system does not detect clear and consistent lane markers.

TO TURN OFF STEERING ASSIST:


- Push the Steering Assist switch **11** on the instrument panel to the left of the steering column or in the settings of "Driver Assistance" in the vehicle information display.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see your Owner's Manual.

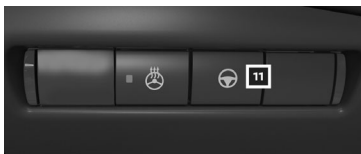

DRIVING FEATURES

HANDS ON DETECTION

- If the driver lets go of the steering wheel or only lightly touches it, the steering torque sensor may not detect the driver's hand(s) on the steering wheel and a sequence of warnings may occur **12**. When the driver holds and operates the steering wheel again (apply a firm grip), the warnings turn off.
- If the driver does not place their hands back on the wheel or cancel the ProPILOT Assist, the vehicle warnings will continue and the vehicle will eventually come to a stop.

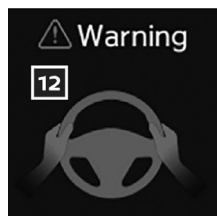

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- This mode allows driving at a fixed speed between 20 and 90 mph (32 to 144 km/h). The system will not respond to vehicles ahead in your lane.
- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch **1** for longer than 1.5 seconds.
- When at the desired speed, push the toggle switch **2** down toward **SET-** and release it.
- To accelerate or decelerate your vehicle to the desired speed, push the toggle switch **2** toward **RES+** or **SET-** and release it.
- The conventional (fixed speed) cruise control mode display and indicators **13** are displayed in the vehicle information display.
- To use the ICC system again, press the ProPILOT Assist switch to turn off the system and press and release the switch to turn on ProPILOT Assist ICC mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or unique traffic conditions. Clean/defrost your windshield and/or cleaning sensor to keep this feature working properly. Please refer to your Owner's Manual for more information.

For more information, refer to the "Instruments and controls", "Starting and driving" and the "Technical and consumer information" sections of your Owner's Manual.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2026/kicks or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

