



QUICK REFERENCE GUIDE

2026 LEAF



1

2

3

4

6

5

7

8

9

10

 
11

12

13

COCKPIT OVERVIEW

- 1** Vehicle information display / Power meter / Li-ion battery temperature gauge
- 2** Li-ion Battery Available Charge Gauge / Driving Range
- 3** Headlight / Turn signal switch
- 4** Wiper and washer switch
- 5** Steering wheel switches for Bluetooth® / Navigation (if so equipped) / Vehicle information display
- 6** Steering wheel switches for ProPILOT Assist (if so equipped) / Volume control
- 7** Tilt / Telescoping steering wheel lever
- 8** Heated steering wheel switch 
- 9** Head up display (HUD) (if so equipped)
- 10** AC ON Switch
- 11** Electronic parking brake with auto hold  (if so equipped)
- 12** Steering Assist switch 
- 13** Power liftgate switch (if so equipped)

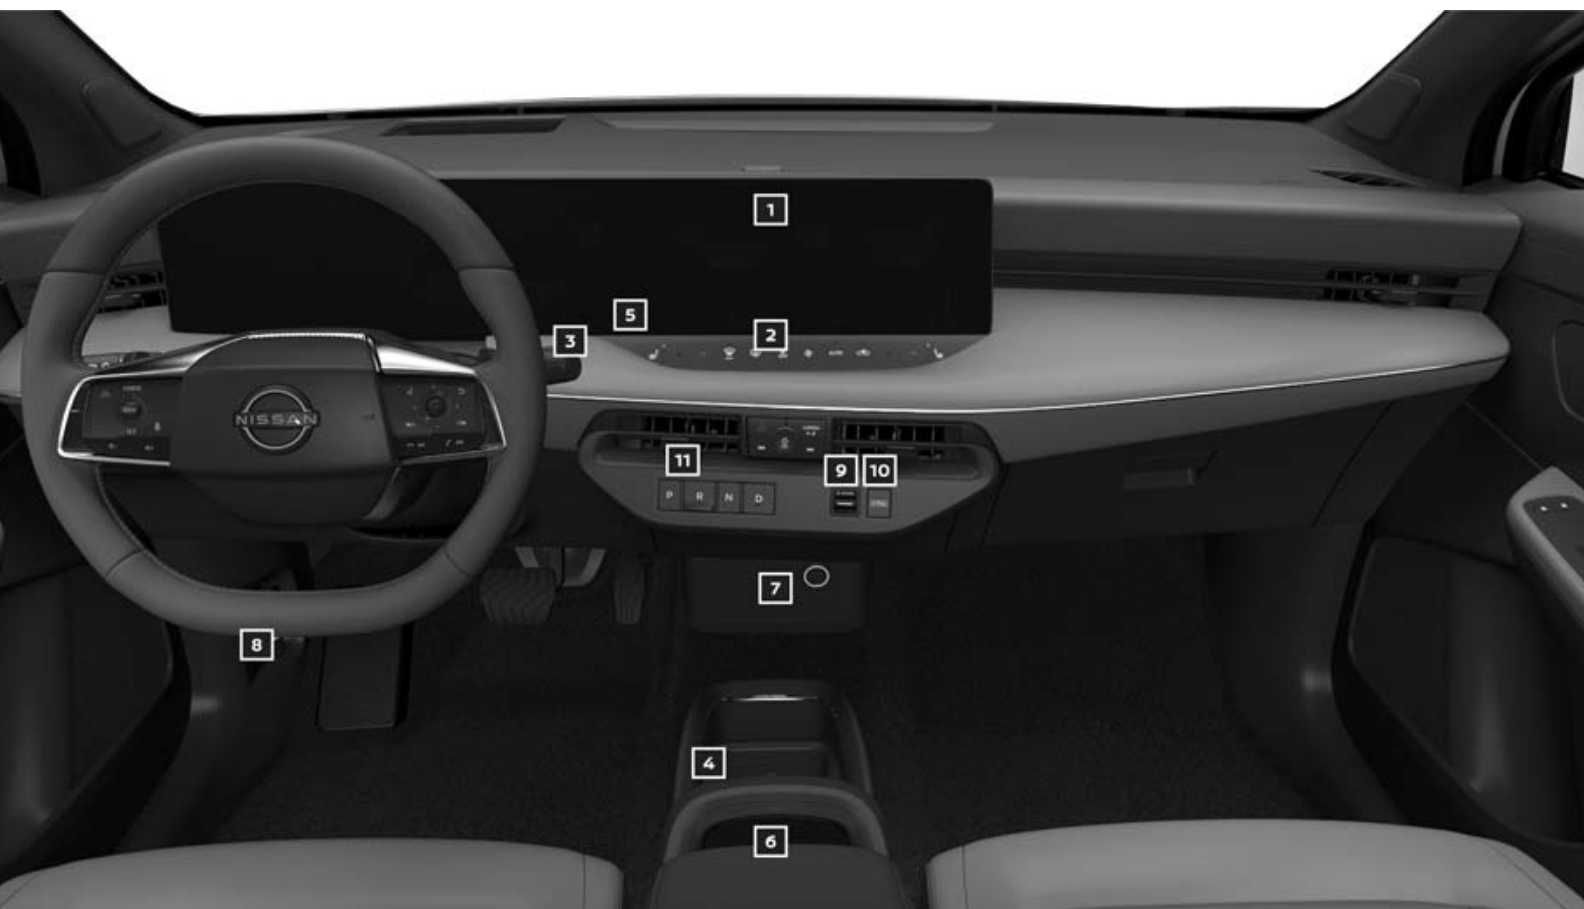

1

2

5

3

11

9

10

7

8

4

6

INSTRUMENT PANEL

- 1** Control panel touch screen display
- 2** Heater and air conditioner (automatic)
- 3** Push-button power switch
- 4** USB connection port interface
- 5** Front heated seat switches  
- 6** Wireless charger (if so equipped)
- 7** 12-Volt power outlet
- 8** Hood release 
- 9** Drive mode switch
- 10** e-Pedal switch
- 11** Shift selector

TABLE OF CONTENTS

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM	3
SEAT ADJUSTMENTS (if so equipped)	4
REAR DOOR ALERT	5
REAR SEAT BELT WARNING	6
STARTING/STOPPING THE ELECTRIC VEHICLE (EV) SYSTEM	6
OUTSIDE MIRROR CONTROL SWITCH	7
EMERGENCY CALL (SOS) BUTTON (if so equipped)	7
HEATER AND AIR CONDITIONER (automatic)	8
HEATED SEATS (if so equipped)	10
HEADLIGHT CONTROL SWITCH	10
WIPER AND WASHER SWITCH	11
VEHICLE INFORMATION DISPLAY	13
TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT	14
LIFTGATE RELEASE	15
POWER LIFTGATE (if so equipped)	16
MOTION-ACTIVATED LIFTGATE (if so equipped)	17
CHARGE PORT LID/CHARGE CONNECTOR LOCK SYSTEM	18
COLD WEATHER RANGE AND PARKING IN EXTREMELY COLD WEATHER	19
ELECTRIC VEHICLE (EV) SYSTEM WARNING LIGHT	19
LI-ION BATTERY CHARGING	20
LI-ION BATTERY GAUGES	23
POWER LIMITATION INDICATOR LIGHT	23
POWER METER	24
QUICK CHARGE IN COLD WEATHER	24
EV SCREEN	25

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

GOOGLE BUILT-IN (if so equipped)	26
HOW TO USE THE TOUCH-SCREEN DISPLAY	26
CLOCK SET/ADJUSTMENT	27
FM/AM/SiriusXM® Radio	27
USB CONNECTION PORT INTERFACE	28
BLUETOOTH® HANDS-FREE PHONE SYSTEM*	29
APPLE CARPLAY®	31
ANDROID AUTO™	32
NISSANCONNECT® EV WITH SERVICES POWERED BY SIRIUSXM® (if so equipped)	32
WIRELESS CHARGING (if so equipped)	34
BLUETOOTH® STREAMING AUDIO	35
HANDS-FREE TEXT MESSAGING ASSISTANT*	36



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system", the "Monitor, climate, audio, phone and voice recognition systems" and the "Starting and driving" of your Owner's Manual.

TABLE OF CONTENTS

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)	37
BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)	38
INTELLIGENT BLIND SPOT INTERVENTION (I-BSI)	38
PROPILOT ASSIST (if so equipped)	39
AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM	43
INTELLIGENT AROUND VIEW® MONITOR (if so equipped)	44
HILL START ASSIST	47
REAR AUTOMATIC BRAKING (RAB)	47
LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)	48
APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM	48
e-STEP SYSTEM	49
INTELLIGENT DRIVER ALERTNESS (I-DA)	50
INTELLIGENT FORWARD COLLISION WARNING (I-FCW)	50
SHIFT CONTROL SYSTEM	51
VEHICLE DYNAMIC CONTROL (VDC)	52
HEAD UP DISPLAY (HUD) (if so equipped)	52

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

This system allows you to lock or unlock the vehicle, open the liftgate and start your vehicle. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- To lock the vehicle, touch either lock sensor **1** or the liftgate request switch **2** once or press the  button **3** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Wrap your hand around the driver's door handle; the driver's door will unlock. Touch the lock sensor within 60 seconds; all other doors will unlock, or
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again within 1 minute; all other doors will unlock.
- The charge port lid is linked to the door locking mechanism of the vehicle. If vehicle doors are locked, the charge port lid will be unlocked when you approach the vehicle with the Intelligent Key. When you walk away from the vehicle with the Intelligent Key, the charge port lid will be locked automatically.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.
 - Press any button on the key fob to turn the panic alarm off, or press the door request switch if the key fob is in range.



LIFTGATE RELEASE (if so equipped)

- To open the liftgate, press the  button **5** for longer than 1 second.
- To close the liftgate, press the  button **5** again for longer than 1 second.

APPROACH UNLOCK FUNCTION

- When you approach the vehicle with the Intelligent Key, the vehicle will unlock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

GETTING STARTED

WALK AWAY LOCK FUNCTION

- When you walk away from the vehicle with the Intelligent Key, the vehicle will lock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

SEAT ADJUSTMENTS (if so equipped)

FRONT POWER SEATS (driver's seat if so equipped)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



FRONT POWER SEAT LIFTER (driver's seat if so equipped)

- To raise or lower the front portion or height of the seat, push the front or back end of the switch **1** up or down.

FRONT POWER LUMBAR SUPPORT (driver's seat if so equipped)

- To adjust the seat lumbar support, move the switch **3** up or down to adjust the height of the lumbar. Move the switch forward to increase the lumbar support or rearward to decrease the lumbar support.

FOLDING THE REAR SEATBACKS DOWN

- To fold the seatback down, pull the release knob **4**.
- To return the seatback to the seating position, lift up each seatback and push it to the upright position until it is latched. Then return the seat belt to its original position.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system" section of your Owner's Manual.

 
GETTING STARTED

REAR DOOR ALERT

The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 15 minutes before driving.

REAR DOOR ALERT (ACTIVE)

- When the system is active and the driver stops the EV system, the below will occur:
 - A notification message appears in the vehicle information display with the options to “Dismiss Message” **2** or “Disable Alert” **3** if desired.
 - The horn will sound and a **Check Rear Seat** warning **1** will appear on the display.

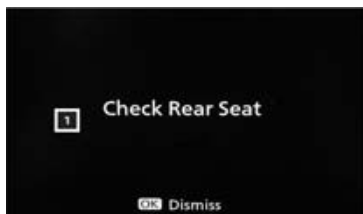

- To activate Rear Door Alert, in your vehicle information display:
 - Press the scroll/ **OK** dial on the steering wheel until the “Settings” menu screen appears. Press the scroll/ **OK** dial to make the selection.
 - Select “Vehicle Settings”, “Rear Door Alert” and press the scroll/ **OK** dial.
 - Choose from the following options: “Horn & Alert”, “Alert Only” or “OFF” and then press the scroll/ **OK** dial.



- To Dismiss Rear Door Alert:
 - Use the scroll/ **OK** dial on the steering wheel to select “Dismiss Message” **2**. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the scroll/ **OK** dial on the steering wheel to select “Disable Alert” **3** and press the scroll/ **OK** dial.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” section of your Owner's Manual.

GETTING STARTED

REAR SEAT BELT WARNING

- The rear seatbelt warning **1** appears for 65 seconds after the power switch is placed in the ON position and the EV system is started. This warning shows the status of the rear seat belts.
- When one of the rear seat belts is buckled, the corresponding seat icon will appear in gray or green.
- When one of the rear seat belts is unbuckled, the corresponding seat icon will appear in red.
- After a change in buckle status, a chime will sound and the warning **1** will appear for another 65 seconds.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

STARTING/STOPPING THE ELECTRIC VEHICLE (EV) SYSTEM

It is important to make sure the NISSAN Intelligent Key® is with you (that is, in your pocket or purse).

- Confirm the parking brake is applied and push the **P (Park)** switch on the shift selector to place it in the **P (Park)** position.
- Depress the brake pedal.
- Push the power switch to start the EV system.
- Check that the READY to drive indicator light illuminates and the start-up sound is audible.
- Check the Li-ion battery level and the estimated driving range shown on the meter.



TURNING THE EV SYSTEM OFF

- Push the **P (Park)** switch on the shift selector to place it in the **P (Park)** position.
- Apply the parking brake.
- Push the power switch to the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

GETTING STARTED

OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver's side outside mirror or push the right switch **2** to select the passenger's side outside mirror.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use the feature, press the cover to open, then press the **SOS**  button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to **www.NissanUSA.com/connect** or call **855-426-6628**.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual or refer to the "Apps" section of your NissanConnect® Owner's Manual.

GETTING STARTED

HEATER AND AIR CONDITIONER (automatic)

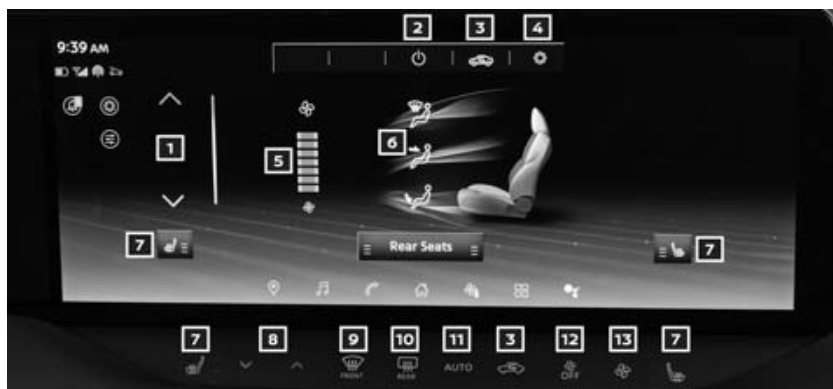

1 TEMPERATURE CONTROL KEY

- Press the temperature control buttons to set the desired temperature.

2 ON-OFF KEY

- Press the **ON-OFF** button to turn the climate control system on or off.

3 INTAKE AIR CONTROL BUTTON/KEY

- For air recirculation, press the  intake air control button to recirculate air inside the vehicle. The indicator light on the button will illuminate. This system is used to avoid certain outside odors and to help adjust the inside vehicle temperature more effectively.
- For outside air recirculation, press the  intake air control button again to turn off air recirculation. This allows outside air to be drawn into the passenger compartment to prevent fogging in the front defroster, floor vent or front defroster/floor vent mode.
- For automatic air intake control mode, press and hold the  intake air control button. The indicator light will blink twice and the inside/outside circulation will then be controlled automatically.

4 SETTINGS KEY

- Press the settings button to open and change the climate control settings.

5 FAN SPEED KEY

- Press the fan speed control button to manually adjust the fan speed up or down.

GETTING STARTED

6 AIR FLOW CONTROL KEY

- Press the button to cycle through the following air flow outlets:



Air flows from center and side vents.



Air flows from center and side vents and foot outlets.



Air flows mainly from the foot outlets.



Air flows from defroster and foot outlets.

7 HEATED SEATS BUTTON/KEY

- Press the button to turn the heated seats on or off.

8 TEMPERATURE CONTROL BUTTON

- Press the temperature control buttons to set the desired temperature.

9 FRONT DEFROSTER BUTTON

- Press the  front defroster button to turn the system on. Both the air conditioner and heater will automatically turn on when the front defroster mode is selected. The driving range will be reduced when using this setting.
- To remove moisture or fog on the front window quickly, set the temperature control buttons **1** and the fan speed control buttons **5** to their maximum settings.

10 REAR WINDOW AND OUTSIDE MIRROR (if so equipped) DEFROSTER SWITCH

- Push the  rear window and outside mirror (if so equipped) defroster switch to turn the system on or off. Start the engine and push the switch on; the indicator light will illuminate.
- Push the switch again to turn the defroster off. This function automatically turns off after approximately 15 minutes.

11 AUTO BUTTON

- The automatic mode may be used year-round. Press the AUTO button, and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

12 OFF BUTTON

- Press the off button to turn the fan off.

13 FAN SPEED CONTROL BUTTON

- Press the fan speed control button to manually adjust the fan speed.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

GETTING STARTED

HEATED SEATS (if so equipped)

- Push the  switch **1** or  switch **2** to heat the seats.
- Push the heated seat switch once for high heat, twice for medium heat and three times for low heat.
- Push the  switch **1** or  switch **2** to turn off the heated seats.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3**, then place the ignition in the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

HEADLIGHT BEAM SELECT

- With the headlights turned to the  position **2**, push the headlight control switch forward **4** to select the high beam function. The blue indicator light will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash on and off the headlight high beams.



GETTING STARTED

HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the switch at the end of the lever. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 13 mph (20 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, push the switch again.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

1 Mist (**MIST**) — One sweep operation of the front wipers.

2 Intermittent (**INT**) or Auto (**AUTO**) — Front wipers operate intermittently by moving the lever down to the **INT / AUTO** position and then rotating the control ring **3** to increase or decrease wiper speed. Also, the intermittent operation speed varies in accordance to the vehicle speed.

4 Low (**LO**) — Front wipers operate at a continuous low-speed.

5 High (**HI**) — Front wipers operate at a continuous high-speed.

6 Front washer — Pull the lever towards you to activate the front washer. The front wipers will operate several times.

- To replace the windshield wipers, they must be in the service position.



GETTING STARTED

- To move the wipers to the service position:
 1. When the power switch is in the ON position or within 60 seconds after placing the power switch in the OFF position.
 2. Place the lever in the OFF position and lift the windshield wiper and washer lever upwards twice in less than 0.5 seconds. The windshield wipers will move to the service position automatically.
 3. The wipers can now be replaced.
- To move the wiper blades back to the original position:
 1. Lift the lever to the **MIST** position once and release.
 2. This will cause the wipers to resume the set position.

DRIP WIPE

- Once the wiper spray cycle is finished, there will be a short delay. Then the wipers will sweep one more time to clear off any remaining drips from the windshield.

RAIN-SENSING AUTO WIPER SYSTEM (if so equipped)

 
- The rain-sensing auto wiper system automatically turns on the wipers and adjusts the wiper speed depending on the rainfall and the vehicle speed by using the rain sensor located on the upper part of the windshield.
- To set the rain-sensing auto wiper system, push the lever down to the AUTO position **2**. The wiper will sweep one time while the power switch is in the "ON" position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Do-it-yourself" sections of your Owner's Manual.

GETTING STARTED

VEHICLE INFORMATION DISPLAY

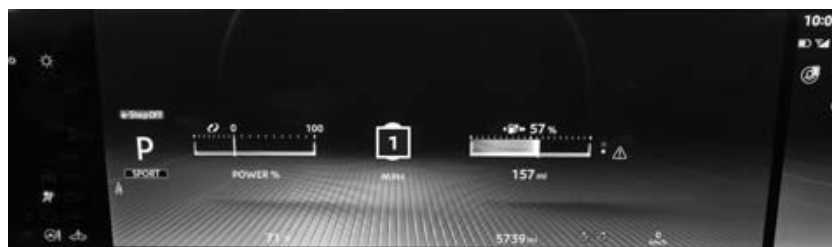

The vehicle information display **1** displays items such as:

- Home
- Blank
- Drive Computer
- Energy Economy or ECO Pedal Guide
- Energy Economy History
- Tire Pressure
- Charge Time (Est.)
- Battery Capacity
- Navigation
- Compass
- Audio
- Driver Assistance
- ProPILOT Assist
- Speed Limit Sign
- Warnings
- Settings

USING THE VEHICLE INFORMATION DISPLAY

- The vehicle information display can be changed using the scroll/ **OK** button **2**, the **◀▶** buttons **4**, **↑↓** buttons **3** and the **↺** button **5** located on the steering wheel.



RESETTING THE TRIP COMPUTER

- Use the scroll/ **OK** button and the arrow buttons on the steering wheel to select the desired trip mode.
- Press and hold the scroll/ **OK** button for more than one second to reset the selected mode.

GETTING STARTED

SETTINGS

The setting mode allows you to change the information displayed in the vehicle information display:

- VDC Setting
- Driver Assistance
- Head-Up Display
- ECO Mode Setting
- TPMS setting
- Clock
- Vehicle Settings
- EV Settings
- Maintenance
- Customize Display
- Unit/Language
- Factory Reset

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).

GETTING STARTED

- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately one minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Push the **P (Park)** button and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Starting and driving", "In case of emergency", "Do-it-yourself" and the "Technical and consumer information" sections of your Owner's Manual.

LIFTGATE RELEASE

To open the liftgate, unlock it and push the liftgate opener **1** switch and pull the liftgate up to open. The liftgate can be unlocked by:

- Pressing the **lock** button **2** on the NISSAN Intelligent Key® twice.
- Pushing the liftgate opener switch **1** while carrying the Intelligent Key with you (that is, in your purse or pocket).
- Pushing the door handle request switch twice.
- Pushing the power door lock switch to the unlock position.

The liftgate does not lock when closed. To lock the liftgate, use the liftgate request switch **3**, power door lock or key fob.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual



GETTING STARTED

POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Push and hold the  switch **1** on the instrument panel for more than 1 second.
 - Pushing the liftgate opener switch **2**.
 - Pressing the  button **3** on the NISSAN Intelligent Key® for more than 1 second.



GETTING STARTED

GARAGE MODE SYSTEM (if so equipped)

- The liftgate can be set to open to a specific height by performing the following procedure:
 1. Open the liftgate.
 2. Pull the liftgate down and move it to the desired height position (the liftgate will have some resistance when being manually adjusted).
 3. Push and hold the  switch **4** and the  lock switch **5** located on the liftgate for approximately 3 seconds or until two beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1 through 3 for setting the position of the liftgate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual

MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Intelligent Key®.
- Use a quick kicking motion under the center of the rear bumper **1**.
- The vehicle will beep three times and the liftgate will open.
- Do not swing your foot side to side or pause during kicking motion.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.



GETTING STARTED

CHARGE PORT LID/CHARGE CONNECTOR LOCK SYSTEM

There are two charge ports on your vehicle, the driver side supports normal and trickle charging and the passenger side supports quick charging.

- To open the charge port lid, unlock the doors then push the part of the lid near the rear of vehicle **1** or approach the vehicle with the Intelligent Key and push the charge connector unlock switch **2** in the charge port.

- When the charge port lid springs up slightly, place your hand underneath the lid and open it fully.
- After 30 seconds, the charge connector lock is locked again.

- To close the charge port lid, slowly move the lid and lock it securely in place.
- The normal or trickle charge connector can be locked to the normal charge port by selecting the charge connector lock mode in the vehicle information display.

- There are three different modes of the charge connector lock system:
 - **AUTO** – The charge connector is locked while charging is in progress and will automatically unlock when charging is complete.
 - **LOCK** – The charge connector will remain locked until **UNLOCK** mode is selected.
 - **UNLOCK** – When the unlock mode is selected, the charge connector will unlock and remain unlocked.



Driver side — normal/trickle charging



GETTING STARTED

NOTE: For DC Quick chargers only, locking is automated for safety, and not controlled by vehicle selection.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Charging", "Instruments and controls", "Pre-driving checks and adjustments" and the "Starting and driving" sections of your Owner's Manual.



Passenger side — quick charging

COLD WEATHER RANGE AND PARKING IN EXTREMELY COLD WEATHER

COLD WEATHER RANGE

- Vehicle range is reduced when the heater is used and the battery temperature drops below 77°F (25°C).
- Using the climate control system to heat the cabin when the outside temperature is below 32°F (0°C) uses more electricity (heat pump, if so equipped) and affects vehicle range more than using the heater at temperatures above 32°F (0°C).

PARKING IN EXTREMELY COLD WEATHER

- Do not store the vehicle in temperatures below -13°F (-25°C) for over seven days. If the outside temperature is -13°F (-25°C) or lower, the Li-ion battery may freeze, and it cannot be charged or provide power to run the vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

ELECTRIC VEHICLE (EV) SYSTEM WARNING LIGHT

- The warning light will illuminate if there is a malfunction in the following systems:
 - Traction motor and inverter system
 - Charge port or on-board charger
 - Li-ion battery system
 - Cooling system
 - Emergency shut-off system is activated
- If the warning light illuminates, it is recommended that you visit a NISSAN certified Leaf dealer.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview" and the "Instruments and controls" sections of your Owner's Manual.

GETTING STARTED

LI-ION BATTERY CHARGING

Before charging the Li-ion battery, see your Owner's Manual for detailed warnings and cautions when charging your battery.

- There are three methods available to perform the charge operation: normal charge, trickle charge and quick charge.

NORMAL CHARGE

Normal charging is only supported on the driver's side charge port.

- Perform a normal charge using the charging device installed in your home.
- Normal charging uses SAE J1772 compliant charger connected to a dedicated 220-240 volt circuit.
- To charge your vehicle:
 1. Place the power switch in the OFF position.
 2. Push the charge port lid switch located on the instrument panel to the left of the steering wheel.
 3. Press the charge port tab and open the cap.
 4. Connect the charge connector **1** to the charge port **2**. When connected correctly, a beep will sound once.
 5. If charging has started, a beep will sound twice and the charging status indicator light will operate.
- To stop charging:
 1. Ensure that the charge connector lock is not engaged.
 2. Press the button on the charge connector **3** to release the lock and remove the charge connector from the charge port.
 3. Close the charge port cap and the charge port lid.



GETTING STARTED

TRICKLE CHARGE

Trickle charging is only supported on the driver's side charge port.

- Perform a trickle charge by connecting the Electric Vehicle Supply Equipment (EVSE) or a SAE J1772 compliant cord set to connect the vehicle to a dedicated AC 110-120 volt, 15A dedicated outlet.

 
- To charge your vehicle:

1. Place the power switch in the OFF position.
2. Open the charge port lid.
3. Connect the EVSE plug **4** to the 110-120 volt, 15A dedicated electrical outlet. The EVSE control box's indicator light **5** will illuminate when connected properly.
4. Open the charge port cap.
5. Remove the safety cap from the charge connector.
6. Connect the charge connector **6** to the charge port **2**. A beep will sound once.
7. If charging has started, a beep will sound twice and the charging status indicator light will operate.

- You can pass a rope through the hole on the EVSE control box **7** in order to hang it up while the Li-ion battery is charging.

- To stop charging:

1. Ensure that the charge connector lock is not engaged.
2. Press the button on the charge connector **3** to release the lock and remove the charge connector from the charge port.
3. Close the charge port cap and the charge port lid.
4. Attach the safety cap to the charge connector, remove the electrical plug from the dedicated outlet and store it in the case.

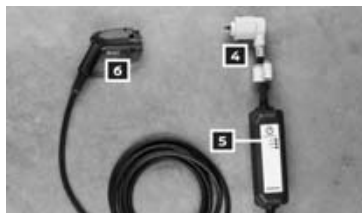

Type A



Type B



GETTING STARTED

QUICK CHARGE

Quick charging is only supported on the passenger's side charge port.

NOTE: Nissan approved charging adapter kits are available through your NISSAN certified LEAF Dealer.

- Perform a quick charge by connecting the charge connector at a public charging station or a SAE J3400 compliant cord to charge the battery in a short period of time.
- Quick charging is possible if the battery temperature is not near the red zone.
- To charge your vehicle:
 - Place the power switch in the OFF position.
 - Open the charge port lid and the charge port cap.
 - Align the groove of the charge connector **8** with the groove of the charge port, then insert the charge connector.
 - Grasp the lock lever and lock the charge connector.
 - Follow the instructions on the quick charge equipment to start charging. When the equipment is properly installed and ready to charge, a beep sounds twice and the charging status indicator light will change.
- To stop charging:
 - The charge connector can be disconnected from the vehicle when the charging is stopped.
 - Unlock the charge connector and remove it from the vehicle.
 - After closing the charge port cap, close the charge port lid.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview" and the "Charging" sections of your Owner's Manual.

GETTING STARTED

LI-ION BATTERY GAUGES

- The Li-ion Battery Available Charge Gauge **1** displays the approximate available Li-ion battery power remaining to drive the vehicle. Charge the Li-ion battery before the blue bar of the gauge disappears.
- The driving range **2** provides an estimated distance that the vehicle can be driven before recharging is necessary. The driving range is constantly being calculated based on the amount of available Li-ion battery charge and the actual power consumption average.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview", "Charging" and the "Instruments and controls" sections of your Owner's Manual.

POWER LIMITATION INDICATOR LIGHT

- When the power limitation indicator light illuminates, power provided to the traction motor is reduced.
- This light illuminates in the following conditions:
 - The Li-ion battery available charge is extremely low.
 - The Li-ion battery temperature is very low.
 - The temperature of the Electric Vehicle (EV) system is high (motor, inverter, coolant system, Li-ion battery, etc.).
 - The EV system has a malfunction.
- If the power limitation indicator light is illuminated, follow the instructions provided on the center display.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview", "Charging", "Instruments and controls" and the "In case of emergency" sections of your Owner's Manual.

GETTING STARTED

POWER METER

- The power meter **1** displays the traction motor power consumption and the regenerative brake power applied to the Li-ion battery.
- The white segment moves to the right when power is provided to the traction motor.
- The white segment moves to the left when power is generated and provided to the Li-ion battery by the regenerative brake system.

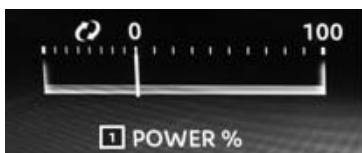

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

QUICK CHARGE IN COLD WEATHER

- It may take more time to charge the Li-ion battery using the quick charger if the vehicle is parked in a cold location (for example, 32°F [0°C]) for a long period of time.
- It may take more time to charge the Li-ion battery using the quick charger if the temperature of the Li-ion battery is high or low.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Charging", "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

GETTING STARTED

EV SCREEN

The EV (Electric Vehicle) screen allows you to use features that are useful for EV driving.

To access the EV screen:

1. Touch the home key on the Launch Bar.
2. Touch the apps key and then touch "EV".
3. The EV screen displays the following options:
 - Battery status indicator
 - Climate Schedule
 - Charge Schedule
 - Battery Cooling Assist
 - Battery Heater
 - Energy Usage
 - Charging Stations
 - Plug-in Reminder
 - Amperage Limit



For more information, refer to the "**Overview**" section of your Owner's Manual and the "**Unique EV functions**" sections of your NissanConnect® Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

GOOGLE BUILT-IN (if so equipped)

Drivers can use Google built-in features on the in-vehicle system.

- Google Assistant™
 - You can voice control various functions such as playing music, and setting destinations with Google Maps, etc.
- Google Maps
 - Navigation functions such as getting driving directions, and finding nearby facilities, ect. can be used.
- Google Play
 - Various apps can be downloaded and used with the in-vehicle system.
- For some of the functions, an internet connection and/or signing into your Google account are required for full use.
- For details of the Google Automotive Services, refer to the following website: <https://built-in.google/cars/>

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

HOW TO USE THE TOUCH-SCREEN DISPLAY



- 1** Notifications/settings keys — Displayed on most of the main screens. Touching these keys will bring up the corresponding screens:
 - Notifications: Notifications can be checked. The number on the icon indicates the number of unconfirmed notifications.
 - All Settings: Various settings can be changed for personal convenience.
 - Climate Control: Keys and information for climate control, etc. are displayed.
- 2** Status indicators — Icons display here showing the status of various items such as connected device battery.
- 3** Widgets — Useful information can be displayed as widgets. The widgets displayed on the home menu screen can be customized.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

4 Launch Bar — Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

CLOCK SET/ADJUSTMENT

■ Some screens may appear differently based on model and software version.

■ To adjust the time and the appearance of the clock on the display:

1. Touch the  key on the **Launch Bar**.
2. Touch the  Settings key on the home page.
3. Touch the "General" key.
4. Touch the "Clock" key.

 


■ Touch the  key to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

FM/AM/SiriusXM® Radio

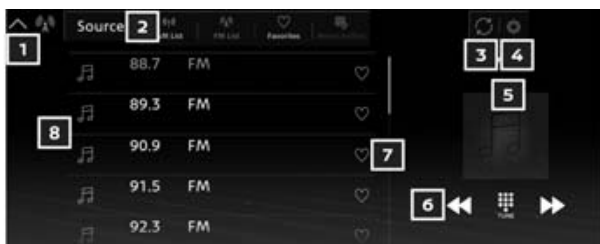

Touch the Audio key on the **Launch Bar** to display the current audio source, and then touch the "Source" key to access the source selection screen.

Touch the Audio key on the to display the current audio source, and then touch the "Source" key to access the source selection screen.

1 OPERATION SCREEN KEY

- Touch to display the AM/FM/SiriusXM® operation screen.

2 AM/FM/SiriusXM® MENU BAR

- < key — Slides the menu bar to the left.
- AM List — Displays the AM list screen.
- FM List — Displays the FM list screen.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- SiriusXM® with 360L — Displays the SiriusXM® list screen.
- Favorites — Displays a list of radio bands registered as favorites.
- MoreLikeThis — Displays a list of songs similar to the ones the user had been listening to.
- > key — Slides the menu bar to the right.

3 REFRESH KEY

- Touch to refresh the station list.

4 SETTINGS KEY

- Touch to display the radio settings screen.

5 STATION INFORMATION

- Displays the radio frequency/station currently tuned to.

6 OPERATION KEYS

- Touch corresponding keys for FM/AM/SiriusXM® radio operation.

7 FAVORITES KEY

- Touch to add the station to favorites. Touch "Favorites" on the AM/FM menu bar to display the favorite station list.

8 STATION LIST

- Select a preferred station.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system" section of your NissanConnect® Owner's Manual.

USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-A) are located by the center console. There are two additional USB connection ports **2** (if so equipped) in the console in front of the backseats.
- When a compatible USB memory device are plugged into the USB connection ports **1** (USB Type-A), compatible audio files stored on the device can be played through the vehicle's audio system. The additional USB charging ports **2** (if so equipped) are for charging only.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

For a full list of compatible devices, refer to your NissanConnect® Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems"** section of your Owner's Manual and the **"Getting started"** section of your NissanConnect® Owner's Manual.

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.

The voice recognition system can be set to Google Assistant.



 
To select which system you wish to use:

1. Touch the  settings key on the home screen.
 2. Touch "Apps & Notifications".
 3. Touch "Active Voice Assistant".
 4. Select the preferred system. The selected app icon will appear on the Launch Bar.
- Press the  button on the steering wheel to use the voice recognition system.
 - When Apple Carplay® or Android Auto™ are active, pushing and holding the  button will start a Siri® or Google Assistant session.
 - If no device is connected, pushing and holding  button opens the screen to add devices.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Touch the  key **1** on the home page.
2. Touch the “Connections” key **2**.
3. Touch the “Device” tab **3** and touch “Add Device”.
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

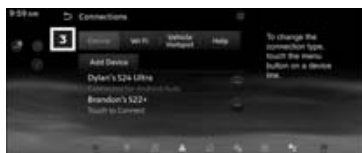


VEHICLE PHONEBOOK

1. Touch the  key on the Launch Bar.
2. Touch the “Phonebook” tab.
3. Choose the desired entry from the displayed list.



MAKING A CALL

 1. Touch the  key on the Launch Bar. The “Phonebook” screen **4** appears on the display.
2. Select one of the options to make a call.

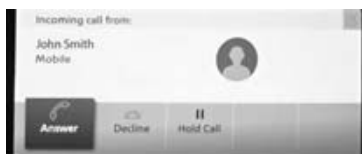

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
 - Press the  button (if so equipped) on the steering wheel
 - Touch the  Decline key on the screen.

SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch “Use Handset” on the screen to use the handset (cellular phone).

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Bluetooth® Hands-Free Phone System” and the “Voice Recognition” sections of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located below the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- To start a Siri session:
 - Press and hold the  button on the steering wheel. Press the button again to end a Siri session.
 - Use the “Hey Siri” command.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available while driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the touch the Home menu key on the Launch Bar.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **1**, or
 - Touch “Apple CarPlay” on the app’s menu screen.
- NISSAN Phone menu and NISSAN Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you can connect a USB cable to the USB connection port located beneath the climate controls. You can also connect via Bluetooth by touching the  key then touching "Connections" followed by "Add Device".
 - Depending on the setting, the startup information screen will appear on the center display.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed by pressing and holding the  button on the steering wheel. Press the button again to end voice operation.
- To return to the Android Auto™ home screen from the main menu:
 - Touch the  key **1** on the Launch Bar, or
 - Touch "Android Auto" on the app's menu screen.
- NISSAN Phone menu will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" and the "Apps" sections of your NissanConnect® Owner's Manual.

NISSANCONNECT® EV WITH SERVICES POWERED BY SIRIUSXM® (if so equipped)

NissanConnect® EV with Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

NissanConnect® EV enables you to perform remote functions from a compatible internet-enabled smartphone or personal computer, such as:

- Battery status check - The status of the battery can be checked even if you are not in the vehicle.
- Unplugged status and charge status - A notification e-mail can be sent if the charging connector is disconnected or if charging is complete.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- Remote charge and remote climate control - Start battery charging, or climate controls can be set.
- Destinations by Google™ - Allows you to search for locations near your vehicle's current location, near a plotted destination, near the map's scroll position or near a searched city center.

To enroll in NissanConnect® EV with Services, create an account or log into your NISSAN Owner Portal with your Vehicle Identification Number (VIN). Follow the prompts to enroll in NissanConnect® EV with Services. Next, download the NissanConnect® Services app on your compatible iPhone® or Android smartphone and log into it using your NISSAN Owner Portal ID and password.

For full details on NissanConnect® EV with Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. A full description of these and other NissanConnect® EV with Services can be found in your NissanConnect® Manual.

- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Connection to Roadside Assistance - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle's location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching "Call NISSAN Assistance".
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your car or if you need to open it and don't have the keys. To use this feature, log into the NissanConnect® Services companion app or website or contact a NissanConnect® EV with Services Response Specialist.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Valet Alert - Use Valet Alert to set up a 0.2-mile radius around your vehicle. Activate alerts via the NissanConnect® Services companion app or website.
- Curfew Alert - Specify curfew limits via the NissanConnect® Services companion app or website and will be notified via a selected method if curfew is violated.
- Route Planner - Allows you to plan your itinerary and simplify your trip. By entering a starting point and end destination, Route Planner will look at the vehicle's range and suggest routes by identifying charging station waypoints along the way.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- **Boundary Alert-** A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect® Services web portal or companion app.
- **Speed Alert -** Sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.

To access these features in your vehicle:

1. Touch the apps key on the Launch Bar.
2. Touch "NissanConnect Services".
3. Select an item from the NissanConnect® Services menu screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual and the "Apps" and the "Troubleshooting guide" sections of your NissanConnect® Manual.

WIRELESS CHARGING (if so equipped)

The wireless charger is located in the center console underneath the lid. Pull up the armrest and place the smartphone horizontally on the pad of the wireless charger **1**. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.



- Please note that phone position and phone case type may impact wireless charging.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
 1. Touch the "Settings" key **1**.
 2. Touch the "Connections" key.
 3. Touch the "Device" key **2**.
 4. Touch "Add Device".
- Once your Bluetooth® device has been connected as an audio device:
 1. Touch the  audio key **3** on the Launch Bar.
 2. Select the added device from "Source" key **4**.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.



*Some jurisdictions prohibit the use of cellular telephones while driving.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-Free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Once the vehicle is in motion, text messages can only be replied to using the Voice Recognition  button on the steering wheel.
- Text messages can be created manually when the vehicle is not in motion.
- Custom text messages must be created in advance.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

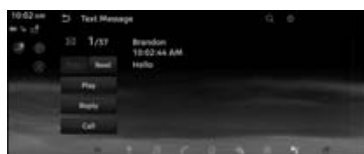

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual.

DRIVING FEATURES

FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - ProPILOT Assist
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - Intelligent Forward Collision Warning (I-FCW)
- The “Forward Driving Aids temporarily disabled Front Sensor blocked See Owner’s Manual” warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, snow, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, place the shift selector in the **P (Park)** position and turn the EV system off. Clean the sensor areas and restart the EV system. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.



Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual **3**



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**” and the “**Starting and driving**” sections of your Owner's Manual.

DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- An indicator light **1** located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- If the turn signal is activated, the system will chime (twice), the side indicator light will flash, and the BSW indicator will illuminate (yellow) in the vehicle information display.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the **R (Reverse)** position is selected and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The RCTA and BSW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

INTELLIGENT BLIND SPOT INTERVENTION (I-BSI)

- The I-BSI system helps alert the driver of other vehicles in adjacent lanes when changing lanes, and helps assist the driver to return the vehicle to the center of the traveling lane.
- An indicator light **1** located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- When the BSI system is turned on the I-BSI ON indicator light on the instrument panel illuminates.
- To turn on the I-BSI system, push the  switch **2** on the steering wheel after starting the EV system.



DRIVING FEATURES

- The I-BSI system operates above approximately 37 mph (60 km/h). If the system detects a vehicle in the detection zone and your vehicle is approaching the lane marker, the system chimes (three times) and the side indicator light and I-BSI indicator flash. The I-BSI system activates to help return the vehicle back to the center of the driving lane. The I-BSI system operates regardless of turn signal usage
- The I-BSI system can be turned on or off through the “Driver Assistance” menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” and the “Starting and driving” sections of your Owner's Manual.

PROPILOT ASSIST (if so equipped)

ProPILOT Assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a “hands-on” driver assistance system and is intended for use on freeways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

SETTING THE PROPILOT ASSIST SYSTEM

1. To set ProPILOT Assist, push the  switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
2. Push the **SET** switch **4** when at the desired speed.
3. Push the  switch **5** to select the following distance.



PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

- 6** Vehicle set speed indicator
 - Displays the speed set by the driver.
 - Green: ICC active
 - Gray: ICC standby
- 7** Steering Assist Indicator
 - Shows whether Steering Assist is active or not (green-active, gray-standby).



DRIVING FEATURES

8 Lane marker indicator

- No lane markers displayed: Steering Assist is turned off.
- Gray: No lane markers detected, steering assist in standby.
- Green: Lane markers detected, steering assist active.
- Yellow: Lane departure is detected.

9 ProPILOT Assist status indicator

- Displays whether ProPILOT Assist is active or not.
- White: Standby
- Blue: Active

10 Vehicle ahead detection indicator

- Appears on display when a vehicle is detected ahead.

11 Set distance indicator

- Displays the selected distance set by the driver.

CANCELING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
 - Push the **CANCEL** switch **2** on the steering wheel.
 - Tap the brake pedal. This action will keep the system in standby. To resume, push the **RES±** switch **3** to either direction to return to the original vehicle set speed, or push the **SET** switch **4** to set the current vehicle speed.

PROPILOT ASSIST INTELLIGENT CRUISE CONTROL (ICC)

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES±** switch **3** or **SET** switch **4** and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

VEHICLE AHEAD DECELERATES AND/OR STOPS

- The system will not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone. The driver must control the vehicle to prevent a collision.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.

DRIVING FEATURES

- When the vehicle ahead accelerates, push and release the **RES±** switch **3** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.

TURNING THE CONVENTIONAL (fixed speed) CRUISE CONTROL MODE ON

- To choose the conventional (fixed speed) cruise control mode, push and hold the  switch **1** for longer than approximately 1.5 seconds.
- Once vehicle is at the desired speed, push the **SET** switch **4**. Once set, the vehicle will maintain the desired set speed as shown by the cruise control icon and set speed indicator displayed above.

STEERING ASSIST

- The Steering Assist system assists the driving operation to help keep the vehicle within the traveling lane. Steering Assist can be activated when the following conditions are met:
 - ProPILOT Assist is activated.
 - Lane markings on both sides are clearly detected.
 - The driver has hands on the steering wheel.
 - The vehicle is driven at the center of the lane.
 - Turn signals are not active.
 - The windshield wipers are not operated in the high speed position
- Steering Assist provides a warning, is canceled or temporarily goes into standby mode under the following conditions:
 - The turn signals are activated.
 - Both hands are not detected on the steering wheel. Simply apply more pressure or a tighter grip on the steering wheel.
 - The wipers are in LO or HI speed position.
 - Steering Assist will not activate if the system does not detect lane markers.

DRIVING FEATURES

Push the Steering Assist switch **12** to turn the system on.

To turn off Steering Assist:

- Push the Steering Assist switch **12** on the instrument panel to the left of the steering column or in the settings of "Driver Assistance" in the vehicle information display.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.



HANDS ON DETECTION

- If the driver lets go of the steering wheel or only lightly touches it, the system may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again (apply gentle torque in one direction), the warnings turn off.
- If the driver does not place their hands back on the wheel or cancel the ProPILOT Assist, the vehicle warnings will continue and the vehicle will eventually come to a stop.



ELECTRONIC PARKING BRAKE AND AUTOMATIC HOLD (if so equipped)

- To apply the parking brake, pull the **15** switch **15**, located in the center console. The electronic parking brake indicator light **16** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the **15** switch **15** down. The electronic parking brake indicator light **16** will turn off.
- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the EV power system ON, push the automatic brake hold switch **17** to activate the automatic brake hold function. The indicator light will illuminate.



DRIVING FEATURES

- To use the automatic brake hold function, the following conditions need to be met:
 - The driver's seat belt is fastened.
 - The electronic parking brake is released.
 - The shift selector is not in the **P (Park)** position.
 - The vehicle is not parked on a steep hill.
- Push the automatic brake hold switch **17** to cancel the function. To deactivate while the feature is applying the brake force, depress the brake pedal and push the automatic brake hold switch **17**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or unique traffic conditions. Clean/defrost your windshield and/or cleaning sensor to keep this feature working properly. Please refer your Owner's Manual for more information.

For more information, refer to the **"Instruments and controls"** and the **"Starting and driving"** sections of your Owner's Manual.

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle, cyclist or pedestrian ahead in the traveling lane.
- Intersection assist helps the driver when there is a risk of a forward collision when turning right or left. The turn signal must be activated for the system to detect an approaching vehicle. The system may detect a pedestrian without the turn signal activated.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-50 mph (10-80 km/h). Intersection assist operates between 6-16 mph (10-25 km/h) when the turn signal is active.
- If there is a risk of a forward collision with a vehicle, an audible tone will sound and the vehicle ahead detection indicator **1** will illuminate. In addition, the system applies partial braking. If the driver does not take action, the AEB Pedestrian Detection System will provide a second set of audible and visual warnings to the driver and then automatically apply harder braking.
- If there is a risk of a forward collision with a pedestrian, an audible tone will sound and the AEB emergency warning indicator **2** will flash. Partial braking will be applied, followed by harder braking if the driver fails to react.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Starting and driving"** section of your Owner's Manual.

 
DRIVING FEATURES

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by selecting the **R (Reverse)** shift position. The monitor displays various views of the position of the vehicle.



- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the **CAMERA** button **1** or the screen icon at the bottom of the display to switch between the available views:

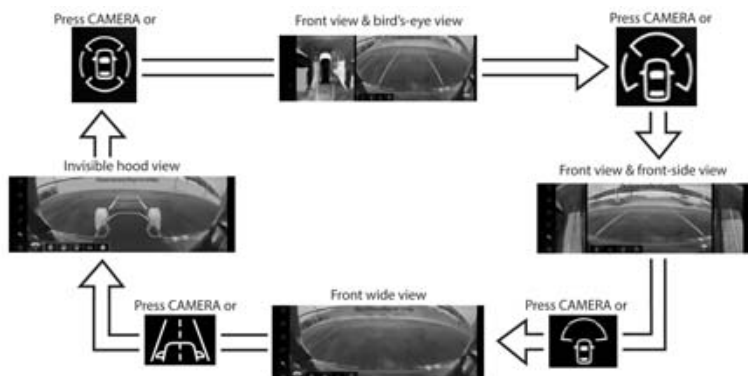


- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the icon **2** at the bottom of the display to see the 3D View **3** (if so equipped).
- The Invisible Hood View allows you to see the road surface underneath the vehicle. This may be useful for aligning the front wheels at a car wash or help to avoid hitting the side of curbs when operating at low speeds.
- The front and rear wide views show a wider area on the entire screen and allows checking of the blind corners on the right and left sides.




DRIVING FEATURES

 - When the **R (Reverse)** shift position is selected, press the CAMERA button or the screen icon at the bottom of the display to switch between the available views:

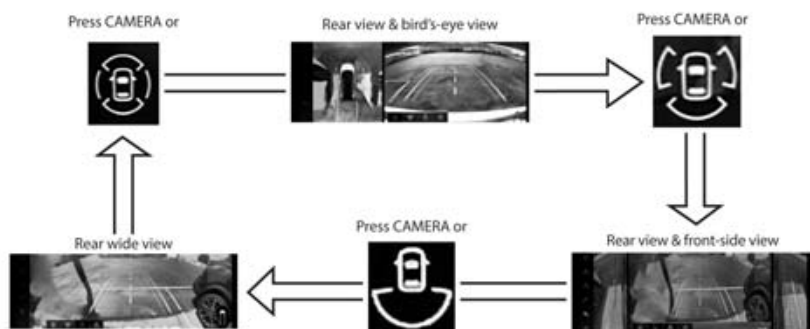

- The colored guidelines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Blue 3 ft (1 m)
 - Blue 7 ft (2 m)
 - Blue 10 ft (3 m)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects:
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **4**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **5** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.
- Objects in the bird's-eye view will appear farther than the actual distance.

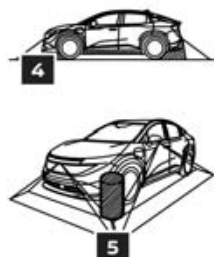 

DRIVING FEATURES

MY PARKING LOCATIONS (if so equipped)

- This system allows you to ensure that there is enough space to open the door at your usual parking spot, such as your home garage.
- To register a parking location after parking the vehicle in the correct position:
 1. Press the camera button.
 2. Touch the “Settings” key.
 3. Touch the “My Parking Locations” key.
 4. Touch your preferable parking location from the list, then touch the “Register” key.
- After registering the parking space, use the on-screen arrows to adjust the parking space frame or delete it.
- Once registered, the display view switches and the parking guide appears when the vehicle approaches the registered spot.

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the transmission is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, an orange frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Green MOD icon ; the system is active.
 - Gray MOD icon; the system is not active.
 - No MOD icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Monitor, climate, audio, phone and voice recognition systems” section of your Owner's Manual.

DRIVING FEATURES

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist system will operate automatically under these conditions:
 - The transmission is shifted to a forward or reverse gear.
 - The vehicle is stopped completely on a hill by applying the brake.
- The system will not operate when the transmission is shifted to the **N (Neutral)** or **P (Park)** position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the transmission is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning indicator light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** for vehicles equipped with the Intelligent Around View® Monitor system. The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.
- The RAB system can be turned on and off through the "Driver Assistance" section vehicle information display.



When the RAB system is turned off, the RAB system warning light **1** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37–125 mph (60–200 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will vibrate and the LDW light **1** on the vehicle information display will blink to alert the driver.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The LDW system can be turned on and off through the “Driver Assistance” section vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**” and the “**Starting and driving**” sections of your Owner's Manual.

APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) SYSTEM

- The VSP system helps alert pedestrians to the presence of the vehicle when it is being driven at a low-speed.
- The sound stops when the vehicle speed is more than approximately 25 mph (40 km/h) while accelerating.
- The sound starts when the vehicle speed is less than approximately 22 mph (35 km/h) while decelerating.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Overview**” and the “**Instruments and controls**” sections of your Owner's Manual.

DRIVING FEATURES

e-STEP SYSTEM

- The e-Step system enables the driver to slow the vehicle by operating only the accelerator pedal. This system helps to keep the driver from moving his/her foot between the accelerator pedal and the brake pedal.
- When the e-Step system is activated, the regenerative brake is enhanced and the driver can adjust the vehicle speed by only depressing or returning the accelerator pedal.
- Be sure to confirm the status of the e-Step system in the vehicle information display before driving.
- To activate or deactivate the e-Step system, place the power switch in the **ON** position and push the e-Step switch **1** located on the instrument panel.
- The e-Step system indicator illuminates **e-Step ON/OFF 2** in the vehicle information display when the e-Step system has been activated or deactivated.
- The e-Step system will not function under the following conditions.
 - When the vehicle is placed in the **P (Park)** or **N (Neutral)** position.
 - When a driver assistance function such as ProPILOT Assist system is operating.



REGENERATIVE BRAKING INTENSITY

When the transmission is in **D (Drive)** position, regenerative braking intensity can be manually selected.

- To reduce the intensity of the regenerative braking, briefly pull on the right-side paddle selector on the steering wheel.
- To increase the intensity of the regenerative braking, briefly pull on the left-side paddle selector on the steering wheel.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls"** and the **"Starting and driving"** sections of your Owner's Manual.

DRIVING FEATURES

INTELLIGENT DRIVER ALERTNESS (I-DA)

- When Driver Alertness **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

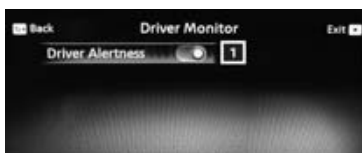


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

 - The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver by blinking the vehicle ahead detection indicator light **1** and an audible alert.

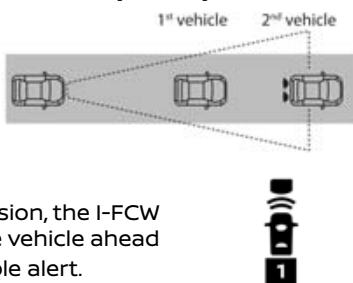

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

SHIFT CONTROL SYSTEM



This vehicle is equipped with an electric shift control system **1**, providing smooth and easy shifting operation.

- There are four shift positions for operating the vehicle: **P (Park)**, **R (Reverse)**, **N (Neutral)** and **D (Drive)**.
 - **P (Park)** – Activated by pushing the **P (Park)** switch on the shift selector when the vehicle has come to a complete stop.
 - **R (Reverse)** – Use this position to back up. Make sure that the vehicle is completely stopped before selecting the **R (Reverse)** position.
 - **N (Neutral)** – Neither forward nor reverse gear is engaged. The vehicle can be placed in the READY to drive position in this position.
 - **D (Drive)** – For normal driving, it is activated by pressing the **D** switch on the shift selector.

Multiple driving modes can be selected by using the Drive Mode Selector **2**. To change the mode, push the upper side or lower side of the Drive Mode Selector **2**.

- Eco mode
 - Improves energy efficiency and cruising range. The intensity of regenerative braking increases when the accelerator pedal is released.
- Personal mode
 - Set drive mode of your own. Using the vehicle information display controls, you can set each of the driving elements to your preference.
- Standard mode
 - This is the normal mode that is most suitable for normal driving.
- Sport mode
 - Provides higher motor torque response for agile driveability and stronger regeneration brake for sporty drive by accelerator pedal only. The setting of the steering system is adjusted to moderately increase steering wheel effort for a sporty feel.

DRIVING FEATURES

NEUTRAL HOLD MODE FUNCTION

- This function enables you to turn off the EV system with the vehicle in the **N (Neutral)** position. While activated, the vehicle can be moved by pushing with hand (when car washing) even if the power switch is in the OFF position. When using this function, release the parking brake. To activate the Neutral Hold Mode Function, please see your Owner's Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Overview" and the "Starting and driving" sections of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure VDC is on by ensuring the VDC OFF light is not on before driving the vehicle.
- The VDC should remain on when driving, except when freeing the vehicle if it is stuck in snow or mud.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

HEAD UP DISPLAY (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle speed
- Navigation
- Driving Assist
- Traffic Sign
- Audio
- TEL/SMS
- Message for Driver Assistance
- Warning message
- Press the Head Up Display (HUD) switch **1** on the lower instrument panel to turn the system on and off.
- To adjust the Head Up Display settings when the system is on:
 1. Press the **◀▶** arrows **2** on the steering wheel until you get to the "Settings" menu in the vehicle information display. Press the scroll/ **OK** dial to select "Head-Up Display".



DRIVING FEATURES

2. Adjust the positioning of the Head Up Display on the windshield by making a selection and press the scroll/ **OK** dial on the steering wheel to adjust features such as the height and brightness.

The following features can be adjusted through the “Settings” menu in the vehicle information display:

- Brightness
- Height
- Rotation
- Contents Selection
- Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**” section of your Owner's Manual.



Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- NISSAN Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- NISSAN Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2026/leaf or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

