 




QUICK REFERENCE GUIDE

2026 **MURANO**

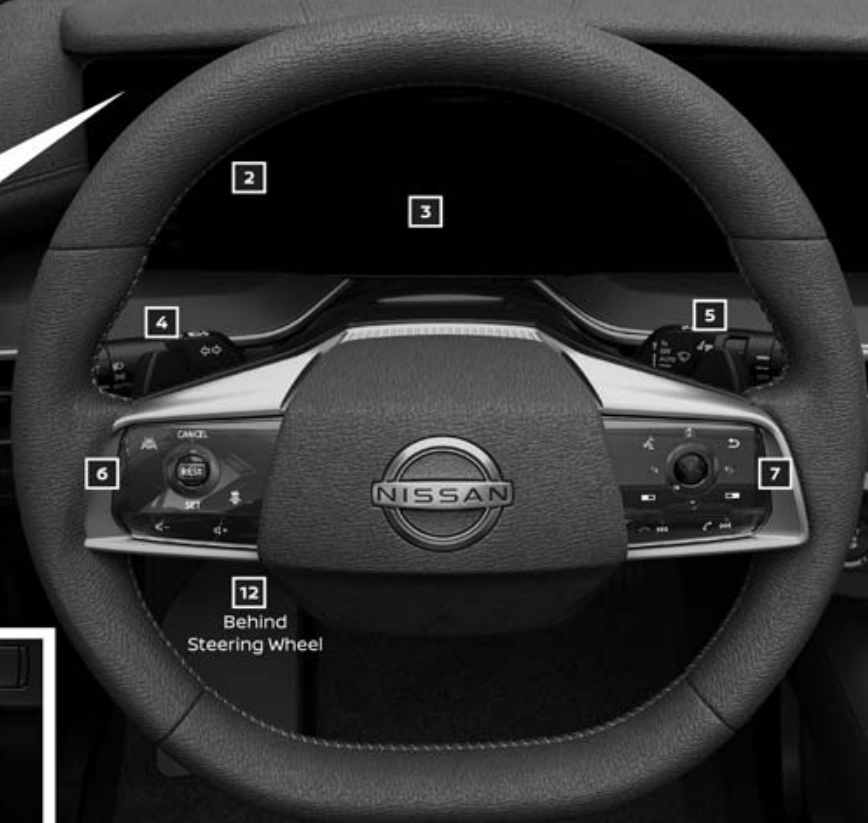

COCKPIT OVERVIEW

- 1** Instrument Brightness Control
- 2** Low Tire Pressure Warning Light 
- 3** Vehicle Information Display
- 4** Headlight and Turn Signal Switch
- 5** Wiper and Washer Switch
- 6** Steering Wheel Switches for Intelligent Cruise Control/ProPILOT Assist Switch/Audio Volume Switch
- 7** Steering Wheel Switches for Audio/Bluetooth®/Navigation (if so equipped)/Vehicle Information Display
- 8** Steering Assist Switch
- 9** Head Up Display On/Off Switch (if so equipped) 
- 10** Power Liftgate Switch 
- 11** Electronic Parking Brake/Auto Hold Switch
- 12** Power Tilt/Telescopic Steering Column (if so equipped)



1

2

3

6

4

5

7

8

INSTRUMENT PANEL

- 1** Control Display/Navigation (if so equipped)/Audio System
- 2** Heater and Air Conditioner (automatic)
- 3** Push-button ignition Switch
- 4** USB Connection Port Interface
- 5** Wireless Charger Indicator Light
- 6** Hood Release 
- 7** Shift Selector
- 8** Drive Mode Selector

TABLE OF CONTENTS

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM	3
SEAT ADJUSTMENTS	6
CLIMATE CONTROLLED SEATS (if so equipped)	7
MEMORY SEAT (if so equipped)	8
REAR SEAT BELT WARNING	9
REAR DOOR ALERT	9
STARTING/STOPPING THE ENGINE	10
OUTSIDE MIRROR CONTROL SWITCH	10
EMERGENCY CALL (SOS) BUTTON	11
HEATER AND AIR CONDITIONER (automatic)	12
HEATED STEERING WHEEL (if so equipped)	14
HEADLIGHT CONTROL SWITCH	14
WIPER AND WASHER SWITCH	16
VEHICLE INFORMATION DISPLAY	17
TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT	18
CAPLESS FUEL FILL AND FUEL-FILLER DOOR	19
TOWING YOUR VEHICLE	19
POWER LIFTGATE	20
MOTION-ACTIVATED LIFTGATE (if so equipped)	21
FRONT ARMREST/CENTER CONSOLE STORAGE BOX	21
REAR DOOR SUNSHADE (if so equipped)	21
INTERIOR AMBIENT LIGHTING (if so equipped)	22

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

GOOGLE BUILT-IN (if so equipped)	23
HOW TO USE THE TOUCH-SCREEN DISPLAY	23
CLOCK SET/ADJUSTMENT	24
USB CONNECTION PORT INTERFACE	24
BLUETOOTH® HANDS-FREE PHONE SYSTEM*	25
FM/AM/SiriusXM® Radio	27
APPLE CARPLAY®	28
ANDROID AUTO™	29
NISSANCONNECT® SERVICES POWERED by SiriusXM®	30
HANDS-FREE TEXT MESSAGING ASSISTANT*	32
BLUETOOTH® STREAMING AUDIO	33
MAGNETIC WIRELESS CHARGING	34
HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)	34
myQ CONNECTED GARAGE (if so equipped)	35



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at www.NissanUSA.com.



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system**", the "**Monitor, climate, audio, phone and voice recognition systems**" and the "**Starting and driving**" of your Owner's Manual.

TABLE OF CONTENTS

DRIVING FEATURES

ELECTRONIC SHIFT SELECTOR	36
FORWARD DRIVING AID SENSORS	37
BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)	38
AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM	39
INTELLIGENT AROUND VIEW® MONITOR (if so equipped)	40
HILL START ASSIST	42
REAR AUTOMATIC BRAKING (RAB)	43
LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)	44
INTELLIGENT DRIVER ALERTNESS (I-DA)	44
INTELLIGENT FORWARD COLLISION WARNING (I-FCW)	45
VEHICLE DYNAMIC CONTROL (VDC)	45
TRAFFIC SIGN RECOGNITION (TSR)	45
PROPILOT ASSIST SYSTEMS	46
HEAD UP DISPLAY (HUD) (if so equipped)	54
IDLING STOP SYSTEM	55
CAMERA BUTTON (+DAY/NIGHT SETTING)	55

GETTING STARTED

NISSAN INTELLIGENT KEY® SYSTEM

The NISSAN Intelligent Key® system allows you to lock or unlock your vehicle, open your liftgate (if so equipped) and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

KEY-LINKED SETTINGS (if so equipped)

The Key-Linked Settings automatically retain the driver's last positions for the specific Intelligent Key when the ignition switch is turned from ON to OFF. The memory seat switch can store two additional positions which are independent from the Key-Linked Settings.

- Use the following process to set up Key-Linked Settings:
 1. While the ignition is OFF, unlock the vehicle with the desired Intelligent Key.
 2. Place the ignition in the ON position.
 3. Within the "All Settings" menu of the touch screen display, select "Users" and then "Setup Profile".
 4. Create a personal profile. This profile automatically links to the key inside the vehicle at the time of profile creation.
 5. Set the desired seat, steering and outside mirror positions.
 6. Place the ignition switch in the OFF position and lock the vehicle with the Intelligent Key.
- Follow the same procedure if you want to link a 2nd, 3rd, or 4th Intelligent Key.

NOTE: The "Guest" profile does not save any settings, and will not be recalled when the ignition is placed in the ON position. The profile and settings linked to the Intelligent Key in use are recalled when the ignition is placed in the ON position. To resume using the "Guest" profile, select "Switch User" from the welcome message, then select "Guest".

REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL*

- Remote Start operating range is approximately 197 ft (60 m) from the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the key and the vehicle.
- For Remote Engine start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
 1. Press the  button **1**.
 2. Within 5 seconds, press and hold the Remote Engine Start  button **2** for at least 2 seconds.
- The engine will start, and the parking lights will turn on.



GETTING STARTED

- The automatic climate control will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.
- The engine will run for 20 minutes and then turn off.
- A maximum of one Remote Engine Start is allowed between ignition cycles.
 - The vehicle must be driven at speeds of 4 mph (7 km/h) before the remote engine start procedure can be used again.
 - To cancel the Remote Engine Start, press the Remote Engine Start button **2**.
- To start driving, depress the brake pedal and push the ignition switch.

LOCKING AND UNLOCKING THE VEHICLE

- The operating range of the Intelligent Key (if so equipped) is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **3** once or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
 - Push the passenger door handle switch **3** to unlock all doors. Push the driver's door handle request switch **3** once to unlock just the driver's door. Push the switch again within 1 minute to unlock all doors.
 - Selective unlock can be turned off in the vehicle information display to make all doors unlock from the driver's door handle switch with one press.
 - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again within 1 minute to unlock all doors.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the horn  button **6** for longer than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.



 
LIFTGATE RELEASE

- To open the liftgate, press the  button **5** for longer than 1 second.
- To close the liftgate, press the  button **5** again for longer than 1 second.

GETTING STARTED

NISSAN INTELLIGENT KEY® BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, **Key Battery Low**  will display on the gauge and the engine will need to be started according to the following procedure:

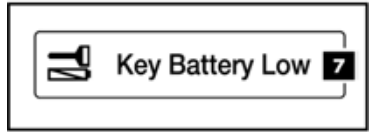

1. Select the **P (Park)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key. A chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

APPROACH UNLOCK FUNCTION

- When you approach the vehicle with the Intelligent Key, the vehicle will be unlocked automatically by the approach unlock function. This function is disabled by the default setting. You can enable this function using the vehicle information display.



WALK AWAY LOCK FUNCTION

- When you walk away from the vehicle with the Intelligent Key, the vehicle will be locked automatically by the walk-away lock function. This function is disabled by the default setting. You can enable this function using the vehicle information display.

*State laws may apply; review local laws before using.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the **"Instruments and controls"**, **"Pre-driving checks and adjustments"**, **"Starting and driving"** and the **"Do-it-yourself"** sections of your Owner's Manual or refer to the **"Getting started"** section of your NissanConnect® Owner's Manual.

GETTING STARTED

SEAT ADJUSTMENTS

FRONT POWER SEAT ADJUSTMENTS

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To recline the seatback, push the switch **2** forward or backward.



SEAT LIFTER

- To adjust the angle and height of the seat cushion, push the front or rear end of the switch **1** up or down.

FRONT LUMBAR SUPPORT (if so equipped)

- To adjust the seat lumbar support, push the front, back, top or bottom ends of the switch **3**.

MASSAGING SEAT (if so equipped)

- Push the switch **4** to start the massage function and again to stop it.
- The massage function can also be operated by using the key on the touchscreen.

FOLDING DOWN THE REAR SEAT

- Fold the seatback forward using release lever **5**, located on the outside edge of the rear seat, or the release lever **6** in the cargo area.
- To raise the seatback manually, lift up each seatback and push it to the upright position until it is latched.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" and the "Instruments and controls" sections of your Owner's Manual.



GETTING STARTED

CLIMATE CONTROLLED SEATS (if so equipped)



The climate controlled seats are cooled by blowing air from under the surface of the seat and warmed by a built-in heater.

FRONT SEATS

- Push the climate controlled seat switch **1** on the touch screen to access the climate control screen for each seat.
- Press the climate control key **2** to turn the climate controlled seats ON or OFF.
 - Press the climate control key to adjust the temperature for your seat **3**.
- Use the temperature keys **4** to adjust the temperature of your seat.



- The heated seats automatically turn off and on to maintain temperature.

REAR SEATS

The heater is controlled by a thermostat, automatically turning the heater on and off. The indicator light will remain on as long as the switch is on.

- Push the left or right heated seat switch **5** to heat the rear seats.
- To turn the heated seats off push the switch.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.



For more information, refer to the "Instruments and controls" and the "Monitor, climate, audio, phone, and voice recognition systems" sections of your Owner's Manual.

GETTING STARTED

MEMORY SEAT (if so equipped)

- The memory seat system provides 2 independent methods for storing the driver's seat, steering wheel and outside mirror positions.
 1. Storing seat memory positions to the memory seat switches.
 2. Linking user profile to memory seat.

NOTE: The steering wheel adjustment is only equipped if your vehicle is fitted with power adjustment operation.

MEMORY SEAT SWITCHES

- Two positions for the driver's seat, steering wheel and outside mirrors can be stored in the memory seat system.
- Follow this procedure to use the memory system:
 1. Place the ignition switch in the ON position. The vehicle should be in the **P (Park)** position while setting the memory.
 2. Adjust the driver's seat, steering wheel and outside mirrors to the desired positions by manually operating each adjusting switch.
 3. Push the **SET** switch **1**, and within 5 seconds, push the memory switch (**1** or **2**) **2**.
 4. The indicator light for the selected switch will illuminate for 5 seconds and a chime will sound indicating the memory has been successfully stored.



NOTE: Memory seat switches are independent of the user profile memory.

USER PROFILE MEMORY

This function allows users to link the intelligent key to the center display. The user profile allows user to automatically save the driver's last seat, steering and mirror positions depending on which key is used when the ignition is turned from ON to OFF. This feature is independent from the Memory Seat Switches.

NOTE: The "Guest" profile will not link to any intelligent key and will not save a driving position. During memory recall, GUEST will not be recalled when the ignition switch is placed in the ON position. Instead, the last profile used will be recalled.

NOTE: If both keys are in the vehicle at the same time, only the last used key will recall memory profile.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

GETTING STARTED

REAR SEAT BELT WARNING

- This warning includes display of the seat belts for rear positions only. Rear seat belts that are unfastened will appear red **1**.
- If any rear seat belts are unfastened when the ignition switch is pushed to the ON position, this warning will display for about one minute.
- When a rear seat belt is changed from fastened to unfastened, this warning will display **1** for about one minute.
- If the vehicle is driven above a certain speed during or after the status change, this warning will display **1** and the chime will sound for over one minute. During this time, the warning and chime cannot be dismissed unless the rear seat belt is fastened again.



NOTE: Opening and closing a rear door while stopped will reset this warning, similar to pushing the ignition switch to ON again.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" and the "Instruments and controls" sections of your Owner's Manual.

REAR DOOR ALERT

This alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 10 minutes before driving.

REAR DOOR ALERT (ACTIVE)

- When the system is active an audible horn will sound three times and a **Check Rear Seat for All Articles** warning **1** will appear on the display.
- To activate Rear Door Alert, in your vehicle information display:
 - Press the ◀▶ buttons on the steering wheel until the "Settings" menu screen appears. Press the scroll/ OK dial to make the selection.
 - Using the ⬆⬇⬆ buttons, select "Vehicle Settings", "Rear Door Alert" and then press the scroll/ OK dial.
 - Choose from the following options: "OFF", "Horn & Alert", or "Alert Only" and then press the scroll/ OK dial.

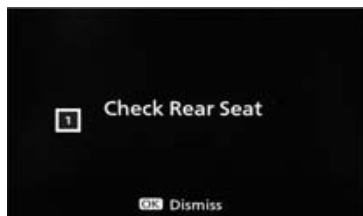

GETTING STARTED

- To Dismiss the Rear Door Alert:
 - To dismiss the warning, use the  buttons on the steering wheel to select “Dismiss Message” **2**. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the  buttons on the steering wheel to select “Disable Alert” **3** and press the **OK** button.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” section of your Owner's Manual.

STARTING/STOPPING THE ENGINE

- Make sure the Intelligent Key® is with you (that is, in your pocket or purse).
- Make sure the vehicle is in the **P (Park)** or **N (Neutral)** position.
- Depress the brake pedal.
- Push the ignition switch to start the engine.



TURNING THE ENGINE OFF

- Push the **P (Park)** button, apply the parking brake and push the ignition switch to turn the engine off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving” section of your Owner's Manual.

OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver's side outside mirror or push the right switch **2** to select the passenger's side outside mirror.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.



GETTING STARTED

REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn both outside mirror surfaces downward to provide better rear visibility close to the vehicle.
 1. Push the left switch **1** to select the driver's side outside mirror or push the right switch **2** to select the passenger's side outside mirror.
 2. Apply the brake.
 3. Place the ignition switch in the ON position.
 4. Select the **R (Reverse)** shift position.
 5. The reverse tilt positions can be changed. While in **R (Reverse)**, adjust the glass positions to the desired location. The next time the vehicle is shifted into **R (Reverse)**, the glass positions will go to the newly set positions.

The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:

- The shifter selection is in any position other than **R (Reverse)**.
- The selected mirror is deselected using the left switch **1** or the right switch **2**.
- The ignition switch is placed in the OFF position.

AUTOMATIC FOLDING OUTSIDE MIRRORS (if so equipped)

- Press the **4** switch to fold the mirrors in and out as needed.
- For more adjustment settings, please refer to your Owner's Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

EMERGENCY CALL (SOS) BUTTON

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use the feature, press the cover to open, then press the **SOS**  button **1** on the overhead console.
- For additional information, or to enroll your vehicle, refer to www.NissanUSA.com/connect or call 855-426-6628.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual or refer to the "Apps" section of your NissanConnect® Owner's Manual.

GETTING STARTED

HEATER AND AIR CONDITIONER (automatic)



- The Heater and Air Conditioner screen can be accessed by pressing the “Climate Controls” button  **1** on the Launch Bar.
- All of the haptic control buttons are located on the front display. Please see your Owner’s Manual for instructions to adjust haptic feedback.

2 ON-OFF BUTTON/KEY

- Press the **ON-OFF** button/key on the front display or on the touch screen to turn the climate control system on or off.

3 AUTO BUTTON/KEY

- The automatic mode may be used year-round. Press the **AUTO** button/key on the front display or on the touch screen. The system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

GETTING STARTED

4 TEMPERATURE CONTROL BUTTON/KEY

- Press the temperature control button/keys on the front display or touch screen to turn up for warmer air or down for cooler air.

5 FAN SPEED CONTROL BUTTON/KEY

- Press the fan speed control button/key on the front display or touch screen to adjust the fan speed up or down.

6 AIR FLOW CONTROL KEY

- Touch the air flow control key on the touch screen to cycle through the following air flow outlets:
 -  Air flows mainly from defroster.
 -  Air flows from center and side vents.
 -  Air flows mainly from the foot outlets.

7 A/C BUTTON KEY

- Press the **A/C** button on the touch screen to manually turn the A/C on or off.

8 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS BUTTON

- Press the front defroster button  on the front display to turn the system on. Both the air conditioner and heater will automatically turn on when the front defroster mode is selected. The driving range will be reduced when using this setting.
- To remove moisture or fog on the front window quickly, set the temperature control buttons **4** and the fan speed control buttons **5** to their maximum settings.

9 AIR RECIRCULATION BUTTON/KEY

- Press the  air recirculation button/key on the front display or touch screen to toggle between recirculation, auto recirculation, and fresh air. The air intake control mode will change each time the button/key is pushed or pressed. The indicator light on the button/key will illuminate.

10 REAR WINDOW AND OUTSIDE MIRROR DEFROSTER BUTTON

- Push the rear window and outside mirror defroster switch  on the front display to turn the system on or off.
- The rear window defroster automatically turns off after approximately 20 minutes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Monitor, climate, audio, phone and voice recognition systems" sections of your Owner's Manual.

GETTING STARTED

HEATED STEERING WHEEL (if so equipped)

- Touch the  icon **1** on the touchscreen to turn on the heated steering wheel.
- The heated steering wheel automatically turns on and off to maintain a temperature above 68°F (20°C).
- Touch the  icon **1** to turn off the heated steering.
- If the temperature of the steering wheel is above 122°F (50°C) when the switch is turned on, the system will not heat the wheel.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



 
AUTOLIGHT SYSTEM

- The system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight switch to the **AUTO** position **3**, then place the ignition in the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

GETTING STARTED

HEADLIGHT BEAM SELECT

- With the headlights **ON** (by selecting the  position **2**), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will turn off.
- To flash the headlight high beams on and off, pull and release the headlight control switch **5**.

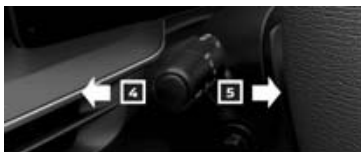

HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the switch **6** as shown. The high beam assist indicator light in the meter will illuminate while the headlights are turned on.



LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash, but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the **"Instruments and controls"** section of your Owner's Manual.

GETTING STARTED

WIPER AND WASHER SWITCH

- The ignition switch must be in the ON position. Move the lever to one of the following positions to operate the windshield wipers:

- 1 Mist (MIST)** — One sweep operation of the front wipers.
- 2 Intermittent (INT)** (if so equipped) — Front wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **3** to increase or decrease the wiper sensitivity.
- 4 Low (LO)** — Front wipers operate at a continuous low-speed.
- 5 High (HI)** — Front wipers operate at a continuous high-speed.
- 6** Pull the lever towards you to activate the front washer. The wipers will operate several times.

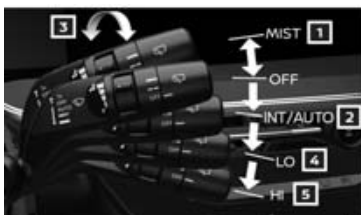

REAR WIPER AND WASHER

- Move the lever to one of the following positions to operate the rear windshield wipers:

- 7 Intermittent (INT)** — Rear wiper operates intermittently.
 - 8 Low (ON)** — Rear wiper operates at a continuous low-speed.
 - 9** Push the lever forward to activate the rear washer. The rear wiper will operate several times.
- Access the rear wiper service position by pushing the rear washer switch forward **9** twice within one second with the ignition in the OFF position (if the ignition is ON or the engine is running, the rear washer will operate).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Do-it-yourself" sections of your Owner's Manual.

GETTING STARTED

VEHICLE INFORMATION DISPLAY



When the buttons **1** on the steering wheel are pressed, the following screens will appear on the vehicle information display: **2**:

 **Home** — Displays the current speed, the compass and the additional media that is available.

 **Driving Computer** — Displays Average Fuel Economy, Average Speed, Trip Computer and time of the trip. Press and hold the **OK** button **3** on the steering wheel.

 **Vehicle Information** — Displays the individual tire pressures while driving, Idling Stop System Status and AWD (4x4 – i) Status (if so equipped).

 **Navigation (if so equipped)** — Displays the vehicle's current direction when the route guidance is set. When no route is set, a compass is displayed on the screen.

 **Audio** — Displays the current playing media. Press the **OK** button **3** on the steering wheel to select other media sources.

 **Driving Aids (if so equipped)** — Displays the Driving Aids that are equipped on your vehicle. To turn each system on or off, use the **OK** button **3** on the steering wheel.

 **Warning Review** — Displays the current warnings. This screen only displays if the vehicle has stored warnings.

 **Settings** — Displays the current vehicle settings.

- Press the **OK** button **3** on the steering wheel to choose the selected menu.
- Press the  buttons **3** on the steering wheel to cycle through the various setting modes.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.



GETTING STARTED

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately one minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
 1. Push the **P (Park)** button and apply the parking brake.
 2. Place the ignition switch in the ON position. Do not start the engine.
 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
 5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Starting and driving", "In case of emergency", "Do-it-yourself" and the "Technical and consumer information" sections of your Owner's Manual.

GETTING STARTED

CAPLESS FUEL FILL AND FUEL-FILLER DOOR

FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the driver's side of the vehicle.



CAPLESS FUEL FILL

- The fuel tank is not equipped with a fuel-filler cap.
- After opening the fuel-filler door, insert the fuel pump nozzle directly into the fuel-filler opening.
- When the fuel pump nozzle is pulled out, the fuel-filler opening will be sealed.

EMERGENCY FILL-IN

- If you need to refuel from a portable fuel container, use the funnel **2** stored in the storage space under the luggage board.
- Be sure to insert the funnel into the fuel-filler opening slowly and fully. Insert the nozzle of the portable fuel container into the opening along the funnel and fill the fuel tank.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

TOWING YOUR VEHICLE

ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)

- An all-wheel drive vehicle must be towed with all wheels off the ground.

For proper towing and to prevent accidental damage to your vehicle, NISSAN recommends that a service operator tows your vehicle after carefully reading the Owner's Manual precautions.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency" section of your Owner's Manual.

GETTING STARTED

POWER LIFTGATE

- When the liftgate is closed and locked, the liftgate will open automatically by:
 - Pushing the power liftgate switch **1** on the instrument panel for more than 1 second.
 - Pushing the liftgate opener switch **2**; the liftgate must be unlocked, or you must have the NISSAN Intelligent Key® with you (that is, in your pocket or purse).
 - Pressing the  button **3** on the NISSAN Intelligent Key® for more than 1 second.

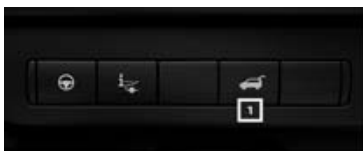

LIFTGATE POSITION SETTING

- The liftgate can be set to open to a specific height by performing the following procedure:
 1. Open the liftgate using the liftgate opener switch or the Intelligent Key.
 2. Pull the liftgate down to the desired position and hold the liftgate (the liftgate will have some resistance when being manually adjusted).
 3. While holding the liftgate in position, push and hold the power liftgate switch **4** located on the liftgate for approximately 3 seconds or until two beeps are heard.
- The liftgate will open to the selected position. To change the position of the liftgate, repeat steps 1 through 3 to set the position of the liftgate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual

GETTING STARTED

MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Intelligent Key® within 47 in (120 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper **1**.
- The vehicle will beep three times and the liftgate will open.
- Do not swing your foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.



FRONT ARMREST/CENTER CONSOLE STORAGE BOX

- Push the button **1** to access the center console storage box.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.



 
REAR DOOR SUNSHADE (if so equipped)

The rear door sunshade is located within the rear doors at the base of the window.

- To raise the sunshade, pull up the center tab **1**.
- Hook the sunshade slots onto the tabs **2**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

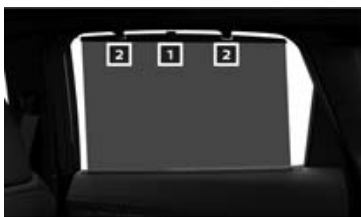

GETTING STARTED

INTERIOR AMBIENT LIGHTING (if so equipped)

To access Interior Ambient Lightning:

1. Select the "Settings" screen.
2. Select "Vehicle".
3. Select "Interior Light". Then choose "Ambient Lighting" to adjust the lighting feature of your vehicle.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

GOOGLE BUILT-IN (if so equipped)

Drivers can use Google built-in features on the in-vehicle system.

- Google Assistant™
 - You can voice control various functions such as playing music, and setting destinations with Google Maps, etc.
- Google Maps
 - Navigation functions such as getting driving directions, and finding nearby facilities, etc. can be used.
- Google Play
 - Various apps can be downloaded and used with the in-vehicle system.
- For some of the functions, an internet connection and/or signing into your Google account are required for full use.
- For details of the Google Automotive Services, refer to the following website: <https://built-in.google/cars/>

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

HOW TO USE THE TOUCH-SCREEN DISPLAY



1 Launch Bar — Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens.

2 Notifications/settings keys — Displayed on most of the main screens. Touching these keys will bring up the corresponding screens:

- Notifications: Notifications can be checked. The number on the icon indicates the number of unconfirmed notifications.
- All Settings: Various settings can be changed for personal convenience.
- Climate Control: Keys and information for climate control, etc. are displayed.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

3 Widgets — Useful information can be displayed as widgets. The widgets displayed on the home menu screen can be customized.

4 Status indicators — Icons display here showing the status of various items such as connected device battery.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

CLOCK SET/ADJUSTMENT

■ Some screens may appear differently based on model and software version.

■ To adjust the time and the appearance of the clock on the display:

1. Touch the  key on the **Launch Bar**.
2. Touch the  Settings key on the home page.
3. Touch the "General" key.
4. Touch the "Clock" key.



■ Touch the  key to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

USB CONNECTION PORT INTERFACE

■ The USB connection ports **1** (USB Type-C) are located on the lower part of the instrument panel.

■ When a compatible USB memory device or auxiliary device is plugged into the USB port, audio contents from the compatible device can play through the in-vehicle audio system.

■ There are also USB charging ports **2** (USB Type-C) located in the 2nd row on the back of the center console. These ports will charge compatible devices.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A or USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual and the "Getting Started" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.

SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a NISSAN Voice Recognition session, press and hold the  button on the steering wheel, or the  key on the steering wheel.
- To decrease or increase the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL (volume)** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the NISSAN Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit www.NissanUSA.com/bluetooth.



AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

CONNECTING PROCEDURE

1. Touch the  key **1** on the home page.
2. Touch the "Connections" key **2**.
3. Touch the "Device" tab **3**.
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.



VEHICLE PHONEBOOK

 
1. Touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

MAKING A CALL

1. Touch the  key on the Launch Bar. The "Phonebook" screen **4** appears on the display.
2. Select one of the options to make a call.

RECEIVING/ENDING A CALL

- To accept the incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  key on the screen.
- To end or reject an incoming call, either:
 - Press the  button on the steering wheel, or
 - Touch the  key on the screen.

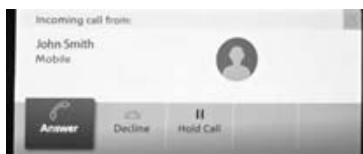

SWITCH TO HANDSET

- Start the call using your Bluetooth® hands-free phone and touch the "Use Handset" key on the screen to use the handset (cellular phone).

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual and the "Bluetooth® Hands-free phone" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

FM/AM/SiriusXM® Radio



Touch the Audio key on the **Launch Bar** to display the current audio source, and then touch the “Source” key to access the source selection screen.

1 OPERATION SCREEN KEY

- Touch to display the AM/FM operation screen.

2 STATION LIST

- Select a preferred station.

3 FAVORITES KEY

- Touch to add the station to favorites. Touch “Favorites” on the AM/FM menu bar to display the favorite station list.

4 AM/FM MENU BAR

- Settings key — Displays the radio settings screen.
- Refresh key — Refresh the list.
- < key — Slides the menu bar to the left.
- AM List — Displays the AM List screen.
- FM List — Displays the FM List screen.
- Favorites — Displays a list of radio bands registered as favorites.
- MoreLikeThis — Displays a list of songs similar to the ones the user had been listening to.
- Internet Radio — Displays the internet radio screen.
- Podcast — Displays the podcast screen.
- > key — Slides the menu bar to the right.

5 STATION INFORMATION

- Displays the radio frequency/station currently tuned to.

6 OPERATION KEYS

- Touch corresponding keys for FM/AM radio operation.

7 HYBRID RADIO KEY (if so equipped)

- Stay connected to your favorite radio station regardless of your location as you drive your vehicle.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems**” section of your Owner's Manual and to the “**Audio system**” section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located below the climate controls or wirelessly via Bluetooth®.
 - Depending on the setting, the startup information screen will appear on the center display.
 - Touch “Yes” then “OK” to use Apple CarPlay®.
 - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- To start a Siri® session, press and hold the  button on the steering wheel.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available while driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the touch the Home menu key on the Launch Bar.
- To return to the Apple CarPlay® screen from the main menu:
 - Touch the  Apple CarPlay® key **1**, or
 - Touch “Apple CarPlay” on the app’s menu screen.
- NISSAN Phone menu and NISSAN Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you can connect a USB cable to the USB connection port located beneath the climate controls. You can also connect via Bluetooth by touching the  key then touching "Connections" followed by "Add Device".
 - Depending on the setting, the startup information screen will appear on the center display.
 - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- Google Assistant™ operation can be accessed by pressing and holding the  button on the steering wheel. Press the button again to end voice operation.
- There are three ways to start Google Assistant™:
 1. Press and release the  button on the steering wheel until a beep is heard.
 2. Touch the microphone key on the Launch Bar.
 3. Say "OK Google" (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto™ home screen from the main menu:
 - Touch the  key **1** on the Launch Bar, or
 - Touch "Android Auto" on the app's menu screen.
- NISSAN Phone menu will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" and the "Apps" sections of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

NISSANCONNECT® SERVICES POWERED by SiriusXM®

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the MyNISSAN® app on your compatible iPhone® or Android® smartphone and log into it using your Nissan Owner Portal ID and password.
- For full details on NissanConnect® Services or to enroll your vehicle, please visit **www.NissanUSA.com/connect** or call **1-855-426-6628**.
- Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect® features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect® features and services, please consult your vehicle's NissanConnect® Owner's Manual at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. For frequently asked questions, please visit: **www.nissanusa.com/connect/faq**.

Some of the available NissanConnect® services may include:

- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Connection to Roadside Assistance - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle's location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching "Call Nissan Assistance".
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect® Services companion app or website or contact a NissanConnect® Services Response Specialist.
- Remote Engine Start - Start your engine remotely using the NissanConnect® Services companion app or website.
- Boundary Alert - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect® Services web portal or companion app.
- Speed Alert - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- **Alarm Notification** - This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert** - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect® Services companion app or website.
- **Curfew Alert** - Specify curfew limits via the NissanConnect® Services companion app or website and will be notified via a selected method if curfew is violated.
- **My Car Finder** - This allows you to locate your vehicle en route or in a crowded lot.
- **Collision Management** - In the event of an emergency, Collision Management is used to document any damage and set-up transportation of your vehicle to a dealership.
- **Hybrid Radio (if so equipped)** - Stay connected to your favorite radio station regardless of your location as you drive your vehicle.
- **Connected Garage Door Opener** - Open or close your compatible garage door, turn off the interior light and check the general status of your garage door.

To access these features in your vehicle:

1. Touch the apps key on the Launch Bar.
2. Touch "NissanConnect Services".
3. Select an item from the NissanConnect® Services menu screen.

DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
 - Transfer the destination from the smartphone, then transfer to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch-screen display.
 - Touch "Store" to register the destination in the address book.
 - Touch "Ignore" to cancel the transfer of the destination.
 - Touch "Start" to start route guidance.

 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

HANDS-FREE TEXT MESSAGING ASSISTANT*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-Free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

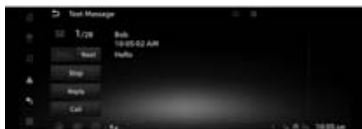

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.



- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.



1. Touch the  settings key **1**.
2. Touch the "Connections" key.
3. Touch the "Device" key **2**.
4. Touch "Add Device".

- Once your Bluetooth® device has been connected as an audio device:

1. Touch the audio key **3** on the Launch Bar.
2. Select the added device from "Source" key **4**.

- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.

*Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Audio system" section of your NissanConnect® Owner's Manual or please visit www.NissanUSA.com/bluetooth.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

MAGNETIC WIRELESS CHARGING

The magnetic wireless charger is located on the front of the center console, below the climate control system. Ensure the smartphone is positioned horizontally and fully seated on the center of the charging pad **1**. To optimize the charging performance, use a Qi2 compatible phone or phone case equipped with a magnetic ring. This will help the phone properly attach and align on the magnetic charger. Charging will begin automatically.



The smartphone will be charged continuously while the ignition switch is in the ON position. Some phone cases, including those not equipped with magnetic ring, may impact charging conditions.

- The  indicator **2** will illuminate in orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink orange for 8 seconds and then turn off.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

HOMELINK® UNIVERSAL TRANSCIEVER (if so equipped)



- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, gates, home and office lighting, entry door locks and security systems.
- Place the ignition switch in the ON or ACC position (without starting the engine) when programming HomeLink®.

AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

- To program the HomeLink® Universal Transceiver:
 - Press and release the HomeLink® button that you would like to program. The HomeLink® indicator light will flash slowly.
 - Position the hand-held transmitter 1–3 in (2–8 cm) away from the HomeLink® surface, keeping the HomeLink indicator light in view.
 - While the HomeLink® indicator light **1** is flashing, press and hold the handheld transmitter button. Continue pressing the hand-held transmitter button until the HomeLink® indicator light changes. You may now release the hand-held transmitter button.
- To verify the programming is complete, press and hold the HomeLink® button and observe the indicator light.
 - A solid, continuous light indicates the programming is complete and the HomeLink® button will activate your device.
 - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
 - At the receiver of the device that you are programming to the HomeLink® system, press and release the learn or smart button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
 - Press and hold the programmed HomeLink® button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink® should now activate your device.
- To view a detailed instructional video, go to **www.nissanquickguide.com/2026/murano** or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for “HomeLink” or “Garage Door”.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**” section of your Owner's Manual, the HomeLink website at **www.homelink.com** or call **1-800-355-3515**.

myQ CONNECTED GARAGE (if so equipped)

myQ Connected Garage allows for remote monitoring, opening and closing of myQ compatible garage doors. This can be accessed through the touch-screen display. Download the myQ app on your smartphone using the QR code displayed on the touchscreen display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Apps**” section of your NissanConnect® Owner's Manual.

DRIVING FEATURES

ELECTRONIC SHIFT SELECTOR

- Before shifting, ensure that the engine is running and the brakes are applied.

To shift to **R (Reverse)**:

- Press the **R (Reverse)** button. The **R** on the shifter button will illuminate, and **R** will be displayed in the meter display.

To shift to **D (Drive)/M**:

- Press the **D (Drive)/M** button. The **D/M** on the shifter button will illuminate, and **D/M** will be displayed in the meter display.

To shift to **N (Neutral)**:

- Press the **N (Neutral)** button. The **N** on the shifter button will illuminate, and **N** will be displayed in the meter display.

To shift to **P (Park)**:

- Press the **P (Park)** button.
- If all of the following conditions have been met, the shift position may be changed to the **P (Park)** position automatically.
 - When the vehicle is stopped.
 - When the driver's door is opened.

NEUTRAL HOLD MODE FUNCTION

- This function enables you to exit the vehicle with the engine running and the vehicle in the **N (Neutral)** position. While this function is activated, the vehicle can be moved by pushing with hand (when car washing). To activate the Neutral Hold Mode Function, please see your Owner's Manual.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.



DRIVING FEATURES

FORWARD DRIVING AID SENSORS

- A camera and radar sensor support forward driving aids for your vehicle. The camera is located above the **1** inside mirror and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
 - Automatic Emergency Braking (AEB) with Pedestrian Detection
 - ProPILOT Assist
 - Intelligent Forward Collision Warning (I-FCW)
- The “Forward Driving Aids temporarily disabled Front Sensor blocked See Owner’s Manual” warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears or the warning light illuminates, stop the vehicle in a safe place, press the **P (Park)** button, and turn the engine off. Clean the radar sensor areas and restart the engine. This may mean cycling the windshield wipers and turning on the windshield defrost for a few minutes. If the message and light continue to appear after cleaning radar sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.



Forward Driving Aids temporarily disabled
Front Sensor blocked
See Owner's Manual **3**



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “**Instruments and controls**” and the “**Starting and driving**” sections of your Owner's Manual.

DRIVING FEATURES

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- If the turn signal is turned on with a vehicle in the detection zone, the system chimes twice, the side BSW with RCTA indicator light flashes and the BSW with RCTA indicator illuminates yellow in the vehicle information display.
- The indicator **2** will illuminate after the ignition switch is placed in the ON position and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the **R (Reverse)** shift position is selected and the vehicle speed is less than approximately 5 mph (8 km/h).
- The BSW system can be enabled/disabled through the "Driver Assistance" screen in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- Intersection assist helps the driver when there is a risk of a forward collision when turning right or left. The turn signal must be activated for the system to detect an approaching vehicle. The system may detect a pedestrian without the turn signal activated.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-50 mph (10-80 km/h). Intersection assist operates between 6-16 mph (10-25 km/h) when the turn signal is active.
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red and white) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

 
DRIVING FEATURES

INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by selecting the **R (Reverse)** shift position. The monitor displays various views of the position of the vehicle.



- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the **CAMERA** button **1** or the screen icon at the bottom of the display to switch between the available views:

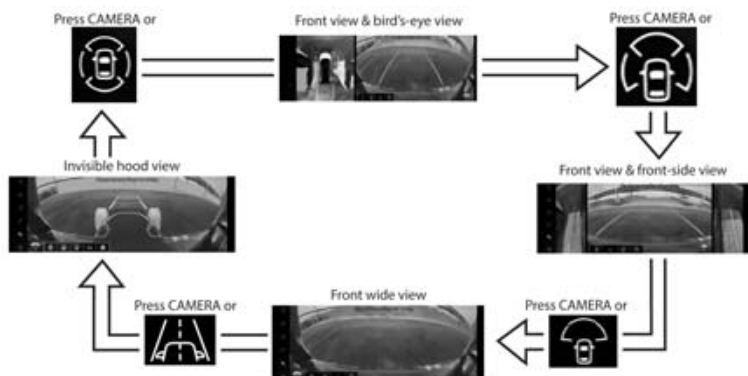


- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the icon **2** at the bottom of the display to see the 3D View **3** (if so equipped).
- The invisible hood view allows you to see the road surface underneath the vehicle. This may be useful for aligning the front wheels at a car wash or help to avoid hitting the side of curbs when driving at low speeds.
- The front and rear wide views show a wider area on the entire screen and allows checking of the blind corners on the right and left sides.




DRIVING FEATURES

 - When the **R (Reverse)** shift position is selected, press the CAMERA button or the screen icon at the bottom of the display to switch between the available views:

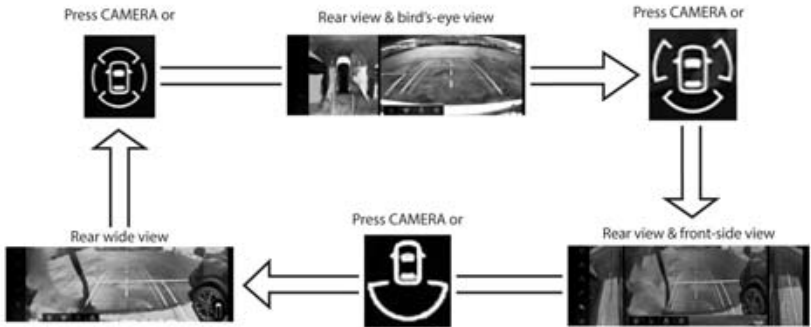

- The colored guidelines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
 - Red 1.5 ft (0.5 m)
 - Blue 3 ft (1 m)
 - Blue 7 ft (2 m)
 - Blue 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects.
 - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **4**.
 - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **5** will not appear in the monitor.
 - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.
- Objects in the bird's-eye view will appear farther than the actual distance.

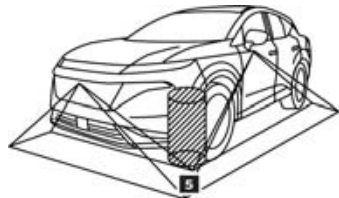 

DRIVING FEATURES

MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the transmission is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
 - Green MOD icon ; the system is active.
 - Gray MOD icon; the system is not active.
 - No MOD icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

- Hill Start Assist will operate automatically under these conditions:
 - A forward or a reverse gear shift position is selected.
 - The vehicle is stopped completely on a hill by applying the brake.
 - The hill grade is above 5%.
- Hill Start Assist will not operate when the **N (Neutral)** or **P (Park)** position is selected or when the vehicle is on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

DRIVING FEATURES

REAR AUTOMATIC BRAKING (RAB)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the **R (Reverse)** shift position is selected and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system indicator light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.



TURNING THE RAB SYSTEM ON/OFF

- The RAB system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.
- The RAB system can be temporarily turned on or off by touching the RAB temporary ON/OFF key on the center display.
- When the RAB system is turned off, the RAB system warning light **3** illuminates.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will alert the driver through the steering wheel (vibration) and the LDW indicator **1** on the instrument panel will blink yellow to alert the driver.
- The LDW system can be turned on and off through the "Driver Assistance" screen in the vehicle information display.
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying the steering to the left or right for a short period of time.
- The LDW and I-LI system can be turned on and off through the "Driver Assistance" section in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

INTELLIGENT DRIVER ALERTNESS (I-DA)

- When Driver Alertness **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver by blinking the vehicle ahead detection indicator light **1** and an audible alert.

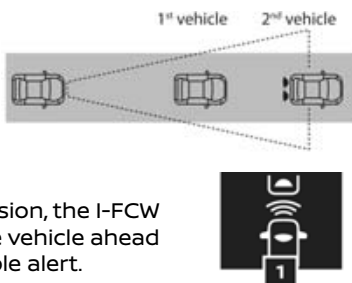

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

VEHICLE DYNAMIC CONTROL (VDC)

- Always make sure VDC is on by ensuring the VDC OFF light  is not on before driving the vehicle. The VDC OFF indicator light should not be illuminated in the instrument panel.
- The  VDC OFF switch should ONLY be used briefly to help free the vehicle if it is stuck in snow or mud.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

TRAFFIC SIGN RECOGNITION (TSR)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror. Detected road signs are displayed in the vehicle information display.

- The TSR system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

DRIVING FEATURES

PROPILOT ASSIST SYSTEMS

ProPILOT Assist is a hands-on driver assistance system intended for limited access expressways and is not designed to be used on city/rural streets. The system is intended to help keep the vehicle in the center of the lane and help maintain a preset distance to the vehicle ahead traveling in the same lane.

The two primary features of ProPILOT Assist include Intelligent Cruise Control (ICC) and Steering Assistance. ProPILOT Assist 1.1 equipped vehicles include Speed Adjust by Route, Speed Limit Assist and Extended Stop. ProPILOT Assist 2.1 (if so equipped and subscribed) offers features like Lane Change Assist, Passing Assist, and Steering Assist with HD map data. The driver is responsible for the driving task and must be prepared to steer and brake the vehicle at all times.

Vehicles equipped with ProPILOT Assist 2.1 will have two roof mounted antennas.

PROPILOT ASSIST OPERATION

1. Push the ProPILOT Assist  switch **1** on the steering wheel.
 - The ProPILOT Assist system display will appear on the vehicle information display.
 - Safety Shield status is temporarily displayed.
2. Once the vehicle is at the desired speed, push the **SET** switch .
 - The vehicle will maintain the set speed, unless the vehicle detects a slower vehicle in the traveling lane, or Speed Limit Assist or Speed Adjust by Route is active.
3. Adjust distance setting using the distance  switch **3**, if necessary.
 - The vehicle will maintain the set speed, unless the vehicle detects a slower vehicle in the traveling lane, or Speed Limit Assist or Speed Adjust by Route is active.



TO INCREASE SPEED

- Push the **RES±** switch **2** up and hold to increase speed in 5 mph (5 km/h) increments.
- Push the **RES±** switch **2** up and quickly release the switch to increase speed by 1 mph (1 km/h).
- Accelerate to the new desired speed and press the **SET** switch.

TO DECREASE SPEED

- Push the **RES±** switch **2** down and hold to decrease speed in 5 mph (5 km/h) increments.
- Push the **RES±** switch **2** down and quickly release the switch to decrease speed by 1 mph (1 km/h).

DRIVING FEATURES

TO CANCEL THE SYSTEM

- Push the **CANCEL** switch **4** or tap the brake pedal.
- These actions will keep the system in standby. To resume, push the **RES±** switch up or down **2** to return to the original vehicle set speed, or push the **SET** switch down to set the current vehicle speed.

UNDERSTANDING THE DISPLAY

Display color will change depending on ProPILOT Assist modes. See table; the further down the list, the higher the level of the mode. Images shown are examples - actual condition may vary slightly. Display may vary depending on vehicle and display configuration.

Color	Meaning
None	System off
Gray	Standby
White	ICC system active
Green	Hands-On mode active
Blue	Hands-Off mode active (ProPILOT Assist 2.1 only)

- 5** ProPILOT Assist indicator:
 - Indicates the status of the ProPILOT Assist function.
- 6** Steering Assist indicator:
 - Indicates the status of the Steering Assist function.
- 7** Vehicle Set Speed indicator:
 - Indicates the vehicle set speed.
- 8** Intelligent Cruise Control (ICC) status indicator:
 - Displays the status of the speed control including the distance setting and detection of a lead vehicle.
- 9** Speed Limit Adjust indicator:
 - Indicates the detected speed limit. "A" indicates Auto mode.
- 10** Lane Change Assist indicator:
 - Icon is displayed when Lane Change Assist feature is available.
- 11** Lane Marker indicator:
 - Displays real world lane condition.
- 12** Blind Spot Detection:
 - Indicates when a vehicle is detected in the blind spot.



DRIVING FEATURES

13 Surrounding Vehicle Display:

- Displays other detected vehicles, including passenger vehicles, trucks and motorcycles. The multi-lane display is only available on HD mapped divided highways.

14 Road information indicator (if so equipped):

- Displays the detected road information.

15 Detected road sign (speed limit) indicator (if so equipped):

- Displays the detected road information.

UNDERSTANDING THE FEATURES OF PROPILOT ASSIST SYSTEMS

INTELLIGENT CRUISE CONTROL

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h).
- When a vehicle is detected in the lane ahead, the ICC system helps control the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and keep the vehicle stopped.
- When the vehicle ahead begins to move, push and release the **RES+** switch up or tap the accelerator pedal if your vehicle has been stopped for more than three seconds (and up to 30 seconds on the highway for vehicles equipped with ProPILOT 1.1 and ProPILOT 2.1). The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system may warn the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected.

STEERING ASSIST

- When the lane markers are clear and consistent on both sides of the vehicle, the Steering Assist system assists the driver to help keep the vehicle within the traveling lane.
- This feature can operate when vehicle speed is above 37 mph (60 km/h).
- Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.

DRIVING FEATURES

- With the Steering Assist active, when a curve or strong cross wind exceeds the capabilities of the system and your vehicle approaches either the left or the right side of the traveling lane, the I-LI system will flash the I-LI indicator on the vehicle information display and provide steering wheel vibration to alert the driver.
- Steering Assist is canceled or temporarily goes into standby mode under, but not limited to, the following conditions:
 - The turn signals are activated (for vehicles not equipped with ProPILOT Assist 2.1).
 - Hands are not detected on the steering wheel (when Hands-off mode is not active, for vehicles equipped with ProPILOT Assist 2.1).
 - The system cannot detect clear and consistent lane markers.
 - The lane marker has been crossed.
 - When the windshield wipers operate in the high speed setting.

TO TURN OFF STEERING ASSIST

 
- Push the  Steering Assist switch **16** on the instrument panel to the left of the steering column or turn it off in the "Driver Assistance" settings under "Lane Centering Assist" in the vehicle information display.



- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see the Owner's Manual.

HANDS ON DETECTION

- The vehicle uses capacitive sensors in the steering wheel to detect whether the driver has their hands placed on the wheel.
- If the driver's hands are not detected on the wheel, the warning appears **17** and a series of escalating warnings will continue. The driver must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

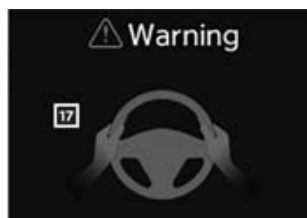

PROPILOT ASSIST 1.1 (if so equipped)

- ProPILOT Assist 1.1 has all the same features of ProPILOT Assist and includes a link to navigation to provide new features like "Speed Limit Assist" and "Speed Adjust by Route".

DRIVING FEATURES

SPEED LIMIT ASSIST (A feature of ProPILOT Assist 1.1, if so equipped)

- When ProPILOT Assist is active and detects a change of the speed limit, the new speed limit sign value is indicated **18** (green outline around sign icon) in the display and can be applied to the vehicle set speed automatically or manually. The driver also has the option to add an offset to the posted speed limit.
- When in manual mode, to accept the new set speed, the driver presses the toggle switch up to accept a higher speed or press down to accept a lower speed.
- If you wish to maintain the current set speed, no action is required.
- If Speed Limit Assist is set to "AUTO" mode, the set speed will automatically change (no driver action required).



TO TURN OFF SPEED LIMIT ASSIST

- Speed Limit Assist can be turned off in the "Driver Assistance" settings under "Intelligent Cruise" in the vehicle information display through:
 - Intelligent Cruise / Speed Limit Assist / Auto/Manual/OFF

SPEED ADJUST BY ROUTE (A feature of ProPILOT Assist 1.1, if so equipped)

- When ProPILOT Assist is active on the freeway, the system uses road information provided by the Map locator system to help adjust the vehicle speed as indicated by the Speed Adjust by Route Icon **19**.
- The system may not always reduce speed for all freeway interchanges and freeway curves.
- The driver needs to maintain vehicle control and apply braking whenever necessary. For best results, a route must be set using in vehicle navigation.



 
TO TURN OFF SPEED ADJUST BY ROUTE

- Speed Adjust by Route can be turned off in the "Driver Assistance" settings under "Intelligent Cruise" in the vehicle information display.

DRIVING FEATURES

CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- This mode allows driving at a fixed speed between 20 to 90 mph (30 to 144 km/h). The system will not respond to vehicles ahead in your lane.
- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch **1** for longer than 1.5 seconds.
- When at the desired speed, push the toggle switch **4** down toward to **SET**.
- To accelerate or decelerate your vehicle to the desired speed, push the toggle switch **4** toward **CANCEL** or **SET** and release it.
- The conventional (fixed speed) cruise control mode display and indicators **20** are displayed in the vehicle information display.
- To use the ICC system again, press the ProPILOT Assist switch to turn off the system and then press and release the switch to turn on ProPILOT Assist ICC mode.

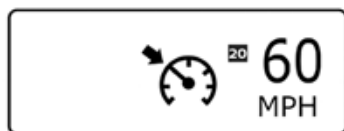

STEERING ASSIST WITH HD MAP DATA (A feature of ProPILOT Assist 2.1, if so equipped)

- ProPILOT Assist 2.1 allows the driver to take their hands off of the steering wheel when certain conditions are met, as indicated by the Hands-Off steering assist indicator and blue display.
- For Hands-Off driving, the vehicle must be on a highway or limited access freeway as defined by the HD map data.

Mode	Display Color	Steering Assist Symbol
OFF	None	None
Standby	Gray	None
Intelligent Cruise Control	White	
Hands-On mode	Green	
Hands-Off mode	Blue	

- The system may request the driver to place their hands back on the wheel at any time if conditions are no longer met – including construction zones, tight curves, merging lanes, for example.
- Hands-off driving is only available for speeds up to 85 mph (136 km/h).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

DRIVING FEATURES

DRIVER MONITOR

- ProPILOT Assist 2.1 uses a driver facing camera located on the steering column to monitor the driver's attention to the road ahead.
- If the system does not detect driver's attention to the road ahead, a series of escalating warnings will display in an effort to draw the driver's attention back forward.
- On ProPILOT Assist 2.1 vehicles, the driver monitor is monitoring driver attention in all driving conditions, not just when ProPILOT Assist 2.1 is active.

LANE CHANGE ASSIST (A feature of ProPILOT Assist 2.1, if so equipped)

- When ProPILOT Assist 2.1 is active and the Lane Change Assist indicator **21** is illuminated in blue, Lane Change Assist can help the driver with steering control during a lane change when the turn signal is activated and conditions are met.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

TO TURN OFF LANE CHANGE ASSIST

- Lane Change Assist can be turned off in the "Lane Change Assist" settings under "Driver Assistance" in the vehicle information display.



The following is shown in the vehicle information display when Lane Change Assist is assisting the lane change of the vehicle.

DRIVING FEATURES

PASSING ASSIST (A feature of ProPILOT Assist 2.1, if so equipped)

- When ProPILOT Assist is active and the Lane Change Assist indicator is illuminated in blue, the Passing Assist feature can suggest a lane change to the left when a slower vehicle is detected ahead. When a slower vehicle is detected ahead the Lane Change Assist screen will appear before the Passing Assist screen.
- The driver can accept to pass the slower vehicle by pressing the lane change assist switch **22** on the steering wheel.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.



The following is shown in the vehicle information display when Passing Assist is suggesting a lane change to pass a slower vehicle ahead.

The vehicle will suggest to pass when the slower lead vehicle is detected traveling at the following speeds:

Setting	Lead vehicle speed
Sport	3 MPH (5 km/h) slower
Standard	6 MPH (10 km/h) slower
Comfort	9 MPH (15 km/h) slower

TO ADJUST SUGGESTION TIMING OR TURN OFF PASSING ASSIST

- Passing Assist can be changed or turned off in the “Driver Assistance” settings under “Lane Change Assist” in the vehicle information display.

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or certain and/or unique traffic conditions. Clean/defrost your windshield and/or clean the sensor(s) to keep this feature working properly.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls”, “Starting and driving” and the “Technical and consumer information” sections of your Owner’s Manual.

DRIVING FEATURES

HEAD UP DISPLAY (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle Speed
 - Navigation
 - Driving Assist
 - Traffic Assist
 - Audio
 - TEL/SMS
 - Message for Driver Assistance
 - Warning message
- Press the Head Up Display (HUD) switch **1** on the lower instrument panel to turn the system on and off.
- To adjust the Head Up Display settings when the system is on:
1. Press the **◀▶** arrows **2** on the steering wheel until you get to the "Settings" menu in the vehicle information display. Press the scroll/ **OK** dial to select "Head-Up Display" **3**.
 2. Adjust the positioning of the Head Up Display on the windshield by making a selection and press the scroll/ **OK** dial on the steering wheel to adjust features such as the height and brightness.

The following features can be adjusted through the "Settings" menu in the vehicle information display:

- Brightness
- Height
- Rotation
- Contents Selection
- Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.



DRIVING FEATURES

IDLING STOP SYSTEM

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- The system is active while waiting at a stop light, etc. When the vehicle is stopped for long periods of time, turn off the engine.
- When the engine is stopped by the Idling Stop system, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop system by pushing the Idling Stop OFF switch **1**.
- The Idling Stop System resets to ON every time the ignition switch is switched from the OFF position to the ON position.
- The status of the Idling Stop System can be checked in the vehicle information display.
 - This indicator **2** is displayed when the Idling Stop System is activated.
 - The indicator **2** blinks when the Idling Stop System is malfunctioning.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

CAMERA BUTTON (+DAY/NIGHT SETTING)

Push the camera button **1** to operate the camera system. Push and hold to switch between the day screen (bright) and the night screen (dark), and to adjust the level of the screen brightness.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual and the "Monitor, climate, audio, phone, and voice recognition systems" section of your Owner's Manual.





Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** www.nissan-techinfo.com
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to www.nissanquickguide.com/2026/murano or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

