 




# QUICK REFERENCE GUIDE

2026 **ROGUE**

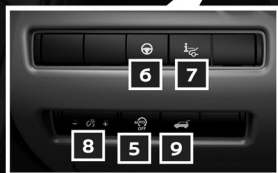

# COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light 
- 2** Vehicle Information Display
- 3** Headlight and Turn Signal Switch
- 4** Wiper and Washer Switch
- 5** Idling Stop OFF Switch 
- 6** Steering Assist Switch  (if so equipped)
- 7** Head Up Display Switch (if so equipped) 
- 8** Instrument Brightness Control
- 9** Power Liftgate Switch (if so equipped) 
- 10** Steering Wheel Switches for Audio Control / Vehicle Information Display
- 11** Cruise Control / Bluetooth® / ProPILOT Assist Switches (if so equipped) / Voice Recognition Switch



Behind  
Steering  
Wheel

1

2

4

5

6

3

# INSTRUMENT PANEL

- 1** Steering Wheel Tilt and Telescopic Adjustment
- 2** Hood Release 
- 3** Audio and Navigation System
- 4** Heated Steering Wheel Switch (if so equipped) 
- 5** Heater and Air Conditioner (automatic) (if so equipped)
- 6** USB Connection Port Interface / Power Outlet

# TABLE OF CONTENTS

## GETTING STARTED

|                                                                  |    |
|------------------------------------------------------------------|----|
| NISSAN INTELLIGENT KEY® SYSTEM                                   | 3  |
| FRONT POWER SEAT ADJUSTMENTS (if so equipped)                    | 5  |
| 2 <sup>ND</sup> ROW SEATS                                        | 6  |
| MEMORY SEAT (if so equipped)                                     | 6  |
| REAR DOOR ALERT                                                  | 7  |
| DOOR LOCKS                                                       | 7  |
| STARTING/STOPPING THE ENGINE                                     | 8  |
| TILT AND TELESCOPIC STEERING WHEEL                               | 9  |
| OUTSIDE MIRROR CONTROL SWITCH                                    | 9  |
| ELECTRONIC SHIFT LEVER                                           | 10 |
| AUTOMATIC ANTI-GLARE REARVIEW MIRROR (if so equipped)            | 11 |
| EMERGENCY CALL (SOS) BUTTON (if so equipped)                     | 11 |
| HEATER AND AIR CONDITIONER (automatic) (if so equipped)          | 12 |
| HEATED STEERING WHEEL AND SEATS (if so equipped)                 | 13 |
| HEADLIGHT CONTROL SWITCH                                         | 14 |
| WIPER AND WASHER SWITCH                                          | 16 |
| SUN VISORS                                                       | 17 |
| VEHICLE INFORMATION DISPLAY                                      | 17 |
| OUTSIDE TEMPERATURE DISPLAY                                      | 19 |
| TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT | 20 |
| CAPLESS FUEL FILL AND FUEL-FILLER DOOR                           | 21 |
| ADJUSTABLE LUGGAGE FLOOR (if so equipped)                        | 22 |
| TOWING YOUR VEHICLE                                              | 23 |
| POWER LIFTGATE (if so equipped)                                  | 23 |
| MOTION-ACTIVATED LIFTGATE (if so equipped)                       | 24 |
| POWER MOONROOF (if so equipped)                                  | 25 |
| REAR DOOR SUNSHADE (if so equipped)                              | 25 |
| JACK/TOOL STORAGE                                                | 26 |

## AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

|                                     |    |
|-------------------------------------|----|
| SYSTEM UPDATES                      | 27 |
| HOW TO USE THE TOUCH-SCREEN DISPLAY | 29 |
| CLOCK SET/ADJUSTMENT                | 30 |
| USB CONNECTION PORT INTERFACE       | 30 |
| HOW TO CONNECT YOUR PHONE/DEVICE    | 31 |
| BLUETOOTH® HANDS-FREE PHONE SYSTEM* | 31 |
| FM/AM/SiriusXM® Radio               | 33 |
| APPLE CARPLAY®                      | 34 |
| ANDROID AUTO™                       | 36 |
| WIRELESS CHARGING (if so equipped)  | 37 |



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



### **Please see your Owner's Manual for important safety information and system operation limitations.**

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "**Safety — Seats, seat belts and supplemental restraint system**", the "**Monitor, climate, audio, phone and voice recognition systems**" and the "**Starting and driving**" of your Owner's Manual.

# TABLE OF CONTENTS

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped) . . . . . 37

VOICE RECOGNITION . . . . . 39

WI-FI . . . . . 40

HANDS-FREE TEXT MESSAGING ASSISTANT\* . . . . . 41

FUNCTIONS DISABLED WHILE DRIVING . . . . . 42

**AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B**

GOOGLE BUILT-IN . . . . . 43

HOW TO USE THE TOUCH-SCREEN DISPLAY . . . . . 43

AUDIO SYSTEM . . . . . 44

SETTING UP YOUR USER PROFILE . . . . . 45

SYSTEM UPDATES . . . . . 45

USB CONNECTION PORT INTERFACE . . . . . 46

HOW TO CONNECT YOUR PHONE/DEVICE . . . . . 46

VOICE RECOGNITION . . . . . 47

APPLE CARPLAY® . . . . . 47

ANDROID AUTO™ . . . . . 48

NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped) . . . . . 49

WIRELESS CHARGING (if so equipped) . . . . . 51

WI-FI . . . . . 52

HANDS-FREE TEXT MESSAGING ASSISTANT\* . . . . . 52

FUNCTIONS DISABLED WHILE DRIVING . . . . . 53

**DRIVING FEATURES**

ELECTRONIC PARKING BRAKE . . . . . 54

FORWARD DRIVING AID SENSORS (if so equipped) . . . . . 55

BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA) . . . . . 56

PROPILOT ASSIST SYSTEMS (if so equipped) . . . . . 57

CRUISE CONTROL (if so equipped) . . . . . 64

AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM . . . . . 65

INTELLIGENT AROUND VIEW® MONITOR TYPE A (if so equipped) . . . . . 66

INTELLIGENT AROUND VIEW® MONITOR TYPE B (if so equipped) . . . . . 69

DRIVE MODE SELECTOR . . . . . 71

REAR AUTOMATIC BRAKING (RAB) . . . . . 73

LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) . . . . . 73

HILL START ASSIST . . . . . 74

INTELLIGENT DRIVER ALERTNESS (I-DA) . . . . . 74

IDLING STOP SYSTEM . . . . . 75

FRONT AND REAR SONAR SYSTEM (if so equipped) . . . . . 75

TRAFFIC SIGN RECOGNITION (TSR) (if so equipped) . . . . . 76

HEAD UP DISPLAY (HUD) (if so equipped) . . . . . 76

DRIVER MONITOR (if so equipped) . . . . . 77

# GETTING STARTED

## NISSAN INTELLIGENT KEY® SYSTEM

This system allows you to lock or unlock the vehicle and open your liftgate. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

 
### REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL\* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the Intelligent Key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
  1. Press the  button **1**.
  2. Within 5 seconds, press and hold the engine start  button **2** for at least two seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control system will begin heating or cooling the vehicle depending on the outside (ambient) temperature, cabin (in-car) temperature and the last user mode. During this period, the climate control display and buttons will be inoperable until the ignition switch is turned ON.
- The engine will run for 20 minutes and then turn off.
- To start driving, depress the brake pedal and push the ignition switch.



### LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each lock sensor.
- To lock the vehicle, push either door handle request switch **3** on the front doors, push the liftgate request switch **4** or press the  button **1** on the key fob.

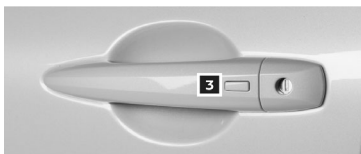

# GETTING STARTED

- To unlock the vehicle, perform one of the following procedures:
  - When you push the driver's door handle request switch **3** or the liftgate request switch **4**, the driver's door or the liftgate will unlock. When the front passenger's door handle request switch is pushed, all doors and the liftgate will unlock. Push the driver's door handle request switch or the liftgate request switch within one minute; all other doors and the liftgate will unlock, or
  - Press the  button **5** on the key fob to unlock the driver's side door. Press the  button **5** again, all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 second. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press any button on the key fob to turn the panic alarm off, or press the door handle request switch if the key fob is in range.

## LIFTGATE RELEASE (if so equipped)

- To open the liftgate, press the  button **7** for longer than 1 second.
- To close the liftgate, press the  button **7** again for longer than 1 second.

## INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Push the park button to shift to the **P (Park)** position.
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
  4. Push the ignition switch while pressing the brake pedal within 10 seconds after the chime sounds. The engine will start.

## DRIVER PROFILES (if so equipped)

- This feature allows 3 drivers to use their own registration, such as audio, settings, and memorizes these custom driver profiles.
- Up to three users can be registered. When the system is started with an Intelligent Key that has been registered, a message asking if you wish to register yourself as a user is displayed:
  1. Touch "Yes" on the user registration screen to register.
  2. The New User Registration screen is displayed. Enter the user information.
  3. After inputting user information, touch "Save" to complete user registration.

# GETTING STARTED

## APPROACH UNLOCK FUNCTION (if so equipped)

- When you approach the vehicle with the Intelligent Key, the vehicle will unlock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

## WALK AWAY LOCK FUNCTION (if so equipped)

- When you walk away from the vehicle with the Intelligent Key, the vehicle will lock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

\*State laws may apply; review local laws before using.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

 
For more information, refer to the **"Pre-driving checks and adjustments"**, **"Starting and driving"** and the **"Monitor, heater, air conditioner, audio and phone systems"** sections of your Owner's Manual or refer to the **"Getting started"** section of your NissanConnect® Owner's Manual.

---

## FRONT POWER SEAT ADJUSTMENTS (if so equipped)

### SEAT ADJUSTMENT CONTROLS LOCATION

- The front power seat adjustment switches are located on the outside sides of the driver and passenger seat.
- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

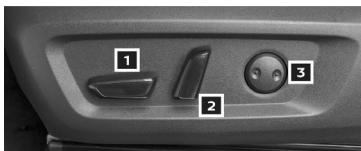

### SEAT TILT AND LIFT (if so equipped for driver's seat only)

- To raise or lower the front and back portion or height of the seat, push the back and front end of the switch **1** up or down.

### LUMBAR SUPPORT (if so equipped for driver's seat only)

- To adjust the seat lumbar support, push the front or back end of the switch **3**.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Safety — Seats, seat belts and supplemental restraint system"** section of your Owner's Manual.

 
# GETTING STARTED

## 2<sup>ND</sup> ROW SEATS

- To lay the seatback down:
  - Lift the seatback release lever **1** to fold the seatback forward.
- To lay the 2nd row seats down flat (if so equipped):
  - Open the rear liftgate and locate the 2nd row seat levers on both sides of the vehicle **2**.
  - Pull both levers **3** at the same time to release the 2nd row seats.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.

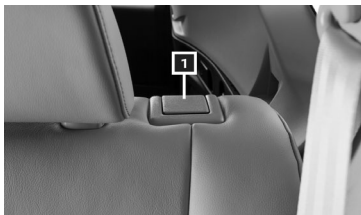

## MEMORY SEAT (if so equipped)

- Two positions for the driver's seat and outside mirrors can be stored in the memory seat system.
- Follow this procedure to set the memory positions:
  - Place the ignition in the ON position and confirm the vehicle is in the **P (Park)** position.
  - Adjust the driver's seat and outside mirrors to the desired position using each adjusting switch.
  - Push the **SET** switch **1**, and within 5 seconds, push the memory switch (**1** or **2**) **2**.
  - The indicator light on the memory switch you select will illuminate for approximately 5 seconds and a chime will sound.
  - The driver's seat and outside mirrors are now set to your preferences.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.



# GETTING STARTED

## REAR DOOR ALERT

 
The Rear Door Alert functions under certain conditions to indicate there may be an object or passenger in the rear seat(s). The system is activated when a rear door is opened and closed within 15 minutes before driving.

### REAR DOOR ALERT (ACTIVE)

- When the system is active, the horn will sound and a **Check Rear Seat** warning **1** will appear on the display.

- To activate Rear Door Alert, in your vehicle information display:
  - Press the scroll/ **OK** dial on the steering wheel until the “Settings” menu screen appears. Press the scroll/ **OK** dial to make the selection.
  - Select “Vehicle Settings”, “Rear Door Alert” and press the scroll/ **OK** dial.
  - Choose from the following options: “Horn & Alert”, “Alert Only” or “OFF” and then press the scroll/ **OK** dial.

- To Dismiss Rear Door Alert:
  - Use the scroll/ **OK** dial on the steering wheel to select “Dismiss Message” **2**. If no selection is made, this message will disappear after a period of time.
- To temporarily disable Rear Door Alert for the remainder of the current trip, use the scroll/ **OK** dial on the steering wheel to select “Disable Alert” **3** and press the scroll/ **OK** dial.

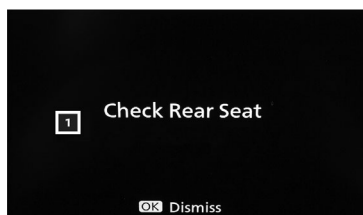

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” section of your Owner's Manual.

## DOOR LOCKS

- All doors lock automatically when the vehicle speed reaches 15 mph (24 km/h).
- All doors unlock automatically when the transmission is placed in the **P (Park)** position or when the ignition switch is placed in the OFF position, depending on the option selected in the “Vehicle Settings” menu.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Pre-driving checks and adjustments” section of your Owner's Manual.

# GETTING STARTED

## STARTING/STOPPING THE ENGINE

### TURNING THE ENGINE ON

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Press the brake pedal.
- Confirm that the vehicle is in the **P (Park)** position.
- Push the ignition switch to the ON position.



### TURNING THE ENGINE OFF

- Push the **P (Park)** button and push the ignition switch to the OFF position.

### AUTO ACC POSITION

- With the vehicle in the **P (Park)** position, the Intelligent Key with you (that is, in your pocket or purse) and the ignition switch placed from ON to OFF, the outside mirror remote control, etc. can still be used for a period of time.
- Depending on the conditions, the Auto ACC function and related functions may not be activated or may continue for a shorter period of time than usual.

### AUTOMATIC ENGINE SHUT-OFF

- This system shuts off the engine automatically after an extended period of time if it has been left running while the transmission is in the **P (Park)** position. This helps avoid unintentional idling.
- The last 30 seconds of engine run time will be indicated in the vehicle information display. At this time you can use the scroll dial on the steering wheel to select one of the following options:
  - "OK" to clear the display and allow the system to shut off the engine. The engine will also shut off if nothing is selected.
  - "Disable" to prevent the system from shutting off the engine for the remainder of this trip. The system cannot be cancelled permanently.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

# GETTING STARTED

## TILT AND TELESCOPIC STEERING WHEEL

- Adjust the steering wheel forward or backward by moving it to the desired position.
- Adjust the steering wheel up or down to the desired position.
- Lock the steering wheel in place by pushing the lock lever up firmly.

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

## OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver's side outside mirror or push the right switch **2** to select the passenger's side outside mirror. The indicator light on the selected mirror switch will illuminate.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.

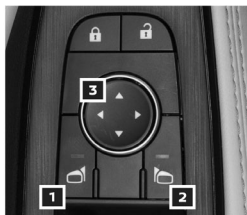

## REVERSE TILT-DOWN FEATURE (if so equipped)

- The reverse tilt-down feature will turn the selected or both (depending on the model) outside mirror surfaces downward to provide better rear visibility close to that side of the vehicle.
  1. Place the ignition switch in the ON position.
  2. Using **1** or **2**, choose which mirror or both mirrors (depending on the model) to tilt down when **R (Reverse)** is selected.
  3. Move the shift lever to the **R (Reverse)** position.
  4. One or both outside mirrors (depending on the model) will move to the reverse tilt-down position. While in **R (Reverse)**, you can adjust the selected mirror's tilt-down position using **3**.
- The outside mirror surfaces will return to their original positions when one of the following conditions has occurred:
  1. The shift lever is moved to any position other than **R (Reverse)** for a short period of time.
  2. The selected mirror or mirrors are deselected using the left switch **1** or the right switch **2**.
  3. The vehicle speed increases to more than 5 mph (8 km/h).
  4. The ignition switch is placed in the OFF position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

# GETTING STARTED

## ELECTRONIC SHIFT LEVER

- The electronic shift lever will return to a home position after each operation. Successful gear selection is not indicated by the physical position of the shift lever. Instead, successful gear selection is indicated by gear position indicators on the shift lever and in the meter display.
- Before shifting, ensure that the engine is running and the brake is applied.

To shift to **R (Reverse)**:

- Press the shift lever button **1** and slide the lever forward fully. The **R** on the shift lever will illuminate, and **R** will be displayed in the meter display.

To shift to **D (Drive)**:

- Slide the lever rearward fully. The **D** on the shift lever will illuminate, and **D** will be displayed in the meter display.

To shift to **N (Neutral)**:

- Slide the lever forward or rearward partially until you feel a slight increase in effort. Hold this position for 0.5 seconds. The **N** on the shift lever will illuminate, and **N** will be displayed in the meter display.

To shift to **P (Park)**:

- Press the **P (Park)** button on the shift lever.
  - **P (Park)** is automatically engaged if you switch off the ignition or if you unfasten your seatbelt and open the driver's door to exit the vehicle in **R, N** or **D**.
- The Neutral Hold mode function enables you to exit the vehicle while in **N (Neutral)** position:
  1. Press and hold the brake pedal.
  2. Release the electronic parking brake.
  3. Push the **P (Park)** button.
  4. Slide the shift lever to the **N (Neutral)** position and hold it for 0.5 seconds until **N** appears in the vehicle information display.
  5. Slide the shift lever to the **N (Neutral)** position again and hold it for 0.5 seconds, until a message "Neutral Hold Mode has been activated" appears in the vehicle information display.
- To cancel Neutral Hold Mode, shift to **P, R**, or **D** while the engine is running.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

 


# GETTING STARTED

## AUTOMATIC ANTI-GLARE REARVIEW MIRROR (if so equipped)

The inside mirror is designed so that it automatically dims during night time conditions and according to the intensity of the headlights of the following vehicle.

The anti-glare system automatically turns on when the ignition switch is placed in the ON position.

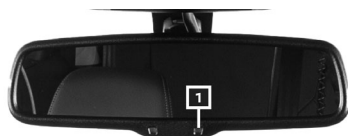

- Do not hang any objects on the mirror or apply glass cleaner. Doing so will reduce the sensitivity of the sensor **1**, resulting in improper operation.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

## EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use the feature, press the switch cover **1** to release, then press the **SOS** button **2** on the overhead console.
- For additional information, or to enroll your vehicle, refer to [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) or call 855-426-6628.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual or refer to your of your NissanConnect® Owner's Manual.

# GETTING STARTED

## HEATER AND AIR CONDITIONER (automatic) (if so equipped)



### 1 AUTO BUTTON

- Press the **AUTO** button to turn the system on, and the system automatically controls the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

### 2 AIR RECIRCULATION BUTTON

- The air recirculation button is used to avoid outside odors.
- Press the air recirculation button  once to turn on and press again to turn off.
- The air recirculation mode cannot be activated when the climate control system is in the front defroster mode  or the front defroster and foot vent mode .

### 3 OUTSIDE AIR RECIRCULATION BUTTON

- Press the fresh air intake  button to draw outside air into the passenger compartment. The fresh air intake indicator light on the button illuminates.

### 4 SYNC BUTTON/PASSENGER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **SYNC** button to turn the passenger's side and rear heater temperature controls on or off. Turn the passenger side temperature control dial right or left to adjust passenger temperature independently of the driver temperature. Push the rear temperature buttons located on the back of the center console to adjust the rear temperature independently from the front temperature.
- Turn the passenger's side temperature control dial left for cooler air or right for warmer air.

### 5 ON-OFF BUTTON/DRIVER'S SIDE TEMPERATURE CONTROL DIAL

- Press the **ON-OFF** button to turn the climate controls on or off. Turn the temperature control dial to the left for cooler air or right for warmer air.

### 6 A/C BUTTON

- Press the **A/C** button to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

# GETTING STARTED

## 7 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease fan speed or the right  button to increase fan speed.

## 8 AIR RECIRCULATION BUTTON

- Press the **AIR FLOW CONTROL** button to cycle through the following air flow outlets:



Air flows from center and side vents.



Air flows from center and side vents and foot outlets.



Air flows mainly from the foot outlets.



Air flows from defroster and foot outlets.

## 9 DEFROSTING FRONT AND SIDE WINDOWS

- Press the front defroster  button **9**. If it is difficult to defrost the windows, press the **A/C** button **6**. This feature removes humidity from the air.
- Turn the temperature control dial **5** left or right to set the desired temperature.
- To set the front defroster on high, press the fan speed control  button **7** all the way up and turn the driver's side temperature control dial **5** all the way to the right.

## 10 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS (if so equipped)

- To defog/defrost the rear window glass and outside mirrors (if so equipped), push the rear window defroster  switch **10**. Push the switch again to turn the defroster off. This function automatically turns off after approximately 20 minutes.

 
Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

## HEATED STEERING WHEEL AND SEATS (if so equipped)

### HEATED STEERING WHEEL (if so equipped)

- Push the  switch **1** to warm the steering wheel after the engine starts. The indicator light **2** on the heated steering wheel switch will illuminate.
- Once activated, the system will heat the steering wheel and cycle off and on to maintain a temperature above 86°F to 104°F (30°C to 40°C).

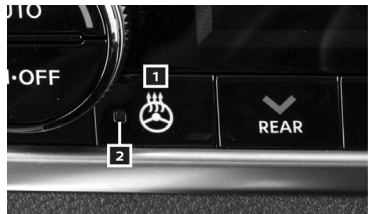

# GETTING STARTED

## HEATED SEATS (if so equipped)

- Push the  or  switch **3** to turn the heated seats on and off .
  - For high heat, push the switch once.
  - For medium heat, push the switch twice.
  - For low heat, push the switch three times.
- The heated seats are controlled by a control module, automatically adjusting the heat level to maintain comfort according to the selected level.



## 2ND ROW HEATED SEATS (if so equipped)

- To activate 2nd row heated seats, push the heated seat switch **4** located on the rear of the front center console. The indicator light on the switch will illuminate.
  - For high heat, push the switch once.
  - For medium heat, push the switch twice.
  - For low heat, push the switch three times.
- To turn the 2nd row heated seats off , push the heated seat switch until the indicator light on the switch turns off.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Instruments and controls**” section of your Owner's Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



# GETTING STARTED

## INTELLIGENT AUTO HEADLIGHT SYSTEM

- The Intelligent Auto Headlight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and one of the doors is opened and if this condition is continued, the headlights remain on for 5 minutes.
- To activate the Intelligent Auto Headlight system, turn the headlight control switch to the **AUTO** position **3** then push the ignition switch ON. To deactivate the Intelligent Auto Headlight system, turn the headlight control switch to the OFF position,  position **1** or  position **2**.

## HEADLIGHT BEAM SELECT

- With the headlights ON (either in the **AUTO** or  position), push the headlight control switch forward **4** to select the high beam function. The blue indicator light  will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash the headlight high beams on and off.



## HIGH BEAM ASSIST

- To activate the High Beam Assist system, place the knob in the **AUTO** position and push the switch **6** as shown. The high beam assist indicator light in the meter will illuminate while the headlights are turned on.



## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

# GETTING STARTED

## WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

 
**1** Auto  — Wipers operate intermittently, and the speed can be adjusted by twisting the time control ring **2** to increase or decrease the wiper speed.

**3** Low  — Wipers operate at a continuous low-speed.

**4** High  — Wipers operate at a continuous high-speed.

**5** Mist — One sweep operation of the front wipers.

**6** Front Washer  — Pull the lever towards you to activate the washer. The wipers will operate several times.

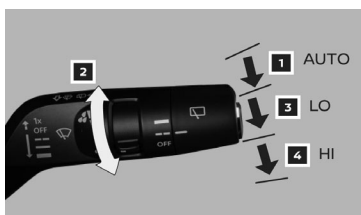

## REAR WIPER AND WASHER

- Move the lever to one of the following positions to operate the rear windshield wipers:

**7** Intermittent  — Rear wiper operates intermittently (not adjustable).

**8** Low  — Rear wiper operates at a continuous low-speed.

**9** Rear Washer  — Push the lever forward to activate the rear washer. The rear wiper will operate several times.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls" and the "Do-it-yourself" sections of your Owner's Manual.

# GETTING STARTED

## SUN VISORS

- Pull down the sun visor **1** to block glare from the front.
- Remove the sun visor from the center mount **2** by lifting it slightly and swing it to the side to block glare from the side window.



## SLIDING FUNCTION

- Slide the sun visor out from the mount **3** to further extend the visor location.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

## VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Home
- Blank
- 4X4-i
- Navigation
- Audio
- Warnings
- Idling Stop
- Fuel Economy
- Variable Compression Turbo
- Tire Pressures
- Speed Limit Sign
- Vehicle Speed
- Drive Computer
- ECO Pedal Guide
- Compass
- Driver Assistance
- Settings
- ProPILOT Assist



# GETTING STARTED

## USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display modes can be changed using the scroll/ **OK** dial **2** and the **◀▶** buttons **3** located on the steering wheel.

- Press the scroll/ **OK** dial **2** on the steering wheel to change or select an item.
- Press the **↶** button **4** on the steering wheel to go back to the previous menu.



## RESETTING THE TRIP COMPUTER

1. Press the **◀▶** buttons **3** located on the steering wheel until you reach the Drive Computer screen.
2. Press the scroll/ **OK** dial **2** to reset the selected drive computer (Manual Reset 1, Manual Reset 2, or Auto Refuel).



## SETTINGS

The settings mode allows you to change the information (if so equipped) displayed in the vehicle information display, such as:

- VDC Setting
- Unit/Language
- TPMS Setting
- Clock
- Maintenance
- Head-Up Display (if so equipped)
- Key-Linked Settings (if so equipped)
- Driver Assistance
- ECO Mode Setting
- Factory Reset
- Vehicle Settings
- Customize Display

# GETTING STARTED

## CHANGING THE METER SCREEN VIEW AND CHANGING HEAD UP DISPLAY (HUD) (if so equipped)

For the models with a full-screen display, the meter screen view can be changed to expand the vehicle information display area. To change the meter screen view:

1. Push the shortcut menu button **5** on the steering wheel.
2. "ShortCut Menu" will appear on the vehicle information display.
3. Select "Change Meter View" by rotating the scroll dial **2** and push it to make a selection.

 


Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

## OUTSIDE TEMPERATURE DISPLAY

- When the ignition switch is in the ON position, and the temperature range is -40 to 140°F (-40 to 60°C), the outside air temperature **1** will appear in the vehicle information display.
- If the outside air temperature mode is below 27°F (-3°C), the snowflake indicator **2** will be displayed.

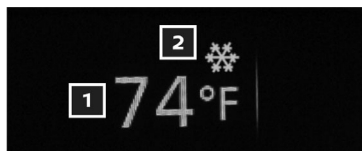

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

# GETTING STARTED

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning **2** will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) **3** may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

### EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.
- To use the Easy-Fill Tire Alert:
  1. Apply the brake.
  2. Push the **P (Park)** button and apply the parking brake.
  3. Place the ignition switch in the ON position. Do not start the engine.
  4. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  5. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.

Repeat this procedure for any additional under-inflated tires.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls", "Starting and driving", "In case of emergency", "Do-it-yourself" and the "Technical and consumer information" sections of your Owner's Manual.

# GETTING STARTED

## CAPLESS FUEL FILL AND FUEL-FILLER DOOR

### FUEL-FILLER DOOR

- The fuel-filler door **1** is located on the passenger's side of the vehicle.



### CAPLESS FUEL FILL

- The fuel tank is not equipped with a fuel-filler cap.
- After opening the fuel-filler door, insert the fuel pump nozzle directly into the fuel-filler opening.
- When the fuel pump nozzle is pulled out, the fuel-filler opening will be sealed.

### REFUELING FROM A PORTABLE FUEL CONTAINER

- If you need to refuel from a portable fuel container, use the funnel **2** stored in the tool bag under the luggage board.
- Be sure to insert the funnel into the fuel-filler opening slowly and fully. Insert the nozzle of the portable fuel container into the opening along the funnel and fill the fuel tank.



**Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Instruments and controls"** and the **"Pre-driving checks and adjustments"** sections of your Owner's Manual.

# GETTING STARTED

## ADJUSTABLE LUGGAGE FLOOR (if so equipped)

- There are multiple positions for the adjustable floor. The low-floor mode maximizes storage volume.
- The flat-floor mode eases loading and unloading of large items and also allows you to store items in the hidden area under the floor board.
- The vertical mode **1** allows you to organize your cargo in two separate areas.
- Refer to the tag attached to the cargo floor or to the Owner's Manual for detailed instructions explaining how to move between the three modes.



## SINGLE LUGGAGE BOARD (if so equipped)

- The single luggage board is held in place by retainer pins at the front of the floor board. To avoid damage to the pins when removing the floor board or accessing the spare tire under the floor board:
  1. Lift the board slightly to clear the rear door sill.
  2. Pull the board toward you through the door opening until the pins disengage from the slide trim.
  3. Lift the board to remove or access the spare tire.
- For further details on how to position the adjustable floors, please refer to the tag attached to the cargo floor or to the Owner's Manual.



**Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

# GETTING STARTED

## TOWING YOUR VEHICLE

### ALL-WHEEL DRIVE (AWD) VEHICLE (if so equipped)

 
- An all-wheel drive vehicle must be towed with all wheels off the ground.
- For proper towing and to prevent accidental damage to your vehicle, NISSAN recommends that a service operator tows your vehicle after carefully reading the Owner's Manual precautions.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "In case of emergency" and the "Technical and consumer information" sections of your Owner's Manual.

## POWER LIFTGATE (if so equipped)

- When the liftgate is closed and locked, the liftgate will open automatically by:
  - Push and hold the  switch **1** on the instrument panel for more than 1 second.
  - Pushing the liftgate opener switch **2**. The liftgate must be unlocked, or you must have the Intelligent Key with you (that is, in your pocket or purse).
  - Pressing the  button **3** on the NISSAN Intelligent Key® for more than 1 second.

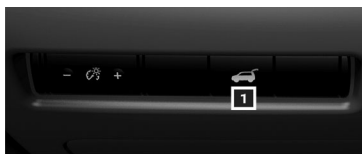

# GETTING STARTED

## GARAGE MODE SYSTEM (if so equipped)

- The liftgate can be set to open to a specific height by performing the following procedure:
  1. Open the liftgate using the request switch or the Intelligent Key.
  2. Pull the liftgate down and move it to the desired height position (the liftgate will have some resistance when being manually adjusted).
  3. Push and hold the  switch **4** located on the liftgate for approximately 3 seconds or until two beeps are heard.
- The liftgate will open to the selected position setting. To change the position of the liftgate, repeat steps 1 through 3 for setting the position of the liftgate.
- When the liftgate is fully open and the Intelligent Key is carried, the liftgate will fully close and lock automatically by pushing the power liftgate lock switch **5** on the liftgate.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual

## MOTION-ACTIVATED LIFTGATE (if so equipped)

To operate the liftgate hands-free:

- Ensure you have the Intelligent Key® within 31.5 in (80 cm) of the liftgate.
- Use a quick kicking motion under the center of rear bumper **1**. After 2 seconds, the vehicle will beep three times and the liftgate will open.
- Do not swing foot side to side or pause during kicking motion.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.



# GETTING STARTED

## POWER MOONROOF (if so equipped)

- To fully open or close the moonroof, push the switch to the **OPEN** position **1** or the **CLOSE** position **2** and release it. The roof will automatically open or close. To stop the moonroof, push the switch once more while it is opening or closing.
- To tilt the moonroof open, press the switch **3** to the UP position. To close the moonroof, push the switch to the **CLOSE** position **2**.



## AUTO-REVERSE

When the auto-reverse function is activated, the moonroof will automatically open or tilt up when the control unit detects something caught in the moonroof when the moonroof is closing or tilting down.

## COMFORT MODE

This is the position used when driving with the moonroof open. When driving with the moonroof fully open, wind noise may be very loud. Use the comfort mode position when driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

## REAR DOOR SUNSHADE (if so equipped)

The rear door sunshade is located within the rear doors at the base of the window.

- To raise the sunshade, pull up the center tab **1**.
- Hook the sunshade slots onto the tabs **2**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

# GETTING STARTED

## JACK/TOOL STORAGE

Access to the Jack/Tool Storage is located in the storage area and luggage floorboards of the vehicle.

- The jack is located in the storage compartment **1** to the left inside the storage area.

1. Remove the storage door by pressing the two release tabs simultaneously.
2. Remove the jack by turning the spindle counterclockwise to relieve the pressure on the jack.

- The tool kit **2** is located under the luggage floorboards of the vehicle:

1. Remove the luggage floorboard **3**.
2. Lift the floorboards and locate the tool kit within the spare tire space.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "In case of emergency" section of your Owner's Manual.



# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

 
- **Yes** — Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- **Later** — Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.

You can trigger the software update manually in the event that “Later” was unintentionally pressed.

- To manually update the software to the latest version:
  1. Press the **MENU** button on the control panel.
  2. Touch “Info” and then touch “System Information”.
  3. Touch “Software Update”.
  4. Touch “Start Software Update” and then “Download”.
- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power cycle.


Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

- To connect to your Wi-Fi network:
  1. Press the **MENU** button on the control panel.
  2. Touch “Connections” and then touch “Wi-Fi”.
  3. Touch the  icon and then touch “Wi-Fi” to turn it on.
  4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.

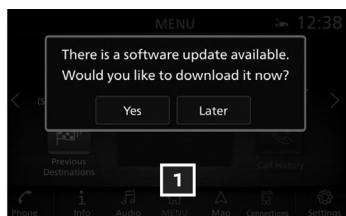

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

 
- To manually update your software using Wi-Fi:
  1. Press the **MENU** button on the control panel.
  2. Touch “Info” and then touch “System Information”
  3. Touch “Software Update”, “Start Software Update” and then touch “Download”

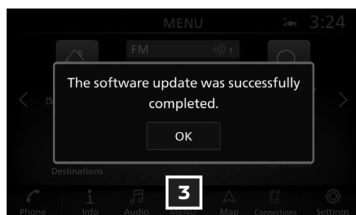

- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

- To turn on automatic updates of map software (if so equipped):

 1. Press the **MENU** button on the control panel.
  2. Touch “Info” and then touch “System Information”
  3. Touch “Map Update” and then touch “Map Update Settings”
  4. Select an area to be updated and touch “Start”.
- When a map update is available for the selected region, a pop-up message **4** will be shown on the screen.
  - Touch “Yes” to start the map download and update or “Later” to see the pop-up again in the next power cycle.
  - To manually update the map software via Wi-Fi:
    1. Connect the vehicle to an available Wi-Fi network.
    2. Press the **MENU** button on the control panel.
    3. Touch “Info” and then touch “System Information”
    4. Touch “Map Update” and then touch “Update by Wi-Fi”
    5. Select an area to be updated and touch “Start”

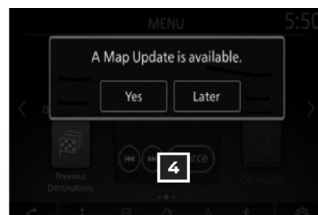

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Getting started**” section of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## HOW TO USE THE TOUCH-SCREEN DISPLAY



**1** Launch Bar - Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.

**2** These dots indicate the page you are currently on, in white, out of the number of pages there are available, in gray.

**3** Touch either arrow to navigate to the next or previous page of the "MENU" screen.

 
 
**4** Widgets - Useful information from primary menu functions can be displayed as widgets.

**5** Shortcuts - Icons for frequently used menu items can be placed on the Home "MENU" screens as shortcuts.

- Shortcut and widget selections can be set up in the "Customize Home Menu" screen which can be accessed by touching the  Settings key **6** followed by the "Customize Home Menu" key **7**. This will display the "Filter" screen, which allows shortcuts and widgets to be added, replaced, rearranged, deleted **8** or reset **9**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

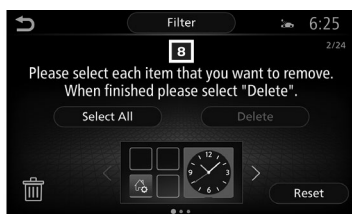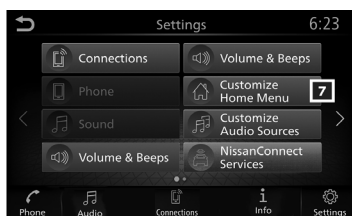


# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
  1. Touch  Settings **1** on the Launch Bar.
  2. Touch the "Clock" key.
  3. Select "Set Clock Manually" **2** to manually adjust the time displayed on the clock.
    - "Set Clock Manually" is only available if the clock mode is changed to "manual"
- Press the  button **3** to return to the previous screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

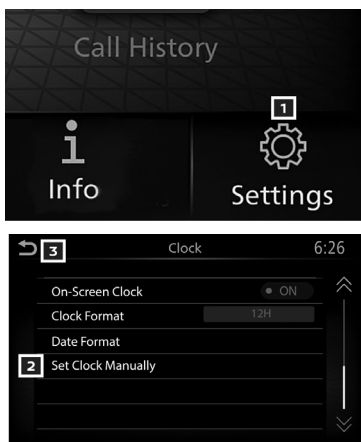

## USB CONNECTION PORT INTERFACE

 
- The USB connection ports **1** (USB Type-C/ USB Type-C) are located beneath the climate controls.
- When a compatible USB memory device is plugged into the USB connection port, compatible audio files stored on the device can be played through the vehicle's audio system.



## CHARGE ONLY PORT (if so equipped)

- The USB charging ports **2** (USB Type-C/USB Type-C) are located on the back of the center console box. These ports, Type C **3** and **4** will charge compatible devices.

For best results, it is recommended to use the manufacturer cables, which are sold separately.

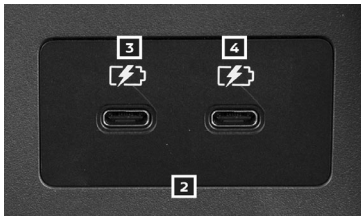

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual and the "Getting started" section of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## HOW TO CONNECT YOUR PHONE/DEVICE

When connecting your cellular phone, there are two ways to connect your phone: via Bluetooth® or USB-C cord.

To connect via Bluetooth®:

1. Push the **MENU** button and touch the "Connections" key.
2. Touch "Devices" and touch the "Add New" key. A message is displayed.

## CORD CONNECTION

- Using a USB-C cord, connect one end of the cord to your cellular phone, and the other to one of the USB connection ports **1** (USB Type-C/USB Type-C) located beneath the climate controls.



For best results, it is recommended to use the manufacturer cables, which are sold separately.

\* Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



## SYSTEM OPERATING TIPS

- Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Michael Smith".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing the heater and air conditioner vents away from the ceiling.

 
 


# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

- Speak naturally without long pauses and without raising your voice.
- To cancel a NISSAN Voice Recognition session, press and hold the  or  button on the steering wheel, or the **BACK** on the control panel.
- To decrease or increase the volume of the voice prompts, push the volume control switches **+** or **-** on the steering wheel or turn the **VOLUME** control knob on the audio system while the system is responding.
- Voice commands can be used to operate various Bluetooth® system features using the NISSAN Voice Recognition System. See your NissanConnect® Owner's Manual for detailed information.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## CONNECTING PROCEDURE

1. Touch the Phone key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Devices" key **3** and touch "Add New". A message is displayed.
4. Touch "Yes" to connect a cellular phone. Touch "No" to connect an audio device and operate as guided by the system. (Operations may differ depending on the device).

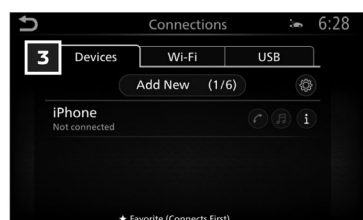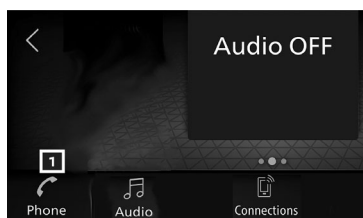

## VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Touch  Settings on the Launch Bar, then touch "Phone".
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

 
## MAKING A CALL

1. Press the  Phone button on the Launch Bar. The "Phone" screen **5** will appear on the display.
2. Select one of the options to make a call.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## RECEIVING/ENDING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Touch the  Answer key on the screen.
- To end or reject an incoming call, either:
  - Press and hold the  button on the steering wheel, or
  - Touch the  Decline key on the screen.

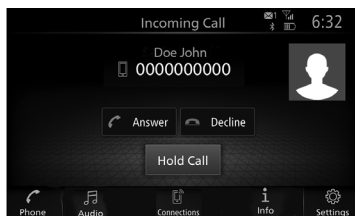

\*Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Monitor, heater, air conditioner, audio and phone systems**” section of your Owner's Manual, the “**Hands-free phone**” and the “**Voice recognition**” sections of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## FM/AM/SiriusXM® Radio



Touch the Audio key on the to display the current audio source, and then touch the “Source” key to access the source selection screen.

### 1 POWER /VOL

- Press the POWER button to turn the system on or off .
- Turn the **VOLUME** control dial to the right or left to increase or decrease the volume.

### 2 TUNE-SCROLL/PUSH SOUND DIAL

- Press the **PUSH SOUND** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** dial left or right.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## 3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons ◀◀ or ▶▶.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons ◀◀ or ▶▶.

## 4 AUDIO BUTTON

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by touching the **AM** button **5**, **FM** button **6** or **SiriusXM** button **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- Next touch and hold the desired station select key (1-12). The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (1-12).

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started" and the "Audio system" sections of your NissanConnect® Owner's Manual.

 
 
---

## APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone® apps directly from your vehicle display.
- Connect your compatible iPhone® to the USB connection port located beneath the climate controls.
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch "Yes" then "OK" to use Apple CarPlay®.
  - After the iPhone® is connected, the Apple CarPlay® home screen will appear, and the iPhone® functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

- There are two ways to start a Siri® session:
  1. Press and hold the  button on the steering wheel.
  2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay® screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay® screen to end the Siri® session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available while driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, press the  **MENU** button on the **Launch Bar**.
- To return to the Apple CarPlay® screen from the main menu:
  - Touch the  Apple CarPlay® key **2** on the **Launch Bar**, or
  - Touch the  Info key **3** on the **Launch Bar**, touch the “Smartphone Connection” key, and then select “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.

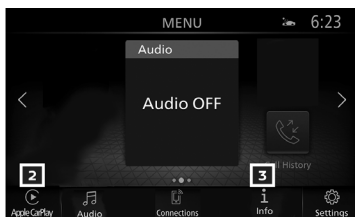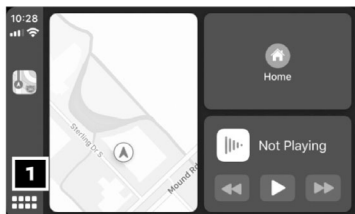

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Getting started**” and the “**Apps**” sections of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

### INITIAL SETUP

 
 
- Launch the app from your Android® phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto™ to fully function on your in-vehicle system.

### USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch “Yes” then “OK” to use Android Auto.

After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.

- When connected to Android Auto, Google Assistant™ operation can be accessed.
- There are three ways to start Google Assistant™:
  1. Press and hold the  button on the steering wheel until a beep is heard.
  2. Touch the  microphone key **1** on the launch bar.
  3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the launch bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the Nissan key.
- To return to the Android Auto home screen from the main menu:
  - Touch the  key **3** on the Launch Bar.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.

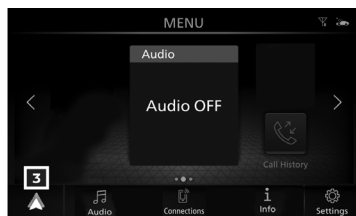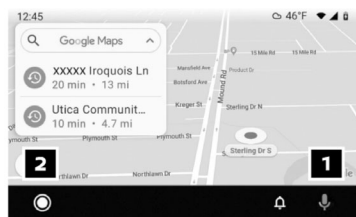

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## WIRELESS CHARGING (if so equipped)

The wireless charger is located on the lower part of the instrument panel. **1**. Ensure the smartphone is positioned face up, horizontally and fully seated on the center of the charging pad over the “Qi” logo. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.



- The indicator  will illuminate orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” section of your Owner's Manual.

## NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the MyNISSAN® app on your compatible iPhone® or Android® smartphone and log into it using your Nissan Owner Portal ID and password.

 
For full details on NissanConnect Services or to enroll your vehicle, please visit **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** or call **1-855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle's NissanConnect Owner's Manual at **<https://owners.nissanusa.com>**. For frequently asked questions, please visit **[www.nissanusa.com/connect/faq](http://www.nissanusa.com/connect/faq)**.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

Some of the available NissanConnect® services may include:

- **Automatic Collision Notification** - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- **Connection to Roadside Assistance** - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle's location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching the  headset icon **1** on the map screen.
- **Stolen Vehicle Locator** - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock** - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- **Remote Engine Start** - Start your engine remotely using the NissanConnect Services companion app or website.
- **Boundary Alert** - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert** - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- **Alarm Notification** - This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert** - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert** - Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.

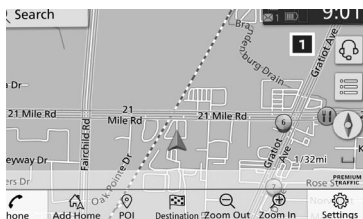


# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

- To access these features in your vehicle.
  - Press the **MENU** button **2** on the control panel.
  - Touch the **i** Info key .
  - Touch the “NissanConnect Services” key **3** .

## DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

 1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
  - Transfer the destination from the smartphone, then transfer to the vehicle.
4. A confirmation screen will be displayed. Touch “Go Here” and the position of the transferred location is displayed in the preview on the touch-screen display.
  - Touch “Store” to register the destination in the address book.
  - Touch “Ignore” to cancel the transfer of the destination.
  - Touch “Start” to start route guidance.

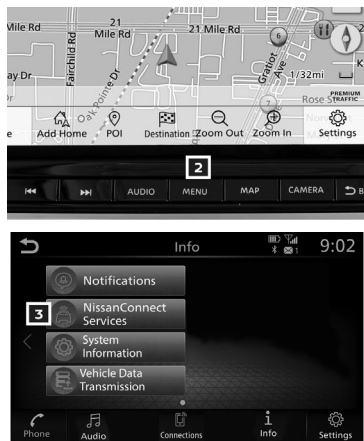

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Information” section of your NissanConnect® Owner's Manual.

## VOICE RECOGNITION

### SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- Confirm that the correct voice commands are being used. Glance at the screen to see the currently available commands.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## USING THE VOICE RECOGNITION SYSTEM

- Press the  button **1** on the steering wheel, and a list of commands will appear on the screen.
- After the tone sounds, speak the command.
- To skip the voice prompt and give the command immediately, press the  button **1** on the steering wheel to interrupt the system. Speak the next command after the tone sounds.
- To cancel the command, press and hold the  button **1** on the steering wheel.



\* Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Monitor, heater, air conditioner, audio and phone systems"** section of your Owner's Manual and the **"Voice recognition"** section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

### TO CONNECT TO A WI-FI NETWORK:

 
- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
  1. Touch the  Settings key on the Launch Bar.
  2. Touch the "Connections" key.
  3. Touch the "Wi-Fi" key **1**.
  4. Touch the name of the device you wish to connect.
  5. Enter a password and touch the "OK" key. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.



# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key **1**.
4. Touch the  key **2**.
5. Touch the preferred item.

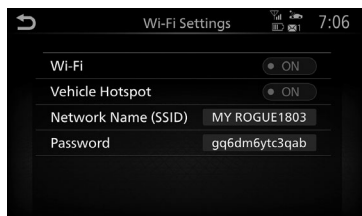


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

## HANDS-FREE TEXT MESSAGING ASSISTANT\*

 - This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-Free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

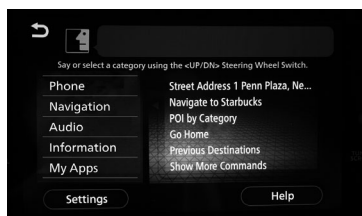

\* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE A

## FUNCTIONS DISABLED WHILE DRIVING

Functions Disabled while Driving allows the passenger in the vehicle to access some of the vehicle functions while the vehicle is moving.

### TO ACTIVATE SEAT LOCK-OUT and UNLOCKING FUNCTIONALITY

- When the vehicle detects a person on the front passenger seat with a seat belt fastened, some of the functions can be unlocked by touching "Accept" on the message screen, which appears when available.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

---

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

## GOOGLE BUILT-IN

 
Drivers can use Google built-in features on the in-vehicle system.

- Google Assistant™
  - You can voice control various functions such as playing music, and setting destinations with Google Maps, etc.
- Google Maps
  - Navigation functions such as getting driving directions, and finding nearby facilities, etc. can be used.
- Google Play
  - Various apps can be downloaded and used with the in-vehicle system.
- For some of the functions, an internet connection and/or signing into your Google account are required for full use.
- For details of the Google Automotive Services, refer to the following website: <https://built-in.google/cars/>

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

## HOW TO USE THE TOUCH-SCREEN DISPLAY

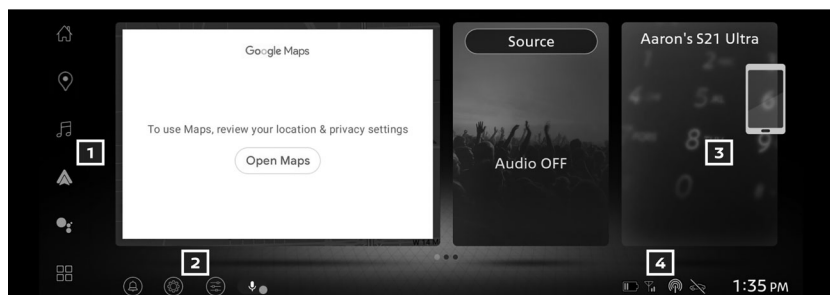

**1** Launch Bar — Various functions can be accessed by touching the items on the Launch Bar, which is displayed on most of the main screens. Touching these keys will bring up the corresponding screens.

**2** Notification / settings keys — Touch the item on the Bottom Bar to set various functions or display the notification list.

**3** Widgets — Useful information can be displayed as widgets. The widgets displayed on the home menu screen can be customized.

**4** Status indicators — Icons display here showing the status of various items such as connected device battery.


- The home menu screen can be personalized by selecting which widgets are to be displayed and where to place them on the screen.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B
 
## AUDIO SYSTEM

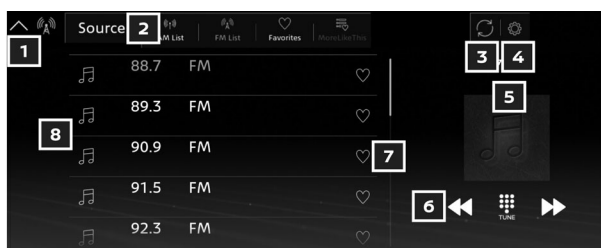

### 1 OPERATION SCREEN KEY

- Touch to display the AM/FM/SiriusXM® operation screen.

### 2 AM/FM/SiriusXM® MENU BAR

- < key — Slides the menu bar to the left.
- AM List — Displays the AM list screen.
- FM List — Displays the FM list screen.
- Favorites — Displays a list of radio bands registered as favorites.
- MoreLikeThis — Displays a list of songs similar to the ones the user had been listening to.
- > key — Slides the menu bar to the right.

### 3 REFRESH KEY

- Touch to refresh the station list.

### 4 SETTINGS KEY

- Touch to display the radio settings screen.

### 5 STATION INFORMATION

- Displays the radio frequency/station currently tuned to.

### 6 OPERATION KEYS

- Touch corresponding keys for FM/AM/SiriusXM® radio operation.

### 7 FAVORITES KEY

- Touch to add the station to favorites. Touch "Favorites" on the AM/FM menu bar to display the favorite station list.

### 8 STATION LIST

- Select a preferred station.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section and the "Audio system" section of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

## SETTING UP YOUR USER PROFILE

- This feature allows three drivers to use their own registration, such as audio, settings, etc. and memorizes these custom driver profiles.
- If you have not registered your user profile to the in-vehicle system, you will be prompted to specify some of the settings and to register your profile.
- For some of the functions, an internet connection and/or signing into your NissanConnect® and Google account are required for full use.
- If you do not register the main information, some of the functions will become inoperable. Internet connection is required for full operation.
- When the vehicle is turned on with an un-registered key, a message will be displayed with a default profile name.
  1. Touch "Next".
  2. Choose your profile name.
  3. Touch "Next".
  4. Follow the prompts to complete user profile setup.

Please see your NissanConnect® Owner's Manual for important safety information, system limitations, and additional operating and feature information.

## SYSTEM UPDATES

Vehicle software such as Bluetooth® Hands-Free Phone System and the vehicle information display can be updated. You can choose automatic or manual software updates.

- To select an update method:
  1. Touch the  icon on the Bottom Bar.
  2. Touch "General" and then touch "System" **1**.
  3. Touch "System Updates" and then "Software Update". The software update screen will be displayed.
  4. Touch "Update Method" then select from "Auto" or "Manual".
- When the update method is set to Auto, the in-vehicle system confirms and downloads the updates automatically. When the manual method is selected and the ignition switch is placed in the OFF position after downloading the update, the confirmation screen will appear. The update contents and the required time for installation can be checked on the screen.
- From the confirmation screens, you can select "Now" to have the update install immediately or "Ask Later" to have the display screen appear the next time the vehicle is switched off.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

 
## USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-C/ USB Type-C) are located beneath the climate controls.
- When a compatible USB memory device is plugged into the USB connection port, compatible audio files stored on the device can be played through the vehicle's audio system.



## CHARGE ONLY PORT (if so equipped)

- The USB charging ports **2** (USB Type-C/USB Type-C) are located on the back of the center console box. These ports, Type C **3** and **4** will charge compatible devices.

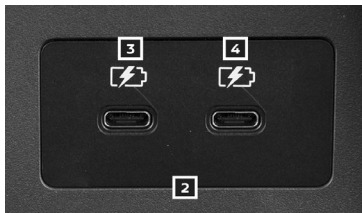

For best results, it is recommended to use the manufacturer cables, which are sold separately.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls" section of your Owner's Manual and the "Getting started" section of your NissanConnect® Owner's Manual.

## HOW TO CONNECT YOUR PHONE/DEVICE

 
When connecting your cellular phone, there are two ways to connect your phone: via Bluetooth® or through a USB-C cord.

To connect via Bluetooth®:

1. Touch the  icon.
2. Touch "Connections" and then touch "Device".
3. Touch "Add Device".

## CORD CONNECTION

- Using a USB-C cord, connect one end of the cord to your cellular phone, and the other to one of the USB connection ports **1** (USB Type-C/USB Type-C) located beneath the climate controls.

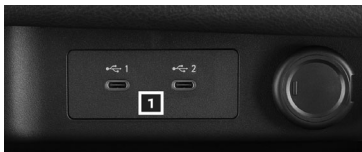

For best results, it is recommended to use the manufacturer cables, which are sold separately.

\* Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

## VOICE RECOGNITION

### SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.

### USING THE VOICE RECOGNITION SYSTEM

The voice recognition system can be set to Google Assistant.

To select which system you wish to use:

1. Touch the  settings keys on the home screen.
  2. Touch "Apps & Notifications".
  3. Touch "Active Voice Assistant".
  4. Select the preferred system. The selected app icon will appear on the Launch Bar.
- Press the  button **1** on the steering wheel to use the voice recognition system.
  - When Apple Carplay® or Android Auto™ are active, pushing and holding the  button will start a Siri® or Google Assistant session.
  - If no device is connected, pushing and holding  button opens the screen to add devices.



Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Monitor, heater, air conditioner, audio and phone systems" section of your Owner's Manual and the "Voice recognition" section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls. You can also connect via Bluetooth by touching the  icon, then touch "Connections" and then touching "Add Device" (if so equipped).
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch "Yes" then "OK" to use Apple CarPlay.
  - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

- While connected to Apple CarPlay, Siri® operation can be accessed.
- To start a Siri session:
  - Press and hold the  button on the steering wheel. Press the button again to end a Siri session.
  - Use the “Hey Siri” command.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the touch the Home menu key on the Launch Bar.
- To return to the Apple CarPlay screen from the main menu:
  - Touch the  Apple CarPlay® key **1**, or
  - Touch “Apple CarPlay” on the app’s menu screen.
- Nissan Phone menu will not be available when Apple CarPlay is active.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Getting started**” and the “**Apps**” sections of your NissanConnect® Owner's Manual.

---

## ANDROID AUTO™

 
- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

### USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you can connect a USB cable to the USB connection port located beneath the climate controls. You can also connect via Bluetooth by touching the  icon then touching “Connections” followed by “Add Device” (if so equipped).
  - Depending on the setting, the startup information screen will appear on the center display.
  - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed by pressing and holding the  button on the steering wheel. Press the button again to end voice operation.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

- To return to the Android Auto home screen from the main menu:
  - Touch the  key **1** on the Launch Bar, or
  - Touch “Android Auto” on the app’s menu screen.

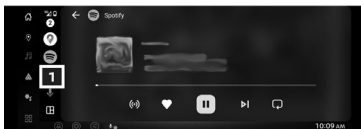

- NISSAN Phone menu will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.

Please see your Owner’s Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner’s Manual.

## NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that add innovation to your daily drive.

To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the NissanConnect Services companion app and log into it using your Nissan Owner Portal ID and password.

For full details on NissanConnect Services or to enroll your vehicle, please visit **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** or call **1-855-426-6628**.

Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect features and services, please consult your vehicle’s NissanConnect Owner’s Manual at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. For frequently asked questions, please visit **[www.nissanusa.com/connect/faq](http://www.nissanusa.com/connect/faq)**.

- Automatic Collision Notification (if so equipped) - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center if the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Connection to Roadside Assistance (if so equipped) - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance to the vehicle’s location in non-emergency situations. Connection to Roadside Assistance can be accessed by touching “Call Nissan Assistance”.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

- **Stolen Vehicle Locator** - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- **Remote Door Lock/Unlock** - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the NissanConnect Services companion app or website or contact a NissanConnect Services Response Specialist.
- **Remote Engine Start** - Start your engine remotely using the NissanConnect Services companion app or website.
- **Boundary Alert** - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert** - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.
- **Alarm Notification** - This system will notify you when the factory-installed vehicle alarm system has been activated.
- **Maintenance Alert** - Review notifications via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- **Valet Alert** - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the NissanConnect Services companion app or website.
- **Curfew Alert** - Specify curfew limits via the NissanConnect Services companion app or website and will be notified via a selected method if curfew is violated.
- **My Car Finder** - This allows you to locate your vehicle en route or in a crowded lot.
- **Collision Management (if so equipped)** - In the event of an emergency, Collision Management is used to document any damage and set-up transportation of your vehicle to a dealership.
- **Hybrid Radio** - Stay connected to your favorite radio station regardless of your location as you drive your vehicle.
- **Connected Garage Door Opener** - Open or close your compatible garage door, turn off the interior light and check the general status of your garage door.

To access these features in your vehicle:

1. Touch the app key on the Launch Bar.
2. Touch "NissanConnect Services".
3. Select an item from the NissanConnect® Services menu screen.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

## DOOR TO DOOR NAVIGATION

The destination can be set using the Door to Door Navigation app and transferred to the vehicle. The route guidance will continue via the Door to Door Navigation app after getting out of the vehicle.

1. Activate the Door to Door Navigation app on your smartphone.
2. Connect the smartphone to the vehicle via Bluetooth®.
3. Select a destination using the Door to Door Navigation app on your smartphone.
  - Transfer the destination from the smartphone, then transfer to the vehicle.
4. A confirmation screen will be displayed. Touch "Go Here" and the position of the transferred location is displayed in the preview on the touch-screen display.
  - Touch "Store" to register the destination in the address book.
  - Touch "Ignore" to cancel the transfer of the destination.
  - Touch "Start" to start route guidance.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

## WIRELESS CHARGING (if so equipped)

The wireless charger is located on the lower part of the instrument panel. **1**. Ensure the smartphone is positioned face up, horizontally and fully seated on the center of the charging pad over the "Qi" logo. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.



- The indicator  will illuminate orange when the charging process is started.
- When the charging is complete, the indicator illuminates in green.
- If a malfunction occurs or the charging process stops, the indicator will blink in orange.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

## WI-FI

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of a smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

### TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
  1. Touch the  Settings key on the Launch Bar.
  2. Touch "Connections" and then touch "Wi-Fi".
  3. Turn on Wi-Fi.
  4. Touch the name of the device you wish to connect.
  5. Enter the network password and touch →. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

### TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key .
4. Touch the key next to the device name. The information and the setting options of the device will be displayed.

 


**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

## HANDS-FREE TEXT MESSAGING ASSISTANT\*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.

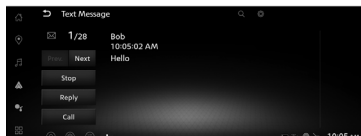

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS TYPE B

- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

\* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Bluetooth® Hands-Free Phone system" section of your NissanConnect® Owner's Manual.

---

## FUNCTIONS DISABLED WHILE DRIVING

Functions Disabled while Driving allows the passenger in the vehicle to access some of the vehicle functions while the vehicle is moving.

### TO ACTIVATE SEAT LOCK-OUT and UNLOCKING FUNCTIONALITY

- When the vehicle detects a person on the front passenger seat with a seat belt fastened, some of the functions can be unlocked by touching "Accept" on the message screen, which appears when available.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

---

# DRIVING FEATURES

## ELECTRONIC PARKING BRAKE

### ELECTRONIC PARKING BRAKE

- To apply the parking brake, pull the electronic parking brake switch **1**, located on the center console, behind the electronic shift lever. The electronic parking brake indicator light **2** will illuminate.
- To release the parking brake, and with the ignition switch in the ON position, depress the brake pedal and push the parking brake switch **1** down. The electronic parking brake indicator light (red) **2** will turn off.



### AUTOMATIC BRAKE HOLD

- Automatic brake hold function maintains the braking force without the driver having to depress the brake pedal when the vehicle is stopped at a traffic light or intersection.
- With the ignition switch in the ON position, push the automatic brake hold switch **3** to activate the automatic brake hold function. The indicator light will illuminate.
- To use the automatic brake hold function, the following conditions need to be met:
  - The driver's seat belt is fastened.
  - The electronic parking brake is released.
  - The transmission is not in the **P (Park)** position.
  - The vehicle is not stopped on a steep hill.
- To cancel the automatic brake hold function push the automatic brake hold switch **3**. To deactivate while the brake force has been maintained, depress the brake pedal and push the automatic brake hold switch **3**.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls", "Starting and driving" and the "Technical and consumer information" sections of your Owner's Manual.

# DRIVING FEATURES

## FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
  - Automatic Emergency Braking (AEB) with Pedestrian Detection
  - Intelligent Cruise Control (ICC) (for vehicles with ProPILOT Assist)
  - Intelligent Forward Collision Warning (IFCW)
- The “Forward Driving Aids temporarily disabled Front Sensor blocked See Owner’s Manual” warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate if the front radar sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears or the warning light illuminates, stop the vehicle in a safe place, press the **P (Park)** button, and turn the engine off. Clean the radar sensor areas and restart the engine. This may mean cycling the windshield wipers and turning on the windshield defrost for a few minutes. If the message and light continue to appear after cleaning radar sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.



Forward Driving Aids temporarily disabled  
Front Sensor blocked  
See Owner's Manual **3**



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Instruments and controls**” and the “**Starting and driving**” sections of your Owner's Manual.

# DRIVING FEATURES

## BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's blind spot detection zone.
- If the turn signal is turned on with a vehicle in the detection zone, there will be an audible alert and the indicator light will flash.
- The indicator **1** will temporarily illuminate after the ignition switch is placed in the ON position and the BSW system is enabled.
- The indicator light **1** located on the outside mirrors will illuminate if the radar sensors detect a vehicle in the detection zone.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).



## INTELLIGENT BLIND SPOT INTERVENTION (I-BSI) (if so equipped)

- When changing lanes, the I-BSI system helps alert you of other vehicles in adjacent lanes and assists you in returning the vehicle to the center of the traveling lane.
- The I-BSI ON indicator light on the instrument panel will illuminate when the I-BSI system is turned on.
- To turn on the I-BSI system, push the  switch **2** on the steering wheel.
- The I-BSI system operates above approximately 37 mph (60 km/h). If the system detects a vehicle in the detection zone and your vehicle is approaching the lane marker, the I-BSI system provides an audible warning (three times), flashes the side indicator light **1** and the I-BSI indicator flash. The I-BSI system activates for a short period of time to help return the vehicle back to the traveling lane.
- The I-BSI system can be enabled/disabled through the "Driver Assistance" menu in the vehicle information display.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

# DRIVING FEATURES

## PROPILOT ASSIST SYSTEMS (if so equipped)

ProPILOT Assist is a hands-on driver assistance system intended for limited access expressways and is not designed to be used on city/rural streets. The system is intended to help keep the vehicle in the center of the lane and help maintain a preset distance to the vehicle ahead traveling in the same lane.

The two primary features of ProPILOT Assist include Intelligent Cruise Control (ICC) and Steering Assistance. ProPILOT Assist 1.1 equipped vehicles include Speed Adjust by Route, Speed Limit Assist and Extended Stop. ProPILOT Assist 2.1 (if so equipped and subscribed) offers features like Lane Change Assist, Passing Assist, and Steering Assist with HD map data. The driver is responsible for the driving task and must be prepared to steer and brake the vehicle at all times.

Vehicles equipped with ProPILOT Assist 2.1 will have two roof mounted antennas.

### PROPILOT ASSIST OPERATION

1. Push the  ProPILOT Assist switch **1** on the steering wheel.
  - The ProPILOT Assist system display will appear on the vehicle information display.
  - Safety Shield status is temporarily displayed.
2. Once the vehicle is at the desired speed, push down the cancel switch to the **SET-** direction **2**.
  - The vehicle will maintain the set speed, unless the vehicle detects a slower vehicle in the traveling lane, or Speed Limit Assist or Speed Adjust by Route is active.
3. Adjust distance setting using the distance  switch **3**, if necessary.
  - Distance will vary based on vehicle speed as this setting is time dependent, not based on vehicle length.



### TO INCREASE SPEED

- Push up and hold the **CANCEL** switch **4** to the **RES+** direction to increase speed in 5 mph (5 km/h) increments.
- Push up and quickly release the **CANCEL** switch **4** to the **RES+** direction **2** to increase speed by 1 mph (1 km/h).
- Accelerate to new desired speed and press the **CANCEL** switch **4** to the **SET-** direction **2**.

### TO DECREASE SPEED

- Push down and hold the **CANCEL** switch **4** to the **SET-** direction **2** to decrease speed in 5 mph (5 km/h) increments.
- Push down and quickly release the **CANCEL** switch **4** to the **SET-** direction **2** to decrease speed by 1 mph (1 km/h).

# DRIVING FEATURES

## TO CANCEL THE SYSTEM

 
- Push the **CANCEL** switch **4** or tap the brake pedal.
- These actions will keep the system in standby. To resume, push up the cancel switch to the **RES+** direction **2** to return to the original vehicle set speed, or push down the cancel switch to the **SET-** direction to set the current vehicle speed.

## UNDERSTANDING THE DISPLAY

Display color will change depending on ProPILOT Assist modes. See table; the further down the list, the higher the level of the mode. Images shown are examples - actual condition may vary slightly. Display may vary depending on vehicle and display configuration.

| Color | Meaning                                          |
|-------|--------------------------------------------------|
| None  | System off                                       |
| Gray  | Standby                                          |
| White | ICC system active                                |
| Green | Hands-On mode active                             |
| Blue  | Hands-Off mode active (ProPILOT Assist 2.1 only) |

- 5** ProPILOT Assist indicator:
  - Indicates the status of the ProPILOT Assist function.
- 6** Steering Assist indicator:
  - Indicates the status of the Steering Assist function.
- 7** Vehicle Set Speed indicator:
  - Indicates the vehicle set speed.
- 8** Intelligent Cruise Control (ICC) status indicator:
  - Displays the status of the speed control including the distance setting and detection of a lead vehicle.

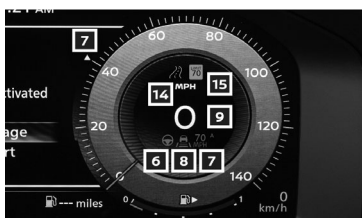

- 9** Speed Limit Adjust indicator:
  - Indicates the detected speed limit. "A" indicates Auto mode.
- 10** Lane Change Assist indicator:
  - Icon is displayed when Lane Change Assist feature is available.
- 11** Lane Marker indicator:
  - Displays real world lane condition.
- 12** Blind Spot Detection:
  - Indicates when a vehicle is detected in the blind spot.

# DRIVING FEATURES

## 13 Surrounding Vehicle Display:

- Displays other detected vehicles, including passenger vehicles, trucks and motorcycles. The multi-lane display is only available on HD mapped divided highways.

## 14 Road information indicator (if so equipped):

- Displays the detected road information.

## 15 Detected road sign (speed limit) indicator (if so equipped):

- Displays the detected road information.

## UNDERSTANDING THE FEATURES OF PROPILOT ASSIST SYSTEMS

### INTELLIGENT CRUISE CONTROL

- The set speed range is between approximately 20 and 90 mph (30 and 144 km/h). Hands-off driving is only available for speeds up to 85 mph (136 km/h).
- When a vehicle is detected in the lane ahead, the ICC system helps control the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and keep the vehicle stopped.
- When the vehicle ahead begins to move, push and release the **RES+** switch up or tap the accelerator pedal if your vehicle has been stopped for more than three seconds (and up to 30 seconds on the highway). The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system may warn the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected.

### STEERING ASSIST

- When the lane markers are clear and consistent on both sides of the vehicle, the Steering Assist system assists the driver to help keep the vehicle within the traveling lane.
- This feature can operate when vehicle speed is above 37 mph (60 km/h).
- Below 37 mph (60 km/h), ProPILOT Assist must detect a vehicle ahead in order for steering assistance to activate.
- With the Steering Assist active, when a curve or strong cross wind exceeds the capabilities of the system and your vehicle approaches either the left or the right side of the traveling lane, the I-LI system will flash the I-LI indicator on the vehicle information display and provide steering wheel vibration to alert the driver.

# DRIVING FEATURES

- Steering Assist is canceled or temporarily goes into standby mode under, but not limited to, the following conditions:
  - The turn signals are activated (for vehicles not equipped with ProPILOT Assist 2.1).
  - Hands are not detected on the steering wheel.
  - The system cannot detect clear and consistent lane markers.
  - The lane marker has been crossed.
  - When the windshield wipers operate in the high speed setting.

 
## TO TURN OFF STEERING ASSIST

- Push the  Steering Assist switch **16** on the instrument panel to the left of the steering column or turn it off in the "Driver Assistance" settings under "Lane Centering Assist" in the vehicle information display.
- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see the Owner's Manual.



## HANDS ON DETECTION

- The vehicle uses capacitive sensors in the steering wheel to detect whether the driver has their hands placed on the wheel.
- If the driver's hands are not detected on the wheel, the warning appears **17** and a series of escalating warnings will continue. The driver must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

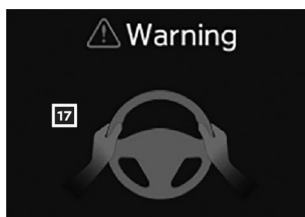

## PROPILOT ASSIST 1.1 (if so equipped)

- ProPILOT Assist with 1.1 has all the same features of ProPILOT Assist and includes a link to navigation to provide new features like "Speed Limit Assist" and "Speed Adjust by Route".

## SPEED LIMIT ASSIST

- When ProPILOT Assist is active and detects a change of the speed limit, the new speed limit sign value is indicated **18** (green outline around sign icon) in the display and can be applied to the vehicle set speed automatically or manually. The driver also has the option to add an offset to the posted speed limit.



# DRIVING FEATURES

- When in manual mode, to accept the new set speed, the driver presses the toggle switch up to accept a higher speed or press down to accept a lower speed.
- If you wish to maintain the current set speed, no action is required.
- If Speed Limit Assist is set to "AUTO" mode, the set speed will automatically change (no driver action required).

## TO TURN OFF SPEED LIMIT ASSIST

- Speed Limit Assist can be turned off in the "Driver Assistance" settings under "Intelligent Cruise" in the vehicle information display through:
  - Intelligent Cruise / Speed Limit Assist / Auto/Manual/OFF

## SPEED ADJUST BY ROUTE

- When ProPILOT Assist is active on the freeway, the system uses road information provided by the Map locator system to help adjust the vehicle speed as indicated by the Speed Adjust by Route Icon **19**.
- The system may not always reduce speed for all freeway interchanges and freeway curves.
- The driver needs to maintain vehicle control and apply braking whenever necessary. For best results, a route must be set using in vehicle navigation.

 


## TO TURN OFF SPEED ADJUST BY ROUTE

- Speed Adjust by Route can be turned off in the "Driver Assistance" settings under "Intelligent Cruise" in the vehicle information display.

## CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- This mode allows driving at a fixed speed between 20 to 90 mph (30 to 144 km/h). The system will not respond to vehicles ahead in your lane.
- To choose the conventional (fixed speed) cruise control mode, push and hold the ProPILOT Assist switch **1** for longer than 1.5 seconds.
- When at the desired speed, push the toggle switch **2** down toward **SET-**.
- To accelerate or decelerate your vehicle to the desired speed, push the toggle switch **2** toward **RES+** or **SET-** and release it.
- The conventional (fixed speed) cruise control mode display and indicators **20** are displayed in the vehicle information display.
- To use the ICC system again, press the ProPILOT Assist switch to turn off the system and then press and release the switch to turn on ProPILOT Assist ICC mode.

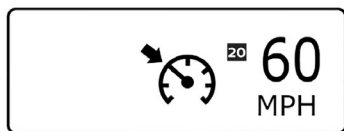

# DRIVING FEATURES

## STEERING ASSIST WITH HD MAP DATA (A feature of ProPILOT Assist 2.1)

- ProPILOT Assist 2.1 allows the driver to take their hands off of the steering wheel when certain conditions are met, as indicated by the Hands-Off steering assist indicator and blue display.
- For Hands-Off driving, the vehicle must be on a highway or limited access freeway as defined by the HD map data.

| Mode                       | Display Color | Steering Assist Symbol                                                            |
|----------------------------|---------------|-----------------------------------------------------------------------------------|
| OFF                        | None          | None                                                                              |
| Standby                    | Gray          | None                                                                              |
| Intelligent Cruise Control | White         |  |
| Hands-On mode              | Green         |  |
| Hands-Off mode             | Blue          |  |

- The system may request the driver to place their hands back on the wheel at any time if conditions are no longer met – including construction zones, tight curves, merging lanes, for example.
- Hands-off driving is only available for speeds up to 85 mph (136 km/h).

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

## DRIVER MONITOR

- ProPILOT Assist 2.1 uses a driver facing camera located on the steering column to monitor the driver's attention to the road ahead.
- If the system does not detect driver's attention to the road ahead, a series of escalating warnings will display in an effort to draw the driver's attention back forward.
- On ProPILOT Assist 2.1 vehicles, the driver monitor is monitoring driver attention in all driving conditions, not just when ProPILOT Assist 2.1 is active.

NOTE: For more information, see "Driver Monitor System" later in this section.

# DRIVING FEATURES

## LANE CHANGE ASSIST (A feature of ProPILOT Assist 2.1)

- When ProPILOT Assist 2.1 is active and the Lane Change Assist indicator **21** is illuminated in blue, Lane Change Assist can help the driver with steering control during a lane change when the turn signal is activated and conditions are met.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

 
**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

### TO TURN OFF LANE CHANGE ASSIST

- Lane Change Assist can be turned off in the "Lane Change Assist" settings under "Driver Assistance" in the vehicle information display.

## PASSING ASSIST (A feature of ProPILOT Assist 2.1)

- When ProPILOT Assist is active and the Lane Change Assist indicator is illuminated in blue, the Passing Assist feature can suggest a lane change to the left when a slower vehicle is detected ahead.
- The driver can accept to pass the slower vehicle by pressing the lane change assist switch **22** on the steering wheel.
- The driver must place their hands on the steering wheel prior to the lane change maneuver and ensure safety throughout the lane change.

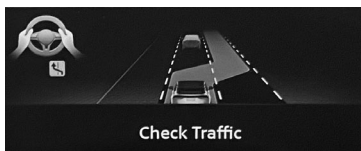

**The following is shown in the vehicle information display when Lane Change Assist is assisting the lane change of the vehicle.**



| Setting         | Lead vehicle speed       |
|-----------------|--------------------------|
| <b>Sport</b>    | 3 MPH + (5 km/h) slower  |
| <b>Standard</b> | 6 MPH + (10 km/h) slower |
| <b>Comfort</b>  | 9 MPH + (15 km/h) slower |

# DRIVING FEATURES

## TO ADJUST SUGGESTION TIMING OR TURN OFF PASSING ASSIST

- Passing Assist can be changed or turned off in the “Driver Assistance” settings under “Lane Change Assist” in the vehicle information display.

 
The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or certain and/or unique traffic conditions. Clean/defrost your windshield and/or clean the sensor(s) to keep this feature working properly.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “Instruments and controls”, “Starting and driving” and the “Technical and consumer information” sections of your Owner's Manual.

## CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h). The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the cruise control switch **1** on the steering wheel. The indicator will appear in the vehicle information display screen.
- To set a cruising speed, accelerate the vehicle to the desired speed, push the toggle switch **2** down toward **SET-** or up toward **RES+** on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push the toggle switch **2** up toward **RES+** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push the toggle switch **2** down toward **SET-** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, tap the brake pedal or push the **CANCEL** switch **3** on the steering wheel.
- To turn off cruise control, push the cruise control switch **1** on the steering wheel, tap the brake pedal or push the cruise control switch on the steering wheel. The  indicator light in the instrument panel will extinguish.

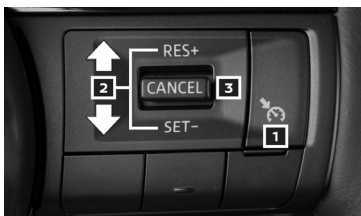

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “Starting and driving” section of your Owner's Manual.

# DRIVING FEATURES

## AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle, cyclist or pedestrian ahead in the traveling lane.
- Intersection assist helps the driver when there is a risk of a forward collision when turning right or left. The turn signal must be activated for the system to detect an approaching vehicle. The system may detect a pedestrian without the turn signal activated.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-50 mph (10-80 km/h). Intersection assist operates between 6-16 mph (10-25 km/h) when the turn signal is active.
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert. The system also applies partial braking.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red) **1** and audible warning. In addition, the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.
- If the warning light **2** illuminates or the "Forward Driving Aids temporarily disabled Front Sensor blocked" message or the "Unavailable Low Visibility" message appears, this indicates the camera or radar sensor may be obstructed. Use the wipers and defrost mode to help clear camera obstruction (dirt, condensation, etc).



### TURNING THE AEB SYSTEM ON/OFF

- The AEB system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.
- When the AEB system is turned off, the warning light **2** illuminates.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

 
# DRIVING FEATURES

## INTELLIGENT AROUND VIEW® MONITOR TYPE A (if so equipped)


- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.



- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

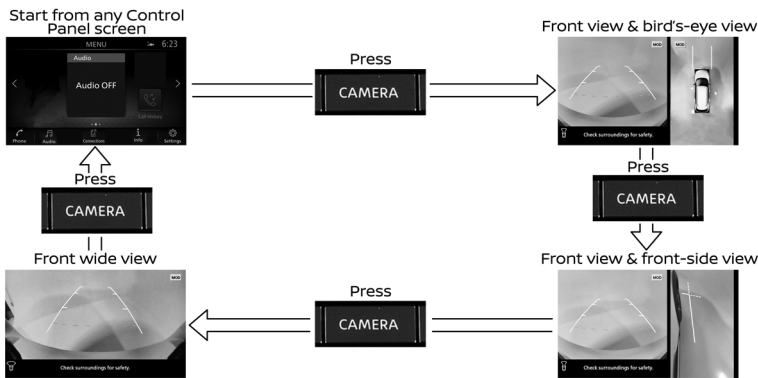

 
- When the electronic shift lever is in the **R (Reverse)** position and the **CAMERA** button **1** is pressed, the following views will display in order:

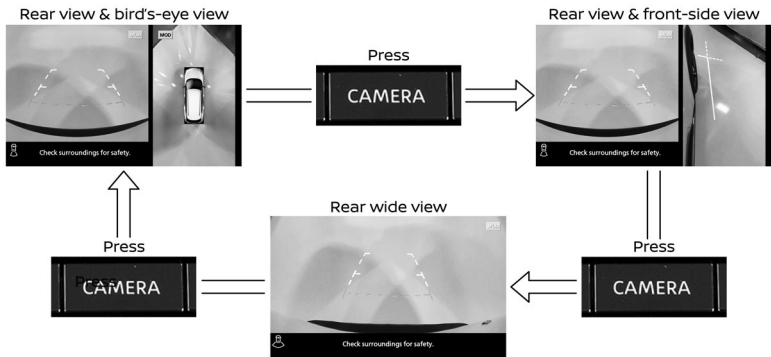

# DRIVING FEATURES

## OFF-ROAD VIEW (if so equipped)

 - When the shift lever is not in the **R (Reverse)** position, selecting the OFF-ROAD mode (using the Drive Mode Selector **4**) affects the Intelligent Around View® Monitor display as follows:
  - Selecting the OFF-ROAD mode will activate the Intelligent Around View Monitor®. The front view/front-side view split screen will be displayed.
  - When the OFF-ROAD mode is selected with the bird's-eye view displayed, the display will change to the front-side views (both driver's and front passenger's sides).
  - With OFF-ROAD mode selected and the shift lever in **R (Reverse)**, the rear view and both rear sides views is displayed.
- When in the OFF-ROAD mode, the monitor will not return to the previous screen until the vehicle speed exceeds 12 mph (20 km/h).

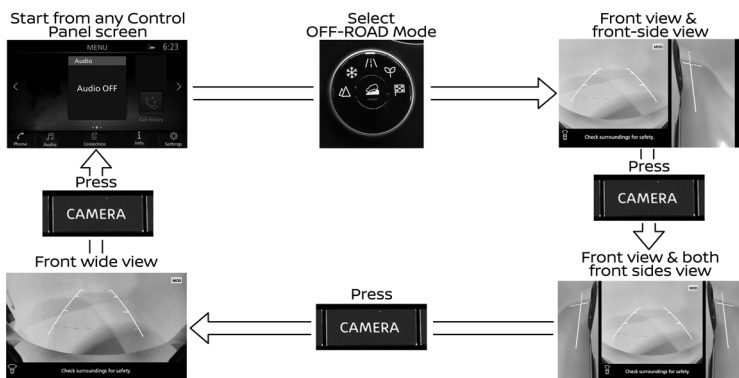


- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m)
  - Yellow 3 ft (1 m)
  - Green 7 ft (2 m)
  - Green 10 ft (3 m) (if so equipped)

# DRIVING FEATURES

 - For information regarding how to access additional viewing cycles, please see your Owner's Manual.

- There are some areas where the system will not detect objects.

- When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
- When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
- The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.

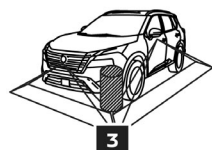


- Objects in the bird's-eye view will appear farther than the actual distance.

## MOVING OBJECT DETECTION (MOD)

 - The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the transmission is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:

- Green **MOD** icon **5**; the system is active.
- Gray **MOD** icon; the system is not active.
- No **MOD** icon, the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.

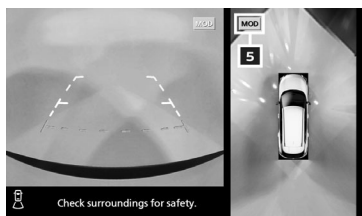

- The MOD system will not operate if the liftgate is open.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.


# DRIVING FEATURES
 
## INTELLIGENT AROUND VIEW® MONITOR TYPE B (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by selecting the **R (Reverse)** shift position. The monitor displays various views of the position of the vehicle.
- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the **CAMERA** button **1** or the screen icon at the bottom of the display to switch between the available views:

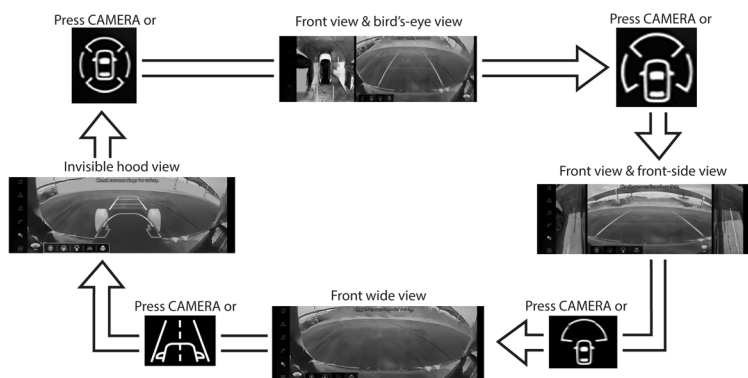


- When the transmission is in the **P (Park)**, **N (Neutral)** or **D (Drive)** position, press the icon **2** at the bottom of the display to see the 3D View **3** (if so equipped).
- The Invisible Hood View allows you to see the road surface underneath the vehicle. This may be useful for aligning the front wheels at a car wash or help to avoid hitting the side of curbs when operating at low speeds.
- The front and rear wide views show a wider area on the entire screen and allows checking of the blind corners on the right and left sides.

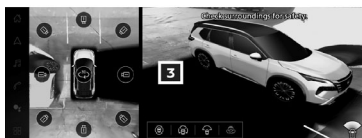 


# DRIVING FEATURES

 - When the electronic shift lever is in the **R (Reverse)** position, press the **CAMERA** button **1** or the screen icon at the bottom of the display to switch between the available views:

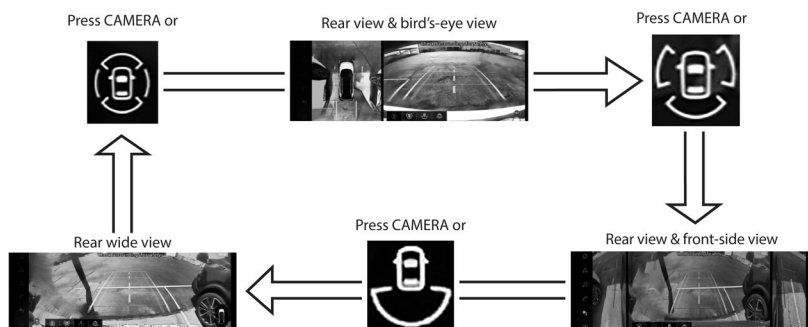

- The colored guidelines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m)
  - Blue 3 ft (1 m)
  - Blue 7 ft (2 m)
  - Blue 10 ft (3 m)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects:
  - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **4**.
  - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **5** will not appear in the monitor.
  - The distance between objects viewed on the Intelligent Around View® Monitor differs from the actual distance.
- Always check your surroundings and turn to look behind you before moving the vehicle.
- Objects in the bird's-eye view will appear farther than the actual distance.

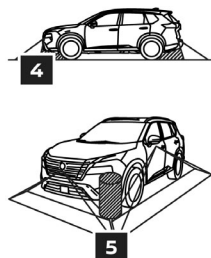 

# DRIVING FEATURES

## MOVING OBJECT DETECTION (MOD)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the transmission is in the **P (Park)**, **R (Reverse)**, **N (Neutral)** or **D (Drive)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.
- If the MOD system detects moving objects, an orange frame will be displayed on the camera image and a chime will sound.
- When the following is displayed:
  - Green MOD icon **6**; the system is active.
  - Gray MOD icon; the system is not active.
  - No MOD icon; the system is off. The indicator will also be off if all of the warning systems are deactivated using the Settings menu.
- The MOD system will not operate if the liftgate is open.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

## DRIVE MODE SELECTOR

### AUTO/STANDARD

- Auto/Standard **/i\** drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

### OFF-ROAD (AWD ONLY)

- OFF-ROAD mode allows for easier driving or starting on a bumpy road surface, such as an uneven dirt road, steep uphill slope or through sand.
  - Turn the Drive Mode Selector **1** to select **OFF-ROAD** mode **2** which will appear in the vehicle information display.



# DRIVING FEATURES

## SNOW (AWD ONLY)

- SNOW mode is recommended to help aid driving on snowy and frozen roads.
  - Turn the Drive Mode Selector **1** to select **SNOW** mode **3** which will appear in the vehicle information display.

## ECO

- ECO mode is recommended to help maximize fuel economy. Performance may be reduced.
  - Turn the Drive Mode selector **1** to select **ECO** mode **4** which will appear in the vehicle information display.

## SPORT

- SPORT drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
  - Turn the Drive Mode selector **1** to select **SPORT** mode **5** which will appear in the vehicle information display.

## HILL DESCENT CONTROL SYSTEM (if so equipped)

The Hill Descent Control system switch **6** is designed to reduce driver workload when going down steep hills. The Hill Descent control system helps to control the vehicle speed so the driver can concentrate on steering the vehicle.

### TO TURN HILL DESCENT CONTROL ON:

- The vehicle speed must be under 15 mph (25 km/h).
- The Hill Descent Control system switch must be ON.

The Hill Descent Control system ON indicator light will come on when the system is activated. If the Hill Descent Control system ON indicator light is blinking, the hill descent control is engaged; the Hill Descent Control will control the vehicle speed. Hill Descent Control will only work in Sand and Mud/Rut mode.

### TO TURN HILL DESCENT CONTROL OFF:

- Push the Hill Descent Control switch **6** to the OFF position.

 
**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Starting and driving" section of your Owner's Manual.

# DRIVING FEATURES

## REAR AUTOMATIC BRAKING (RAB)

- The Rear Automatic Braking (RAB) system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the R (Reverse) position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning light **1** will flash in the vehicle information display.
- A red frame will appear in the center display **2** (for vehicles equipped with the Intelligent Around View® Monitor system). The system will chime three times and braking will be applied automatically. The driver must press the brake pedal to maintain brake pressure.

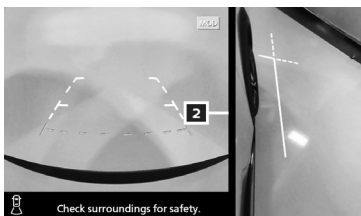

## TURNING THE RAB SYSTEM ON/OFF

- The RAB system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.
- When the RAB system is turned off, the RAB system warning light **1** illuminates or blinks.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

## LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right-side lane marking or road edge.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings or road edges are clearly visible on the road.
- When the vehicle approaches either the left or the right-side lane marking or road edge, the LDW system will vibrate the steering wheel and the orange LDW indicator **1** on the instrument panel will blink to alert the driver.



# DRIVING FEATURES

- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by steering to the left or right (for a short period of time).
- The I-LI is turned on by pushing the ProPILOT Assist **2** switch on the steering wheel.
- The LDW system can be turned on or off through the “Driver Assistance” menu in the vehicle information display and the I-LI can be turned on or off with the ProPILOT Assist switch on the steering wheel.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” and the “Starting and driving” sections of your Owner's Manual.

## HILL START ASSIST

Hill Start Assist allows time for the driver to release the brake pedal and apply the accelerator when the vehicle is parked on a hill. The brakes are applied automatically for 2 seconds after the driver releases the brake pedal.

 
- Hill Start Assist will operate automatically under these conditions:
  - The transmission is shifted into a forward or a reverse gear.
  - The vehicle is stopped completely on a hill by applying the brake.
- Hill Start Assist will not operate when the shift lever is in the **N (Neutral)** or **P (Park)** position or on a flat and level road.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Starting and driving” section of your Owner's Manual.

## INTELLIGENT DRIVER ALERTNESS (I-DA)

- When Driver Alertness **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

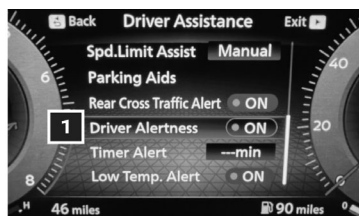


### TURNING THE I-DA SYSTEM ON/OFF

- The I-DA system can be turned on and off in the “Driver Assistance” settings in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the “Instruments and controls” and the “Starting and driving” sections of your Owner's Manual.

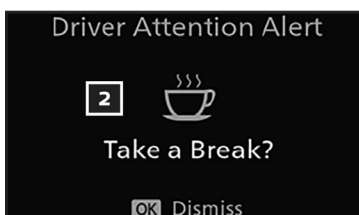

# DRIVING FEATURES

## IDLING STOP SYSTEM

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- Use this system while waiting at a stop light, etc.  
When the vehicle is stopped for long periods of time, turn off the engine.
- When the engine is stopped by the Idling Stop system, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop system by pushing the Idling Stop OFF switch **1**.
- The status of the Idling Stop System can be checked in the vehicle information display.
  - This indicator **2** is displayed when the idling Stop System is activated.
  - The indicator **2** blinks when the Idling Stop System is malfunctioning.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

---

## FRONT AND REAR SONAR SYSTEM (if so equipped)

- The system informs with a visual and audible alert of front obstacles when the shift lever is in the **D (Drive)** position and both front and rear obstacles when the shift lever is in the **R (Reverse)** position.
- The sonar (parking sensor) system sounds a tone to inform the driver of obstacles near the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

# DRIVING FEATURES

## TRAFFIC SIGN RECOGNITION (TSR) (if so equipped)

The TSR system captures road sign information with a camera unit located on the windshield in front of the inside rearview mirror. Detected road signs are displayed in the vehicle information display.

- The TSR system can be turned on or off through the “Driver Assistance” menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” and the “Starting and driving” sections of your Owner's Manual.

## HEAD UP DISPLAY (HUD) (if so equipped)

The Head Up Display can display the following features (if so equipped):

- Vehicle speed
- Navigation
- Driving Assist
- Traffic Sign
- Audio
- TEL/SMS
- Message for Driver Assistance
- Warning message



# DRIVING FEATURES

- Press the Head Up Display (HUD) switch **1** on the lower instrument panel to turn the system on and off.

- To adjust the Head Up Display settings when the system is on:

 
 
1. Press the ◀▶ arrows on the steering wheel until you get to the “Settings” menu in the vehicle information display. Press the scroll/ OK dial to make your selection.
2. Press the scroll/ OK dial **3** to select “Head-Up Display” **2**.
3. Adjust the positioning of the Head Up Display on the windshield by making a selection and scrolling the scroll/ OK dial **3** on the steering wheel to adjust features such as the height **4** and brightness **5**.

The following features can be adjusted through the “Settings” menu in the vehicle information display:

- Brightness
- Height
- Rotation
- Contents Selection
- Reset

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the “Instruments and controls” section of your Owner's Manual.

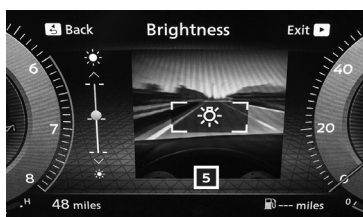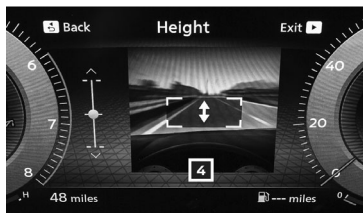

## DRIVER MONITOR (if so equipped)

The Driver Monitor System determines if the driver is monitoring the road ahead, in all driving conditions, with a driver-facing camera located on the steering column **1**. If the system does not detect the driver's attention on the road, a series of warnings will display in an effort to draw the driver's attention back forward. It is the driver's responsibility to pay attention in order to avoid these alerts:



# DRIVING FEATURES

## FIRST WARNING

- A beep and message will appear to draw the driver's attention toward the road.
- The driver must look ahead to clear the message.

## SECOND WARNING

- The message changes and request to hold the steering wheel appears.
- Message flashes with escalating beeping sounds to draw driver's attention.
- Driver must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

## THIRD WARNING

- Vehicle will apply 2 brake pulses to alert the driver of failure to comply.
- Driver must place their hands back on the steering wheel or apply light torque to the steering wheel to clear the message.

## EMERGENCY STOP

- Emergency warning sound will play and a "Manually Steer and/or "Slowing to Stop" warning message will display.
- The vehicle will gradually slow to a complete stop in the traveling lane and the hazard indicator lights will automatically activate when the vehicle reaches approximately 40 mph (65 km/h).
- After the vehicle is brought to an emergency stop, the vehicle is connected to the Emergency Call (SOS) service operator, who then requests relief from public institutions (police, fire department, medical institutions).
- After the emergency stop function is activated, the Steering Assist function will be disabled with the "Steering Assist OFF" message displayed until the ignition switch has been switched off and on again.
- Driver must place their hands back on the steering wheel or apply light torque to the steering wheel to deactivate the emergency stop.

## TO ENABLE/DIABLE DRIVER MONITOR

- The Driver Monitor system can be turned on and off in the "Driver Assistance" Settings under "Driver Monitor" in the vehicle information display.

**NOTE:** The driver monitor is active in all driving modes, not just when ProPILOT Assist 2.1 is active.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Starting and driving**" section of your Owner's Manual.



# Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** [www.nissan-techinfo.com](http://www.nissan-techinfo.com)  
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to [www.nissanquickguide.com/2026/rogue](http://www.nissanquickguide.com/2026/rogue) or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://owners.nissanusa.com/owners/navigation/manualsGuide>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

