



# QUICK REFERENCE GUIDE

2026 **SENTRA**



1

2

3

4

6

5

10

 
7

8

9

# COCKPIT OVERVIEW

- 1** Low Tire Pressure Warning Light 
- 2** Vehicle Information Display
- 3** Headlight and Turn Signal Switch
- 4** Wiper and Washer Switch
- 5** Bluetooth® / Vehicle Information Display Switches
- 6** Intelligent Cruise Control / ProPILOT Assist (if so equipped) / Volume Switches
- 7** Trunk Lid Release Switch 
- 8** Heated Steering Wheel Switch (if so equipped) 
- 9** Steering Assist Switch (if so equipped)
- 10** Tilt/Telescopic Steering Column

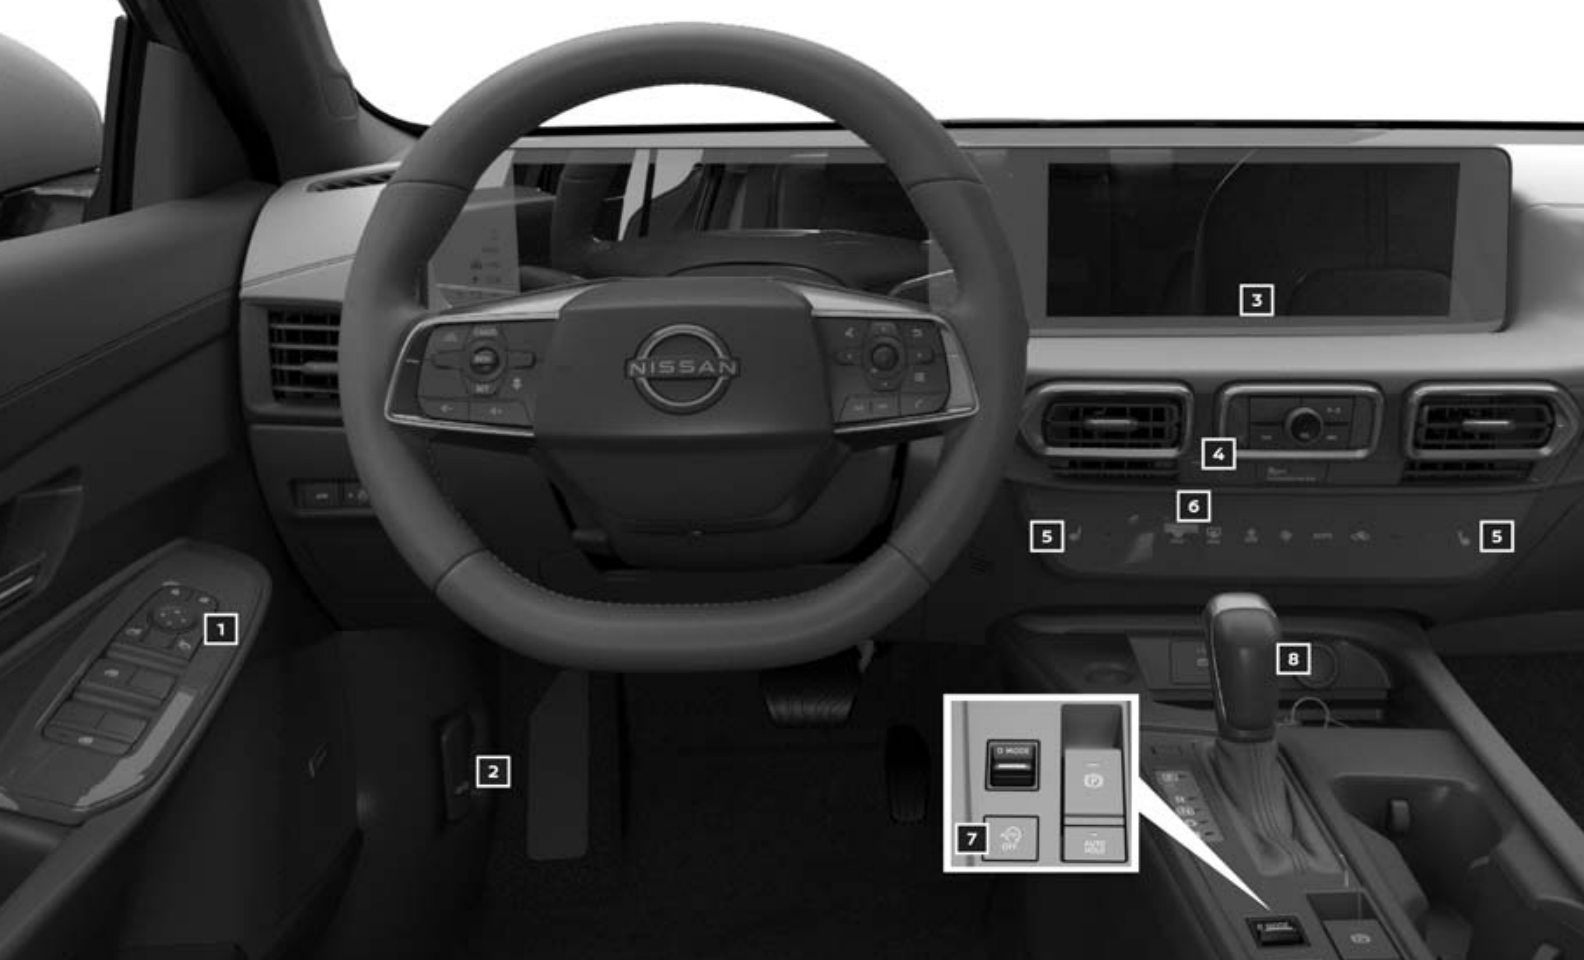

1

2

3

4

6

5

5

8



7

# INSTRUMENT PANEL

- 1** Power Mirror Switch
- 2** Hood Release
- 3** Audio System
- 4** Front Passenger Air Bag Status Light
- 5** Heated Seats   Switches (if so equipped)
- 6** Heater and Air Conditioner (automatic) (if so equipped)
- 7** Idling Stop OFF Switch 
- 8** USB Connection Port Interface

# TABLE OF CONTENTS

## GETTING STARTED

|                                                                  |    |
|------------------------------------------------------------------|----|
| NISSAN INTELLIGENT KEY® SYSTEM                                   | 2  |
| FRONT POWER SEAT ADJUSTMENTS (if so equipped for driver's seat)  | 4  |
| STARTING/STOPPING THE ENGINE                                     | 4  |
| OUTSIDE MIRROR CONTROL SWITCH                                    | 5  |
| EMERGENCY CALL (SOS) BUTTON (if so equipped)                     | 5  |
| HEATER AND AIR CONDITIONER (automatic) (if so equipped)          | 6  |
| HEATED STEERING WHEEL AND SEATS (if so equipped)                 | 8  |
| HEADLIGHT CONTROL SWITCH                                         | 8  |
| WIPER AND WASHER SWITCH                                          | 10 |
| VEHICLE INFORMATION DISPLAY                                      | 10 |
| TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT | 12 |
| TRUNK LID RELEASE SWITCH                                         | 13 |

## AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

|                                                               |    |
|---------------------------------------------------------------|----|
| CLOCK SET/ADJUSTMENT                                          | 14 |
| FM/AM/SiriusXM® RADIO                                         | 14 |
| USB CONNECTION PORT INTERFACE                                 | 15 |
| BLUETOOTH® HANDS-FREE PHONE SYSTEM*                           | 16 |
| BLUETOOTH® STREAMING AUDIO                                    | 18 |
| APPLE CARPLAY®                                                | 19 |
| SIRI® EYES FREE                                               | 20 |
| ANDROID AUTO™                                                 | 20 |
| NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped) | 21 |
| WIRELESS CHARGING (if so equipped)                            | 22 |
| WI-FI (if so equipped)                                        | 22 |
| HANDS-FREE TEXT MESSAGING ASSISTANT*                          | 23 |
| myQ CONNECTED GARAGE (if so equipped)                         | 23 |

## DRIVING FEATURES

|                                                                       |    |
|-----------------------------------------------------------------------|----|
| FORWARD DRIVING AID SENSORS (if so equipped)                          | 24 |
| IDLING STOP SYSTEM                                                    | 24 |
| BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)         | 25 |
| REAR AUTOMATIC BRAKING (RAB) (if so equipped)                         | 26 |
| LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI) | 26 |
| INTELLIGENT FORWARD COLLISION WARNING (I-FCW)                         | 27 |
| INTELLIGENT CRUISE CONTROL (ICC)                                      | 28 |
| PROPILOT ASSIST (if so equipped)                                      | 29 |
| AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM    | 32 |
| REARVIEW MONITOR                                                      | 33 |
| INTELLIGENT AROUND VIEW® MONITOR (if so equipped)                     | 33 |
| DRIVE MODE SELECTOR (if so equipped)                                  | 35 |
| INTELLIGENT DRIVER ALERTNESS (I-DA)                                   | 36 |



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Owner's Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



### Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system", the "Monitor, climate, audio, phone and voice recognition systems" and the "Starting and driving" of your Owner's Manual.

# GETTING STARTED

## NISSAN INTELLIGENT KEY® SYSTEM

This system allows you to lock or unlock your vehicle, open your trunk and remotely start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

### REMOTE ENGINE START WITH INTELLIGENT CLIMATE CONTROL\* (if so equipped)

- The Remote Engine Start operating range is approximately 197 ft (60 m) from the vehicle. The Remote Engine Start feature will not operate if the Intelligent Key is inside the vehicle. The effective operating range may be shorter if there are walls or other obstructions between the Intelligent Key and the vehicle.
- For Remote Engine Start to function, the vehicle must be in the **P (Park)** position with the ignition off and all of the doors must be closed and locked. Please see your Owner's Manual for additional information.
- To start your vehicle remotely:
  1. Press the  button **1**.
  2. Within 5 seconds, press and hold the engine start  button **2** for at least two seconds.
- The engine will start, and the parking lights will turn on.
- The automatic climate control will begin heating or cooling the vehicle depending on the outside temperature.
- The engine will run for 20 minutes and then turn off.
- To start driving, depress the brake pedal and push the ignition switch.



### LOCKING AND UNLOCKING THE VEHICLE

- The lock and unlock operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch (if so equipped) **3** once or press the  button **1** on the key fob.
- To unlock the vehicle, perform one of the following procedures:
  - Push the driver's door handle request switch (if so equipped) **3** once; the driver's door will unlock. Push the door handle request switch (if so equipped) **3** again within 60 seconds; all other doors will unlock, or
  - Press the  button **4** on the key fob to unlock the driver's side door. Press the  button **4** again, all other doors will unlock.



# GETTING STARTED

## TRUNK LID RELEASE

 
- To open the trunk, press and hold the trunk lid release  button **5** for more than 0.5 seconds.
- The trunk lid release button will not operate when the ignition switch is in the ON position.

## PANIC ALARM

- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **6** for more than 0.5 seconds. Once activated, the panic alarm and headlights will stay on for a period of time.
- Press the  button **4** on the key fob to turn the panic alarm off.

## INTELLIGENT KEY BATTERY DISCHARGE

- If the **Key Battery Low** indicator **7** appears in the vehicle information display, replace the battery as soon as possible.
- If the battery of the Intelligent Key is discharged and the indicator **8** appears in the vehicle information display, or if environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Move the shift lever to the **P (Park)** position.
  2. Firmly apply the foot brake.
  3. Push the ignition switch with the Intelligent Key near, and a chime will sound.
  4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

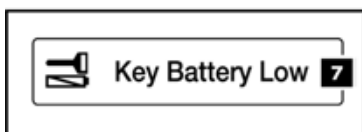

## APPROACH UNLOCK FUNCTION (if so equipped)

- When you approach the vehicle with the Intelligent Key, the vehicle will unlock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

## WALK AWAY LOCK FUNCTION (if so equipped)

- When you walk away from the vehicle with the Intelligent Key, the vehicle will lock automatically. This function is disabled by the default setting. You can enable this function by using the vehicle information display.

\*State laws may apply; review local laws before using.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Pre-driving checks and adjustments", "Starting and driving" and the "Do-it-yourself" sections of your Owner's Manual.



# GETTING STARTED

## FRONT POWER SEAT ADJUSTMENTS (if so equipped for driver's seat)

- To slide the seat forward or backward, push the switch **1** forward or backward.
- To adjust the angle of the seatback, push the switch **2** forward or backward.

### SEAT LIFTER

- Push the end of the switch **1** up or down to adjust the height of the seat cushion.

### POWER LUMBAR SUPPORT

- To adjust the lumbar area, push the switch **3** up or down to adjust the height, forward to increase the lumbar support or rearward to decrease the lumbar support.



Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system" section of your Owner's Manual.

## STARTING/STOPPING THE ENGINE

### TURNING THE ENGINE ON

- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- Move the shifter lever to the **P (Park)** position.
- Depress the brake pedal.
  - If the brake pedal is not depressed, pushing the ignition switch once enters the AUTO ACC mode.
  - If the ignition switch is pushed a second time, the vehicle will enter the ON mode.
- Push the ignition switch to start the engine.



### TURNING THE ENGINE OFF

- Apply the brake pedal, move the shift lever to the **P (Park)** position, apply the parking brake and push the ignition switch.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

# GETTING STARTED

## OUTSIDE MIRROR CONTROL SWITCH

- Push the left switch **1** to select the driver's side outside mirror or push the right switch **2** to select the passenger's side outside mirror. The indicator light on the selected mirror switch will illuminate.
- Adjust each mirror to the desired position using the outside mirror control switch **3**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments" section of your Owner's Manual.

## EMERGENCY CALL (SOS) BUTTON (if so equipped)

- The Emergency Call (SOS) feature requires a NissanConnect® Services subscription.
- With a paid subscription, it can be used to call for assistance in case of an emergency.
- To use this feature, press the cover once to expose the **SOS** button **1** on the overhead console and then press the button.
- For additional information, or to enroll your vehicle, refer to [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect) or call 855-426-6628.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual or refer to the "Information" section of your NissanConnect® Owner's Manual.

# GETTING STARTED

## HEATER AND AIR CONDITIONER (automatic) (if so equipped)



### 1 DRIVER/PASSENGER TEMPERATURE CONTROL SWITCHES/KEYS

- Push the temperature control switch/key **1** up for warmer air or down for cooler air.

### 2 FRONT DEFROSTER BUTTON

- Press the  front defroster button **2** to turn on the system. This feature removes humidity from the air.
- Use the temperature control switches on the corresponding side to set the desired temperature.
- To quickly remove ice from the outside of the windows, use the  fan speed control button/key **4** to set the fan speed to the maximum setting.

### 3 REAR WINDOW DEFROSTER BUTTON

- Push the  rear window defroster button **3** to turn the system on or off.
- This function automatically turns off after approximately 20 minutes.

### 4 FAN SPEED CONTROL SWITCH/KEY

- Press the  fan speed control key **4** downwards to decrease fan speed or upwards to increase fan speed. Press the left  fan speed control switch **4** to turn the fan off or decrease fan speed. Press the right fan speed  fan speed control switch **4** to turn the fan on or increase fan speed.

# GETTING STARTED

## 5 ON-OFF KEY

- Press the  **ON-OFF** key **5** to turn the climate control system on or off.

## 6 AUTO BUTTON/KEY

- Press the **AUTO** button/key **6**, and the system will automatically control air flow distribution and fan speed to achieve and maintain the temperature setting (automatic cooling and/or dehumidified heating).
- Automatic mode may be used year-round and will work to reach a comfortable temperature quickly. For example, on a very hot day, the system will initially operate at maximum air flow for a rapid cool down.

## 7 AIR INTAKE CONTROL BUTTON/KEY

- Press the  air recirculation button/key **7** to recirculate interior air inside the vehicle.
- The air recirculation mode cannot be activated when the air conditioner is in the front defroster mode.
- This mode helps adjust the inside vehicle temperature more effectively.
- To automatically control air intake inside the vehicle, press the  air recirculation button/key **7** to cycle through the modes. The indicator light on the button will illuminate. When the automatic control is set, the system automatically alternates between the outside air circulation and the air recirculation modes. The indicator light of the active mode will illuminate.

## 8 AIR FLOW CONTROL KEY

- Press the air flow control key **8** to cycle through the following air flow outlets:
  -  Air flows from center and side vents.
  -  Air flows mainly from the foot outlets.
  -  Air flows from defroster.

## 9 AIR CONDITIONER KEY

- Press the **A/C** key **9** to turn the air conditioner system on or off. This system helps cool and dehumidify the air inside the cabin and defog the windows.

Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

# GETTING STARTED

## HEATED STEERING WHEEL AND SEATS (if so equipped)

### HEATED STEERING WHEEL (if so equipped)

- Push the  heated steering wheel switch **1**.
- The heated steering wheel automatically turns on and off to maintain a temperature above 68°F (20°C).
- Push the  heated steering wheel switch **1** to turn off the heated steering.
- If the temperature of the steering wheel is above 68°F (20°C) when the switch is turned on, the system will not heat the wheel. This is normal operation.

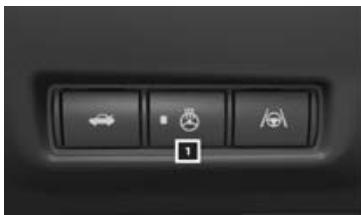

### HEATED SEATS (if so equipped)

- With the ignition switch in the ON position, push the  or  heated seat switch **2** to heat the seats.
- The lights illuminated represent the heat setting, the bottom light represents the low setting and the top represents the high setting.
- To turn the heated seats off push the  or  heated seat switch **2**.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.



# GETTING STARTED

## AUTOLIGHT SYSTEM

- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **3**, then place the ignition in the ON position. To deactivate the autolight system, turn the headlight control switch to the OFF position,  $\equiv$  position **1** or  $\odot$  position **2**.

## HEADLIGHT BEAM SELECT

- With the headlights turned to the  $\odot$  position **2**, push the headlight control switch forward **4** to select the high beam function. The blue indicator light will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch **5** to flash on and off the headlight high beams.



## HIGH BEAM ASSIST

- To activate the High Beam Assist system, turn the headlight switch to the **AUTO** position **3** and push the switch at the end of the lever. The High Beam Assist indicator light in the meter will illuminate while the headlights are turned on.
- When the vehicle speed lowers to less than approximately 16 mph (25 km/h), the headlight uses the low beam.
- To turn off the High Beam Assist system, push the switch again.

## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

# GETTING STARTED

## WIPER AND WASHER SWITCH

- The ignition switch must be in the ON position. Move the lever to one of the following positions to operate the windshield wipers:

**1** Mist  — One sweep operation of the front wipers.

**2** Intermittent (**INT**) or Auto (**AUTO**)— Front wipers operate intermittently by moving the lever down to the **INT / AUTO** position and then rotating the control ring **3** to increase or decrease wiper speed. Also, the intermittent operation speed varies in accordance to the vehicle speed.

**4** Low  — Wipers operate at a continuous low-speed.

**5** High  — Wipers operate at a continuous high-speed.

**6** Washer  — Pull the lever towards you to activate the washer. The wipers will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Do-it-yourself" sections of your Owner's Manual.

## VEHICLE INFORMATION DISPLAY

The vehicle information display **1** displays items such as:

- Audio Information
- Drive Computer Information
- Fuel Economy Information
- Indicators and Warnings
- Vehicle and Meter Display Settings
- Odometer/twin trip odometer
- Gear Position Indicator (P, R, N, D, B)
- Distance To Empty and Fuel Indicator



# GETTING STARTED

## USING THE VEHICLE INFORMATION DISPLAY

The vehicle information display can be changed using the scroll/ **OK** button **2**, the **↑** or **↓** buttons **3** and the button **4** located on the steering wheel.



## RESETTING THE TRIP COMPUTER

- Use the scroll/ **OK** button and the arrow buttons on the steering wheel to select the desired trip mode.
- Press and hold the scroll/ **OK** button for more than one second to reset the selected mode.

## SETTINGS

The Settings menu allows you to change the information displayed in the vehicle information display such as:

- |                     |                     |                    |
|---------------------|---------------------|--------------------|
| ■ VDC Setting       | ■ Driver Assistance |                    |
| ■ Clock             | ■ Maintenance       | ■ Unit/Language    |
| ■ TPMS Setting      | ■ Factory Reset     | ■ Vehicle Settings |
| ■ Customize Display | ■ ECO Mode Setting  |                    |

**Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Instruments and controls**" section of your Owner's Manual.



# GETTING STARTED

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT



- The low tire pressure warning light **1** and a **Tire Pressure Low — Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately one minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a NISSAN dealer.

### EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended tire pressure.
- To use the Easy-Fill Tire Alert:
  1. Move the shift lever to the **P (Park)** position and apply the parking brake.
  2. Place the ignition switch in the **ON** position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop.
  5. Repeat this procedure for any additional under-inflated tires.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls", "Starting and driving", "In case of emergency", "Do-it-yourself" and the "Technical and consumer information" sections of your Owner's Manual.

# GETTING STARTED

## TRUNK LID RELEASE SWITCH

Use one of the following methods to unlatch the trunk lid then raise the lid to open the trunk:

- Push the trunk opener request switch **1**, located under the trunk handle in the center, for more than one second. The doors must be unlocked or the Nissan Intelligent Key® must be with you (that is, in your pocket or purse).
- Press the  button **2** on the key fob for more than 0.5 seconds.
- Push the trunk lid release switch **3** down. The trunk lid release switch **3** is located to the left of the steering wheel.



**Please see your Owner's manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Pre-driving checks and adjustments"** section of your Owner's Manual.



# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## CLOCK SET/ADJUSTMENT

 
- Some screens may appear differently based on model and software version.
- To adjust the time and the appearance of the clock on the display:
  1. Touch the  key on the **Launch Bar**.
  2. Touch the  Settings key on the home page.
  3. Touch the "General" key.
  4. Touch the "Clock" key.
- Touch the  key to return to the previous screen.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

## FM/AM/SiriusXM® RADIO

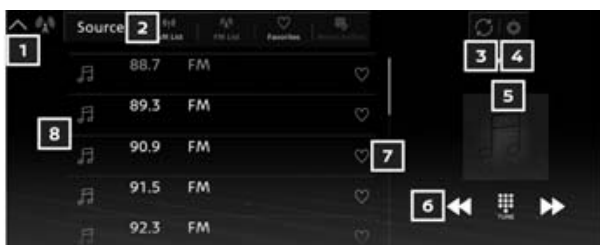

### 1 OPERATION SCREEN KEY

- Touch to display the AM/FM/SiriusXM® operation screen.

### 2 AM/FM/SiriusXM® MENU BAR

- < key — Slides the menu bar to the left.
- AM List — Displays the AM list screen.
- FM List — Displays the FM list screen.
- Favorites — Displays a list of radio bands registered as favorites.
- MoreLikeThis — Displays a list of songs similar to the ones the user had been listening to.
- > key — Slides the menu bar to the right.

### 3 REFRESH KEY

- Touch to refresh the station list.

### 4 SETTINGS KEY

- Touch to display the radio settings screen.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## 5 STATION INFORMATION

- Displays the radio frequency/station currently tuned to.

## 6 OPERATION KEYS

- Touch corresponding keys for FM/AM/SiriusXM® radio operation.

## 7 FAVORITES KEY

- Touch to add the station to favorites. Touch "Favorites" on the AM/FM menu bar to display the favorite station list.

## 8 STATION LIST

- Select a preferred station.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section and the "Audio system" section of your NissanConnect® Owner's Manual.

## USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-C) are located beneath the heater and air conditioning controls.
- There are also USB charging ports located in the second row on the back of the center console **2** (USB Type-C). These ports will charge compatible devices.
- When a compatible USB memory device or auxiliary device is plugged into the USB port/AUX jack (if so equipped), compatible audio files stored on the device can be played through the vehicle's audio system.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A or USB Type-C (if so equipped) adapter (or vice versa) can also be purchased separately; however, results may vary.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the connecting procedure within this guide.



 
### SYSTEM OPERATING TIPS

- The interior of the vehicle should be as quiet as possible.
- Speak naturally. Speaking too fast, too slow, too soft, or too loud makes voice recognition more difficult.
- When Apple Carplay® or Android Auto™ are active, pushing and holding the  button will start a Siri® or Google Assistant session.



### CONNECTING PROCEDURE

1. Touch the  settings key **1** on the home page.
2. Touch the "Connections" key **2**.
3. Touch the "Device" tab **3**.
4. Follow the instructions on the screen. If a PIN appears on the screen, operate the Bluetooth® device to enter/confirm the PIN.

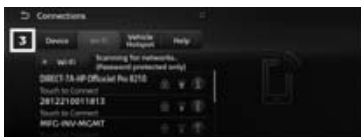


### VEHICLE PHONEBOOK

1. Press the  button on the steering wheel or touch the  Phone key on the Launch Bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.

### MAKING A CALL

 
1. Touch the  key on the Launch Bar. The "Phonebook" screen **4** appears on the display.
2. Select one of the options to make a call.

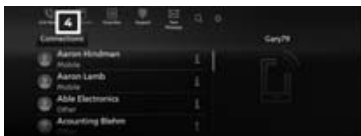

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## RECEIVING/ENDING A CALL

 - To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Touch the  Answer key on the screen.

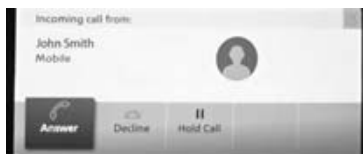

- To end or reject an incoming call, either:
  - Press and hold the  button on the steering wheel, or
  - Touch the  Decline key on the screen.

## SWITCH TO HANDSET

- Start the call using Bluetooth® hands-free phone and touch "Use Handset" on the screen to use the handset (cellular phone).

\*Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

---

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP profile), you can set up the wireless connection between your Bluetooth® device and the in-vehicle audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
  1. Touch the  settings key **1**.
  2. Touch the "Connections" key.
  3. Touch the "Device" key **2**.
  4. Touch "Add Device".
- Once your Bluetooth® device has been connected as an audio device:
  1. Touch the  audio key **3** on the Launch Bar.
  2. Select the added device from "Source" key **4**.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.



\*Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Audio system" section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located below the climate controls or wirelessly via Bluetooth®.
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch “Yes” then “OK” to use Apple CarPlay®.
  - After the iPhone is connected, the Apple CarPlay® home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay®, Siri® operation can be accessed.
- To start a Siri session:
  - Press and hold the  button on the steering wheel. Press the button again to end a Siri session.
  - Use the “Hey Siri” command.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri® functions may not be available while driving.
- For functions that can be used with Siri®, please refer to the Apple® website.
- To exit the Apple CarPlay® screen, touch the Home menu key on the Launch Bar.
- To return to the Apple CarPlay® screen from the main menu:
  - Touch the  Apple CarPlay® key **1**, or
  - Touch “Apple CarPlay” on the app’s menu screen.
- NISSAN Phone menu and NISSAN Voice Recognition cellular phone commands will not be available when Apple CarPlay® is active.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “Getting started” and the “Apps” sections of your NissanConnect® Owner's Manual.



# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## SIRI® EYES FREE

- If you have a compatible iPhone® with Siri®, you can link your iPhone® to the Siri® Eyes Free function in your vehicle's Bluetooth® system.
- If you have a compatible iPhone® connected to the system, press and hold the  button **1** on the steering wheel for a few seconds and Siri® will be activated in Eyes Free mode.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual, the "Information" section of your NissanConnect® Owner's Manual and visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

## ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

### USING ANDROID AUTO™

- To connect your Android phone to the in-vehicle system, you can connect a USB cable to the USB connection port located beneath the climate controls. You can also connect via Bluetooth by touching the  settings key then touching "Connections" followed by "Add Device".
  - Depending on the setting, the startup information screen will appear on the center display.
  - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto™, Google Assistant™ operation can be accessed by pressing and holding the  button on the steering wheel. Press the button again to end voice operation.
- To return to the Android Auto™ home screen from the main menu:
  - Touch the  key **1** on the Launch Bar, or
  - Touch "Android Auto" on the app's menu screen.
- NISSAN Phone menu will not be available when Android Auto™ is active.
- If you have difficulties with connection or performance, try a different USB cable.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" and the "Apps" sections of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect® Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect® Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect® Services. Next, download the MyNISSAN® app on your compatible iPhone® or Android® smartphone and log into it using your Nissan Owner Portal ID and password.
- For full details on NissanConnect® Services or to enroll your vehicle, please visit **[www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)** or call **1-855-426-6628**.
- Here is a quick overview of some of the features that may be available for your vehicle. If equipped, your vehicle may include NissanConnect® features services such as emergency SOS calling, Automatic Collision Notification, Wi-Fi, Remote Services, Navigation, Bluetooth® and more. For complete information about your NissanConnect® features and services, please consult your vehicle's NissanConnect® Owner's Manual at **<https://www.nissanusa.com/owners/manuals-guides.html>**. For frequently asked questions, please visit: **[www.nissanusa.com/connect/faq](http://www.nissanusa.com/connect/faq)**.

Some of the available NissanConnect® services may include:

- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the NissanConnect® Services Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Emergency Call - Which connects you to a live response specialist who will assist in the dispatch of emergency services to the vehicle location. To use this feature, press the SOS button on the overhead console. The SOS button should only be used in emergency situations or in conjunction with the Roadside Assistance feature, if warranted.
- Wi-Fi Hotspot (if so equipped) - Enables you to connect up to seven devices to the vehicle and access the Internet when a service provider's subscription is active.

To access these features in your vehicle:

1. Touch the apps key on the Launch Bar.
2. Touch "NissanConnect Services".
3. Select an item from the NissanConnect® Services menu screen.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Information" section of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## WIRELESS CHARGING (if so equipped)

The wireless charger is located on the front of the center console. Place the smartphone horizontally on the pad of the wireless charger **1**. Charging will start automatically. The smartphone will be charged continuously while the ignition switch is in the ON position. All doors should be closed for charging operation to work properly.



- Please note that phone position and phone case type may impact wireless charging.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" section of your Owner's Manual.

## WI-FI (if so equipped)

 
A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of a smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

### TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
  1. Touch the  Settings key on the Launch Bar.
  2. Touch "Connections" and then touch "Wi-Fi".
  3. Turn on Wi-Fi.
  4. Touch the name of the device you wish to connect.
  5. Enter the network password and touch →. The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.

### TO CHANGE THE WI-FI SETTINGS:

1. Touch the  Settings key on the Launch Bar.
2. Touch the "Connections" key.
3. Touch the "Wi-Fi" key **1**.
4. Touch the key next to the device name. The information and the setting options of the device will be displayed.

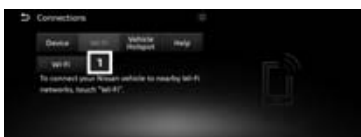


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started" section of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS
 
## HANDS-FREE TEXT MESSAGING ASSISTANT\*

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-Free Phone System.
- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

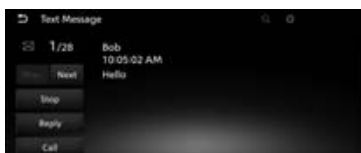

\* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Bluetooth® Hands-Free Phone System" section of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

---

## myQ CONNECTED GARAGE (if so equipped)

myQ Connected Garage allows for remote monitoring, opening and closing of myQ compatible garage doors. This can be accessed through the touch-screen display. Download the myQ app on your smartphone using the QR code displayed on the touchscreen display.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Apps" section of your NissanConnect® Owner's Manual.

---

# DRIVING FEATURES

## FORWARD DRIVING AID SENSORS (if so equipped)

- A camera and sensor support forward driving aids for your vehicle. The camera sensor is located above the **1** inside mirror and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems supported by these sensors include, but are not limited to:
  - Automatic Emergency Braking (AEB) with Pedestrian Detection
  - Intelligent Cruise Control (ICC)
  - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears, stop the vehicle in a safe place, place the shift lever in the **P (Park)** position, and turn the engine off. Clean the sensor areas and restart the engine. If the message and light continue to appear after cleaning sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a NISSAN dealer.



Forward Driving Aids temporarily disabled  
Front Sensor blocked  
See Owner's Manual **3**



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

## IDLING STOP SYSTEM

The Idling Stop System activates to prevent unnecessary fuel consumption, exhaust emissions and noise.

- The system is active while waiting at a stop light, etc. When the vehicle is stopped for long periods of time, turn off the engine.
- When the engine is stopped by the Idling Stop system, heating, cooling and dehumidifying functions will be deactivated. To avoid the air conditioning functions from being deactivated, turn off the Idling Stop system by pushing the Idling Stop OFF switch **1**.



# DRIVING FEATURES

- The Idling Stop System resets to ON every time the ignition switch is switched from the OFF position to the ON position.
- The status of the Idling Stop System can be checked in the vehicle information display.
  - This indicator **2** is displayed when the Idling Stop System is activated.
  - The indicator **2** blinks when the Idling Stop System is malfunctioning.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

## BLIND SPOT WARNING (BSW) WITH REAR CROSS TRAFFIC ALERT (RCTA)

- The BSW system helps to alert the driver when another vehicle moves into the vehicle's detection zone.
- An indicator located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- If the turn signal is turned on with a vehicle in the detection zone the system chimes and the side indicator light will flash.
- The indicator **2** will illuminate after the ignition switch is in the ON position and the BSW system is enabled. This indicates that the BSW system is operational.
- The RCTA system helps to alert the driver of an approaching vehicle when the driver is backing out of a parking space. The system operates when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 5 mph (8 km/h).
- The radar sensors detect an approaching vehicle from up to 66 ft (20 m). The sensors are located on both sides near the rear bumper. The system gives visual and audible warnings if an approaching vehicle is detected.
- The BSW with RCTA system can be turned on or off through the "Driver Assistance" screen in the vehicle information display.



 
Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

# DRIVING FEATURES

## REAR AUTOMATIC BRAKING (RAB) (if so equipped)

- The RAB system can assist the driver when the vehicle is backing up and approaching objects directly behind the vehicle.
- The RAB system will function when the shift lever is in the **R (Reverse)** position and the vehicle speed is less than approximately 9 mph (15 km/h).
- If a risk of a collision with an obstacle is detected when your vehicle is backing up, the RAB system warning indicator light **1** will flash in the vehicle information display and the system will chime three times.
- A red frame will appear in the center display **2** for vehicles equipped with the Intelligent Around View® Monitor system. The system will chime three times and the brakes will be applied automatically. The driver must depress the brake pedal to maintain brake pressure.
- The RAB system can be turned on and off through the "Driver Assistance" screen in the vehicle information display.

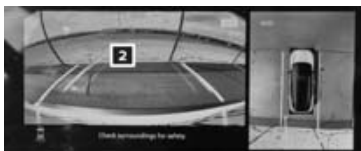

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

## LANE DEPARTURE WARNING (LDW) AND INTELLIGENT LANE INTERVENTION (I-LI)

- The LDW system can help alert the driver when the vehicle is traveling too close to either the left or the right side of a traveling lane.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side of the traveling lane, the LDW system will alert the driver through the steering wheel (vibration) and the LDW indicator **1** on the instrument panel will blink to alert the driver.
- The LDW system can be turned on and off through the "Driver Assistance" screen in the vehicle information display.



# DRIVING FEATURES

 
- The I-LI system can assist the driver in returning the vehicle to the center of the traveling lane by applying the steering to the left or right for a short period of time.
- The LDW and I-LI system can be turned on and off through the “Driver Assistance” section in the vehicle information display.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Instruments and controls**” and the “**Starting and driving**” sections of your Owner's Manual.

## INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The I-FCW system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver by blinking the vehicle ahead detection indicator light **1** and an audible alert.

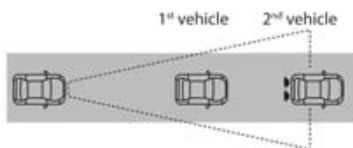

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Instruments and controls**” and the “**Starting and driving**” sections of your Owner's Manual.



# DRIVING FEATURES

## INTELLIGENT CRUISE CONTROL (ICC)

### VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the  ICC switch **1** on the steering wheel. The ICC indicators **2** will illuminate.
- Accelerate to the desired speed.
- Push the **SET** switch **3** on the steering wheel and release it. ICC will be set to the desired speed.
- Push the  distance switch **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- This indicator **5** indicates the ICC system status depending on the color:
  - ICC system ON indicator (gray): Indicates that the ICC switch is on.
  - ICC system SET indicator (green): Indicates that the cruising speed is set.
  - ICC system warning (orange): Indicates that there is a malfunction in the ICC system.
- To reset at a faster cruising speed, push the **RES+** switch up **6** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push the **RES-** switch down **6** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **7** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **8** will turn off.
- To turn off ICC, push the  ICC switch **1** on the steering wheel. The ICC indicators **2** in the instrument panel will turn off.



### CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push the ICC switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving" section of your Owner's Manual.

# DRIVING FEATURES

## PROPILOT ASSIST (if so equipped)

ProPILOT Assist is a combination of Intelligent Cruise Control (ICC) and Steering Assist. The ProPILOT Assist system is intended to enhance the operation of the vehicle when following a vehicle traveling in the same lane and direction. The ProPILOT Assist system is a "hands-on" driver assistance system and is intended for use on freeways/highways.

The driver must be prepared to steer and brake the vehicle at all times.

### SETTING THE PROPILOT ASSIST SYSTEM

1. To set ProPILOT Assist, push the  switch **1** on the steering wheel. The ProPILOT Assist system display will appear on the vehicle information display.
2. Push the **SET** switch **4** when at the desired speed.
3. Push the  switch **5** to select the following distance.



### PROPILOT ASSIST SYSTEM DISPLAY AND INDICATORS

#### **6** Vehicle set speed indicator

- Displays the speed set by the driver.
- Green: ICC active
- Gray: ICC standby

#### **7** Steering Assist Indicator

- Shows whether Steering Assist is active or not (green-active, gray-standby).

#### **8** Lane marker indicator

- No lane makers displayed: Steering Assist is turned off.
- Gray: No lane markers detected, steering assist in standby.
- Green: Lane markers detected, steering assist active.
- Orange: Lane departure is detected.

#### **9** ProPILOT Assist status indicator

- Displays whether ProPILOT Assist is active or not.
- White: Standby
- Blue: Active

#### **10** Vehicle ahead detection indicator

- Appears on display when a vehicle is detected ahead.

#### **11** Set distance indicator

- Displays the selected distance set by the driver.



# DRIVING FEATURES

## CANCELING THE PROPILOT ASSIST SYSTEM

- To cancel ProPILOT Assist, do one of the following:
  - Push the **CANCEL** switch **2** on the steering wheel.
  - Tap the brake pedal (except at a standstill). This action will keep the system in standby. To resume, push the **RES±** switch **3** to either direction to return to the original vehicle set speed, or push the **SET** switch **4** to set the current vehicle speed.

## PROPILOT ASSIST

- The set speed range is between approximately 20 and 90 mph (32 and 144 km/h).
- To accelerate or decelerate your vehicle to the desired speed, push the **RES±** switch **3** up or down and release it.
- When a vehicle is detected in the lane ahead, the ICC system controls the vehicle speed to maintain the distance from the vehicle ahead set by the driver.
- For more information, refer to the ICC section in this book.

## INTELLIGENT CRUISE CONTROL (ICC)

- The system will not detect a vehicle that is already stopped in the traveling lane before it enters the detection zone, the driver must control the vehicle to prevent a collision.
- When the vehicle ahead decelerates, your vehicle decelerates to maintain the distance from the vehicle ahead set by the driver.
- Once the vehicle ahead stops, the ICC system will stop your vehicle and apply the brakes to keep the vehicle stopped.
- When the vehicle ahead begins to move, push up and release the **RES±** switch **3** or depress the accelerator pedal. The ICC system starts to follow the vehicle ahead.
- If your vehicle comes closer to the vehicle ahead due to rapid deceleration of that vehicle or if another vehicle cuts in, the system warns the driver with a chime and ICC system display. The driver must control the vehicle to prevent a collision.
- ICC may not operate as expected under all conditions. Always be prepared to brake if needed. For example, vehicles cutting into your lane or approaching stopped traffic may not be detected. For more information see Owner's Manual.

## STEERING ASSIST

- The Steering Assist system assists the driving operation to help keep the vehicle within the traveling lane. Steering Assist can be activated when the following conditions are met:
  - ICC system is activated.
  - Lane markings on both sides are clearly detected.

# DRIVING FEATURES

 
- A vehicle ahead is detected (when the vehicle is driven at speeds under 37 mph [60 km/h]).
  - The driver has hands on the steering wheel.
  - The vehicle is driven at the center of the lane.
  - Turn signals are not active.
  - The windshield wipers are not operated in the high speed position
- Steering Assist provides a warning, is canceled or temporarily goes into standby mode under the following conditions:
- The turn signals are activated.
  - Both hands are not detected on the steering wheel. Simply apply more pressure or a tighter grip on the steering wheel.
  - The wipers are in LO or HI speed position.
  - Steering Assist will not activate if the system does not detect lane markers.

Push the Steering Assist switch **12** to turn the system on.

To turn off Steering Assist:

- Push the Steering Assist switch **12** on the instrument panel to the left of the steering column or in the settings of "Driver Assistance" in the vehicle information display.

- Steering Assist may not operate as expected under all conditions. Always be prepared to steer if needed. For example, lighting conditions, weather, lane splits (such as exit ramps) and confusing lane markers may cause the system to not operate as expected. For more information see Owner's Manual.

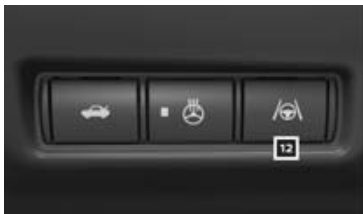

## HANDS ON DETECTION

- If the driver lets go of the steering wheel or only lightly touches it, the system may not detect the driver's hand(s) on the wheel and a sequence of warnings may occur. When the driver holds and operates the steering wheel again (apply gentle torque in one direction), the warnings turn off.
- If the driver does not place their hands back on the wheel or cancel the ProPILOT Assist, the vehicle warnings will continue and the vehicle will eventually come to a stop.



# DRIVING FEATURES

## CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push and hold the  switch **1** for longer than approximately 1.5 seconds.
- Once vehicle is at the desired speed, push the **SET** switch **4**. Once set, the vehicle will maintain the desired set speed as shown by the cruise control icon and set speed indicator displayed above.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

The System may temporarily become unavailable due to poor weather conditions, lane visibility issues or unique traffic conditions. Clean/defrost your windshield and/or cleaning sensor to keep this feature working properly. Please refer your Owner's Manual for more information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.

---

## AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle, pedestrian or cyclist ahead in the traveling lane.
- The AEB system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the vehicle ahead detection indicator **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red and white) **2** and audible warning. If the driver releases the accelerator pedal, then the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Starting and driving" section of your Owner's Manual.

# DRIVING FEATURES

## REARVIEW MONITOR

- When the shift lever is shifted into the **R (Reverse)** position, the monitor display shows a rearward view from the vehicle.
- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m)
  - Blue 3 ft (1 m)
  - Blue 7 ft (2 m)

 


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems" section of your Owner's Manual.


## INTELLIGENT AROUND VIEW® MONITOR (if so equipped)

- With the ignition switch in the ON position, the Intelligent Around View® Monitor is activated by pressing the **CAMERA** button **1**, located on the control panel, or by moving the shift lever to the **R (Reverse)** position. The monitor displays various views of the position of the vehicle.
- When the shift lever is in the **P (Park)** or **D (Drive)** position and the **CAMERA** button **1** is pressed, the following views display:

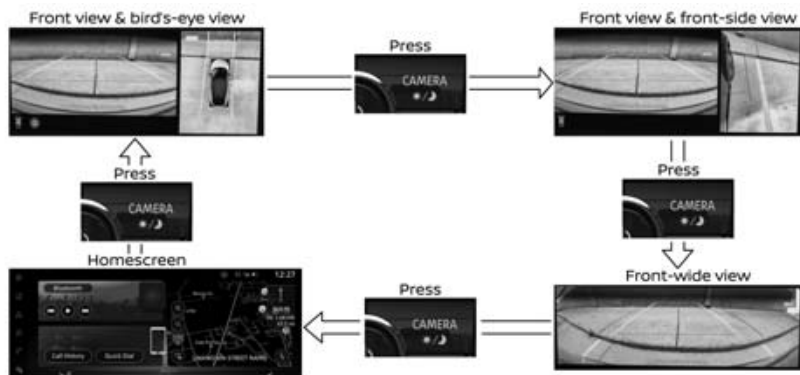

# DRIVING FEATURES

 - When the shift lever is in the **R (Reverse)** position and the **CAMERA** button is pressed, the following views will display in order:

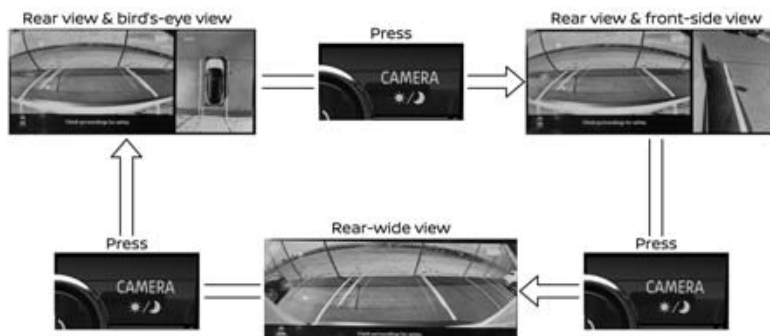

- The colored guide lines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line.
  - Red 1.5 ft (0.5 m)
  - Blue 3 ft (1 m)
  - Blue 7 ft (2 m)
  - Blue 10 ft (3 m) (if so equipped)
- For information regarding how to access additional viewing cycles, please see your Owner's Manual.
- There are some areas where the system will not detect objects:
  - When in the front or the rear view display, an object below the bumper or on the ground may not be detected **2**.
  - When in the bird's-eye view, a tall object near the seams of the camera detecting areas **3** will not appear in the monitor.
  - The distance between objects viewed on the Intelligent Around View® monitor differs from the actual distance.
- Objects in the bird's-eye view will appear farther than the actual distance.



## MOVING OBJECT DETECTION (MOD) (if so equipped)

- The MOD system helps inform the driver of moving objects around the vehicle.
- The system will operate when the shift lever is in the **D (Drive)**, **N (Neutral)**, **R (Reverse)** or **P (Park)** position and the vehicle is driven at speeds of approximately 5 mph (8 km/h) or less.

# DRIVING FEATURES

- If the MOD system detects moving objects, a yellow frame will be displayed on the camera image.
- When the following is displayed:
  - Blue MOD icon **4**; the system is active.
  - Gray MOD icon; the system is not active.
  - No MOD icon; the system is off.
- The MOD system will not operate if the trunk is open.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems"** section of your Owner's Manual.

## DRIVE MODE SELECTOR (if so equipped)

### STANDARD

- Normal drive mode is recommended for normal, everyday driving and is the default mode of your vehicle.

### ECO

- ECO drive mode is recommended to help maximize fuel economy. Performance may be reduced.
  - Push the Drive Mode selector **1** to select ECO mode to activate.
  - The ECO mode indicator light will illuminate in the vehicle information display.

### SPORT

- Sport drive mode is recommended for an enhanced performance feel. Fuel economy may be reduced.
  - Press the Drive Mode selector **1** to select SPORT mode from the list in the vehicle information display and an indicator light appears.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Starting and driving"** section of your Owner's Manual.

 




# DRIVING FEATURES

## INTELLIGENT DRIVER ALERTNESS (I-DA)

- When Driver Alertness **1** is selected in the vehicle information display, the system will use an audible and visual warning to suggest that the driver take a break.
- If the system detects that driver attention is decreasing, the **Take a Break?** message **2** appears in the vehicle information display and a chime sounds when the vehicle is driven at speeds above 37 mph (60 km/h).

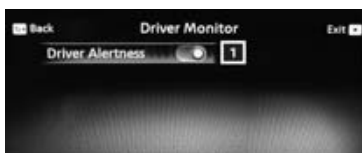

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls" and the "Starting and driving" sections of your Owner's Manual.



# Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](https://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** [www.nissan-techinfo.com](http://www.nissan-techinfo.com)  
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to [www.nissanquickguide.com/2026/sentra](http://www.nissanquickguide.com/2026/sentra) or snap this QR code with an appropriate QR code reader.



For vehicles equipped with remote connectivity, including an SOS button, scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at <https://www.nissanusa.com/owners/manuals-guides.html>. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

