



# QUICK REFERENCE GUIDE

2026 **Z**

# COCKPIT OVERVIEW



# COCKPIT OVERVIEW

- 1** Vehicle Information Display
- 2** Low Tire Pressure Warning Light (!)
- 3** Headlight and Turn Signal Switch
- 4** Wiper and Washer Switch
- 5** Steering Wheel Switches for Audio / Vehicle Information Display / Navigation (if so equipped)
- 6** Intelligent Cruise Control / Bluetooth® / Voice Recognition Switches
- 7** Vehicle Dynamic Control (VDC) Off Switch
- 8** Tilt / Telescopic Steering Column

# INSTRUMENT PANEL



1

2

3

4

5

6

# INSTRUMENT PANEL

- 1** Audio and Navigation System (if so equipped)
- 2** Heater and Air Conditioner (automatic)
- 3** USB Connection Port Interface
- 4** Passenger Airbag Status Light
- 5** Drive Mode Selector (if so equipped)
- 6** Electronic Shift Lever (if so equipped)

# TABLE OF CONTENTS

## GETTING STARTED

|                                                                        |    |
|------------------------------------------------------------------------|----|
| Intelligent Key® System .....                                          | 3  |
| Power Seat With Manual Seat Adjustments (if so equipped) .....         | 4  |
| Manual Seat Adjustments (if so equipped) .....                         | 4  |
| Power Outside Mirror Control Switch .....                              | 5  |
| Electronic Shift Lever (if so equipped) .....                          | 5  |
| HomeLink® Universal Transceiver (if so equipped) .....                 | 6  |
| Automatic Heater And Air Conditioner .....                             | 7  |
| Headlight Control Switch .....                                         | 7  |
| Wiper And Washer Switch .....                                          | 8  |
| Tire Pressure Monitoring System (TPMS) With Easy-Fill Tire Alert ..... | 9  |
| Rear Hatch Release .....                                               | 10 |
| Power Windows Automatic Adjusting Function .....                       | 10 |
| Starting/Stopping The Engine .....                                     | 11 |
| Loose Fuel Cap .....                                                   | 11 |
| Fuel-Filler Door .....                                                 | 11 |
| Vehicle Information Display .....                                      | 12 |

## AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

|                                                                     |    |
|---------------------------------------------------------------------|----|
| System Updates .....                                                | 13 |
| Clock Set/Adjustment .....                                          | 14 |
| USB Connection Port Interface .....                                 | 15 |
| Bluetooth® Hands-Free Phone System .....                            | 15 |
| FM/AM/SiriusXM® Radio .....                                         | 17 |
| Apple Carplay® .....                                                | 18 |
| Android Auto™ .....                                                 | 19 |
| Navigation System (if so equipped) .....                            | 20 |
| NissanConnect® Services Powered by SiriusXM® (if so equipped) ..... | 21 |
| SiriusXM® Travel Link and SiriusXM® Traffic (if so equipped) .....  | 22 |
| Wi-Fi (if so equipped) .....                                        | 23 |
| Hands-Free Text Messaging Assistant .....                           | 23 |
| Amazon Alexa (if so equipped) .....                                 | 24 |
| Bluetooth® Streaming Audio .....                                    | 25 |



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
  - Always wear your seat belt.
  - Supplemental air bags do not replace proper seat belt usage.
  - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
  - Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual and your NissanConnect® Manual.

# TABLE OF CONTENTS

## DRIVING FEATURES

|                                                                         |    |
|-------------------------------------------------------------------------|----|
| Forward Driving Aid Sensors.....                                        | 26 |
| Blind Spot Warning (BSW).....                                           | 26 |
| Intelligent Cruise Control (ICC).....                                   | 27 |
| Automatic Emergency Braking (AEB) With Pedestrian Detection System..... | 28 |
| Drive Mode Selector (if so equipped) .....                              | 28 |
| Rearview Monitor .....                                                  | 29 |
| Lane Departure Warning (LDW).....                                       | 29 |
| Intelligent Forward Collision Warning (I-FCW) .....                     | 30 |
| Rear Cross Traffic Alert (RCTA).....                                    | 30 |
| Front And Rear Sonar System .....                                       | 30 |



Additional information about your vehicle is also available in your Owner's Manual, NissanConnect® Manual and at [www.NissanUSA.com](http://www.NissanUSA.com).



Please see your Owner's Manual for important safety information and system operation limitations.

- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

 
 
For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual and your NissanConnect® Manual.

# GETTING STARTED

## INTELLIGENT KEY® SYSTEM

The Intelligent Key® system allows you to lock or unlock your vehicle, open your rear hatch and start the engine. It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **1** or the rear hatch request switch once or press the  button **2** on the Intelligent Key.
- To unlock the vehicle, perform one of the following procedures:
  - Push either door handle request switch **1** or the rear hatch request switch once to unlock all of the doors, or
  - Press the  button **3** on the key fob to unlock the driver's side door.
  - Press the  button **3** again; all other doors will unlock.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **4** for more than one second. Once activated, the panic alarm and headlights will stay on for a period of time.

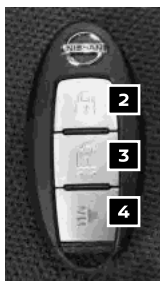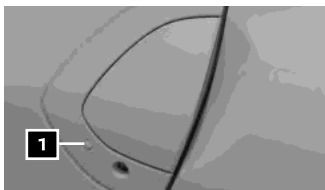

### INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
  1. Push the park button to shift to the **P (Park)** position (for automatic transmission model) or the shift lever to the **N (Neutral)** position (for manual transmission model).
  2. Firmly apply the foot brake.
  3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
  4. Push the ignition switch while depressing the brake pedal within 10 seconds after the chime sounds. The engine will start.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Pre-driving checks and adjustments (section 3)" and the "Starting and driving (section 5)" of your Owner's Manual.



## POWER SEAT WITH MANUAL SEAT ADJUSTMENTS (if so equipped)

- To adjust the angle of the seatback, push the recline switch (if so equipped) **1** forward or backward.
- To slide the seat forward or backward, push the switch **2** forward or backward.



### MANUAL SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion to the desired position, turn either dial **3**.



### MANUAL LUMBAR SUPPORT (if so equipped for driver's seat)

- The driver's seat lumbar support lever **4** is located on the inboard side of the driver's seat. To adjust the lumbar support, move the lever up or down.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

## MANUAL SEAT ADJUSTMENTS (if so equipped)

### SEAT SLIDE

- Pull the lever **1** up while you slide the seat forward or backward to the desired position. Release the lever to lock the seat in position.



### SEAT RECLINING

- Type A (if so equipped):
  - To recline the seatback, pull the lever **2** up and lean back. To bring the seatback forward again, pull the lever **2** and move your body forward.
- Type B (if so equipped):
  - To recline the seatback, turn the adjusting dial **3** toward the rear of the vehicle and lean back. To bring the seatback forward, turn the adjusting dial **3** toward the front of the vehicle and lean your body forward.



### SEAT LIFTER (if so equipped for driver's seat)

- To adjust the angle and height of the seat cushion to the desired position, turn either dial **4**.

### THIGH SUPPORT (if so equipped for driver's seat)

- Pull up and hold the lever **5** to extend the front portion of the seat to the desired position.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Safety – Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

# GETTING STARTED

## POWER OUTSIDE MIRROR CONTROL SWITCH

- To select the right or left side mirror, turn the control switch **1** right or left.
- To adjust the mirror angle, move the control switch **1** up, down, right or left.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## ELECTRONIC SHIFT LEVER (if so equipped)

- The electronic shift lever will return to a home position after each operation. Successful gear selection is not indicated by the physical position of the shift lever. Instead, successful gear selection is indicated by gear position indicators on the shift lever and in the meter display.
- Before shifting, ensure that the engine is running and the brake is applied.

To shift to **R (Reverse)**:

- Press the shift lever button **1** and slide the lever forward fully. The **R** on the shift lever will illuminate, and **R** will be displayed in the meter display.

To shift to **D (Drive)**:

- Slide the lever rearward fully. The **D** on the shift lever will illuminate, and **D** will be displayed in the meter display.

To shift to **N (Neutral)**:

- Slide the lever forward or rearward partially until you feel a slight increase in effort. Hold this position for approximately 0.5 seconds. The **N** on the shift lever will illuminate, and **N** will be displayed in the meter display.
  - **Neutral hold mode function** enables you to turn off the engine with the vehicle in the **N (Neutral)** position. While this function is activated, the vehicle can be moved by pushing with hand even if the ignition switch is in the OFF position.

 
To shift to **P (Park)**:

- Press the **P (Park)** button **2** on the shift lever.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



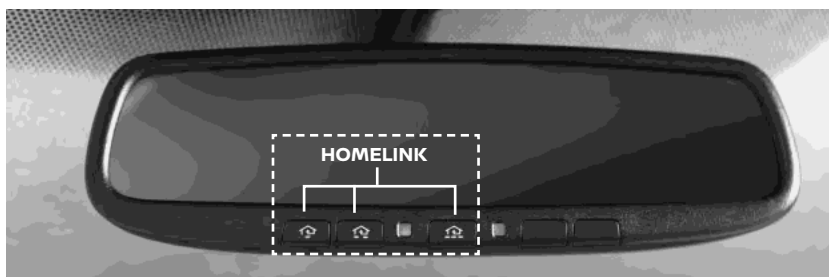

## HOMELINK® UNIVERSAL TRANSCEIVER (if so equipped)

- The HomeLink® Universal Transceiver can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.
- To program the HomeLink® Universal Transceiver:
  - Position the handheld transceiver 1-3 in (2-8 cm) away from the HomeLink surface, keeping the HomeLink indicator light in view.
  - Press and hold the desired HomeLink button and the handheld transmitter button simultaneously until the HomeLink indicator light flashes slowly and then rapidly.
  - Both buttons may be released when the indicator light flashes rapidly.
- To verify the programming is complete, press and hold the HomeLink button and observe the indicator light:
  - A solid, continuous light indicates the programming is complete and the HomeLink button will activate your device.
  - A blinking light that turns to a solid, continuous light after 2 seconds indicates additional steps are required to complete the programming.
- An additional person may make the remaining steps easier. To complete the programming process:
  - At the receiver of the device that you are programming to the HomeLink system, press and release the “learn” or “smart” button (the name may vary by manufacturer, but it is usually located near where the hanging antenna wire is attached to the unit). You have approximately 30 seconds to initiate the following step.
  - Press and hold the programmed HomeLink button for 2 seconds and release.
- You may have to repeat the previous two steps up to three times to complete the programming process. HomeLink should now activate your device.

To view a detailed instructional video, go to [www.nissanquickguide.com/2025/z](http://www.nissanquickguide.com/2025/z) or snap the QR code on the back cover of this publication with an appropriate QR code reader and search for “Homelink” or “Garage Door”.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner's Manual, the HomeLink® website at [www.homelink.com](http://www.homelink.com) or call 1-800-355-3515.

# GETTING STARTED



## AUTOMATIC HEATER AND AIR CONDITIONER

### 1 A/C BUTTON/FAN SPEED CONTROL DIAL

- Press the **A/C** button to turn the A/C on or off.
- Turn the  fan speed control dial to the left to decrease fan speed or to the right to increase fan speed.

### 2 AIR INTAKE CONTROL BUTTON/TEMPERATURE CONTROL DIAL

- Push the air intake control button to recirculate interior air inside the vehicle. The indicator light on the right side will illuminate. Push the button again to draw outside air into the passenger cabin. The indicator light on the left side will illuminate.
- Turn the temperature control dial to set the desired temperature.

### 3 REAR DEFROSTER BUTTON/AIR FLOW CONTROL DIAL

- Push the rear defroster  button to defrost the rear window and outside mirrors (if so equipped).
- Turning the air flow control dial selects the air outlet to:
  -  Air flows from the center and side vents.
  -  Air flows from the center, side and foot vents.
  -  Air flows mainly from the foot vents.
  -  Air flows from the front defroster and foot vents.
  -  Air flows mainly from defroster outlets.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

 
## HEADLIGHT CONTROL SWITCH

### HEADLIGHT CONTROL

- Turn the headlight control switch to the  position **1** to turn on the front parking, side marker, tail, license plate, daytime running lights and instrument panel lights. Turn the switch to the  position **2** to turn on the headlights.

## INTELLIGENT AUTO HEADLIGHT SYSTEM

- The Intelligent Auto Headlight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all the doors are closed.
- To activate the Intelligent Auto Headlight system, turn the headlight control switch to the **AUTO** position **3** or the  position then push the ignition switch to **ON**. To deactivate the Intelligent Auto Headlight system, turn the headlight control switch to the **OFF** position, **1** or  position **2**.

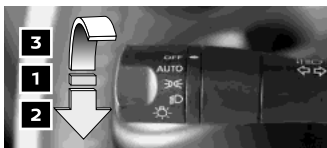

## HIGH BEAM SELECT

- To select the high beam, push the lever forward **4** while the switch is in the  position. Pull it back to select the low beam.
- Pulling the lever toward you will flash the headlight high beam even when the headlight switch is in the OFF position.



## LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on road and traffic conditions.

 
**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

## WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:

- 1** Mist (**MIST**) - One sweep operation of the front wipers.
- 2** Variable Intermittent (**INT**) - Move the lever down to the **INT** position and then rotate the control ring **3** to increase or decrease wiper speed.
- 4** Low (**LO**) - Front wipers operate at a continuous low speed.

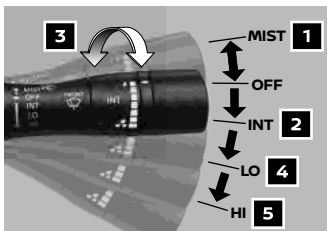


# GETTING STARTED

- 5** High (HI) - Front wipers operate at a continuous high speed.
- 6** Washer  - Pull the lever toward you to activate the washer. The wipers will operate several times.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

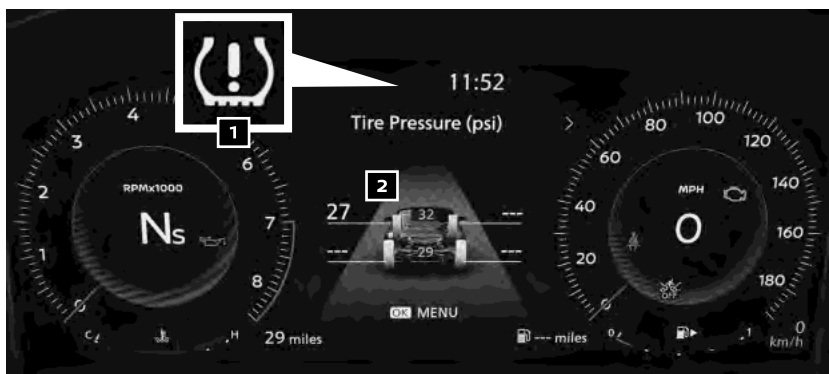

## TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT

- The low tire pressure warning light **1** and a **Tire Pressure Low - Add Air** warning will illuminate when one or more tires are low in pressure and air is needed.
- Current tire pressure of all tires **2** (except the spare) may be visible on the Tire Pressure screen within the vehicle information display when the vehicle is driven at speeds above 16 mph (25 km/h).
- Adjust the tire pressure to the recommended tire pressure shown on the Tire and Loading Information label located in the driver's door opening.
- When the low tire pressure warning light **1** flashes for approximately 1 minute and then remains on, the TPMS is not functioning properly. It is recommended that you have the system checked by a Nissan dealer.
- Please check and adjust the air pressure of the tires when the tires are cold during the daily inspection.
- The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature.
- Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate.

To view detailed instructional videos regarding these and other features, please go to [www.nissanquickguide.com](http://www.nissanquickguide.com)

## EASY-FILL TIRE ALERT

- When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure. To use the Easy-Fill Tire Alert system:
  1. Apply the parking brake and push the park button to shift to the **P (Park)** position (for automatic transmission models) or the shift lever to the **N (Neutral)** position (for manual transmission models).
  2. Place the ignition switch in the ON position. Do not start the engine.
  3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights start flashing.
  4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
  5. Repeat this procedure for any additional under-inflated tires.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Instruments and controls (section 2)**", the "**Starting and driving (section 5)**", the "**In case of emergency (section 6)**", the "**Do-it-yourself (section 8)**" and the "**Technical and consumer information (section 10)**" of your Owner's Manual.

---

## REAR HATCH RELEASE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).
- Release the rear hatch by pulling the rear hatch release switch on the center console **1** or on the rear hatch **2**.
- To close the rear hatch, push it down securely.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

---

## POWER WINDOWS AUTOMATIC ADJUSTING FUNCTION

- When the front doors are opened, the windows automatically lower slightly to avoid contact between the windows and the side roof panels.
- If your vehicle's battery has been disconnected, the power window automatic adjusting function will not operate.
- Refer to your Owner's Manual for information on how to initialize your power window system.
- If the power window functions do not operate properly after initializing the system, have your vehicle checked. It is recommended you visit a Nissan dealer for this service.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Instruments and controls (section 2)**" of your Owner's Manual.

# GETTING STARTED

## STARTING/STOPPING THE ENGINE

- It is important to make sure the Nissan Intelligent Key® is with you (that is, in your pocket or purse).

**AUTOMATIC TRANSMISSION** (if so equipped)

- Make sure the vehicle is in the **P (Park)** position.
- Depress the brake pedal.
- Push the ignition switch to start the engine.
  - If the brake pedal is not depressed, pushing the ignition switch once will activate the **ACC** mode.

**MANUAL TRANSMISSION** (if so equipped)

- Make sure the vehicle is in the **N (Neutral)** position.
- Depress the clutch pedal to the floor.
- Push the ignition switch to start the engine.
  - If the clutch pedal is not depressed, pushing the ignition switch once will activate the **ACC** mode.

**TURNING THE ENGINE OFF**

- For an automatic transmission, push the park button to shift to the **P (Park)** position and push the ignition switch to turn the engine off.
- For a manual transmission, move the shift lever to the **N (Neutral)** position and push the ignition switch to turn the engine off.

 
**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Starting and driving (section 5)**" of your Owner's Manual.



## LOOSE FUEL CAP

- A **LOOSE FUEL CAP** warning message will appear in the vehicle information display when the fuel-filler cap is not tightened correctly.
- To turn off the warning, perform the following steps:
  1. Remove and install the fuel-filler cap as soon as possible.
  2. Tighten the fuel-filler cap until it clicks.
  3. Push the scroll dial on the steering wheel **1** for about one second to turn off the **LOOSE FUEL CAP** warning after tightening the fuel-filler cap.

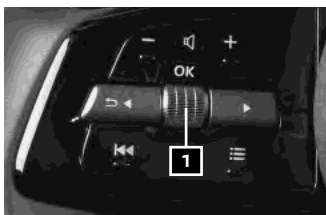

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Instruments and controls (section 2)**" and the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.

## FUEL-FILLER DOOR

- The fuel-filler door is located on the passenger's side of the vehicle.
- Unlock the fuel-filler door using one of the following operations, then push and release the left side of the door to open:
  - Push the door handle request switch while carrying the Nissan Intelligent Key® with you.



- Press the **i** button on the Intelligent Key.
- Push the power door lock switch to the **i** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.



## VEHICLE INFORMATION DISPLAY

- Use the scroll dial **1** to navigate through the following modes on the vehicle information display **2**:
  - **Home** - Displays vehicle speed, navigation (if so equipped) and audio.
  - **Drive Computer** - Displays the average fuel consumption, average speed, trip odometer, and elapsed time.
  - **Fuel Economy display** - Displays the current fuel consumption and the average fuel consumption.
  - **Tire Pressures** - Displays the pressure of all four tires while the vehicle is driven.
  - **Compass** - Displays the heading direction of the vehicle.
  - **Navigation** (if so equipped) - When the route guidance is set in the navigation system, this item shows the navigation route information.
  - **Audio** - Displays the status of the audio information.
  - **Driver Assistance** - Displays the operating condition for the Automatic Emergency Braking (AEB) with Pedestrian Detection system, the Intelligent Forward Collision Warning (I-FCW), the Lane Departure Warning (LDW), and the Blind Spot Warning (BSW).
  - **Settings** - Displays the available settings that can be changed.



### CHANGING THE METER SCREEN VIEW

The meter screen view can be changed to expand the vehicle information display area. To change the meter screen view:

1. Push the shortcut menu button **3** on the steering wheel.
2. "Shortcut Menu" will appear on the vehicle information display.
3. Select "Change Meter View" by rotating the scroll dial **1** and push it to make a selection.
4. Select "Sport, Normal, or Enhanced" by rotating the scroll dial and push it to make a selection.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## SYSTEM UPDATES

Your vehicle software can be updated with over-the-air updates. If so equipped, when new software is available, a message **1** will be shown. Choose one of the following prompts on the screen:

- **Yes** - Triggers the Software update to start in the background. You can continue to use the system during the Software update.
- **Later** - Skips the Software update, the pop-up message is hidden and will be shown again in the next power cycle.

You can trigger the software update manually in the event that "Later" was unintentionally pressed.

- To manually update the software to the latest version:

1. Press the **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information".
3. Touch "Software Update".
4. Touch "Start Software Update" and then "Download".

- When the message **2** appears, turn the vehicle off for at least 20 minutes. The update will be applied on the next power on cycle.

Your vehicle software can also be updated through a secure Wi-Fi connection. Only 2.4

GHz Wi-Fi networks are able to be connected. It is recommended that you have a strong signal strength. Connect your vehicle in a well-ventilated area to prevent exposure to hazardous fumes.

 
 
- To connect to your Wi-Fi network:

1. Press the **MENU** button on the control panel.
2. Touch "Connections" and then touch "Wi-Fi".
3. Touch the  icon and then touch "Wi-Fi" to turn it on.
4. Touch , and then enter your Wi-Fi network name and password when prompted. A message will appear under the network name when your vehicle is successfully connected.


- To manually update your software using Wi-Fi:

1. Press the **MENU** button on the control panel.
2. Touch "Info" and then touch "System Information".
3. Touch "Software Update", "Start Software Update" and then touch "Download".


- When the message **2** appears, turn the vehicle off for at least 20 minutes. When the vehicle is restarted a message **3** will appear verifying that the update is complete.

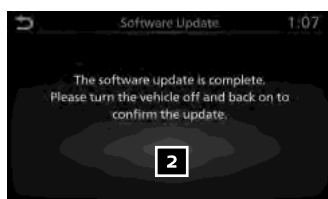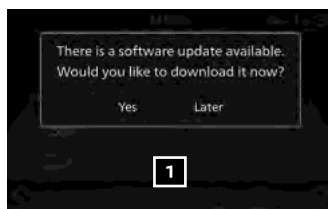

 - To turn on automatic updates of map software:
  1. Press the **MENU** button on the control panel.
  2. Touch "Info" and then touch "System Information".
  3. Touch "Map Update" and then touch "Map Update Settings".
  4. Select an area to be updated and touch "Start Updating".

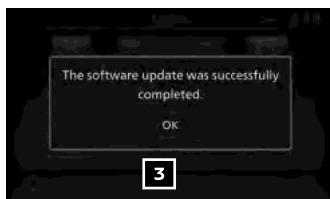

 - When a map update is available for the selected region, a pop-up message 4 will be shown on the screen.

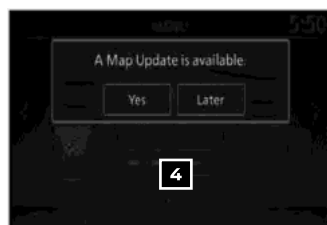


- Touch "Yes" to start the map download and update or "Later" to see the pop-up again in the next power cycle.
- To manually update the map software via Wi-Fi:
  1. Connect the vehicle to an available Wi-Fi network.
  2. Press the **MENU** button on the control panel.
  3. Touch "Info" and then touch "System Information".
  4. Touch "Map Update" and then touch "Update via Wi-Fi".
  5. Select an area to be updated and touch "Start Updating".

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

 For more information, refer to the "Getting started (section 2)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.

## CLOCK SET/ADJUSTMENT

- To adjust the time and the appearance of the clock on the display:
  1. Touch  Settings 1 on the Launch Bar.
  2. Touch the "Clock" key.
  3. Select "Set Clock Manually" 2 to manually adjust the time displayed on the clock.
    - "Set Clock Manually" is only available if the clock mode is changed to "manual".
- Press the  button 3 to return to the previous screen.

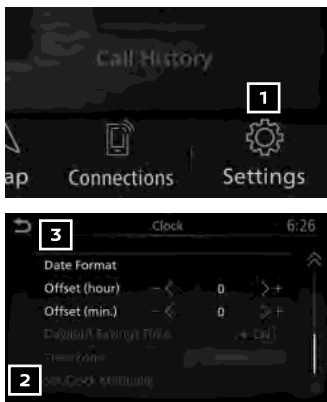

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Getting started (section 2)" of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## USB CONNECTION PORT INTERFACE

- The USB connection ports **1** (USB Type-C/USB Type-A) are located beneath the climate controls.
- When a compatible USB port device is plugged into the USB port compatible audio and video files stored on the device can be played through the vehicle's audio system and front display.



For best results, it is recommended to use the manufacturer cables, which are sold separately. A USB Type-A to USB Type-C adapter (or vice versa) can also be purchased separately; however, results may vary.

 
**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual and the "Audio system (section 3)" of your NissanConnect® Owner's Manual.

---


## BLUETOOTH® HANDS-FREE PHONE SYSTEM\*

- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.
- For information regarding connecting your cellular phone, refer to the appropriate "Bluetooth® System" section within this guide.

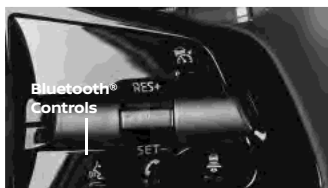


### SYSTEM OPERATING TIPS

 - Press the  button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the  button on the steering wheel, and after the tone, say "Call Redial".
- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing HVAC vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To exit the Voice Recognition System, push and hold the  on the steering wheel.
- Voice commands can be used to operate various Bluetooth® system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.

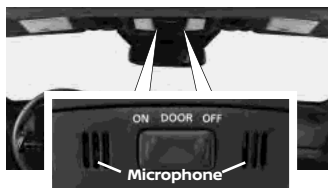

## CONNECTING PROCEDURE

 1. Touch the Phone key **1** on the Launch Bar.
2. Touch the "Connections" key **2**.
3. Touch the "Devices" key **3** and touch "Add New". A message is displayed.
4. Operate as guided by the system. (Operations may differ depending on the device).

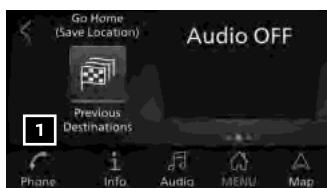

## VEHICLE PHONEBOOK

To access the vehicle phonebook:

1. Touch the Phone key **1** on the Launch Bar.
2. Touch the "Phonebook" key **4**.
3. Choose the desired entry from the displayed list.



 
## MAKING A CALL

1. Touch the Phone key **1** on the Launch Bar.
2. Select one of the options to make a call.



## RECEIVING/ENDING A CALL

- To accept the incoming call, either:
  - Press the  button on the steering wheel, or
  - Touch the Answer key on the screen.
- To End a call, either:
  - Press the  button on the steering wheel, or
  - Touch the  Hang Up key on the screen.
- To Reject a call, either:
  - Press and hold the  button on the steering wheel, or
  - Touch the  Decline key on the screen.

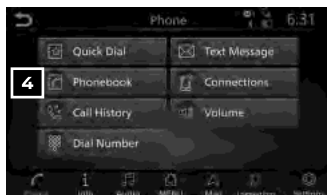


\* Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

 For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual and the "Hands-free phone (section 4)" of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

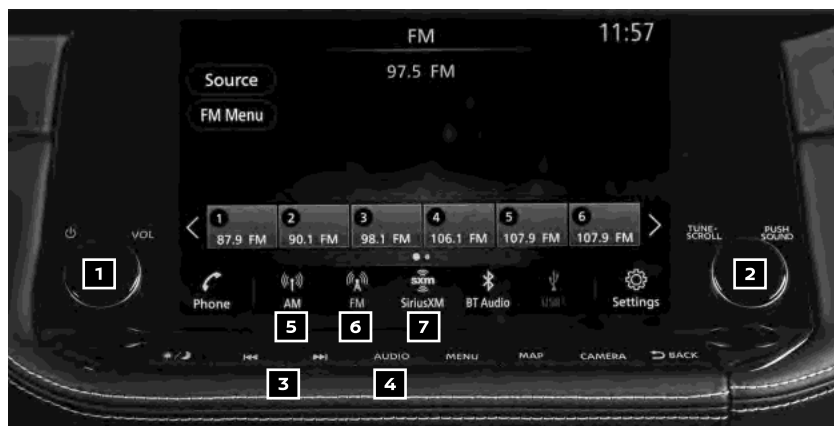

## FM/AM/SiriusXM® RADIO

### 1 POWER /VOL

- Press the **POWER**  button to turn the system on or off.
- Turn the **VOLUME** control dial to the right or left to increase or decrease the volume.

### 2 TUNE-SCROLL DIAL/PUSH SOUND

- Press the **PUSH SOUND** button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE-SCROLL** dial left or right.

### 3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons  or .
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons  or .

### 4 AUDIO BUTTON

 
- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by touching the **AM** key **5**, **FM** key **6** or **SiriusXM** key **7** then tune to the desired FM, AM or satellite radio station. Audio source icon layout in the launch bar is customizable, and your vehicle display may vary.
- Next touch and hold the desired station select key (**1-12**). The channel indicator will appear on the display and the programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then touch the corresponding station select key (**1-12**).

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Getting started (section 2)", the "Audio system (section 3)" and the "Information (section 5)" of your NissanConnect® Owner's Manual.

## APPLE CARPLAY®

- Apple CarPlay® lets you use your compatible iPhone® to make calls, listen to music, send and receive messages, get directions and use iPhone apps directly from your vehicle display.
- Connect your compatible iPhone to the USB connection port located beneath the climate controls or wirelessly via Bluetooth® (if so equipped).
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch “Yes” then “OK” to use Apple CarPlay.
  - After the iPhone is connected, the Apple CarPlay home screen will appear, and the iPhone functions displayed on the screen can be operated by the in-vehicle system.
- While connected to Apple CarPlay, Siri® operation can be accessed.
- There are two ways to start a Siri session:
  1. Press and hold the  button on the steering wheel.
  2. Touch and hold the  or  key **1** on the lower left corner of the Apple CarPlay screen.
- Press the  button on the steering wheel or touch the  or  key **1** on the lower left corner of the Apple CarPlay screen to end the Siri session.
- Keep the interior of the vehicle as quiet as possible. Close the windows to eliminate the surrounding noises (traffic noises, vibration sounds, etc.) and point the heater and air conditioner vents away from the ceiling, which may prevent the system from recognizing the voice commands correctly.
- Some Siri functions may not be available during driving.
- For functions that can be used with Siri, please refer to the Apple® website.
- To exit the Apple CarPlay screen, press the **MENU** button on the launch bar.
- To return to the Apple CarPlay screen from the main menu:
  - Touch the  Apple CarPlay key **2**, or
  - Touch the  Info key **3** on the Launch Bar, touch the “Smartphone Connection” key, and then select the “Apple CarPlay” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Apple CarPlay is active.

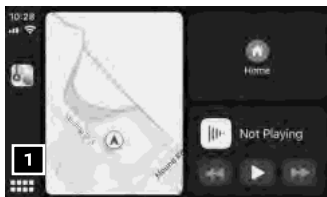

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## ANDROID AUTO™

- Android Auto™ connects with your compatible Android® phone to control your phone, apps and navigation directly from your vehicle display.

### INITIAL SETUP

- Download the Android Auto app from the Google Play™ store to your compatible Android phone.
- Launch the app from your Android phone and follow the directions for setting up the application. Several permissions will need to be given to the app for Android Auto to fully function on your in-vehicle system.

### USING ANDROID AUTO

 
- To connect your Android phone to the in-vehicle system, you must connect a USB cable to the USB connection port located beneath the climate controls.
  - Depending on the setting, the startup information screen will appear on the center display.
  - Touch “Yes” then “OK” to use Android Auto.
  - After the cellular phone is connected, the Android Auto home screen will appear and can be operated by the in-vehicle system.
- When connected to Android Auto, Google Assistant™ operation can be accessed. There are three ways to start Google Assistant™:
  1. Press and hold the  button on the steering wheel until a beep is heard.
  2. Touch the  key **1** on the launch bar.
  3. Say “OK Google” (requires appropriate permissions enabled via cellular phone).
- To return to the Android Auto home screen after operation, touch the  key **2** on the Launch Bar.
- To exit the Android Auto screen, touch the  key **2** on the Launch Bar and then touch the exit key.
- To return to the Android Auto home screen from the main menu:
  - Touch the  key **3** on the Launch Bar, or
  - Touch the  Info key **4** on the Launch Bar, touch the “Smartphone Connection” key, and then touch the “Android Auto” key.
- Nissan Phone menu and Nissan Voice Recognition cellular phone commands will not be available when Android Auto is active.
- If you have difficulties with connection or performance, try a different USB cable.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Getting started (section 2)**” and the “**Information (section 5)**” of your NissanConnect® Owner's Manual.



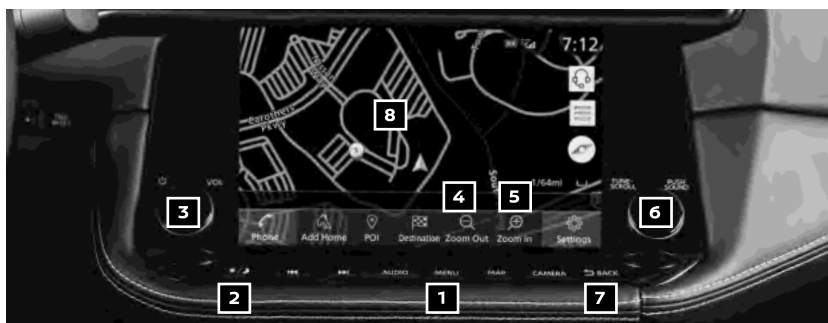

## NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from your current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route. Features such as Premium Traffic can give detailed traffic information.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Navigation (if so equipped) (section 6)" of your NissanConnect® Owner's Manual.

- 1 MENU button** – Press this button, then touch "Map" on the Launch Bar to get to the Navigation screen.
- 2  button** – Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE-SCROLL** knob. Press and hold to turn the display off. Press again to turn the display on.
- 3 VOLUME control knob** – Turn right to increase the volume or left to decrease the volume.
- 4  key** – Touch to zoom the map out.
- 5  key** – Touch to zoom the map in.
- 6 TUNE-SCROLL knob** – Turn to scroll through the items in a list. Press to select a menu item.
- 7  BACK button** – Press to return to the previous screen.
- 8 Touch-screen display** – Create routes to destinations, observe traffic, see retail locations, and view current location.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Navigation (section 6)" of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## NISSANCONNECT® SERVICES POWERED by SiriusXM® (if so equipped)

NissanConnect® Services is a collection of security and convenience services that make it easy to access information, stay connected to your vehicle, and get assistance when you need it.

- To enroll in NissanConnect Services, create an account or log into your Nissan Owner Portal with your Vehicle Identification Number (VIN). Under the NissanConnect Services tab, select the red button next to Manage Subscription. Follow the prompts to enroll in NissanConnect Services. Next, download the MyNISSAN® app on your compatible iPhone® or Android smartphone and log into it using your Nissan Owner Portal ID and password.
- For additional information about your NissanConnect® features and services:
  - Consult your vehicle's NissanConnect® Owner's Manual at <https://www.nissanusa.com/owners/ownership/manuals-guides.html>.
  - Visit [www.nissanusa.com/connect/support-faqs](http://www.nissanusa.com/connect/support-faqs) for frequently asked questions.
  - Visit [www.nissanusa.com/connect](http://www.nissanusa.com/connect), scan the QR code on the back of this book or call **1-855-426-6628**.
- Automatic Collision Notification - A service that generates an automatic connection between the vehicle and the Emergency Response Center when the vehicle has been involved in an accident that was severe enough to deploy the air bags.
- Connection to Roadside Assistance - Allows you to contact a Roadside Response Specialist who can dispatch roadside assistance in non-emergency situations. Connection to Roadside Assistance can be accessed by touching the headset key **1** on the map screen.
- Stolen Vehicle Locator - A service that works in coordination with law enforcement agencies to assist in the recovery of a stolen vehicle.
- Remote Door Lock/Unlock - For use when you forget to lock your vehicle or if you need to open it and do not have the keys. To use this feature, log into the MyNISSAN® app or website or contact a NissanConnect Services Response Specialist.
- Remote Engine Start - Start your engine remotely using the MyNISSAN® app or website.
- Alarm Notification - This system will notify you when the factory-installed vehicle alarm system has been activated.
- Maintenance Alert - Receive notification via a selected method of a vehicle system malfunction that triggers instrument panel warning lights.
- Connected Search - Select "Connected Search" from the "Destination" menu on the vehicle's Navigation System to conduct a Point of Interest (POI) search within a certain distance of the vehicle's location.
- Valet Alert - Use Valet Alert to set up a radius around your vehicle. Activate alerts via the MyNISSAN® app or website.



- **Curfew Alert** - Specify curfew limits via the MyNISSAN® app or website and will be notified via a selected method if curfew is violated.
- **Journey Planner** - With which you can send a route with a destination and up to five waypoints directly to the vehicle.
- **Boundary Alert** - A feature that allows you to monitor the movement of your vehicle in and out of specified regions you have set on the Monitoring section of the NissanConnect Services web portal or companion app.
- **Speed Alert** - Which sends you alerts when your vehicle speed exceeds a threshold you have set on the web portal or companion app.



To access these features in your vehicle:

- Press the **MENU** button **2** on the control panel.
- Touch the **i** Info key.
- Touch the "NissanConnect Services" key **3**.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

## SiriusXM® TRAVEL LINK and SiriusXM® TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM® Travel Link and SiriusXM® Traffic capabilities.
- Press the **INFO** key on the Launch Bar to access SiriusXM Travel Link and SiriusXM Traffic.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings, sports scores and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event. Incidents on the route are automatically displayed as they are approached.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Information (section 5)"** of your NissanConnect® Owner's Manual.

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## WI-FI (if so equipped)

A Wi-Fi connection can be made to communicate by using an available Wi-Fi network near the vehicle or tethering function of smartphone, etc. Wi-Fi connection is useful when updating maps or for online search. There must be a secure Wi-Fi network for the vehicle to connect.

### TO CONNECT TO A WI-FI NETWORK:

- To use the Wi-Fi connection for the first time, the following connecting procedures are required.
  1. Touch **MENU** key on the Launch Bar.
  2. Touch the “Connections” key.
  3. Touch the “Wi-Fi” key **1**.
  4. Touch the name of the device you wish to connect.
  5. Enter a password and touch the “OK” key.  
The device will be connected.
- The connected Wi-Fi device will be added to the list on the connection screen. If a listed device is in a status capable of making Wi-Fi connection, touching the device name on the list will start the connection.



### TO CHANGE THE WI-FI SETTINGS:

1. Touch the MENU key on the Launch Bar.
2. Touch the “Connections” key.
3. Touch the “Wi-Fi” key **1**.
4. Touch the  key **2**.
5. Touch a preferred item.



**Please see your Owner's Manual for important safety**

**information, system limitations, and additional operating and feature information.**

For more information, refer to the “**Getting started (section 2)**” of your NissanConnect® Owner's Manual.

## HANDS-FREE TEXT MESSAGING ASSISTANT

- This text messaging feature allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth® Hands-free Phone System.
- Text messages have the option of being read aloud.
- Text messages can be created manually when the vehicle is not in motion.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth® pairing. For some cellular phones, you may need to enable “Notifications” in the cellular phone's Bluetooth® menu for text messages to appear on the touch-screen display. For more detailed information and instructions, refer to your cellular phone's Owner's Manual.



To view detailed instructional videos regarding these and other features, please go to [www.nissanquickguide.com](http://www.nissanquickguide.com)

- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth) for compatibility information as well as your device's Owner's Manual.

\*Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Hands-free phone (section 4)"** of your NissanConnect® Owner's Manual.

---

## AMAZON ALEXA (if so equipped)

- Alexa Built-in can be used as a Virtual Personal Assistant. You can log in to your Amazon account and use Alexa like you would with an Amazon speaker device.
- To get to the Amazon Alexa screen:
  1. From the Menu screen, press the Info key **1**.
  2. Touch the Downloaded Apps key **2**.
  3. Touch the "Alexa" key **3**.



\*Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the **"Voice recognition (section 7)"** of your NissanConnect® Manual or [www.nissanusa.com/connect/features-apps/nissanconnect-services-amazon-alexa-skill](http://www.nissanusa.com/connect/features-apps/nissanconnect-services-amazon-alexa-skill).

# AUDIO, NAVIGATION AND BLUETOOTH® SYSTEMS

## BLUETOOTH® STREAMING AUDIO

- If you have a compatible Bluetooth® device with streaming audio (A2DP and AVRCP profiles), you can set up the wireless connection between your Bluetooth® device and your vehicle's audio system. This connection allows you to listen to audio from the Bluetooth® device using your vehicle's speakers.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.\*
- To use your connected Bluetooth® device to stream audio, it will need to be connected as an audio device. The following procedure will initially connect a Bluetooth® device as an audio player and allow you to switch between devices.
  1. Press the **SETTINGS** button on the control panel and touch the "Connections" key on the display.
  2. Touch the "Add New (X/6) Free" key.
  3. Press the gear icon to search for your device.
  4. Initiate connecting from the device.
- Once your Bluetooth® device has been connected as an audio device:
  - Press the **AUDIO** button on the control panel.
  - Select the "Source" key **1**.
  - Select the "Bluetooth Audio" key.
- Bluetooth® connectivity issues can usually be resolved with a reboot of your cellular phone if you do not regularly turn off your cellular phone. Otherwise, try updating your cellular phone with the latest software.



\*Some jurisdictions prohibit the use of cellular telephones while driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "**Audio system (section 3)**" of your NissanConnect® Owner's Manual or please visit [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth).

 
# DRIVING FEATURES

## FORWARD DRIVING AID SENSORS

- A camera and sensor support the forward driving aids for your vehicle. The camera sensor is located above the inside mirror **1** and the radar sensor is located on the front of the vehicle **2**.
- Forward Driving Aid systems (if so equipped) supported by these sensors include, but are not limited to:
  - Intelligent Cruise Control (ICC)
  - Automatic Emergency Braking (AEB) with Pedestrian Detection
  - Intelligent Forward Collision Warning (I-FCW)
- The "Forward Driving Aids temporarily disabled Front Sensor blocked See Owner's Manual" warning **3** may illuminate if the front radar sensor **2** is obstructed.
- The warning light **4** may illuminate and blink if the front camera sensor **1** is obstructed.
- Front sensor areas may become obstructed due to mud, dirt, ice, and inclement weather (rain, fog, snow, etc).
- If the warning message appears or the warning light illuminates, stop the vehicle in a safe place, park the vehicle, and turn the engine off. Clean the radar sensor areas and restart the engine. This may mean cycling the windshield wipers and turning on the windshield defrost for a few minutes. If the message and light continue to appear after cleaning radar sensor areas, it may mean that forward driving aids are not functioning properly. It is recommended that you have the systems checked by a Nissan dealer.



Forward Driving Aids temporarily disabled  
Front Sensor blocked  
See Owner's Manual **3**

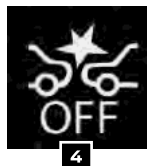

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and Driving (section 5)" of your Owner's Manual.

## BLIND SPOT WARNING (BSW)

The BSW helps to alert the driver when another vehicle moves into the vehicle's detection zone.

- An indicator light located near the outside mirrors **1** will illuminate if the radar sensors detect a vehicle in the detection zone.
- The indicator light will illuminate after the ignition switch is ON and the BSW is enabled. This indicates that the BSW is operational.



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

 
For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

# DRIVING FEATURES

## INTELLIGENT CRUISE CONTROL (ICC)

### VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, push the  switch **1** on the steering wheel for less than 1.5 seconds. The **CRUISE ON/OFF** indicator light **2** will illuminate.
- Accelerate to the desired speed.
- Push down on the **SET-** switch **3** on the steering wheel and release it. Intelligent Cruise Control will be set to the desired speed.
- Press the distance button **4** on the steering wheel repeatedly to change the set distance between long, middle and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **5** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance and set vehicle speed indicator lights will illuminate **6** in set mode.
- To reset at a faster cruising speed, push and hold the **RES+** switch **7** on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **SET-** switch **3** on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **8** on the steering wheel or tap the brake pedal. The set vehicle speed indicator **5** will extinguish.
- To turn off Intelligent Cruise Control, press the  button **1** on the steering wheel. The **CRUISE ON/OFF** indicator light **2** in the instrument panel will extinguish.

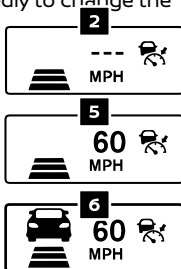

### CONVENTIONAL (FIXED SPEED) CRUISE CONTROL MODE

- To choose the conventional (fixed speed) cruise control mode, push the **CRUISE ON/OFF** switch **1** for longer than approximately 1.5 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.



## AUTOMATIC EMERGENCY BRAKING (AEB) WITH PEDESTRIAN DETECTION SYSTEM

- The AEB with Pedestrian Detection system can assist the driver when there is a risk of a forward collision with a vehicle or pedestrian ahead in the traveling lane.
- The AEB with Pedestrian Detection system will function when your vehicle is driven at speeds above approximately 3 mph (5 km/h). For the pedestrian detection function, the AEB with Pedestrian Detection system operates at speeds between 6-37 mph (10-60 km/h).
- If a risk of a forward collision is detected, the AEB with Pedestrian Detection system will provide a warning to the driver by flashing the warning (yellow) **1** in the vehicle information display and providing an audible alert.
- If the driver applies the brakes quickly and forcefully after the warning, and the AEB with Pedestrian Detection system detects that there is still the possibility of a forward collision, the system will automatically increase the braking force.
- If the driver does not take action, the AEB with Pedestrian Detection system issues the second visual (flashing) (red and white) **2** and audible warning. In addition, the system applies partial braking.
- If the risk of collision becomes imminent, the AEB with Pedestrian Detection system applies harder braking automatically.
- If the warning light **3** illuminates, blinks, or the "Forward Driving Aids temporarily disabled Front Sensor blocked" message appears, this indicates the camera may be obstructed. Use the wipers and defrost mode to help clear camera obstruction (dirt, condensation, etc).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

## DRIVE MODE SELECTOR (if so equipped)

Drive modes can be selected by using the Drive Mode Selector **1**.

### STANDARD MODE

- This is the standard mode that is most suitable for normal driving. This mode will be selected first each time the ignition switch is placed in the ON position.



### SPORT MODE

- Adjusts the engine and transmission points for a higher response. The setting of the steering system is adjusted to moderately increase steering wheel effort for a sporty feel.

# DRIVING FEATURES

## SPORT+ MODE (if so equipped)

- In addition to the characteristics of the SPORT mode, this mode heightens engine torque and transmission shift points for optimum performance during high-speed driving.

**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

## REARVIEW MONITOR

- When the shift lever is shifted into the **R (Reverse)** position, the monitor display shows a rearward view from the vehicle.
- The colored guidelines on the display screen indicate vehicle width and approximate distances to objects with reference to the vehicle body line:
  - Red 1.5 ft (0.5 m)
  - Yellow 3 ft (1 m)
  - Green 7 ft (2 m)



**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Center display, heater, air conditioner, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

## LANE DEPARTURE WARNING (LDW)

- The Lane Departure Warning system can help alert the driver when the vehicle is traveling too close to either the left or the right side lane marking.
- The system will operate when the vehicle is driven at speeds of approximately 37 mph (60 km/h) and above and only when the lane markings are clearly visible on the road.
- When the vehicle approaches either the left or the right side lane marking, a chime will sound and the LDW indicator **1** on the instrument panel will blink to alert the driver.
- The LDW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

 
 


**Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.**

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

## INTELLIGENT FORWARD COLLISION WARNING (I-FCW)

- The intelligent Forward Collision Warning (I-FCW) system can help alert the driver of sudden braking by the second vehicle traveling ahead of your vehicle in the same lane.
- The I-FCW system operates at speeds above approximately 3 mph (5 km/h).
- If there is a potential risk of a forward collision, the I-FCW system will warn the driver with the vehicle ahead detection indicator light **1** blinking and an audible alert will be heard.
- The I-FCW system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

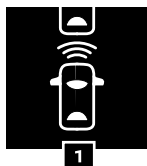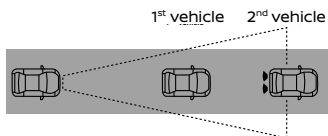

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Starting and driving (section 5)" of your Owner's Manual.

## REAR CROSS TRAFFIC ALERT (RCTA)

- The RCTA system can help alert the driver of an approaching vehicle when the driver is backing out of a parking space.
- When the shift position is in **R (Reverse)** and the vehicle speed is less than approximately 5 mph (8 km/h), the RCTA system is operational.
- If the radar detects an approaching vehicle from either side, the system chimes (once) and the side indicator light flashes on the side the vehicle is approaching from.
- The RCTA system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

## FRONT AND REAR SONAR SYSTEM

The system informs with a visual and audible alert of front obstacles when the shift lever is in the **D (Drive)** position or **N (Neutral)** and both front and rear obstacles when the shift lever is in the **R (Reverse)** position.

- The system may not detect objects at speeds above 6 mph (10 km/h) and may not detect certain angular or moving objects.
- The sonar system detects obstacles up to 3.9 ft (1.2 m) from the bumper with a decreased coverage area at the outer corners of the bumper.
- The Front and Rear Sonar system can be turned on or off through the "Driver Assistance" menu in the vehicle information display.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.



## Helpful Resources

Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- NissanConnect® Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- [www.NissanUSA.com/bluetooth](http://www.NissanUSA.com/bluetooth)
- [www.NissanUSA.com/connect](http://www.NissanUSA.com/connect)
- [www.youtube.com/user/NissanUSA](http://www.youtube.com/user/NissanUSA)
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide  
(Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the App Store® or Google Play™ store for download to your smartphone)
- **GENUINE NISSAN ACCESSORIES** [www.nissan-techinfo.com](http://www.nissan-techinfo.com)  
Reference this site for accessory instructions to help ensure safe and proper installation or removal of the accessory. From the home page, select Accessory Instructions.



To view detailed instructional videos, go to  
**[www.nissanquickguide.com/2026/Z](http://www.nissanquickguide.com/2026/Z)**  
or snap this QR code with an  
appropriate QR code reader.



For vehicles equipped with remote  
connectivity, including an SOS button,  
scan to download the smartphone app.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain, with this Quick Reference Guide, all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at **<https://owners.nissanusa.com/owners/navigation/manualsGuide>**. If you have questions concerning any information in your Owner's Manual, contact NISSAN Consumer Affairs. See the NISSAN CUSTOMER CARE PROGRAM page in the Owner's Manual for contact information.

The word "QR Code" is a registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.

