

QUICK SETUP GUIDE

BN68-07834T-01



SAMSUNG

 
UNPACK



ONE CONNECT
ONE CONNECT CABLE



SAMSUNG SMART REMOTE &
BATTERIES (AA X 2)



POWER CORD




WALL MOUNT ADAPTER




USER MANUAL
REGULATORY GUIDE
CLEANING CLOTH




CONNECT

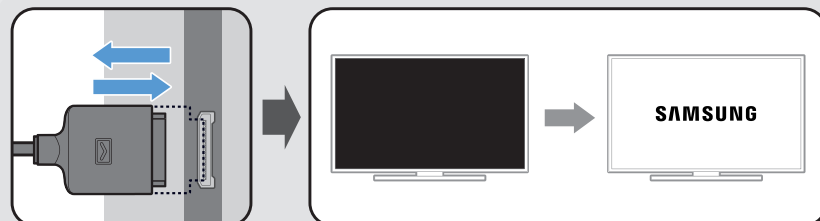

When the ONE CONNECT CABLE is connected or disconnected, the TV reboots immediately.

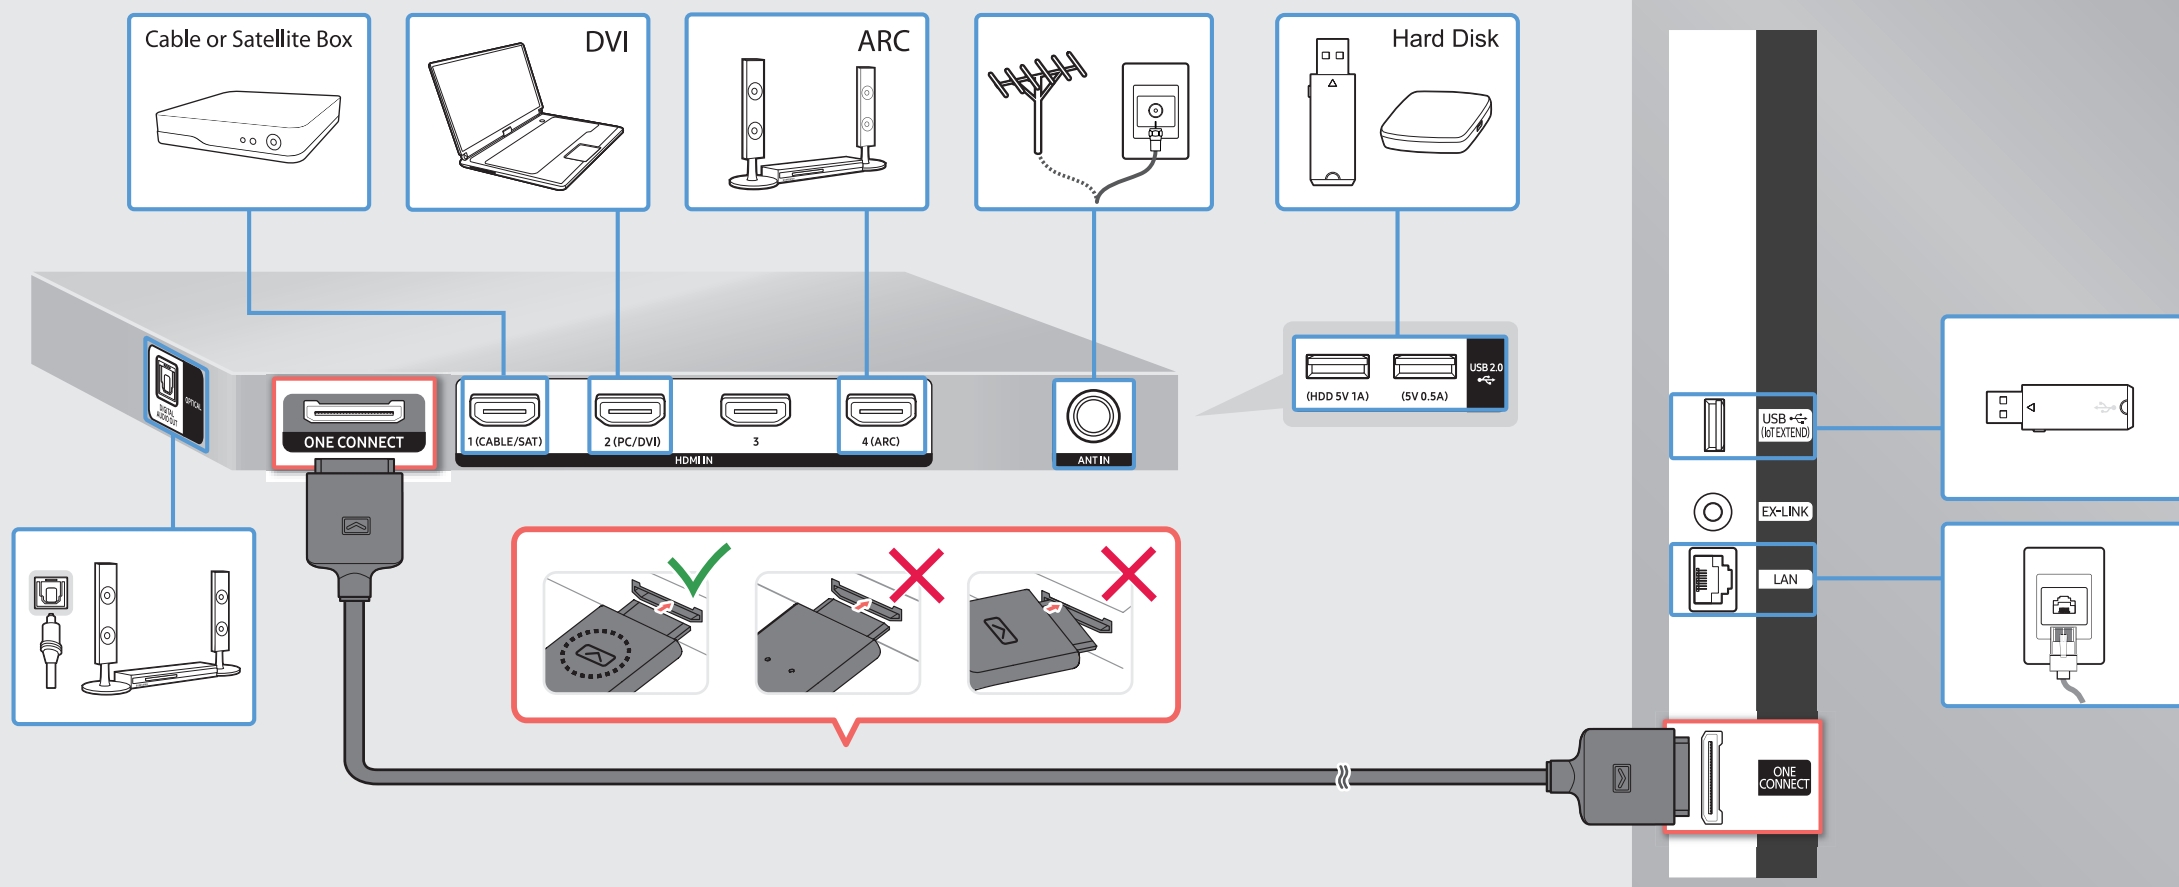

INITIAL SETUP

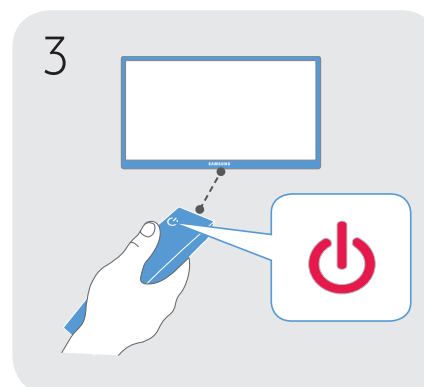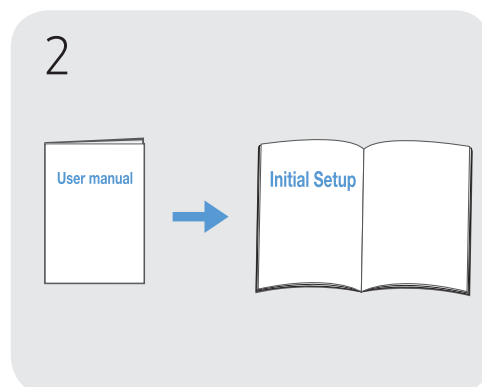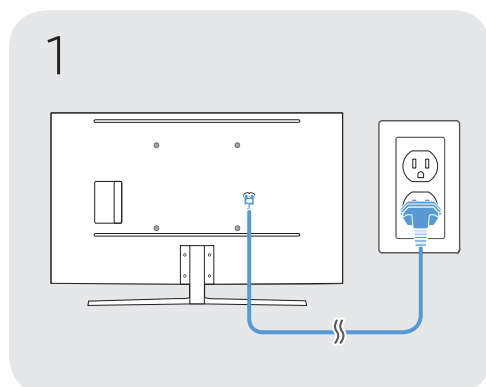

SMART REMOTE BUTTON GUIDE

