




OWNER'S MANUAL AND OPERATING INSTRUCTIONS

GAS LAWN MOWER LM3N1-SPR

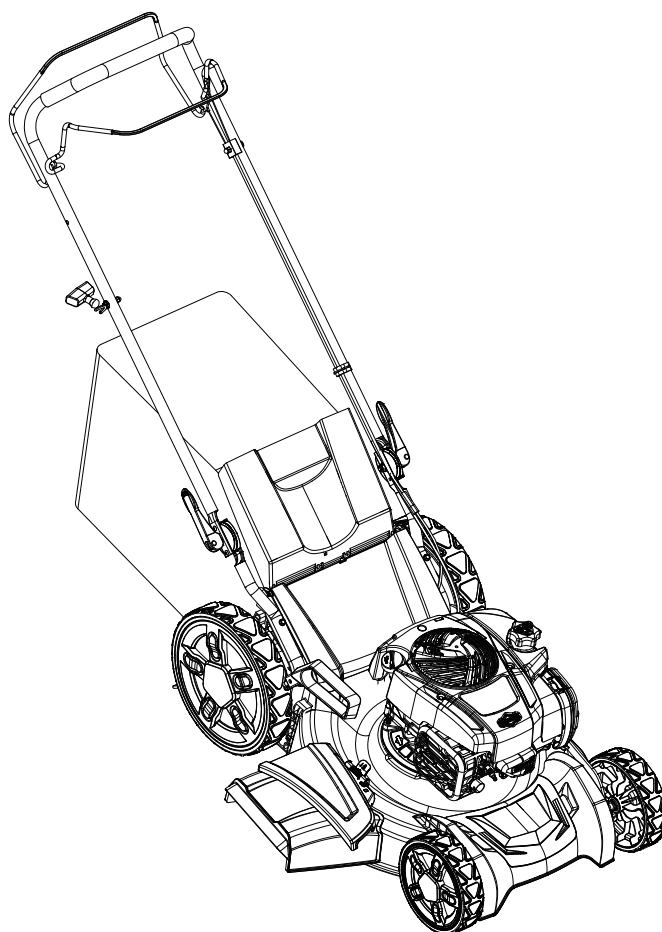

IMPORTANT

These instructions are for your safety. Please read through them thoroughly prior to handling the product and retain them for future reference.

Contents

Product description.....1

Safety3

Technical specification12

Before you start13


Use18

Functions & Settings20

Operation.....24

Care and maintenance30

Guarantee41

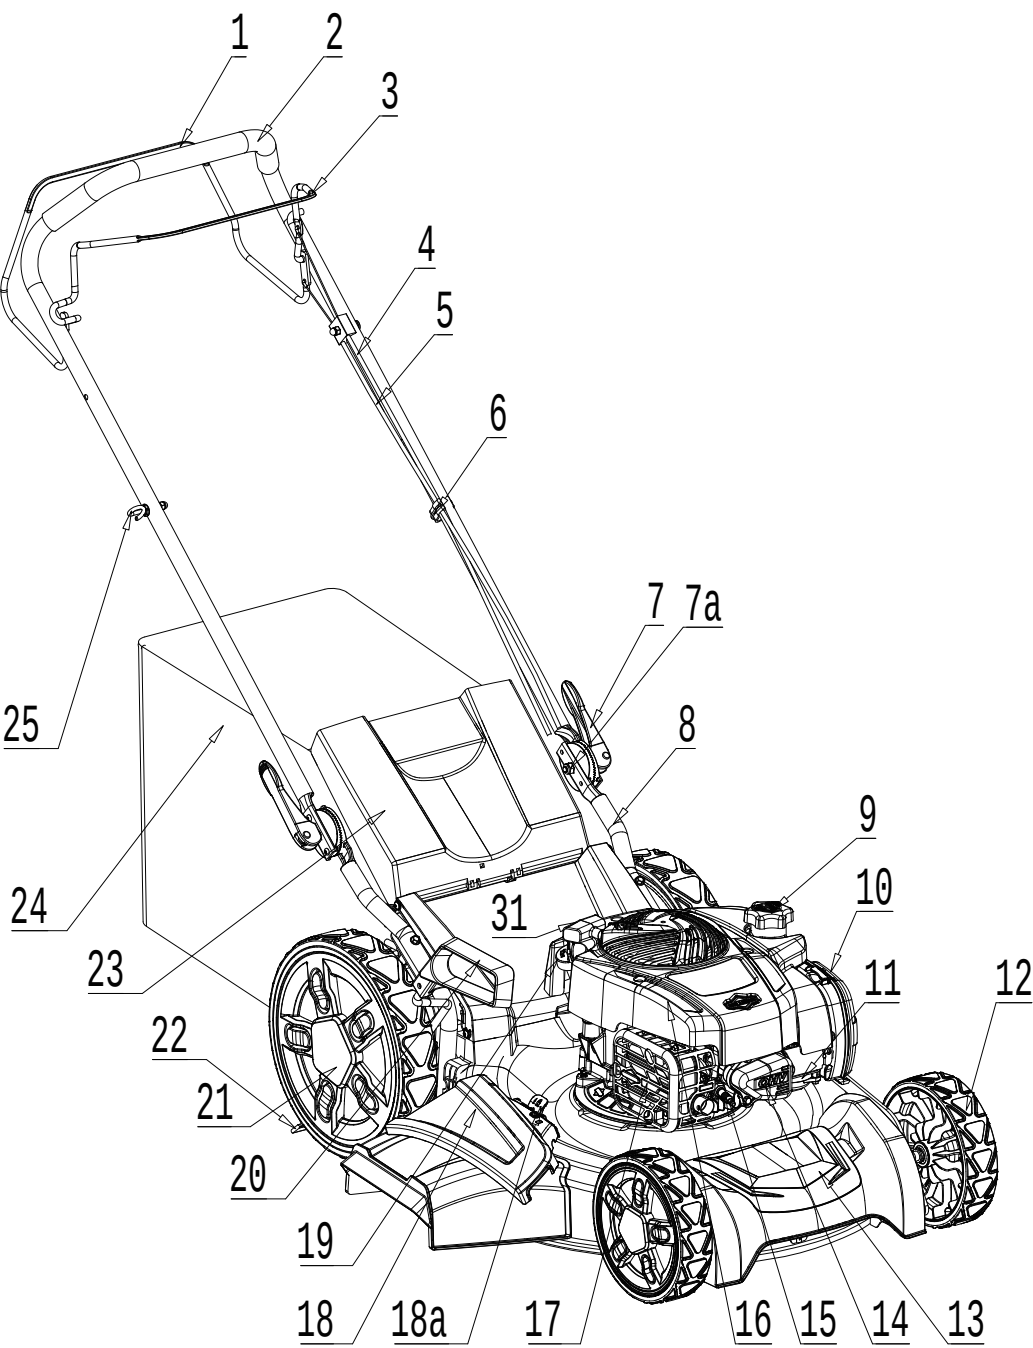

- | | | |
|--------------------------|--|------------------------------------|
| 1. Self-propelling lever | 11. Carburetor* | 21. Rear wheel (x2) |
| 2. Upper handle bar | a. Fuel drain screw* | 22. Protect panel |
| 3. Brake lever | 12. Front wheel (x2) | 23. Rear deflector guard |
| 4. Brake wire | 13. Front Cover | 24. Grass bag |
| 5. Self-propelling wire | 14. Engine | 25. Hook for recoil starter handle |
| a. Upper locking nut* | 15. Spark plug connector | |
| b. Lower sleeve* | a. Spark plug | |
| 6. Wire clip | 16. Engine top cover | |
| 7. Clamp lever (x2) | 17. Muffler | |
| a. Locking nut | 18. Side deflector guard | |
| 8. Lower handle bar (x2) | a. Locking buckle | |
| 9. Fuel tank cap | b. Hook* (x2) | |
| 10. Air filter cover | 19. Oil tank cap | |
| a. Latch (x2) | 20. Lever for cutting height
adjustment | |
| b. Filter* | | |



NOTE: Parts marked with * are not shown in this overview. Please refer to the respective section in the instruction manual.



Safety

Safety warnings

Gas powered lawn mowers safety warnings



IMPORTANT

Read carefully before use.

Keep for future reference.



WARNING! Your safety and the safety of others is very important. Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining this product. At all times you must use your own good judgment.

Training

1. Read the instructions carefully. Be familiar with the controls and the proper use of the product.
2. Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the age of the operator.
3. Never mow while people, especially children, or pets are nearby.
4. Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
5. The operators must receive proper training in the use, adjustment and operation of the product, including prohibited operations.

Preparation

1. While mowing, always wear substantial footwear and long trousers. Do not operate the product when barefoot or wearing open sandals.
2. Thoroughly inspect the area where the product is to be used and remove all objects which can be thrown by the product.



WARNING: Gas is highly flammable.

- Store fuel in containers specifically designed for this purpose.
- Refuel outdoors only and do not smoke while refueling.
- Add fuel before starting the engine. Never remove the cap of the fuel tank or add Gas while the engine is running or when the engine is hot.

- If gas is spilled, do not attempt to start the engine but move the product away from the area of spillage and avoid creating any source of ignition until gas vapours have dissipated.
 - Replace all fuel tank and container caps securely.
3. Replace faulty silencers.
 4. Before using, always visually inspect to see that the cutting blades, cutting blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged cutting blades and bolts in sets to preserve balance.



CAUTION: Do not touch rotating cutting blade.

5. Engine brake (brake lever (3)): Use the brake lever (3) to stop the engine. When you release the brake lever (3), the engine and the blade stop automatically in a few second. To mow, hold the brake lever (3) in the working position. Before you start to mow, check the brake lever (3) several times to be sure that it is working properly. Ensure that the brake wire (4) can be smoothly operated (i.e. is not catching or kinking in any way).

Operation

1. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
2. Mow only in daylight or in good artificial light.
3. Do not operate the product when there is a risk for lightning.
4. Do not operate the product while being tired, ill or under influence of alcohol or drugs.
5. Avoid operating the product in wet grass, where feasible.
6. Always be sure of your footing on slopes.
7. Walk, never run.
8. Mow across the face of slopes, never up and down.
9. Exercise extreme caution when changing direction on slopes.
10. Do not mow excessively steep slopes near drop-offs, ditches or embankments.
11. Avoid using the product in bad weather conditions especially when there is a risk of lightning.
12. Use extreme caution when reversing or pulling the product towards you.
13. Stop the cutting blade(s) if the product has to be tilted for transportation when crossing surfaces other than grass, and when transporting the product to and from the area to be mowed.

14. Never operate the product with defective guards, shields, or without safety devices, for example deflectors, self-closing discharge opening guard and/or grass bags, in place.
15. Do not change the engine governor settings or over speed the engine.
16. Do not alter or tamper with any sealed adjustments for the engine speed control.
17. Do not tamper or disable any product's safety systems or features.
18. Ensure and regularly check that all starting interlocks and operator presence controls are properly functioning.
19. Stop the product according to instructions in this manual before leaving the operator's position and park it in a safe location.
20. Start the engine or switch on the engine carefully according to instructions and with feet well away from the cutting blade(s).
21. Do not tilt the product when starting the engine or switching on the engine, except if the product has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground.
22. Keep hands and feet away from the cutting means at all times and especially when switching on the engine.
23. Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
24. Never pick up or carry a product while the engine is running.
25. In case of any situation mentioned below, stop the engine and disconnect the spark plug connector, make sure that all moving parts have come to a complete stop and, where a key is fitted remove the key:
 - before clearing blockages or unclogging chute,
 - before checking, cleaning or working on the product,
 - after striking a foreign object. Inspect the product for damage and make repairs before restarting and operating the product,
 - if the product starts to vibrate abnormally (check immediately).
 - > inspect for damage
 - > replace or repair any damaged parts
 - > check for and tighten any loose parts
 - whenever you leave the product,
 - before refueling.
26. Never touch the exhaust, exhaust guard or cooling fins when the engine is hot.

27. Never carelessly touch hot parts of the product, you can burn yourself. While the product is in operation or shortly thereafter, its parts such as the exhaust pipe, engine, and other surfaces are extremely hot! Pay attention to the markings on the product.
28. Make sure that the air vents of the combustion engine are clear. Keep the air vents free of dust, dirt particles, gases and fumes.
29. Never start or run the engine indoors. The exhaust fumes are dangerous, containing carbon monoxide, an odorless and deadly gas. Operate this product only in well ventilated outdoor areas.

Maintenance and storage

1. Follow the maintenance and repair instructions for this product. Never carry out any modifications of the product. Never change the preset rotary speed or the engine and product settings. Information about maintenance and repair is provided in this user manual.
2. Keep all nuts, bolts and screws tight to ensure the product is in safe working condition.
3. Improper maintenance, using non-genuine parts, or removing / modifying safety components may lead to malfunction / failure of the product and injury of operators. Many accidents are caused by poorly maintained products.
4. Never store the product with gas in the tank inside a building where fumes can reach an open flame or spark.
5. To reduce the fire hazard, keep the engine, silencer and gas storage area free of grass, leaves, or excessive grease to reduce the fire hazard.
6. Allow the engine to cool before storing in any enclosure. Clean and maintain the product before storage.
7. Check the grass bag frequently for wear or deterioration.
8. If the fuel tank has to be drained, this should be done outdoors.
9. Wear strong work gloves when removing and re-assembling the cutting blade.
10. Replace worn or damaged parts for safety. Use only the genuine replacement parts and spare parts.
11. Ensure that only replace the recommended cutting means (blade) with the right type.

Fuel handling

1. Before refueling, stop the engine, disconnect the spark plug connector and let the product cool. Fuel and fuel vapours are highly flammable. Take care when handling fuel. Never smoke when you are refueling the product. Do not refuel the product, if there is an open fire in the vicinity!
2. Always use suitable aids such as funnels and filler necks. Do not spill any fuel on the product or its exhaust system. There is a risk of ignition. However, if fuel should be spilled, then you must remove it carefully from all parts of the product. Any residue which may be present must be completely removed, before the product is operated!
3. Never refuel indoors. Exhaust gases and fuel fumes are noxious.
4. Never use the product in environments where there is a risk of explosion. Fuel fumes can ignite.
5. Never breathe in any fuel fumes, when you are refueling the product. Never fill the tank in enclosed spaces, such as basements or sheds. There is a risk of poisoning and explosion!
6. Avoid skin contact with gas.
7. Do not eat or drink, while you are refueling the product. If you have swallowed gas or oil, or if gas or oil has got into your eyes, then seek medical advice immediately.
8. Close the fuel tank cap immediately after filling the fuel tank. Make sure that it is properly closed.
9. Never use the product without an air filter.
10. Fuel vapour pressure may build up inside the fuel tank depending on the fuel used, weather conditions and the tank venting system. To reduce the risk of burns and other personal injuries, remove the fuel cap carefully to allow any pressure build up to release slowly.
11. Be aware of fire risks, explosion and inhalation risks.
12. Do not smoke while operating the product, handling fuel or near fuel.
13. Ensure the spark plug lead is secured; a loose lead may cause electrical arcing that could ignite combustible fumes and cause a fire or explosion.
14. Check regularly for leaks from the fuel cap and fuel lines.
15. Do use caution when handling fuel. To avoid any accidental fires, move the product at least 3 meters (10') from the fueling point before starting the engine.
16. Tighten the fuel tank cap thoroughly after refilling the fuel tank.
17. Do not operate the product if it is leaking fuel. Do not remove the fuel tank cap while the engine is running.
18. Use only an approved container for this purpose.

19. Do not store cans of fuel or refill the fuel tank in any place where there is a boiler, stove, wood fire, electrical sparks, welding sparks, or other sources of heat or fire which might ignite the fuel.
20. If any fuel spillage occurs during refueling, use a dry rag to wipe up spills and allow remaining fuel to evaporate before turning the engine on again.
21. If you have spill fuel on yourself or on your clothes, change your clothes and wash any part of your body that has come in contact with fuel before turning the engine on again.
22. If fuel is ignited, put out the fire with a dry powder fire extinguisher.
23. If the fuel tank is drained, this should be done outdoors.

Vibration and noise reduction

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and low-noise operating modes as well as wear personal protective equipment.

Take the following points into account to minimise the vibration and noise exposure risks:

1. Only use the product as intended by its design and these instructions.
2. Ensure that the product is in good condition and well maintained.
3. Use correct accessories for the product and ensure they in good condition.
4. Keep tight grip on the handles/grip surface.
5. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
6. Plan your work schedule to spread any high vibration tool use across a longer period of time.

Emergency

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Stop the engine and disconnect the spark plug connector if there are malfunctions. Have the product checked by a qualified professional and repaired, if necessary, before you operate it again.

3. In case of fire, stop the engine and disconnect the spark plug connector. Take fire-extinguishing measures immediately if the product switch is no longer accessible.



WARNING! Never use water to extinguish a product on fire. Burning fuel must be extinguished with special extinguishing agents! We recommend that you keep a suitable fire extinguisher within reach in your work area!

Residual risks

Even if you are operating this product in accordance with **all** the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
2. Injuries and damage to property due to broken application tools or the sudden impact of hidden objects during use.
3. Danger of injury and property damage caused by flying objects.
4. Burns, if touching hot surfaces.



WARNING! This product produces an electromagnetic field during operation! This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, we recommend persons with medical implants to consult their doctor and the medical implant manufacturer before operating this product!!

Symbols

On the product, the rating label and within these instructions you will find among others the following symbols and abbreviations. Familiarise yourself with them to reduce hazards like personal injuries and damage to property.

kW	Kilowatt	cc	Cubic centimetre
kg	Kilogram	dB(A)	Decibel (A-rated)
g/kWh	Gram per kilowatt per hour	m/s ²	Meters per second squared
kg/h	Kilogram per hour	in	inch
cm	Centimetre	°F	Fahrenheit degree
/min or min ⁻¹	Per minute	gal	gallon
mm	Millimetre	fl.oz	Fluid ounce
°C	Degree Celsius		
L	Litre		
ml	Millilitre		
yyWxx	Manufacturing date code; year of manufacturing (20yy) and week of manufacturing (Wxx)		

	Lock / to tighten or secure		Unlock / to loosen
	CAUTION! / WARNING! / DANGER!		Read the instruction manual
	NOTE:		Wear hearing protection. Wear eye protection.
	Wear respiratory protection.		Wear protective gloves.
	Wear protective, slip-resistant footwear.		Wear tight-fitted protective clothes.
	Do not expose the product to rain or wet conditions.		
	Open flames in the work area, around the product and in the vicinity of flammable materials are prohibited!		
	Do not smoke in the work area, around the product and in the vicinity of flammable materials!		
	Risk of fire / flammable materials		
	Hot surface, do not touch! High temperatures on the product's surfaces and structural parts that could cause burns, if they are touched. The product can also stay hot for a longer period of time after operation!		
	This product produces noxious exhaust fumes. If the product is used improperly, these fumes can lead to poisoning, a loss of consciousness or death!		
	Noxious exhaust fumes; do not operate or start the product in indoor rooms!		
	Keep hands and feet away.		
	Only refuel unleaded gas!		
	Add engine oil.		

	Check and refill oil.
	Switch the engine off while you are refilling the tanks! Fuel is flammable, keep fire away. Do not add fuel with running engine
	Mow across the face of slopes, never up and down.
	Inspect the area where the product is to be used and remove all objects which can be thrown by the product. If objects are hidden while operating, stop the engine and remove the object.
	Keep hands and feet away from sharp rotating parts – danger of injury! When cleaning, repairing, or inspecting, make certain the cutting blade and all mowing parts have stopped. Disconnect the spark plug connector, and keep the connector away from the plug to prevent accidental starting.
	Stop the engine and disconnect the spark plug connector before assembly, cleaning, adjustments, maintenance, storage and transportation.
	cutting blade continues to rotate after the product is switched off. Wait until all machine components have completely stopped before touching the product.
	Pay special attention when working on the cutting blade!
	Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.
	Release the brake lever (3) to stop the engine and blade.
	Push the self-propelling lever (1) forward to engage the wheels.
	Engine manual start; recoil starter.
	Guaranteed sound power level: 98 dB(A)
	The product complies with the applicable America directives and an evaluation method of conformity for these directives was done.

Technical specifications

General

Model	LM3N1-SPR
Engine type	Single cylinder,4-stroke, air cooled, OHV, Recoil start
Oil type	SAE 10W-30
Cutting Height adjust	Central adjust
Cutting width	21inch (530mm)
Cutting height	1.18~3.74inch (30-95mm), 6 positions
Grass bag volume	Fabric bag: 70L
Wheel Size (front/rear)	8/12inch (200/305mm)
Deck Material	Steel
Noise Level	98dB(A)

Engine

Engine model	Briggs & Stratton EX550
Engine type	air cooled, 4-stroke engine
Engine displacement	140cc
Fuel tank capacity	0.21Gal (800ml)
Engine oil capacity	15.89fl.oz (470ml)
Rated engine speed	3200 min ⁻¹
Nominal power	2.2KW

The sound values have been determined according to noise test code given in ANSI/OPEI 5395-1-2024 and ANSI/OPEI 5395-2-2024, using the basic standards ISO 3744 and ISO 11094.

Wear hearing protection, especially when sound pressure is over 80 dB(A).

The declared vibration value has been measured in accordance with a standard test method (according to ANSI/OPEI 5395-1-2024 and ANSI/OPEI 5395-2-2024) and may be used for comparing one product with another. The declared vibration value may also be used to evaluate the exposure for the user caused by vibration in advance.



WARNING! Depending on the actual use of the product the vibration values can differ from the declared total! Adopt proper measures to protect yourself against vibration exposures. Take the whole work process including times the product is running under no load or switched off into consideration.

Proper measures include among others regular maintenance and care of the product and application tools, keeping hands warm, periodical breaks and proper planning of work processes.

Before you start

Unpacking



NOTE: The product is heavy, ask another person for assistance if required.

1. Unpack all parts and lay them on a flat, stable surface.
2. Remove all packing materials and shipping devices if applicable.
3. Make sure the delivery contents are complete and free of any damage. If you find that parts are missing or show damage do not use the product but contact your dealer. Using an incomplete or damaged product represents a hazard to people and property.
4. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING! The product and the packaging are not children's toys! Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation!

You will need

(items not supplied)

Suitable personal protective equipment
Fuel funnel with filter
Gas and engine oil
Fuel collecting container
Oil collecting container
Lubrication oil/grease
Suitable torque wrench
Suitable spanner

 
(items supplied)

Grass bag (24)
Side discharge attachment (28)
Mulching insert (29)
Spark plug wrench (30)

Assembly



WARNING! The product must be fully assembled before operation! Do not use a product that is only partly assembled or assembled with damaged parts!

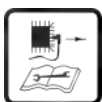

Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product!

Disconnect the spark plug connector (15) from the spark plug! Reconnect it after assembly.



NOTE: Take care of small parts that are removed during assembly or when making adjustments. Keep them secure to avoid loss

Upper handle bar

1. Put the product on the ground.
2. Unfold the two clamp levers (7) to release the upper handle bar (2) (Fig. 1, step 1).
3. Unfold the upper handle bar (2) (Fig. 1, step 2) to align it with the lower handle bars (8), then hold the upper handle bar (2) in position. Ensure that the upper handle bar (2) with the brake lever (3) facing upwards.
4. Secure the upper handle bar (2) with the lower handle bars (8) by folding up the clamp levers (7) towards the handle bars (2, 8). If the clamp lever (7) cannot be folded, loosen it and fold again. If it is too loose, firstly hold the locking nut (7a) steady with a suitable spanner (size: 13mm), then tighten it by turning the clamp lever (7) clockwise (Fig. 2).
5. Make sure that the self-propelling wire (5) and the brake wire (4) run on the upper side of the handle bars (2, 8).
6. Make sure that the pre-assembled hook for recoil start handle (31) rest on your right-hand side (when viewed from operator's position).

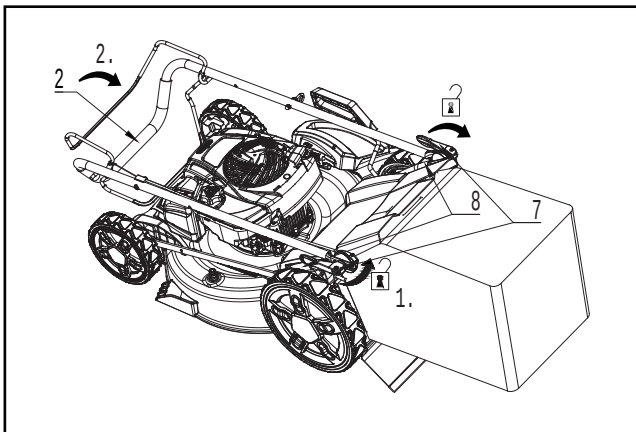


Fig. 1

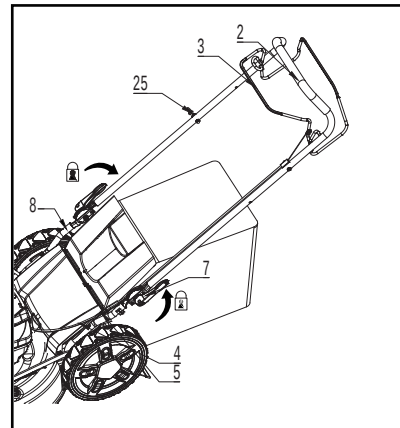


Fig. 2

7. Attach the self-propelling wire (5) and the brake wire (4) with the wire clip (6) on the upper handle bar (2) (Fig. 3)

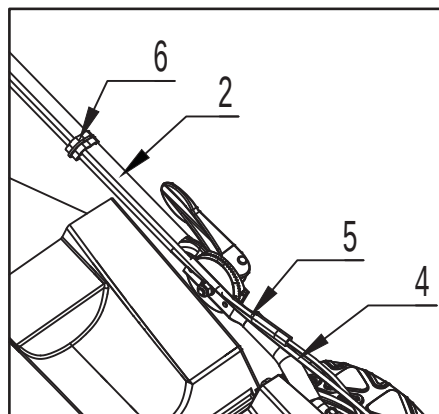


Fig. 3

Grass bag

1. Attach the rubber clips (24a) to the rod (24d) if they are not pre-assembled (Fig. 4).
2. The grass bag (24) is now ready for use (Fig. 4).

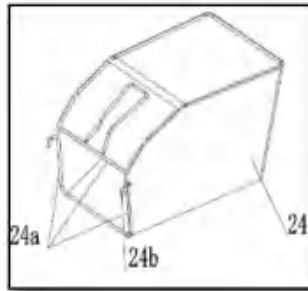


Fig. 4

3. Open the rear deflector guard (23) and hold it in position (Fig. 5, step 1).
4. Carry the grass bag by its carry handle (24c).
5. Align the hooks (24b) with the slots and hang the grass bag onto it (Fig. 5, step 2)
6. Carefully release the rear deflector guard (23) afterwards.

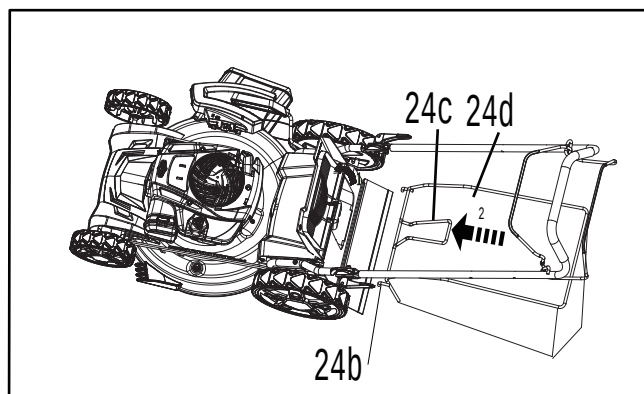


Fig5



NOTE: Always carry the grass bag (24) by its carry handle (24c).

Before hooking the grass bag (24), check if the mulching insert (29) is in the rear discharge chute. Take away the mulching insert (29) before hooking the grass bag (24).



NOTE: The mulching insert (29) must be removed if the grass bag (24) is used

Fuel and engine oil

This product is equipped with a 4-stroke engine. Before operation it is necessary to add proper fuel and engine oil separately.

1. Place the product on a stable, level surface. We recommend laying a nonflammable sheet under the product.
2. Use proper funnels. Avoid spilling and overfilling the tanks.



WARNING! Fuel and oil are highly inflammable! Fumes will explode if lit! Ensure that there are no naked flames around the product!



Do not smoke while filling fuel and oil!

3. Always dispose of fuel, used oil and objects contaminated with them in accordance with local regulations.

Fuel



NOTE: This product is not supplied with fuel! Before operating this product it is essential to fill it with fuel! Fill fuel and engine oil separately. Never mix oil with gas!



1. Always use clean, fresh unleaded gas. Purchase fuel in quantities that can be used within 30 days.
2. Never mix oil with gas. Avoid getting dirt, dust or water in the fuel tank.
3. Unscrew and remove the fuel tank cap (9) (Fig. 6).
4. Add suitable fuel into the fuel tank. Leave a minimum 5mm of space between the top of the fuel and the inside edge of the tank to allow for expansion (Fig. 7).

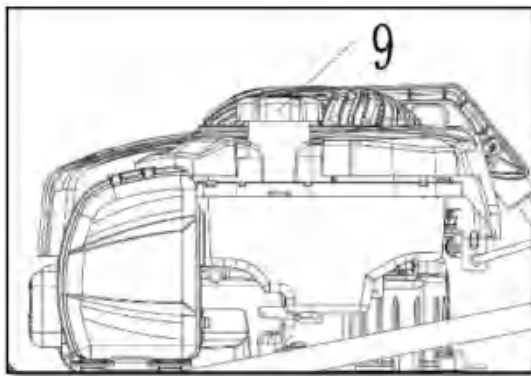


Fig. 6

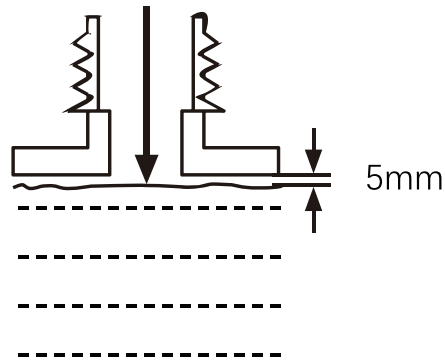


Fig.7



NOTE: Gas deteriorates over time. It may be difficult to start the engine if you use gas which has been kept for more than 30 days.

Towards the end of the season, it is advisable to put only as much fuel in the tank as you need for each use, since it should be completely used up before storing the product.

Always empty the fuel tank when storing the product for over 30 days.

5. Wipe any spilled fuel with a soft cloth and reattach the fuel tank cap (9).

Engine oil



WARNING! This product is not supplied with oil. However, for manufacturing reasons it is possible that a small quantity may be in the engine! Before



operating this product it is essential to fill it with proper oil (4-stroke engine oil, e.g. SAE 10W-30)!

Engine oil has a major influence on engine performance and service life. Non-detergent or 2-cycle engine oils will damage the engine and should not be used!

1. Unscrew and remove the oil tank cap (19) (Fig. 8).
2. Gradually add good-quality engine oil (SAE 10W-30). Allow the oil to settle.
3. Check the oil level frequently while filling. Wipe the oil dipstick clean and insert it into the tank opening to the end with tightening the cap until it rests on the oil tank, and then remove the dipstick again.
4. The oil level must be between the “max” and “min” of the oil level markings. Add more oil if necessary. Do not overfill (Fig. 9).
5. After adding oil, wait a minute and then recheck the oil level.
6. Wipe spilled oil with a soft cloth and reattach the oil tank cap (19).

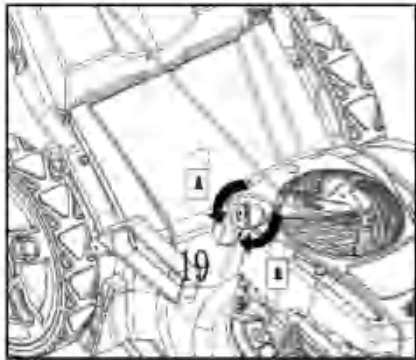


Fig.8


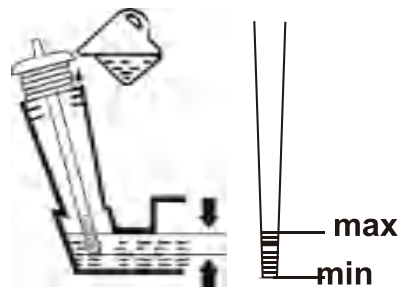


Fig.9



Set up

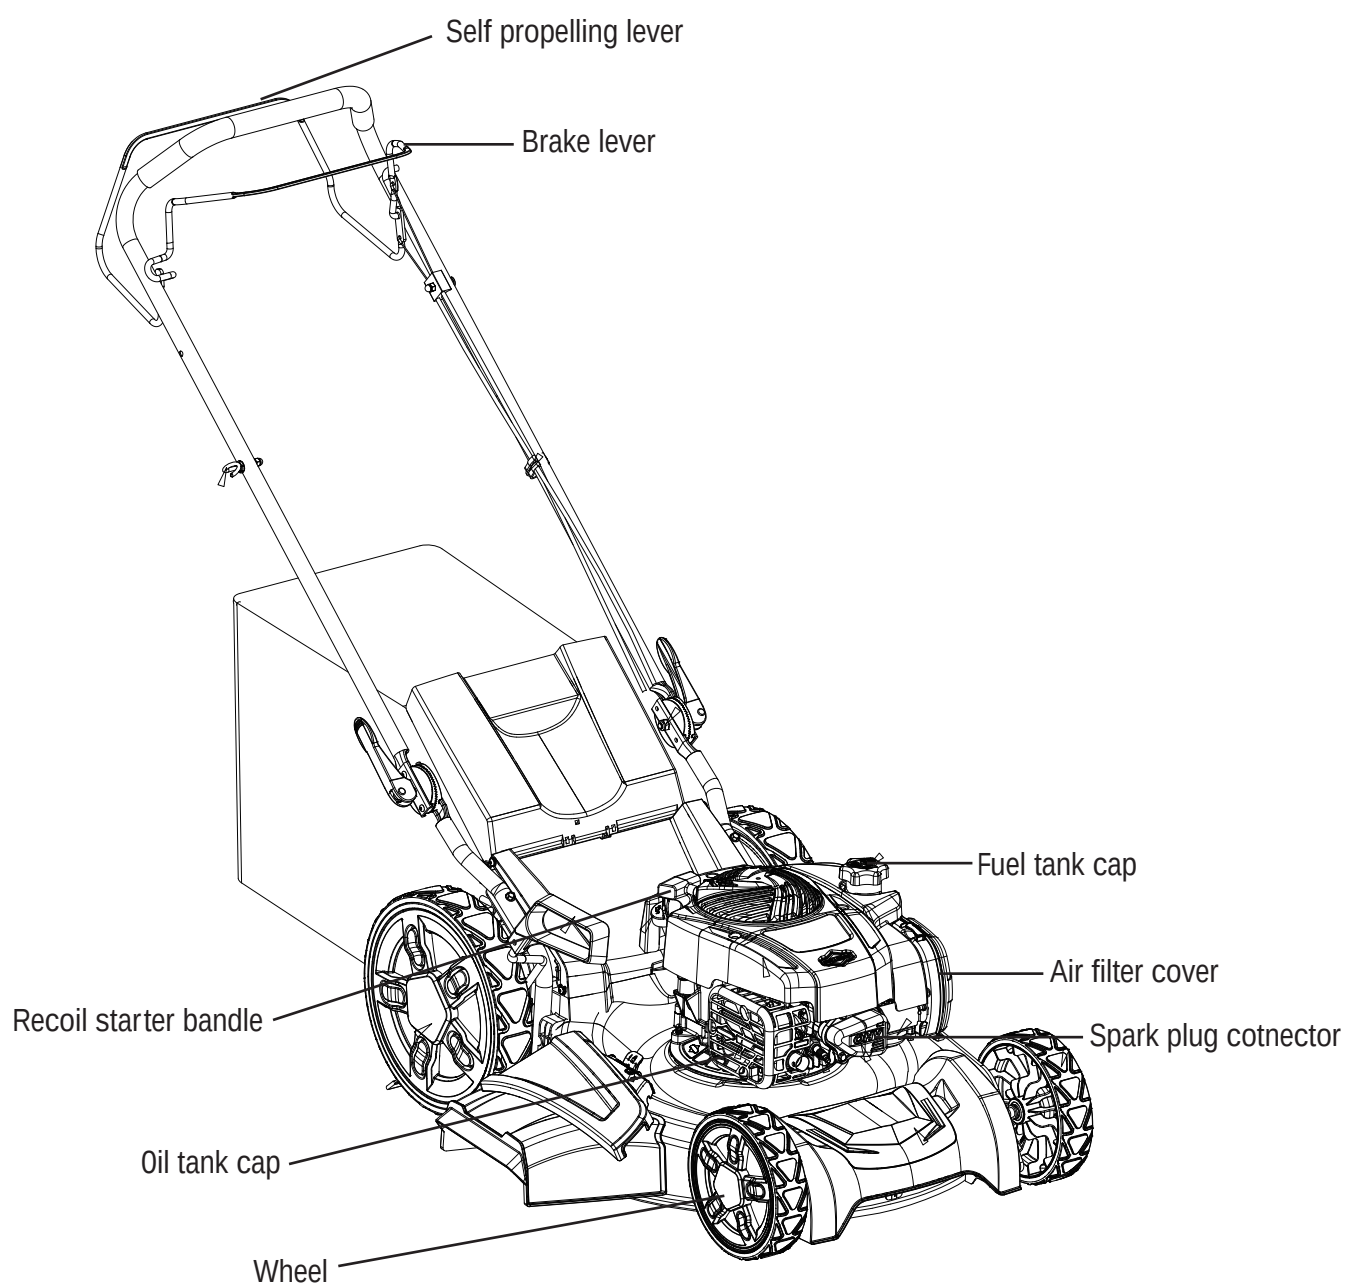

Assemble



Adjust



Add fuel




Add oil

Start



Pull back the
brake lever &
hold it in position.

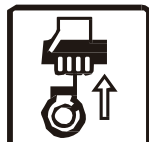

Pull recoil starter
handle , repeat
until engine starts.



Push the
self-propelling
lever & hold it
in position.



Operate.

Stopping



Release the
self-propelling lever.



Release the brake
lever.

Storage



Empty fuel tank



Empty oil tank.



Clean and
maintain.



Store



WARNING! This quick start provides only a short overview of how to start and stop the product! For safe use it is essential to read the entire instruction manual before first use!

Functions & Settings

Intended use

The product is intended for mowing grass in domestic gardens only. It must not be used to mow unusually high, dry or wet grass, e.g. pasture grass, or to shred leaves. For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions therein.

This product is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.

Brake lever

1. Pull back the brake lever (3) and hold it against the upper handle bar (2) when starting the engine. Keep it squeezed during operation (Fig. 10).
2. Release the brake lever (3) to stop the engine.

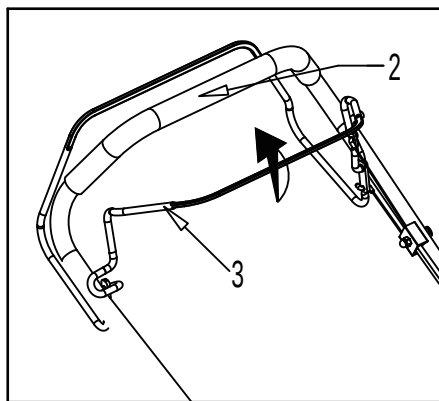


Fig. 10

Recoil starter

The recoil starter handle (31) is positioned at the top of the engine.

1. Pull back the brake lever (3) and hold it against the upper handle bar (2) (Fig. 10).
2. Pull the recoil starter handle (31) lightly until you feel resistance then pull it rapidly. Do it repeatedly until the engine starts (Fig. 11).
3. Always rest the recoil starter handle (31) onto the hook (25) located on the right-hand side of the upper handle bar (2) (Fig. 12) when the recoil starter is not operated.



WARNING! Never twist the starter cord around your hand! Only pull on the recoil starter handle (31)!

Do not suddenly release the recoil starter handle (31)! Allow the starter cord to return slowly and in a controlled manner each time it is pulled!

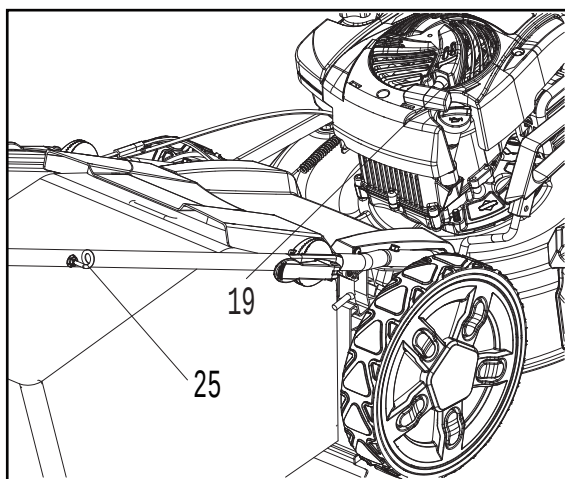


Fig. 11

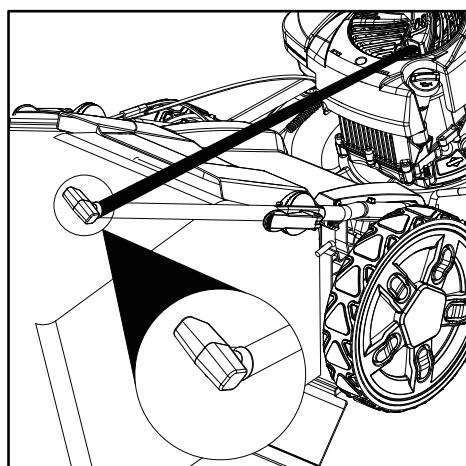


Fig. 12

Self-propelling lever

Use the self-propelled function as assistance during operation; the rear wheels are automatically driven by the engine; you do not need to push the product manually.

1. Push the self-propelling lever (1) forward and hold it against the upper handle bar (2) to engage the rear wheels (Fig. 13).
2. Release the self-propelling lever (1) to disengage the rear wheels.

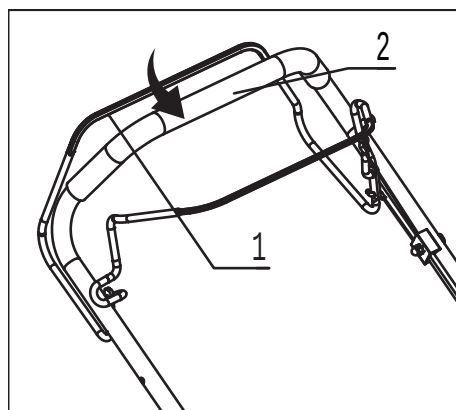


Fig. 13

Grass bag



WARNING! Do not attempt to use the product without the grass bag attached when collecting grass - danger of flying objects!

When using the product without the grass bag (24), insert the mulching insert (29).

Switch the engine off and wait that the blade had come to a complete stop before removing the grass bag!

1. Always attach the grass bag (24) when using the product for grass collection as described in the “Assembly - grass bag” section.
2. Always carry the grass bag by its carry handle (24c).

Emptying



WARNING! Switch the engine off and wait that the blade had come to a complete stop before removing the grass bag!

Empty the grass bag (24) frequently during use. Do not wait until it is completely full.

We recommend emptying when it is 90% full.



NOTE: A full grass bag (24) will reduce the performance of this product.

1. Lift the rear deflector guard (23) and hold it in place.
2. Lift the grass bag hooks (24b) off the slots and remove the grass bag (24).
3. Remove the grass clippings from the rear discharge chute into the grass bag (24).
Use a proper tool such as a brush.
4. Remove the grass bag (24) by its carry handle (24c).
5. Empty the grass clippings onto a compost heap by its carry handle (24c).
6. Re-fit the grass bag (24) onto the product and ensure the grass bag hooks (24b) to stay correctly onto the slots as described in the “Assembly - grass bag” section.



WARNING! Never use your hands or feet to remove grass clippings from the rear discharge chute!

Mulching insert

The mulching insert prevents grass from being collected by blocking the rear discharging chute. This allows the grass clippings to be deposited back on the lawn during cutting.



NOTE: Mulching means cutting and returning the grass clippings to the lawn in one step: the grass clippings are cut very fine and then distributed evenly back onto the lawn. Under normal conditions, the mulched grass will biodegrade quickly to provide nutrients to the lawn.

Do not use the grass bag (24) and the mulching insert (29) at the same time.

1. Open the rear deflector guard (23) , hold it in position and insert the mulching insert (29) into the rear discharge chute (34) (Fig. 14). Ensure the two spigots (29a) and the locking latch (29b) snap into the rear discharge chute slots with a click sound.
2. Squeeze the locking latch (29b) and release it from the rear discharge chute slot (34), then remove the mulching insert (29) (Fig. 15).

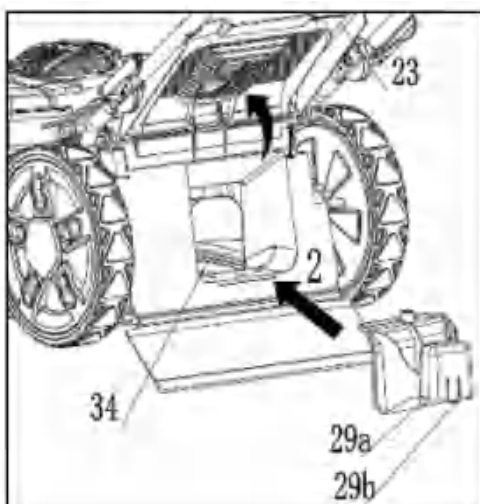


Fig. 14

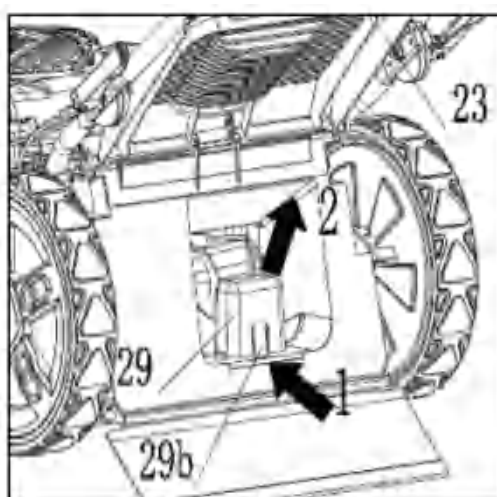


Fig. 15

Side discharge attachment

1. Set the cutting height adjustment lever (20) higher than the second lowest position (Fig. 18).
2. Turn the locking buckle (18a) downward and hold to disengage it (Fig. 16, step 1).
3. Open the side deflector guard (18) and hold it in position (Fig. 16, step 2) .
4. Align and hang the slots (18b) of the side discharge attachment (18) onto the hooks (Fig. 17). The side discharge attachment is ready for use.

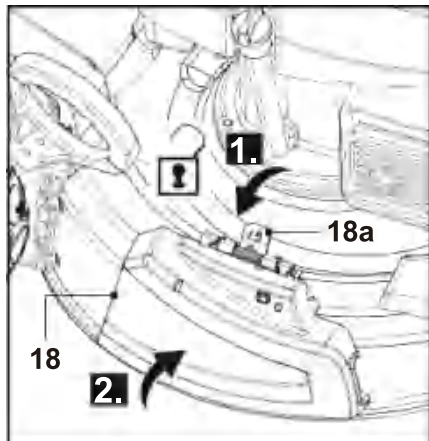


Fig. 16

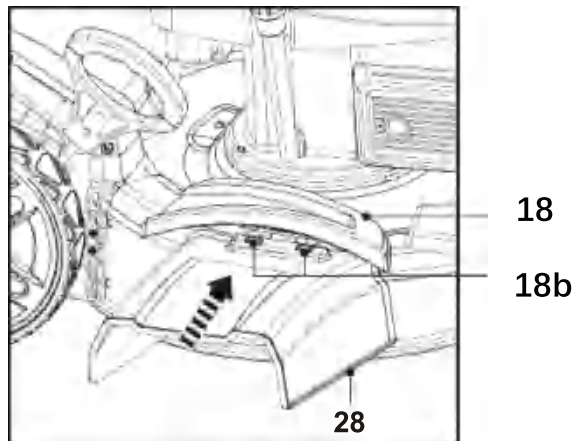


Fig. 17

Cutting height adjustment

Adjust the cutting height according to the needs of your lawn. The cutting height depends on the kind of lawn and its actual height. When mowing high grass, start with the maximum cutting height and make a second cut with a lower cutting height.

1. Pull the lever for cutting height adjustment (20) towards the rear wheel (21) (Fig. 18, step 1), then move it forward or backward to the desired cutting height (Fig. 18, step 2).
2. Release the lever (20) and ensure it engages into place properly (Fig. 18, step 3).

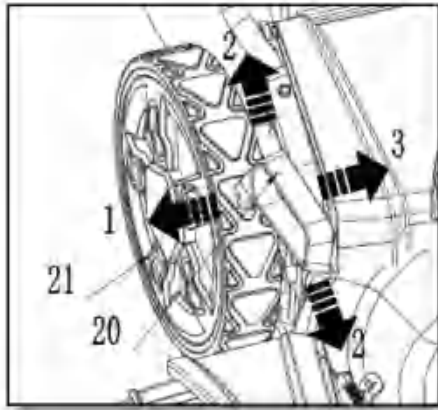


Fig. 18



WARNING! Ensure that the lever for cutting height adjustment (20) engages between two of the prongs!

Switch the engine off and wait for the blade to come to a complete stop before adjusting the cutting height!

Operation

General operation

1. Before each use:
 - Check the product and accessories for damage and whether they are properly fixed. Do not use the product if it is damaged or shows any signs of wear and tear. Take care of any problem you find or have the product checked by qualified specialist.
 - Check the fuel and oil level. Refill if necessary.
 - Look around and underneath the product for signs of oil or fuel spill.
 - Check each control for proper operation.
 - Check the cutting blade (27) for wear.
 - Make sure that all bolts and screws are tightened.
 - Check if the air filter (10) is clean.
2. Always push the product using the upper handle bar (2). Use the self-propelling function if required. Keep the handle bar dry and free from lubricant to ensure safe support.
3. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.

4. Stop the engine immediately if you are disturbed while working by other people entering the working area. Always let the product come to a complete stop before leaving the product unattended.
5. Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.

Starting/Stopping



WARNING! Before starting, put the product on a flat surface free of high grass!

Clean the underside of the deck!

Keep yourself ready! The product will start moving forward once you hold the self-propelling lever (1) towards the upper handle bar (2)!

Start the engine carefully according to instructions. Keep your feet well away from the blade (27)!

Do not tilt the product when starting the engine.

Start

1. Stand behind the upper handle bar (2).
2. Pull back the brake lever (3) and hold it against the upper handle bar (2) (Fig. 19, step 1).
3. Rest the recoil starter handle (31) onto the hook (25) located on the right hand side of the upper handle bar (2).
4. Pull the recoil starter handle (31) lightly until you feel resistance then pull it rapidly. Do it repeatedly until the engine starts (Fig. 19, step 2).
5. When you are ready to mow, push the self-propelling lever (1) forward and hold it against the upper handle bar (2) (Fig. 19, step 3). The product starts moving forward and begins mowing.

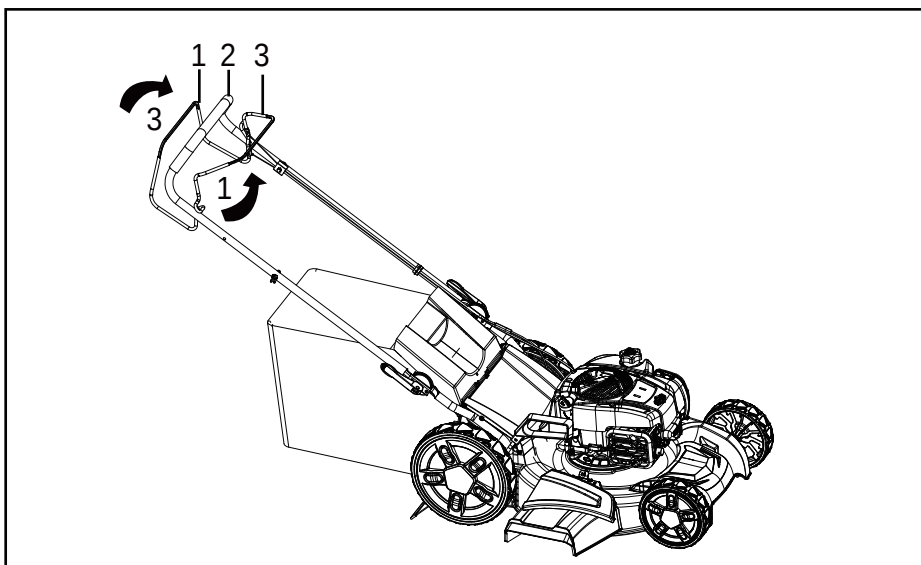


Fig. 19



WARNING! The starting position should be as described in the instruction manual. (Fig. 20 A) illustrates the defined starting position. The operator should start the engine behind the upper handle bar (2). Do not start the engine while standing at the side of the product (see Fig. 20 B.)

A



B

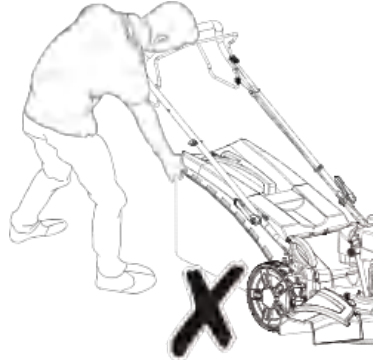


Fig. 20



NOTE: If the engine does not start, the engine may be flooded. Flooding is caused by too much fuel injected into the combustion chamber and can prevent a product from starting. Follow below procedure:

1. Remove the spark plug (15) and dry it.
2. Pull the recoil starter handle (31) for several times to drain the fuel from the combustion chamber.
3. Wait until fuel vapours evaporate and refit the spark plug. Clean up any spilled fuel and move the product at least 3 metres (10') away before starting the engine to avoid any accidental fire. Wait for the engine to cool down then start the product as described in the "Start" section.

Stopping

1. Release the self-propelling lever (1) to stop the self-propelled function (Fig. 21, step 1).

2. Release the brake lever (3) to stop the engine and blade (Fig. 21, step 2).

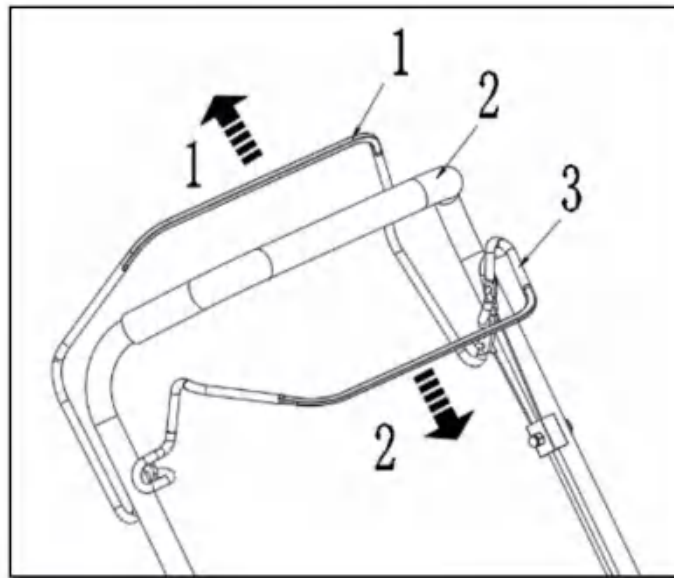


Fig. 21

Mowing

1. Make sure that the lawn is clear of stones, toys, sticks, wire or other objects that could damage the product or its engine.
2. Do not cut wet grass because it tends to stick to the under body of the product, preventing the proper discharge of grass clippings, and it could also cause you to slip and fall.
3. Never cut off more than one-third of the total length of the grass for a healthy lawn. In the autumn, lawns should only be cut as long as there is growth.
4. Mow in slight overlapping rows. The most effective pattern for mowing lawns is straight lines along one of the sides. This will keep the rows even and ensures that all the lawn is cut without missing any spots (Fig. 22).

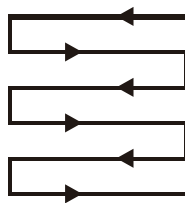


Fig.22

5. Circle around flower beds. When reaching a flower bed in the middle of the lawn, cut a row or two around the circumference of the bed.
6. Pay special attention when changing direction.
7. Empty the grass bag (24) regularly.



WARNING! If the product strikes a foreign object stop immediately! Let the product cool down and thoroughly inspect the product for damage! Have any damage repaired before restarting!



Extensive vibration of the product during operation is an indication of damage!



Stop the engine immediately. The product should be promptly inspected and repaired!

8. Prepare the product according to required application.

Function	Grass bag	Mulching insert	Side discharge attachment
Grass collection	attached	removed	removed
Mulching	removed	inserted	removed
Side discharge	removed	inserted	inserted

Grass collection

1. Remove the mulching insert (29) and attach the grass bag (24). Make sure the side discharge attachment (28) is not fitted to the product and the side deflector guard (18) is in place.
2. Empty the grass bag (24) regularly.

Mulching



NOTE: Mulching means cutting and returning the grass clippings to the lawn in one step: the grass clippings are cut very fine and then distributed evenly back onto the lawn. Under normal conditions, the mulched grass will biodegrade quickly to provide nutrients to the lawn.

1. Insert the mulching insert (29) into the rear discharge chute (34), make sure the side discharge attachment (28) and grass bag (24) are not fitted to the product and the side deflector guard (18) is in place.
2. Avoid mowing when the grass is wet from rain or dew. Wet grass may form clumps which interfere with the mulching action and reduce runtime. The best time to mow grass is late afternoon when the grass is dry and the newly cut area will not be exposed to direct sunlight.
3. Set the cutting height to about one third of the grass blade length, ideally no more than 35 mm at one time for best mulching performance. If the lawn is overgrown, it may be necessary to increase the cutting height to reduce the pushing effort and prevent the engine overloading. For extremely heavy mulching, it is advisable to first cut at a high cutting height, and then again to a lower cutting height. Otherwise, make narrower cuts and mow slowly.
4. Keep the housing free of built-up grass for best performance. From time to time switch the product off and wait for the blade to come to a complete stop. Then turn

the product on its side. Using an object such as a wooden stick, remove any accumulation of grass in the blade area. Be careful of the sharp edges of the blade. Clean often after cutting new grass and after every use.

5. Certain types of grass or grass conditions may require an area to be mulched a second time to fully disperse the grass across the lawn. When cutting a second time, it is advisable to cut perpendicular (across) the first cutting pattern. Do not change the cutting pattern in any way that would cause you to mow downhill.
6. Change your cutting pattern from week to week. This will help prevent matting and graining of the lawn.

Side discharging



NOTE: When using the side discharge function, the grass clippings are discharged and spread across the ground

Attach the side discharge attachment (28). Make sure the mulching insert (29) is inserted and the grass bag (24) is not fitted to the product.



NOTE: Fuel may leak from the fuel tank cap (9) and/or carburetor (11). Always ensure the fuel tank remains upright.

After use

1. Stop the engine, disconnect the spark plug connector and let it cool down.



WARNING! The spark plug (15) will stay hot for a longer period of time after operation!

2. Check, clean and store the product as described below.

Care and maintenance

 
The golden rules for care



WARNING! Proper maintenance is essential for safe and trouble free operation. Improper maintenance, or failure to address a problem instantly can cause a malfunction which can result in serious injury or even death.



WARNING! Always stop the engine, disconnect the spark plug connector (15) and let the product cool down before performing inspection, maintenance and cleaning work!

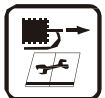

DO NOT touch a rotating blade (27).

1. Keep the product clean. Remove debris from it after each use and before storage.
2. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
3. Inspect the product before each use for worn and damaged parts. Do not operate it if you find broken and worn parts. Replace worn parts as necessary or contact an authorised service centre for repair before using the product again.



WARNING! Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist!

General cleaning

1. Clean the product with a slightly damp cloth and mild soap. Use a brush for areas that are hard to reach.
2. In particular clean the air vents after every use with a cloth and brush.
3. Remove stubborn dirt with high pressure air (max. 3 bar).



NOTE: Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

4. Check for worn or damaged parts. Replace worn parts as necessary or contact an authorised service centre for repair before using the product again.

Thorough cleaning

1. Carry out the water supply deck cleaning in a flat area with good water drainage. Connect a garden hose to the water inlet (32) on the mower deck (Fig. 23).
2. Set the mower cut height to the highest position. Only clean with the product in the normal working position. Do NOT tilt or support the mower above the ground. Turn the water on.

3. Pull the brake lever (3) and hold it against the upper handle bar (2), then pull the recoil starter handle (31) lightly to start the engine and cutting blade (27).
4. Stop the engine by releasing the brake lever (3) when no further dirty water or debris can be seen exiting the underside of the product.
5. Dry the product with suitable cloths or paper towel. Wipe over the inside of the deck and blade with spray lubricant to prevent corrosion.

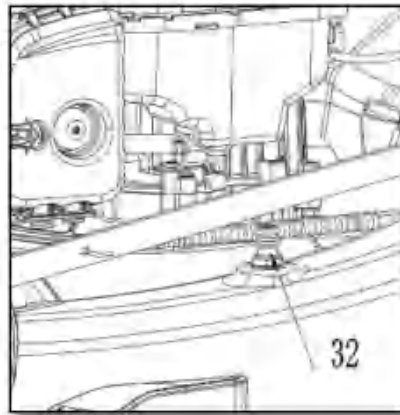


Fig. 23

Maintenance

Before and after each use, check the product and accessories (or attachments) for wear and damage. If required, exchange them for new ones as described in this instruction manual. Observe the technical requirements.



WARNING! It requires to tip the product when performing maintenance, therefore the fuel tank must be empty otherwise the fuel can leak out and result in a fire or explosion.



NOTE: Always empty the fuel tank and keep the air filter (10) and the spark plug (15) facing up. Otherwise the fuel or engine oil will contaminate them and cause difficulties to start the engine.

Maintenance table

Part	To do	Before/ after each use	First month or 5 hours	Every 3 months or 25 hours	Every 6 months or 50 hours	Every year or 100 hours	Every 2 years or 250 hours
Engine oil	check	✗					
	replace				✗		
Air filter	check	✗					
	clean			✗			
	replace						✗
Spark plug	check/ adjust			✗			
	clean			✗			

	replace						X
Spark plug cap	clean					X	
Fuel tank and filter	clean			X			
Fuel tube	check	Every 2 years (replace if necessary)					
Valve clearance	check/adjust					X	
Muffler	check					X	
	clean					X	
	replace					X	
Combustion chamber	clean	Every 200 hours					
Flywheel brake pad	check				X		

Under body and cutting blade



WARNING! Wear protective gloves when working on the cutting blade (30) and close to it! Use proper tools to remove debris, e. g. a wooden stick! Never use your bare hands!

Always use original spare parts for replacement. The cutting blade (27) must be replaced with the appropriate model. Do not attach any other type of cutting blade!

The replacement of the cutting blade (27) should be done by an experienced user! Rework or sharpening blades is not recommended unless done by a qualified service center.



NOTE: We strongly recommend jacking the product when performing inspection and work on the cutting blade (27). Avoid tilting the product in order to prevent fuel and oil leakages.

1. Keep the under body and cutting blade (27) clean and free of debris. Remove clippings from the rear discharge chute.
2. Check all nuts and bolts periodically for tightness before operation. After prolonged use, especially in sandy soil conditions, the cutting blade (27) will become worn and lose some of the original shape. The cutting efficiency will be reduced and the cutting blade should be replaced.
3. Keep the cutting blade (27) sharp to ensure a good cutting performance. Replace a worn or damaged cutting blade with a new one of the same type or have it sharpened by a qualified specialist.

4. If jacking the product is not possible, tilt it to the right side so that the fuel tank cap (9) side is up. This helps to prevent fuel leakage and harder starting due to flooding of the carburetor (10).
5. Loosen the hex bolt (27e) counterclockwise using a suitable wrench (size 17 mm) and remove it together with the cup washer (27d), the cutting blade (27), the blade holder (27c) and the pin (27b) from the spindle (27a) (Fig. 24).
6. Slide the pin (27b) into the slot on the spindle (27a), then refit the blade holder (27c) onto the spindle (27a) and hold the assembly in position.
7. Replace the cutting blade (27) with a new one of the same type. Check the status of the flange onto the blade holder (27c), then attach the cutting blade (27) properly and fix the assembly with the cup washer (27d) and hex bolt (27e). Tighten the hex bolt (27e) clockwise with 40-45 N.m to ensure safe operation of your product (Fig. 24).



DANGER! Before fitting the cutting blade (27) , making sure that the blade's wings are facing toward the interior of the blade deck.

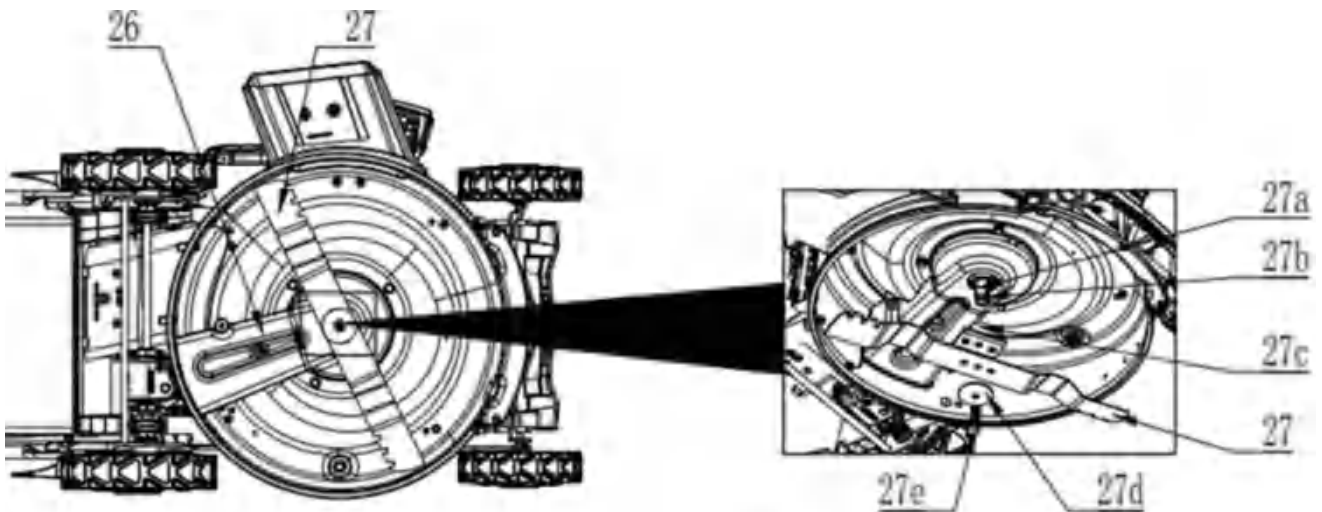


Fig. 24



DANGER! If the cutting blade (27) is not torqued properly, they could become loose and be thrown from the product and seriously hurt or kill the operator or bystanders.



NOTE: Replace this cutting blade (27) after 50 hours mowing or 2 years whichever is sooner regardless of condition. If the cutting blade is cracked or damaged, you must immediately replace it with a new one.

8. Lubricate the cutting blade (27) after each use to prolong the life span of both the cutting blade and product. Apply lubrication oil/grease along the edges of the cutting blade (27).

Grass bag

1. Inspect the grass bag (24) before each use. Do not use it if you find any damage.
2. Clean the grass bag (24) after operation using water and mild soap.
3. Let the grass bag (24) dry thoroughly before storing to avoid mildew.

Wires

Check the performance of the self-propelling wire (5) and the brake wire (4) before each use. Ask a qualified specialist to adjust it if necessary.



WARNING! Do not use the product with defective or loose wires!

Air filter



NOTE: A properly maintained air filter (10b) helps to prevent dirt from entering the engine. Entering dirt can cause blockages that can lead to premature engine wear or problems with starting or running the engine.

Wash the air filter (10b) every 25 hours (in dusty conditions or when airborne debris is present, clean more often).

1. Inspect the air filter (10b) regularly. Replace it with a new one if necessary.
2. Press two latches (10a) to disengage the air filter cover (10) and remove the air filter cover (10) afterwards (Fig. 25).
3. Remove the air filter (10b) and tap it on a solid surface or blow it with air jet gun to remove dust.
4. Close the air filter cover (10) and ensure two latches (10a) engage properly.

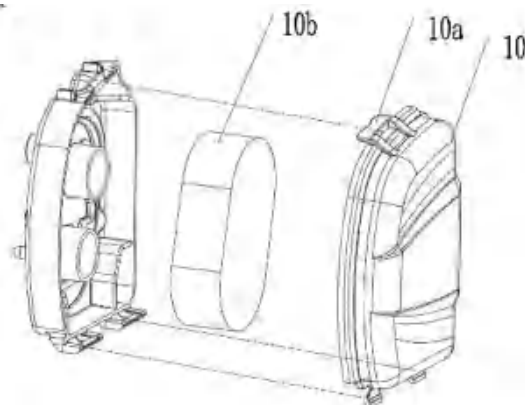


Fig. 25

Spark plug



NOTE: For good performance, the spark plug (15a) must be properly gapped and free of deposits.

Inspect the spark plug (15a) every 25 hours or before long-term storage over 180 days. Clean or replace with a new one if necessary (type: RC12YC).

1. Disconnect the spark plug connector (15) (Fig. 26).
2. Loosen the spark plug anti-clockwise using the spark plug wrench (30) and remove it carefully (Fig. 27).

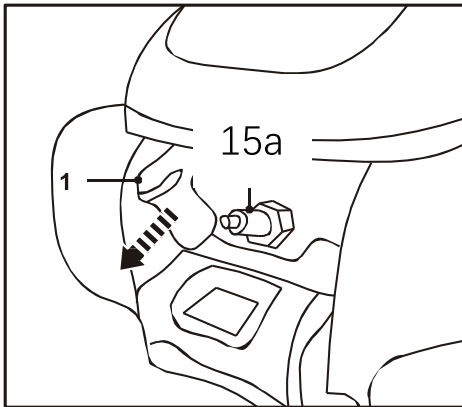


Fig. 26

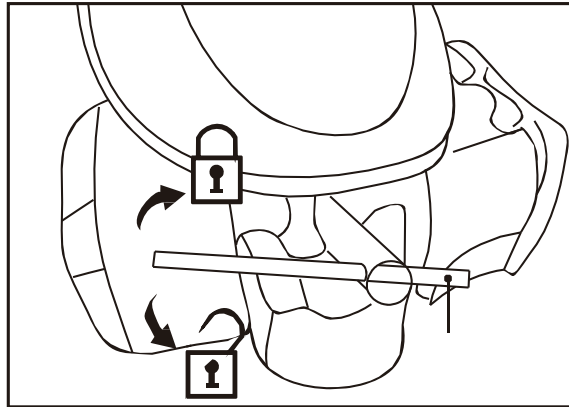


Fig. 27

3. Check the spark plug (15a) for damage and wear. The colour of the electrode should be light-brown.
4. Remove the deposits from the electrode with a soft wired brush. Avoid heavy cleaning of the electrode.
5. Dry the spark plug (15a) with a soft cloth, if it is wet from fuel.
6. Check the spark plug gap. It should be 0.7-0.8 mm(0.028-0.031.in) (Fig. 28).
7. Replace with a new spark plug if either the electrode or the insulation is damaged.
8. When replacing the spark plug (15a), first screw it in hand tight and then lightly tighten it with the spark plug wrench (30).

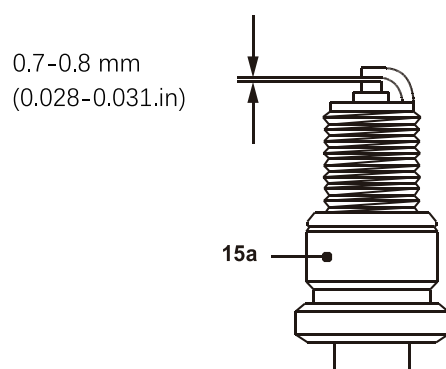


Fig. 28



WARNING! Do not over tighten the spark plug (15a) to avoid any damage!

Fuel



NOTE: Gas deteriorates over time. Engine starting may be difficult if you use gas kept for more than 30 days.

1. Do not allow gas to remain in your engine for long term storage. It must be drained out into a container.(Fig. 29)
2. After draining the fuel tank, replace the fuel cap back and tighten it, start the engine, continue to run the engine until it stops from the lack of fuel in the carburetor fuel bowl. Running time is about 5 minutes.



WARNING! DO NOT run the engine too long, or it will damage the engine!

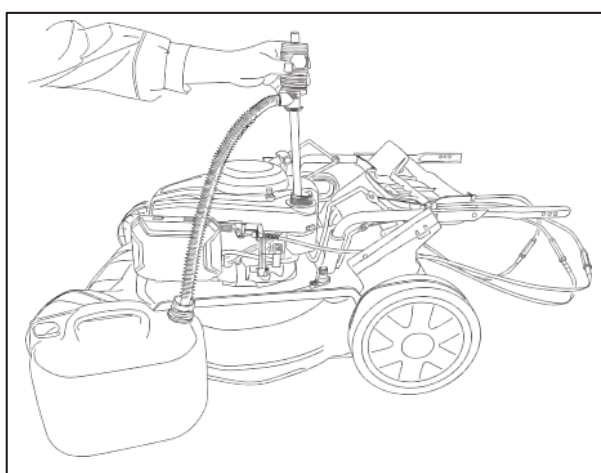


Fig. 29

Checking engine oil



NOTE: Check the oil level and quality before each use.

The oil must be replaced after every 6 months or after 50 hours of operation.

1. Unscrew and remove the oil tank cap (19).
2. Gradually add good-quality engine oil (SAE 10W-30). Allow the oil to settle.
3. Check the oil level frequently while filling. Wipe the oil dipstick clean, refit and tighten the oil tank cap (19), and then remove the dipstick again.
4. The oil level must be between the oil level markings. Add more oil if necessary. Do not overfill. Capacity: 470 ml.
5. After filling oil, wait 1 minute and then recheck the oil level.
6. Wipe the spilt oil with a soft cloth and reattach the oil tank cap (19).

Draining engine oil



NOTE: Drain the oil every 50 hours of operation or every 6 months.



WARNING! Before tilting the product for maintenance, the fuel tank must be empty, otherwise the fuel can leak out and result in a fire or explosion!

1. The oil should be clear and of normal viscosity. If the oil is sticky or contains dirt particles, draining the oil is necessary.
2. Unscrew and remove the oil tank cap (19).
3. Place a suitable container next to the product to collect the drained oil. Ensure the container has sufficient capacity.
4. Tilt the product to the side to drain the oil into the oil container.
5. Wipe spilled oil up.
6. Refill the oil tank as described in the “Fuel and engine oil - Engine Oil” section.

Carburettor

The carburetor (11) is preset by the manufacturer. Should it be necessary to make any changes, contact an authorised service center or a similarly qualified specialist. Do not attempt to make any adjustments by yourself.

Muffler

Should it be necessary to modify or replace the muffler (17), contact an authorised service center or a similarly qualified specialist. Do not attempt to make any adjustments by yourself.

Valve play

Have a qualified specialist check and adjust the valve play. Details for the specialist: IN = 0.10 ± 0.02 mm, EX = 0.10 ± 0.02 mm.

Repair



NOTE: Adjustment of the self-propelling wire (5) may be necessary as it may stretch over time.

If the rear wheels (21) do not rotate when operating the self-propelling lever (1), it may be necessary to adjust the self-propelling wire (5) (Fig. 30).

1. Ensure that the upper locking nut (5a) is held steady by the spanner (size: 10mm), then use the other spanner (size: 8mm) to turn the lower sleeve (5b) counterclockwise to loosen it.
2. Continue to turn the lower sleeve (5b) counterclockwise (downward) and leave 3- 5 threads.

3. Ensure that the lower sleeve (5b) is held steady by the spanner (size: 8mm), then use the spanner (size: 10mm) to turn the upper locking nut (5a) in clockwise to tighten it.

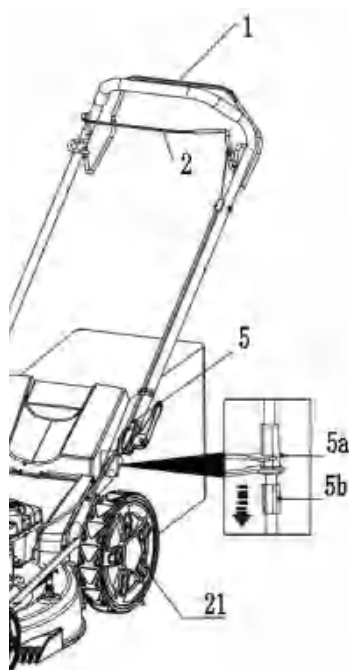


Fig. 30

If this problem cannot be solved, please contact an authorized service centre or qualified personnel for inspection and repair.

This product does not contain any other parts that can be repaired by the consumer.

Storage



NOTE: Good storage conditions are important for keeping your product trouble free.

1. Stop the engine and disconnect the spark plug connector (15).
2. Clean the product as described in the “Cleaning” section.
3. Store the product and its accessories in a dry, frost-free, well-ventilated place.
4. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 50°F (10°C) and 86°F (30°C).
5. We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.
6. Empty the fuel tank if you are not going to use the product for an extended period of time (more than 30 days) and before storing it for the winter.

Transportation

1. Stop the engine and disconnect the spark plug connector (15).
2. Adjust the cutting height to the highest position as described in the “Cutting height adjustment” section.
3. Attach transportation guards, if applicable.
4. Always transport the product by the upper handle bar (2) and the transport handle.
5. If a suitable loading ramp is not available, ask another person for assistance when loading the product on a vehicle.
6. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
7. Secure the product to prevent it from slipping or falling over, loss of fuel, damage and injury.

Troubleshooting

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore check the product using this section. In most cases the problem can be solved quickly.



WARNING! Only perform the steps described within these instructions! All further inspection, maintenance and repair work must be performed by an authorised service centre or a similarly qualified specialist if you cannot solve the problem yourself!

Problem	Possible cause	Solution
1. Engine does not start	1.1. Not enough fuel in fuel tank 1.2. Spark plug is wet 1.3. Spark plug is damaged 1.4. Spark plug connector is loose 1.5. Air filter is dirty 1.6. Spark plug is loose 1.7. Spark plug gap is incorrect 1.8. Carburettor is flooded with fuel 1.9. Faulty ignition module	1.1. Add fuel 1.2. Dry spark plug 1.3. Replace spark plug 1.4. Attach properly 1.5. Clean air filter 1.6. Tighten spark plug 25-30 N.m 1.7. Set gap between electrodes at 0.7 - 0.8 mm 1.8. Remove the spark plug and pull recoil starter handle continuously until carburettor clears itself 1.9 Contact an authorised service agent
2. Engine stops	2.1. Not enough fuel in fuel tank 2.2. cutting blade is blocked	2.1. Add fuel 2.2. Remove blockage
3. Engine difficult to start or loses power	3.1. Dirt, water or stale fuel in the tank 3.2. Vent hole in fuel tank cap is clogged 3.3 Air filter is dirty	3.1. Drain fuel and clean tank. Fill tank with clean, fresh fuel 3.2. Clean or replace fuel tank cap 3.3. Clean air filter
4. Engine operates erratically	4.1. Spark plug is defective 4.2. Spark plug gap is incorrect 4.3. Air filter is dirty	4.1. Install new, correctly gapped plug 4.2. Set gap between electrodes at 0.7 - 0.8 mm

Problem	Possible cause	Solution
		4.3 Clean air filter
5. Engine idles poorly	5.1. Air filter is dirty 5.2. Air vents are clogged 5.3. Cylinder fins are blocked	5.1. Clean air filter 5.2. Remove debris from vents 5.3. Remove debris from cylinder fins
6. Engine skips at high speed	6.1. Gap between electrodes of spark plug is too close	6.1. Set gap between electrodes at 0.7 - 0.8 mm
7. Engine overheats	7.1. Air vents are clogged 7.2. Incorrect spark plug	6.1. Remove debris from vents 6.2. Install correct spark plug and clean cylinder fins.
8. Unsatisfactory result	8.1. Cutting blade is dull 8.2. Cutting material exceeds capacity 8.3. Cutting height is incorrect 8.4. The walking line is not straight	7.1. Replace with a new one 7.2. Only cut materials ac. to the capacity of the product 7.3. Adjust cutting height 7.4. Lock the two front wheels (15) in mowing
9. Excessive vibration/noise or exhaust	9.1. Cutting blade is dull/damaged 9.2. Bolts/nuts are loose 9.3. Gas/oil type is incorrect	9.1. Replace with a new one 9.2. Tighten bolts/nuts 9.3. Drain the gas/oil and refill with the correct gas/oil

Recycling and disposal

Old products are potentially recyclable and do not, therefore, belong in your household rubbish. You are requested to assist us and our contribution to saving resources and protecting the environment by handing in this appliance at an equipped collection centre (if there is one available).

Gas, oil, used oil, mixtures of oil and gas and objects soiled with oil e.g. cleaning cloths do not belong in the household rubbish. Dispose of oil contaminated items in accordance with the local guidelines and hand them in at recycling centre.

The product comes in a package that protects it against damage during shipping. Keep the package until you are sure that all parts have been delivered and the product is function properly. Recycle the package afterwards.

Guarantee

LIMITED WARRANTY

KEEP YOUR RECEIPT

Proof of purchase will be required to substantiate any warranty claim.

WHAT IS COVERED:

A-iPower Corp. warrants to the original retail purchaser in the United States of America, or Canada that this product is free of defects in material and workmanship and agrees, at A-iPower Corp's direction, to either repair, provide replacement parts for, or replace (without charge for parts or labor) any product or component with a material defect for a period of 2 years from the date of purchase, except as limited below. Warranty service and replacement parts are warranted only for the duration of the warranty on the original product. All replaced parts or products become a property of A-iPower Corp. This product is also covered by an Emissions Control System Warranty which is separate from and in addition to the warranty.

Warranty

A-iPower Limited Warranty – 2 Years.

Thank you for choosing A-iPower products. To ensure proper registration of your product warranty, please submit your warranty registration along with proof of purchase within 10 days of the date of purchase, this can be done by:

- A. Completing the Warranty Registration form at the back of this manual and mailing to:
A-IPOWER CORP.10887 COMMERCE WAY UNIT A FONTANA CA 92337 USA
- B. Visit us at www.aipower.com and click the product registration icon

Warranty Term

A-iPower will provide warranty for any of its products purchased through any authorized A-iPower dealer in North America to the original purchaser and will be warranted against defects in material or workmanship for a period of two (2) years for Consumer use from date of purchase, subject to exclusions noted herein.

Consumer Use" – residential household use by a retail consumer

How to Obtain Warranty Service

Please call our Customer Service Dept. 855-888-3598 or e-mail to support@a-ipower.com
Please have necessary information available – Model Number, Serial Number, Proof of Purchase.

DO NOT RETURN THE PRODUCT TO THE PLACE OF PURCHASE

A-iPower Customer Service Dept. will assist with all product related questions and will help troubleshoot issues and will send any replacement parts as necessary while product is within the warranty period at no charge. If the issue cannot be resolved then A-iPower Customer Service Dept. at its discretion determine and authorize diagnosis and repair through one of its authorized Service Centers. A-iPower Corp. at its discretion may choose to provide a replacement part, component, or product. Service or replacement of parts at any unauthorized repair facility without prior authorization will not be covered by this warranty.

Warranty Exclusions

This warranty does not cover the following:

Regular wear and maintenance – this warranty will not cover repair when normal use has exhausted the lifetime of a part(s) or engine.

Installation and Maintenance- this warranty does not cover improper or unauthorized assembly, alteration, modification or any other damage resulting from misuse or neglect.

Normal maintenance parts- this warranty does not cover spark plugs, air filters, adjustments, or other related service due to obstructions and other build ups resulting from improper maintenance

Additional exclusions-this warranty does not cover wearable parts such as filters, spark plugs, o-rings, batteries etc. It does not cover any cosmetic defects such as scratches to paint, decals etc. It does not cover any damage resulting from use of non-original manufacturer's parts, use of after-market parts. It does not cover any failures due to acts of God and other force majeure events beyond the control of the manufacturer.

Warranty limits and Implications and Consequential Damages

A-iPower is not obligated to cover any loss of time, use of product, freight cost, or any other incidental or consequential claim from the use of this product. This warranty is in lieu of all other warranties, express or implied

This warranty gives you specific legal rights which vary from state to state.

MERCHANDISE RETURN GUIDELINES

- All products must be returned in original or equivalent packaging. Improperly packaged returns will not be accepted.
- Must have adequate packing for transportation
- Federal Law requires that all machines that utilize gasoline, oil, or other flammable liquids must be drained completely & thoroughly prior to shipment.
- Gas caps and oil plugs must be left off for 24 hours prior to shipping. Please note: liability for this violation of the law resides with the sender of the shipment.
- Return to address provided in return authorization, using the parcel service required.

Units returned without authorization will not be honored.

- Please Note: Refunds will not be granted for items that have been modified or damaged by abuse or usage not in accordance with product instructions.



Fontana, CA 92337 EE.UU.

Teléfono: 855-888-3598

support@a-ipower.com

www.aipower.com