

1



### ADD OIL:

Place unit on a flat surface, open access panel, remove oil fill cap/dipstick. With provided funnel, add 0.4 Qt / .38 L / 12.8 Oz of SAE 10W-30 oil. Replace fill cap/dipstick.

2



### ADD GAS:

Fill with fresh, unleaded fuel. Capacity: 1.1 Gal. / 4.2 L. Min. 87 Octane, 0-10% Ethanol

3




### STARTING SC2000i:

3a: Disconnect any electrical devices and Switch LOW IDLE to OFF



3b: Move inverter to well ventilated area.

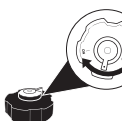

3c: Turn fuel cap air vent to "ON".



3d: Turn MULTI-Switch to START/CHOKE position if engine is cold. Use RUN position if engine is warm



Once engine starts and stabilizes, rotate MULTI-Switch from "Choke/Start" position to RUN and pull cord.

4

### TO STOP:

5a: Disconnect electrical items from unit.


5b: Rotate MULTI-Switch to STOP.

5c: Turn fuel cap air vent to "OFF".

5



READ & UNDERSTAND YOUR OWNERS MANUAL & ALL WARNINGS BEFORE RUNNING YOUR GENERATOR

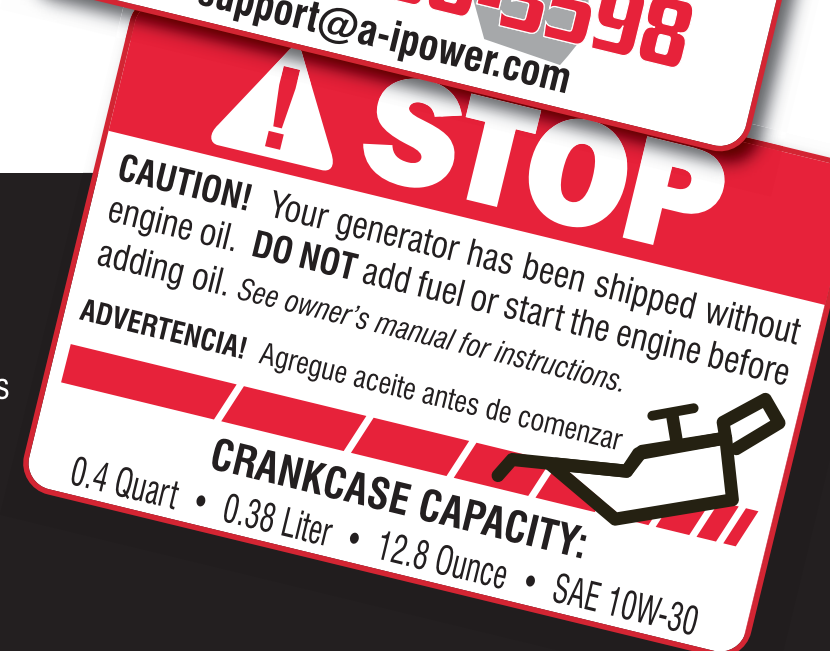

## DANGER

USING A GENERATOR INDOORS CAN KILL YOU IN MINUTES. GENERATOR EXHAUST CONTAINS CARBON MONOXIDE. THIS IS A POISON YOU CANNOT SEE OR SMELL.



NEVER USE INSIDE A HOME OR GARAGE, EVEN IF DOORS AND WINDOWS ARE OPEN.



ONLY USE OUTSIDE AND FAR AWAY FROM WINDOWS, DOORS, AND VENTS.

3b

## PARALLELING MADE EASY! QUICK & SIMPLE SET-UP:



- 1) Make sure all power cords are disconnected from generators
- 2) Connect the two generators with the parallel cables supplied; Red to Red / Black to Black / Ground to Ground connection. NOTE: Only use factory supplied cables
- 3) Start both units (refer to starting procedures in manual)
- 4) One of the units can be used for maximum power output of 3000 watts  
**NOTE: Please read manual instructions prior to parallel operation**
- 5) Do not disconnect parallel cables while generator is running and power cords connected