

AOG

AMERICAN OUTDOOR GRILL

Accent Color Panels

for Grill and Side Burner
Front Face Panels



(Model AO-24L-BLK shown)

	Series	Appliance Models	Accent Color Panel Models
AOG Grills	L-Series	AOG24L(N,P)	AO-24L-***
		AOG30L(N,P)	AO-30L-***
		AOG36L(N,P)	AO-36L-***
	T-Series	AOG24T(N,P)	AO-24T-***
		AOG30T(N,P)	AO-30T-***
		AOG36T(N,P)	AO-36T-***
AOG Side burners	L-Series	AOG2SBL(P)	AO-2SB-***
	T-Series	AOG2SBT(P)	AO-2SB-***

***Colors: BLK, WHT, PRD, FBE, SGY, HTL, FGN, TYW

Table 1 - Model compatibility

This accent color panel is for installation on compatible models listed on Table 1. Call your local dealer for ordering information.

Note: Color tones may vary.

PREPARE FOR INSTALLATION

CAUTION: Before installing the accent color panel, ensure the appliance is **OFF** and completely cool.

1. Pull the control knobs directly outward from the stems and set them aside. See Fig. 1-1.
2. Using a Phillips-head screwdriver, loosen (do not fully remove) the fastener screws securing the control knob bezels (see Fig. 1-2, A).
3. Slide the bezels upward to free from the screws (Fig. 1-2, B), then pull outward to remove (Fig. 1-2, C).
4. Use a damp clean cloth (or soapy water solution) and/or a grill cleaner to clean the front face panel surface of grease and dirt before application.
Always wipe with the grain.

Note: Ensure front panel is dry before continuing.

Installation continued on the following page.



Fig. 1-1 Remove knobs

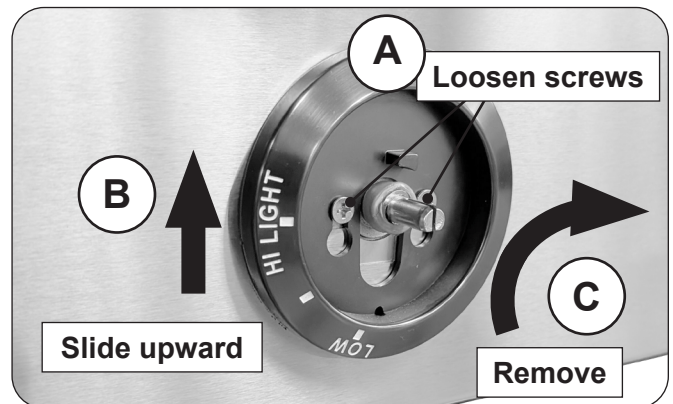


Fig. 1-2 Remove bezels

INSTALL ACCENT COLOR PANEL

Note: Remove drip tray before installing accent color panel, if applicable.

1. Remove the film from the pre-installed adhesive strip pieces located on the bottom flange of the panel shown in Fig. 2-1.
2. Slide the panel underneath the unit's face frame. See Fig. 2-2, A.
3. Follow the step below as applicable:

Grills: Align the backburner etching (if equipped) with the panel (Fig. 2-2, B), as applicable.

Double Side Burner: Position the color panel over the front panel of the double side burner, ensuring the rectangular cutout aligns with the AOG logo plate (see Fig. 2-3, B).

Griddle: Position the accent color panel over the front face panel.

4. Press the accent panel firmly onto the front face panel surface. See Fig. 2-2, C. Then press upward to ensure the adhesive strips hold the panel in place.
5. Reinstall all bezels and control knobs as shown in Fig. 2-4.

CLEANING

Use a soapy water solution and a clean cloth to remove grease and dirt from the surface of the accent color panel.

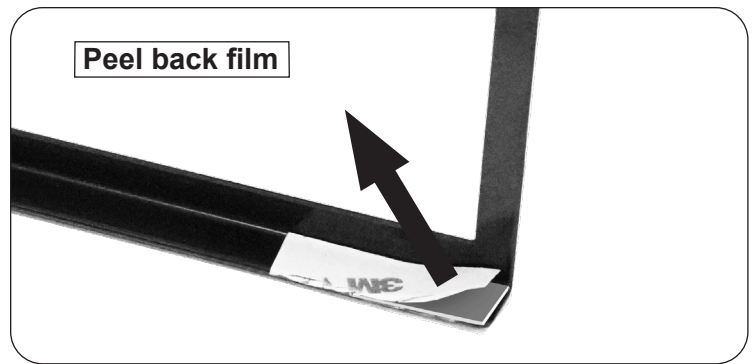


Fig. 2-1 Remove film from adhesive strips

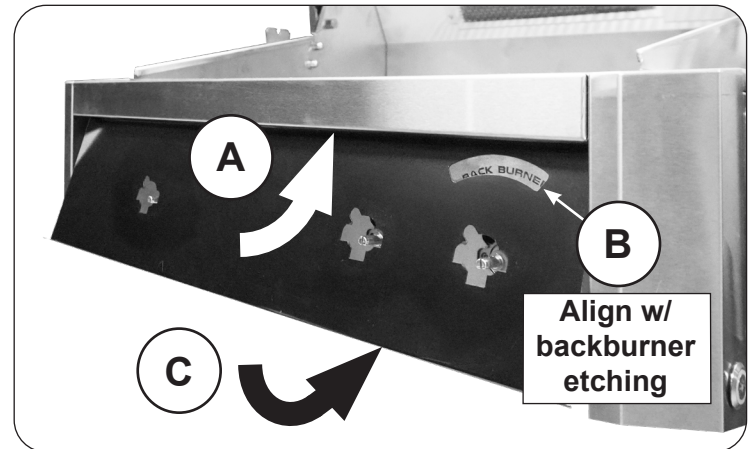


Fig. 2-2 Install accent panel on grill/griddle

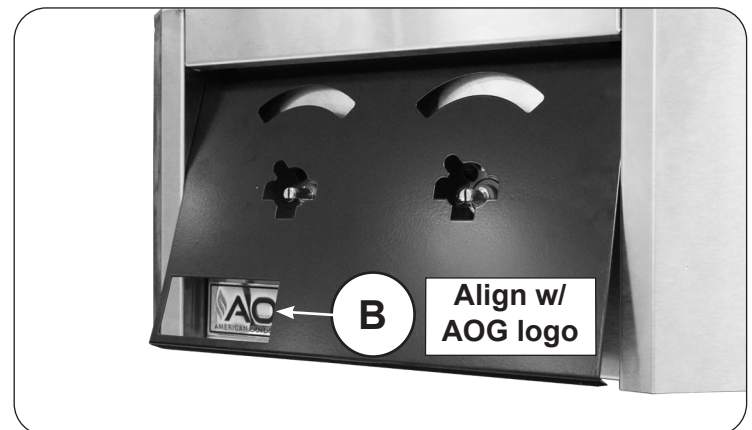


Fig. 2-3 Align panel with AOG logo

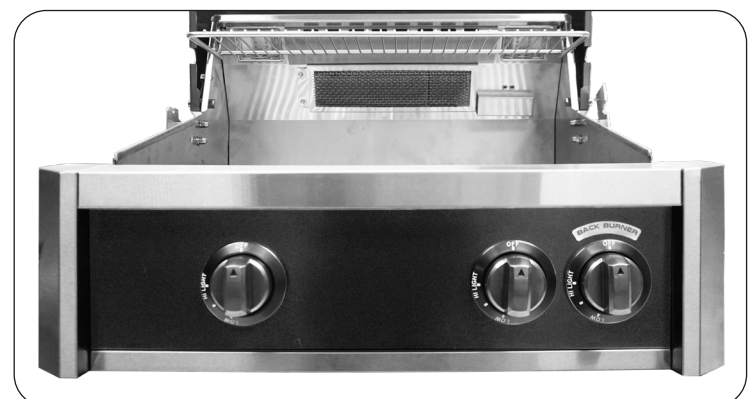


Fig. 2-4 Installation complete