



ARIENS
THE KING OF SNOW

Sno-Thro®

Operator's Manual
Manuel du Utilisateur

Professional 21


Models

938024 – SSR

(SN 000101 +)

938025 – SSRC

(SN 000101 +)

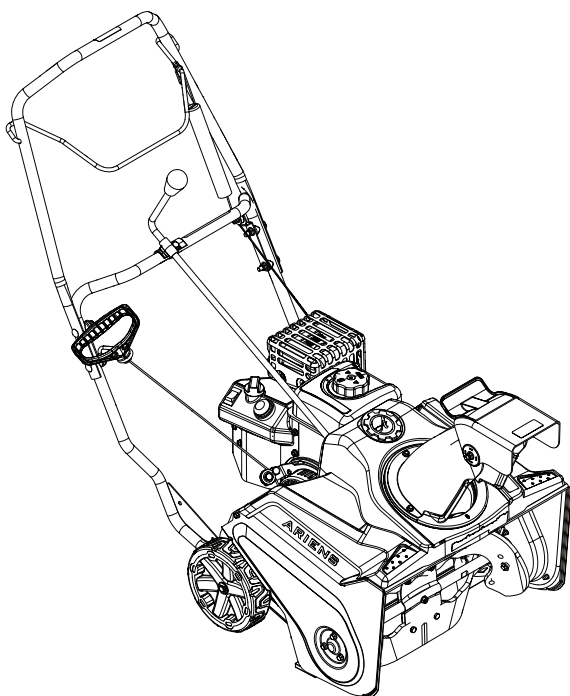

EN ENGLISH

FR FRANÇAIS

05147700A • 2/19

Printed in USA

TABLE OF CONTENTS

WELCOME	1	Transporting Unit	12
Register Your Product!	1	For Best Performance	12
SAFETY	2	MAINTENANCE	13
Practices & Laws	2	Maintenance Schedule	13
Emission Control System	2	Service Parts	13
Required Operator Training	2	Clean Unit	13
Safety Alert Symbol	2	Check Engine Oil	13
Signal Words	2	Change Engine Oil	13
Safety Decals	3	Check Fasteners	13
Safety Rules	4	Check Deflector Resistance	13
CONTROLS & FEATURES	8	Check Auger Paddle Wear	14
Engine Switch	9	Check Scraper Blade Wear	14
Choke Control Knob	9	Check Belt Wear	14
Fuel Valve	9	SERVICE & ADJUSTMENTS	14
Primer Bulb	9	Replace Auger Paddles	14
Hour Meter	9	Adjust Auger Cable	15
Auger Control Lever	9	Replace Drive Belt	16
Discharge Chute Handle	9	Replace Scraper Blade	17
Discharge Chute Rotation Lever	10	STORAGE	18
Discharge Chute Deflector Lever	10	Short Term Storage	18
BEFORE OPERATION	10	Long Term Storage	18
Check Engine Oil	10	Start-of-Season Fuel Preparation	18
OPERATION	11	ACCESSORIES	18
Emergency Stopping	11	TROUBLESHOOTING	19
Start The Engine	11	SPECIFICATIONS	20
Operate Unit	11	WARRANTY	21
Stop The Engine	12		

WELCOME

Congratulations on your purchase and welcome to the Ariens family! Every machine in the Ariens lineup is designed for long-lasting and unsurpassed performance. We are confident your machine will be part of your family for many years to come.

Have Questions or Need Assistance?


www.ariens.com

A parts manual for your unit is available for free download or purchase at www.ariens.com.

REGISTER YOUR PRODUCT!

It is extremely important to register your product at time of purchase. Product registration activates the warranty and establishes a communication link from AriensCo.

Locate the model and serial number decal on your unit and register those numbers online at www.ariens.com. See Figure 1 for decal location. Be aware that the original selling dealer may have already completed product registration on behalf of the original purchaser.

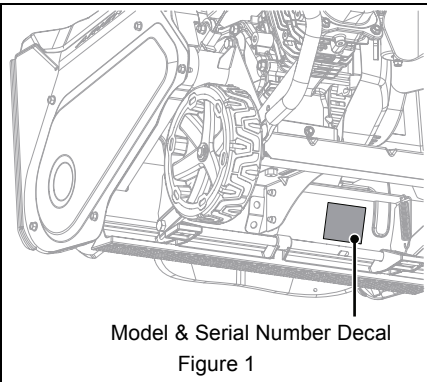

Record model number here.

Record serial number here.

MANUALS

Before operating or servicing the unit, carefully and completely read the manuals provided with the unit. They contain safety instructions and important information about unit controls.

The engine on this unit is covered by a separate manual. Refer to the engine manual for engine service recommendations. Contact the engine manufacturer for a replacement manual if necessary.

Your dealer must review important information in this manual with you before or upon delivery of the unit. It is your responsibility to read and understand all safety precautions and instructions in the manuals. If you do not understand or have difficulty following the instructions, contact your Ariens dealer for assistance. To locate your nearest Ariens dealer, go to www.ariens.com.

DISCLAIMER

Ariens reserves the right to discontinue, make changes to, and add improvements upon its products at any time without public notice or obligation. The descriptions and specifications contained in this manual were in effect at printing. Equipment described in this manual may be optional. Some illustrations may not be applicable to your unit.

SAFETY

Read these safety rules and follow them closely. Failure to follow these rules could lead to loss of control of unit, severe personal injury or death to you or bystanders, or result in damage to property or the machine.

PRACTICES & LAWS

Practice usual and customary safe working precautions. Learn applicable rules and laws in your area. Always follow the practices set forth in this manual.

EMISSION CONTROL SYSTEM

This equipment and/or its engine may include exhaust and evaporative emissions control system components required to meet U.S. Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB) regulations. Tampering with emission controls and components by unauthorized personnel may result in severe fines or penalties. Emission controls and components can only be adjusted by an Ariens dealer or an authorized engine manufacturer's service center. Contact your Ariens Equipment Retailer concerning emission controls and component questions.

REQUIRED OPERATOR TRAINING



Read and understand the Operator's Manual and decals on the unit. This information is for your safety and the proper use of your equipment. Failure to follow these

instructions and warnings may cause death or serious injury. If you have purchased this product from an Ariens dealer, the dealer can provide you with training.

Familiarize yourself and any other operators with all controls and the safe use of the features of this unit. If you loan, rent or sell this product to others, provide them with all manuals.

If you have any questions, please call our customer support line at 920-756-4688 or contact us at www.ariens.com. Do not use this equipment if, after reading the Operator's Manual and the on-board decals, you have any questions about the safe use of this product.



WARNING: AVOID INJURY. This snow thrower is capable of crushing or amputating body parts. Failure to observe the safety instructions in the manuals and on decals could result in serious injury or death.

ALWAYS disengage auger, stop unit and engine and allow moving parts to stop before leaving operator's position.

SAFETY ALERT SYMBOL



This is the safety alert symbol. It means:

- **ATTENTION!**
- **YOUR SAFETY IS INVOLVED!**

When you see this symbol:

- **BECOME ALERT!**
- **OBEY THE MESSAGE!**

SIGNAL WORDS

The safety alert symbol above and signal words below are used on decals and in this manual. Read and understand all safety messages.

1. Danger



DANGER: Indicates an **IMMINENTLY HAZARDOUS SITUATION!** If not avoided, **WILL RESULT** in death or serious injury.

2. Warning



WARNING: Indicates a **POTENTIALLY HAZARDOUS SITUATION!** If not avoided, **COULD RESULT** in death or serious injury.

3. Caution



CAUTION: Indicates a **POTENTIALLY HAZARDOUS SITUATION!** If not avoided, **MAY RESULT** in minor or moderate injury. It may also be used to alert against unsafe practices.

4. Notice

NOTICE: Indicates information or procedures that are considered important but not hazard related. If not followed, property damage could result.

5. Important

IMPORTANT: Indicates general reference information worthy of special attention.


SAFETY DECALS

The safety decals on your machine are visual reminders of the important safety information in this manual. All messages on your unit must be fully understood and carefully followed. Safety decals on the machine are explained below.

Always replace missing or damaged safety decals. Replacement decal information is in the parts manual for your machine. Decals can be ordered from your dealer.

See Figure 2 for safety decal locations.

Safety Decal Locations

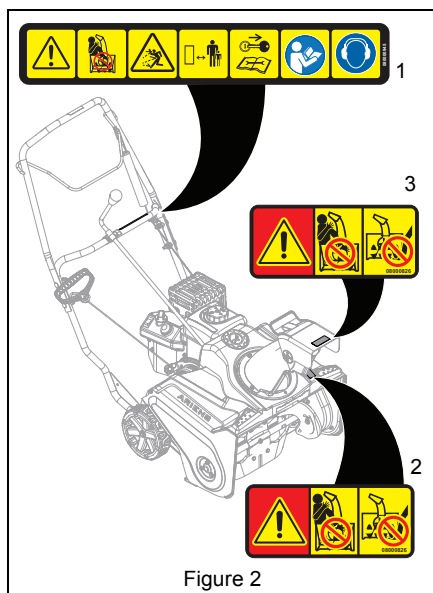

Safety Decal Descriptions

1. DANGER!



Danger!




Only use clean-out tool to clear blockages. NEVER use your hands.



NEVER direct discharge towards persons or property that may be injured or damaged by thrown objects.



Keep people away from unit while operating. Keep children out of work area and under watchful care of a responsible adult.

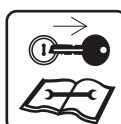

Stop engine and read manual before making any repairs or adjustments.



Read operator's manual.



Wear appropriate hearing protection.

2. DANGER!



Danger!



ROTATING PARTS.

Keep clear of auger while engine is running.



- Read Operator's Manual.
- Allow operation only by properly trained adult, never children.
- Stop engine prior to leaving the operator's position for any reason.
- Keep all controls, guards and safety devices properly serviced and functional.
- Never direct discharge towards persons or property that may be injured or damaged by thrown objects.

3. DANGER!



Danger!



ROTATING PARTS! ONLY use clean-out tool to clear blockages. **NEVER** use your hands. High speed auger/impeller rotates below discharge opening. Wait for all moving parts to stop before removing clogs or servicing.



SAFETY RULES

The following safety instructions are based on the B71.3 specifications of the American National Standards Institute in effect at the time of production.

Training

Read, understand and follow all instructions on the machine and in the manual(s) before operating this unit. Be thoroughly familiar with the controls and the proper use of the equipment. Know how to stop the unit and disengage the controls quickly.

Never allow children to operate the equipment. Never allow adults to operate the equipment without proper instruction, including actual operation.

Keep the area of operation clear of all persons, particularly small children. Keep children under watchful care of a responsible adult. Be alert and shut off unit if children enter area.

Exercise caution to avoid slipping or falling, especially when operating the snow thrower in reverse.

Always remove key and/or wire from spark plug before assembly, maintenance or service. Unintentional engine start up can cause death or serious injury.

Complete a walk-around inspection of the unit to understand the unit, your work area, and all safety decals.

Preparation

Always check overhead and side clearances carefully before operation.

Always be aware of traffic when operating along streets or curbs.

Thoroughly inspect the area where the equipment is to be used and remove all pets, doormats, sleds, boards, toys, wires, debris and other foreign objects.

Disengage the auger control lever before starting the engine (motor).

Handle fuel with care; it is highly flammable. • Use an approved fuel container. • Never add fuel to a running engine or hot engine. • Fill fuel tank outdoors with extreme care. Never fill fuel tank indoors. • Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground, away from your vehicle, before filling. • When practical, remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment on a trailer with a portable container, rather than from a gasoline dispenser nozzle. • Keep the nozzle in contact with the rim of the fuel tank or container opening at all times, until refueling is complete. Do not use a nozzle lock-open device. • Replace gasoline cap securely and wipe up spilled fuel. • If fuel is spilled on clothing, change clothing immediately.	After striking a foreign object, stop the engine (motor), remove the wire from the spark plug, thoroughly inspect the snow thrower for any damage, and repair the damage before restarting and operating the snow thrower.
Never attempt to make any adjustments while the engine (motor) is running (except when specifically recommended by manufacturer).	If the unit should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause.
Always allow unit and engine to adjust to outdoor temperature before clearing snow.	Stop the engine (motor) whenever you leave the operating position, before unclogging the auger/impeller housing or discharge chute, and when making any repairs, adjustments or inspections.
	When cleaning, repairing or inspecting the snow thrower, make certain the auger/impeller and all moving parts have stopped. Disconnect the spark plug wire and keep the wire away from the plug to prevent someone from accidentally starting the machine.
	Do not run the engine (motor) indoors. Open the outside doors; exhaust fumes are dangerous.
	Never operate the snow thrower without proper guards and other safety protective devices in place.
	Thrown objects can cause injury. Never direct the discharge toward people or areas where property damage can occur from thrown objects. Keep children and others away.
Operation	Do not overload the machine capacity by attempting to clear snow at too fast a rate. Slow down and turn corners slowly.
Never leave a running unit unattended. Always shut off engine before leaving unit.	Never operate the machine at high transport speeds on slippery surfaces. Look behind and use care when backing.
Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.	Do not operate in reverse unless absolutely necessary. Always back up slowly and look down and behind before and while backing.
Moving and/or rotating parts can cut off body parts such as fingers or a hand. Always keep hands, feet and clothing away from all rotating parts during operation.	Do not carry passengers.
Always keep hands away from all pinch points.	Disengage attachment drive when traveling from one work area to another.
Do not touch unit parts which might be hot from operation. Allow parts to cool before attempting to maintain, adjust or service.	Disengage power to the auger/impeller when snow thrower is transported or not in use.
Check for weak spots on docks, ramps or floors. Avoid uneven work areas and rough terrain. Stay alert for hidden hazards.	Use only attachments and accessories approved by the manufacturer of the snow thrower (such as wheel weights, counterweights or cabs).
Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for hidden hazards or traffic.	

This product is equipped with an internal combustion type engine. Do not use unit on or near any unimproved, forest-covered or brush-covered land unless exhaust system is equipped with a spark arrester meeting applicable local, state or federal laws. A spark arrester, if it is used, must be maintained in effective working order by operator.	Always maintain unit in safe operating condition. Damaged or worn out muffler can cause fire or explosion.
Never operate the snow thrower without good visibility or light. Falling snow, fog, etc. can reduce vision and cause an accident.	Keep unit free of ice or other debris. Clean up oil or fuel spills.
Never operate unit after or during the use of medication, drugs or alcohol. Safe operation requires complete and unimpaired attention at all times.	Always keep protective structures, guards, and panels in good repair, in place and securely fastened. Never modify or remove safety devices.
Never allow anyone to operate this unit when their alertness or coordination is impaired.	Never store the machine with fuel in the fuel tank inside a building where ignition sources are present such as hot water heaters, space heaters or clothes dryers. Allow the engine to cool before storing in any enclosure or covering the unit.
Do not throw snow any higher than necessary.	Always refer to operator's manual for important details if the snow thrower is to be stored for an extended period.
Clearing a Clogged Discharge Chute	
Hand contact with the rotating auger/impeller inside the discharge chute is the most common cause of injury associated with snow throwers. Never use your hand to clean out the discharge chute.	Maintain or replace safety and instruction labels as necessary.
To clear the chute: 1. SHUT THE ENGINE OFF! 2. Wait 10 seconds to be sure the auger/impeller blades have stopped rotating. 3. Always use a clean-out tool, not your hands.	Run the machine a few minutes after throwing snow to prevent freeze-up of the auger/impeller.
Maintenance and Storage	
Secure unit so it will not tip over during maintenance.	Personal Protection
Before cleaning, removing clogs or making any inspections, repairs, etc., disengage auger control lever, stop unit and engine, allow moving parts to stop and hot parts to cool.	Do not operate the equipment without wearing adequate winter garments. Avoid loose fitting clothing that can get caught in moving parts. Wear footwear that will improve footing on slippery surfaces.
Make sure the equipment is in safe working condition. Check hardware at frequent intervals for proper tightness. If components are worn or damaged, replace with manufacturer's recommended parts.	Wear adequate safety gear, including safety glasses with side shields, and protective gloves.
Do not change engine governor settings or over-speed engine.	Do not wear loose clothing or jewelry, and tie back hair that may get caught in rotating parts.
Adjust and service as required. All motion of auger/impeller must stop quickly when auger control lever is released.	Protect eyes, face and head from objects that may be thrown from unit. Wear appropriate hearing protection.
Slope Operation	
Operate the snow thrower on level surfaces. Stay off slopes and slippery surfaces.	
Do not clear snow across the face of slopes; go up and down. Exercise extreme caution when operating on slopes. Do not attempt to clear steep slopes.	

Use a slow speed to avoid stops or shifts on slopes. Avoid starting or stopping on a slope. Do not park unit on a slope unless absolutely necessary. When parking on a slope always block the wheels.

Do not operate near drop-offs, ditches, or embankments. Unit can suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.

Fuel

Do not run engine in an enclosed area. Always provide good ventilation. Fumes from engine exhaust can cause injury or death.

Fuel is highly flammable and its vapors are explosive. Handle with care. Use only an approved gasoline container with an appropriately sized dispensing spout.

No smoking, sparks or flames. Always allow engine to cool before servicing.

Never fill fuel tank when engine is running or hot from operation.

Never fill or drain fuel tank indoors.

Replace fuel cap securely and clean up spilled fuel.

Properly remove fuel before tipping unit up onto housing, so no spills will occur.

Towing/Transporting

Always shut off engine and close fuel shut-off valve or drain fuel when transporting unit on a truck or trailer.

Use extra care when loading or unloading unit onto trailer or truck. Secure unit chassis to transport vehicle. Never secure from rods or linkages that could be damaged. Do not transport machine while engine is running.

Accessories

Use only attachments recommended by AriensCo that are appropriate to your use and can be used safely in your application.

CONTROLS & FEATURES

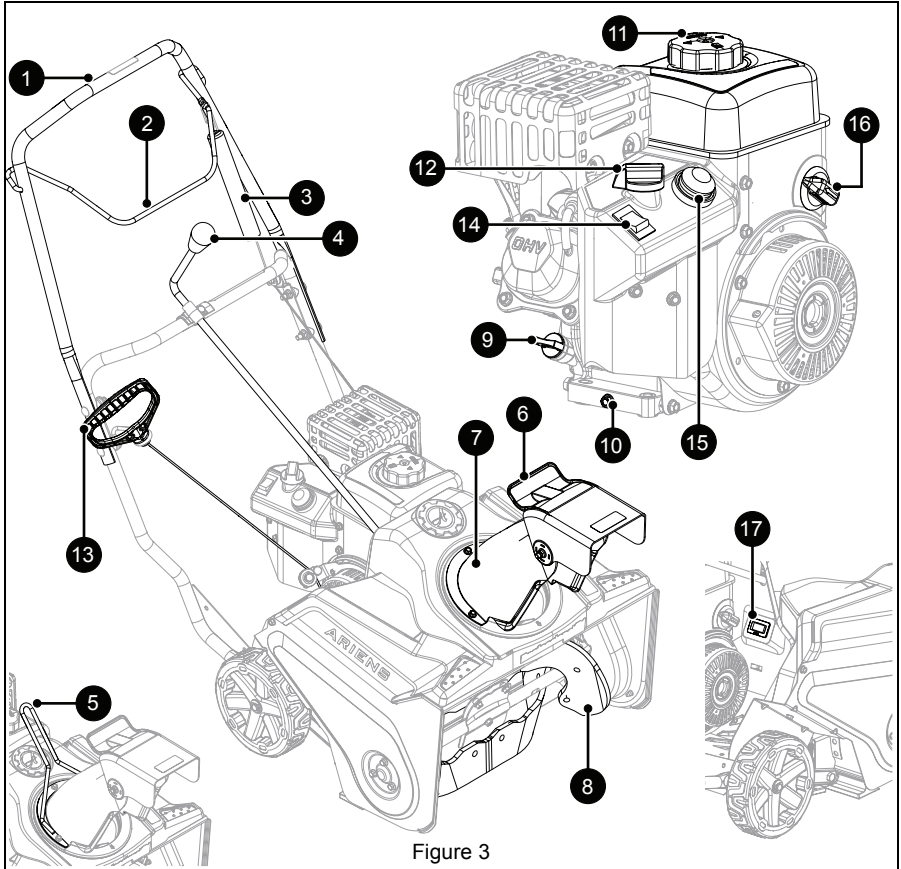


Figure 3

- | | |
|---|---------------------------|
| 1. Handlebar | 9. Oil Fill Port |
| 2. Auger Control Lever | 10. Oil Drain |
| 3. Auger Control Cable Adjustment Plate | 11. Fuel Tank & Cap |
| 4. Discharge Chute Rotation Lever (Model 938025) | 12. Choke Control Knob |
| 5. Discharge Chute Rotation Handle (Model 938024) | 13. Recoil Starter Handle |
| 6. Discharge Chute Deflector Lever | 14. Engine Switch |
| 7. Discharge Chute | 15. Primer Bulb |
| 8. Auger Paddle | 16. Fuel Valve |
| | 17. Hour Meter |



WARNING: AVOID INJURY. Read and understand the *Safety* section before proceeding.

See Figure 3 for all controls and features locations.

ENGINE SWITCH

See Figure 4.

Controls power to the engine. Engine switch must be in the run position to start and operate the engine. Engine will stop and will not start when switch is in the stop position.

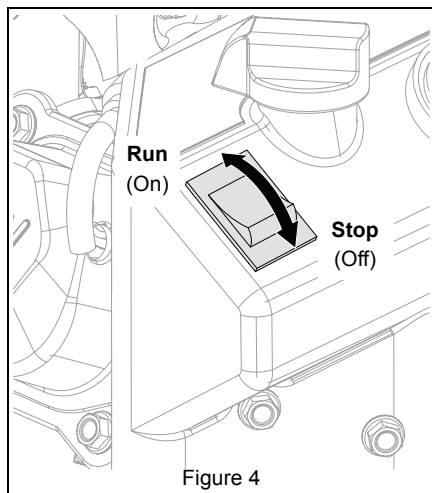


Figure 4

CHOKE CONTROL KNOB

See Figure 5.

Restricts air intake for easier starting on cold engines.

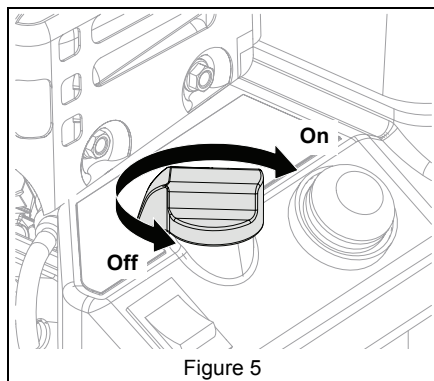


Figure 5

FUEL VALVE

See Figure 6.

Controls fuel flow to the engine.

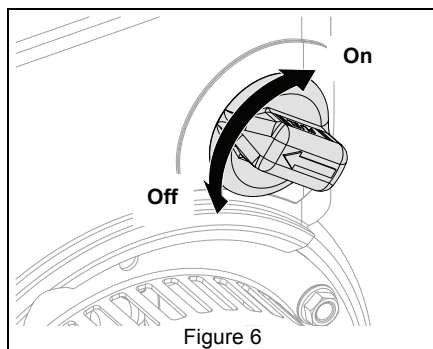


Figure 6

PRIMER BULB

Adds fuel to engine for easier starting on cold engines.

HOUR METER

Measures and displays engine runtime.

AUGER CONTROL LEVER

Engages and disengages auger paddle rotation. Pulls unit forward when engaged.

DISCHARGE CHUTE HANDLE

Model 938024

See Figure 7.

Rotates discharge chute left or right to control direction of snow discharge.

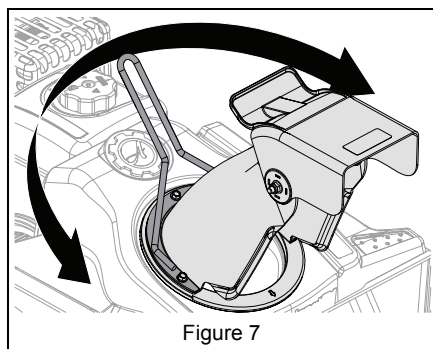



Figure 7

DISCHARGE CHUTE ROTATION LEVER

Model 938025

See Figure 8.


Rotates discharge chute left or right to control snow discharge.

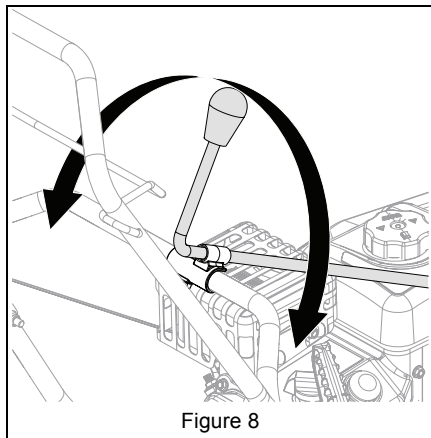

DISCHARGE CHUTE DEFLECTOR LEVER

See Figure 9.

Moves discharge deflector up or down to control height of snow discharge.

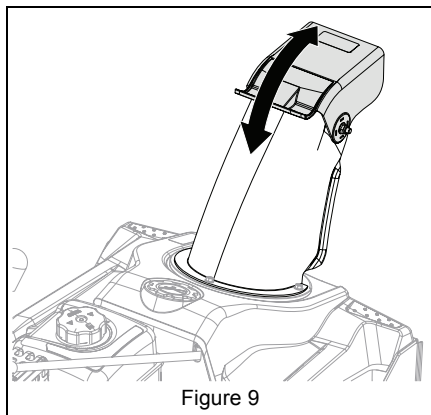

BEFORE OPERATION



WARNING: AVOID INJURY. Read and understand the *Safety* section before proceeding.

IMPORTANT: Register your product! See *Register Your Product!* on page 1.

IMPORTANT: All references to left, right, front or rear are given from the perspective of operator in operator's position, facing the direction of forward travel.

1. Know how to stop in an emergency. See *Emergency Stopping* on page 11.
2. Check for frozen components.
3. Check fuel level and add fuel if needed.

IMPORTANT: Use fresh unleaded fuel with an octane rating of at least 87. DO NOT use E85 blended fuels; the engine is not E20 / E30 / E85 compatible. The maximum recommended ethanol content is 10%. Ariens recommends using a quality fuel stabilizer in all fuel. See *Short Term Storage* on page 18.

4. Check engine oil level and add oil if needed. See *Check Engine Oil* on page 10.
5. Check function of all controls.

CHECK ENGINE OIL

1. Stop engine and wait for all moving parts to stop and for hot parts to cool.
2. Remove dipstick from oil fill port.
3. Check engine oil level and add oil if needed. Refer to engine manual.
4. Reinstall dipstick and tighten.

IMPORTANT: Clean up any spilled oil.

OPERATION



WARNING: AVOID INJURY. Read and understand the *Safety* section before proceeding.

EMERGENCY STOPPING

1. Release auger control lever.
2. Push engine switch to the stop position.
3. Wait for all moving parts to stop before leaving operator's position.

START THE ENGINE

1. Position discharge chute in a safe direction. See *Position Discharge Chute* on page 11.
2. Turn fuel valve to the on position.
3. Push engine switch to run position.
4. *Cold Engines Only:* Turn choke control knob to on position.
5. *Cold Engines Only:* Push primer bulb twice.
6. Pull recoil starter handle.
 - a. Grasp handle and pull rope out slowly until it pulls harder.
 - b. Pull handle firmly and quickly with a rapid, continuous full-arm stroke. Repeat until engine starts. If engine does not start, see *Troubleshooting* on page 19.
 - c. Let handle rewind slowly after engine starts. **DO NOT** let handle snap back against handlebar.
7. Gradually turn choke off as engine warms.

OPERATE UNIT

1. Rotate discharge chute and move deflector to desired positions. See *Position Discharge Chute* on page 11.

NOTICE: On some surfaces, auger paddle rotation may leave residual paddle material. This usually washes off after rain showers.

2. Engage auger control lever to clear snow and move unit forward. Release bar to stop augers and unit. See Figure 10.

IMPORTANT: If unit does not propel itself forward in heavy snow or on slippery surfaces, push forward on the handlebar. Allow unit to work at its own pace.

IMPORTANT: Disengage auger when traveling between work areas.

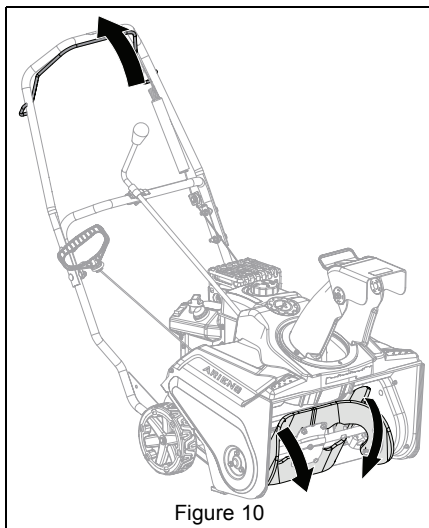


Figure 10

3. Move handlebar left and right to steer unit.
4. Reposition discharge chute and deflector as necessary.


Position Discharge Chute

IMPORTANT: Always throw snow in a safe direction, away from people and windows.

NOTICE: If chute becomes frozen and does not turn correctly, move unit into warm area until controls are unfrozen.

See Figure 11.

1. Release auger control lever.
2. *Model 938025:* Move discharge chute rotation lever left or right to rotate chute.
Model 938024: Move discharge chute rotation handle left or right to rotate chute.
3. Move deflector lever up or down to control discharge distance.

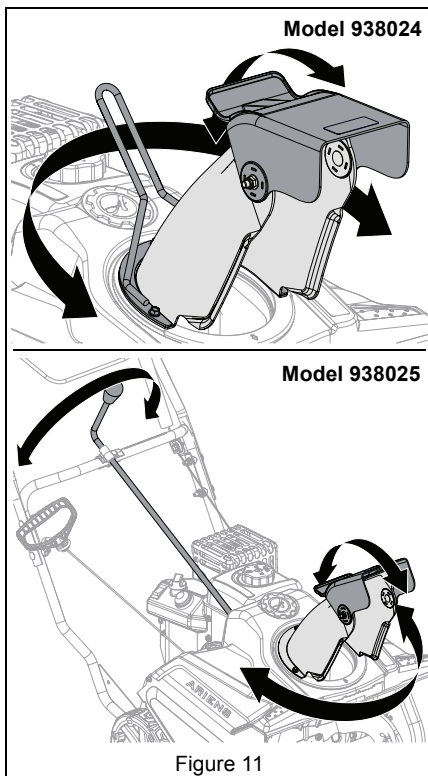

TRANSPORTING UNIT

1. Stop engine and wait for all moving parts to stop and for hot parts to cool.

NOTICE: Use extra care when loading or unloading onto truck or trailer. DO NOT lift using discharge chute handle.

 
2. Secure unit chassis to transport vehicle.

NOTICE: Never secure unit from rods or linkages that could be damaged.

FOR BEST PERFORMANCE

- For complete snow removal, walk slowly and slightly overlap each path previously taken.
- Position discharge chute downwind when possible.
- Do not allow unit to ingest gravel and rocks. Push handlebar down slightly over loose surfaces to avoid ingesting debris.
- Inspect auger before each use and remove any accumulation / debris.
- Check oil level before each use.
- Clean unit after each use. See *Clean Unit* on page 13.

Clear a Clogged Discharge Chute



1. Stop engine and wait for all moving parts to stop and for hot parts to cool.
2. Use a tool to clear the clog. See *Troubleshooting* on page 19.

STOP THE ENGINE

1. Operate the auger momentarily to remove loose or melting snow from unit to help prevent moving parts from freezing.
2. Release auger control lever.
3. Push engine switch to off position.
4. Turn fuel valve to the off position.

MAINTENANCE



WARNING: AVOID INJURY. Read and understand the *Safety* section before proceeding.

Proper maintenance can prolong the life of unit. The *Maintenance Schedule on Page 13* shows the recommended service schedule.

Your Ariens dealer can provide service and adjustments to keep your unit operating at peak efficiency. Contact an authorized engine manufacturer's service center for engine service.

More frequent service may be required due to working conditions.

See the maintenance instructions in the Engine Manual for additional information.

MAINTENANCE SCHEDULE

Service Performed	Each Use	Every 10 hrs.	As Needed	Annually
Clean Unit	•			
Check Engine Oil*	•			
Check Fasteners	•			
Check Auger Paddle Wear	•			•
Check Scraper Blade Wear	•			•
Check Belt Wear		•		•
Replace Scraper Blade**			•	
Change Engine Oil*			•	
Replace Auger Paddles			•	

*Refer to engine manual for instructions.

**See *Check Scraper Blade Wear* on page 14.

SERVICE PARTS

See your Ariens dealer to purchase service parts for your unit.

Description	Part No.
Fuel Stabilizer – 118 ml (4 oz)	
• Except Canada	04730400
• Canada Only	04742500
Ariens 5W-30 Engine Oil	
• 473 ml (16 oz)	00091000
• 946 ml (32 oz)	00067600
Auger Cable	06900533

Description	Part No.
Auger Belt	07200627
Auger Paddle Replacement Kit	73801200
Scraper Blade Replacement Kit	53804100
Pawl Arm Replacement Kit	53803800

CLEAN UNIT

1. Wash salt and other corrosive ice-melting agent residue from unit with mild soap and low-pressure water.

NOTICE: NEVER spray unit with high-pressure water.

2. Remove snow and debris with a soft-bristled brush. DO NOT use harsh abrasives or cleaners.

CHECK ENGINE OIL

See *Check Engine Oil* on page 10.

CHANGE ENGINE OIL

Refer to engine manual.

CHECK FASTENERS

Check for loose or missing hardware.

CHECK DEFLECTOR RESISTANCE

See Figure 12.

If discharge chute deflector moves up and down too easily, tighten deflector hardware slightly to increase resistance. DO NOT overtighten.

IMPORTANT: Use an Allen wrench to hold hardware in place and tighten hardware on both sides of deflector equally.


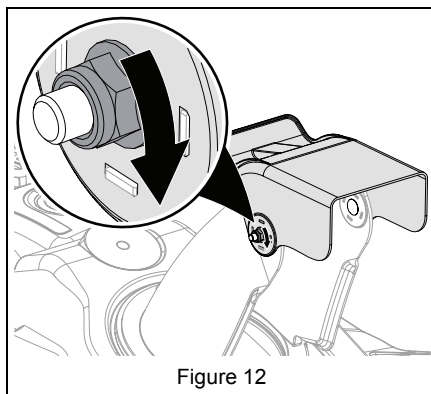


Figure 12

CHECK AUGER PADDLE WEAR

See Figure 13.

Check that paddles have not worn past wear indicator holes. Replace auger paddles when paddles have worn completely through wear indicator holes. See *Replace Auger Paddles* on page 14.

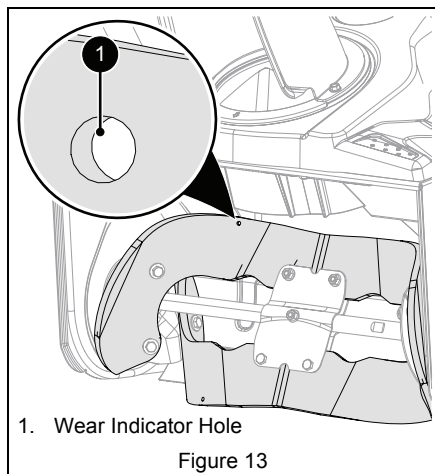

CHECK SCRAPER BLADE WEAR

Replace scraper blade if damaged, completely worn through, or with every paddle replacement. See *Maintenance Schedule* on page 13.

NOTICE: DO NOT allow scraper blade to wear down too far or auger housing will become damaged. See *Replace Scraper Blade* on page 17.

CHECK BELT WEAR

Adjust auger cable to compensate for belt wear. If auger cable has been adjusted for maximum tension and auger stops or stutters when auger control lever is engaged, belt may need replacement. See *Adjust Auger Cable* on page 15 and *Replace Drive Belt* on Page 16.

SERVICE & ADJUSTMENTS



WARNING: AVOID INJURY. Read and understand the *Safety* section before proceeding.

IMPORTANT: All references to left, right, front or rear are given from the perspective of operator in operator's position, facing the direction of forward travel.

REPLACE AUGER PADDLES

Replace auger paddles when paddles have worn completely through wear indicator holes. See Figure 13.

IMPORTANT: ALWAYS replace paddles in pairs. DO NOT replace only one paddle.

Remove Auger Paddles

1. Stop engine and wait for all moving parts to stop and for hot parts to cool.
 2. Disconnect spark plug wire and turn fuel valve to off position.
- See Figure 14.
3. Tip unit back onto handlebar bend.

NOTICE: DO NOT tip beyond handlebar bend or oil may leak from engine.

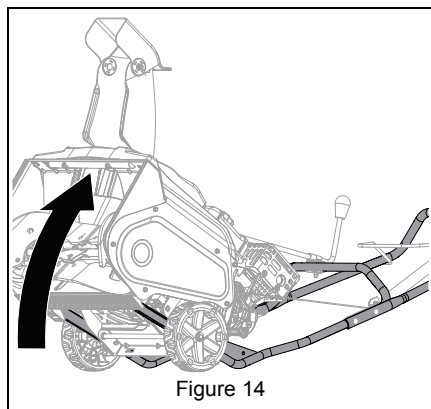


Figure 14

See Figure 15.

4. Remove hardware retaining paddles to center plate and side plates. Discard all parts.

IMPORTANT: DO NOT remove center plate.

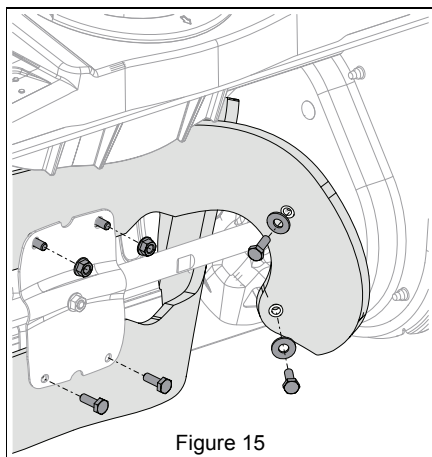


Figure 15

Install Auger Paddles

1. Install spacers into paddle holes. See Figure 16.

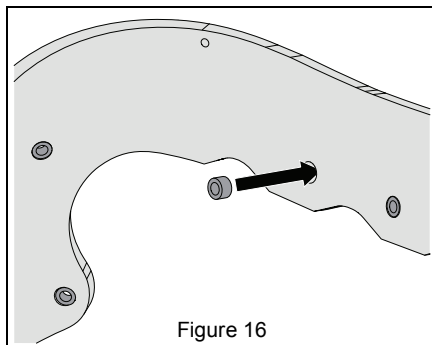


Figure 16

See Figure 17.

IMPORTANT: Install new paddles so wear indicator holes are positioned on the right side of unit.

2. Secure each paddle to side plates with four hex bolts, four flat steel washers and four flange nuts.
3. Secure each paddle to center plate with two hex bolts and two flange nuts.
4. Torque paddle hardware to 5.6 N•m – 10.2 N•m (50 lb-in – 90 lb-in). DO NOT overtighten.

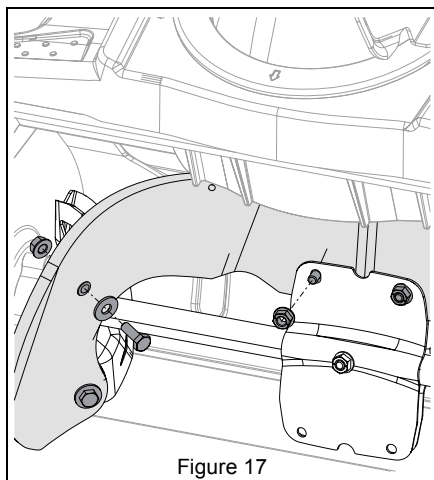


Figure 17

5. Rotate auger paddles by hand to ensure paddles are secure and do not interfere with housing.
6. Return unit to upright position.
7. Remove slack from auger cable. See *Adjust Auger Cable* on page 15.
8. Reconnect spark plug wire and turn fuel valve to the on position.

ADJUST AUGER CABLE

See Figure 18.

1. Stop engine and wait for all moving parts to stop and for hot parts to cool.
2. Move plastic sleeve up to auger control lever.
3. Remove cable end from adjustment bracket.
4. Insert Z-hook into highest adjustment bracket hole reachable.
5. Wrap cable end around adjustment bracket.

IMPORTANT: When auger control lever is disengaged, there should be slight slack in cable and no tension.

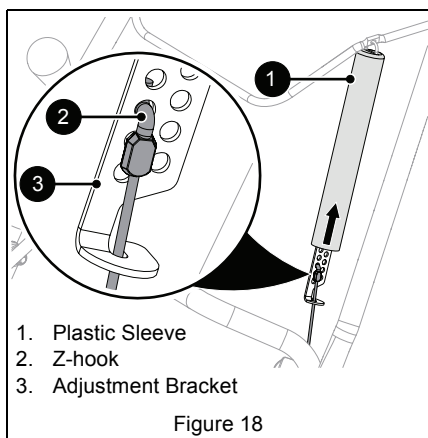


Figure 18

6. Start engine and engage auger control lever to ensure proper operation.
7. Release auger control lever and ensure paddle rotation stops.

IMPORTANT: Cable tension should not be excessive.

8. Reposition sleeve over adjustment bracket.

REPLACE DRIVE BELT

Remove Drive Belt

1. Stop engine and wait for all moving parts to stop and for hot parts to cool.
2. Disconnect spark plug wire.
3. Remove belt cover hardware and remove cover. Retain all parts. See Figure 19.

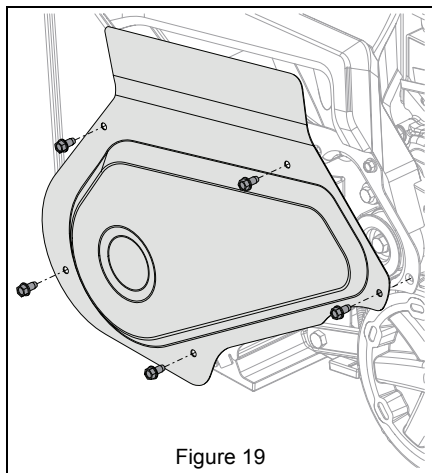


Figure 19

See Figure 20.

4. Disconnect extension spring from idler arm.
5. Remove belt from drive sheave, idler sheave and engine sheave.

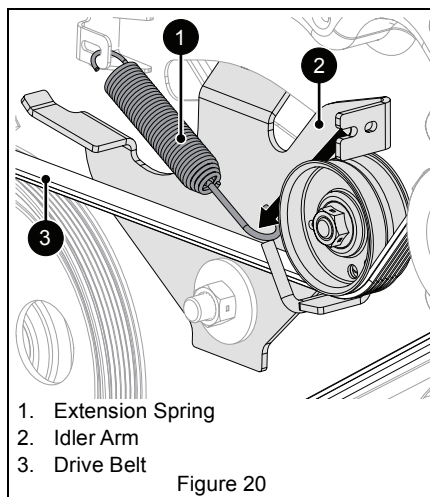


Figure 20

Install Drive Belt

See Figure 21.

1. Install new belt around engine sheave and align with drive and idler sheaves.
2. Reinstall extension spring onto idler arm.

IMPORTANT: Ensure belt has tension and is aligned in all sheaves.

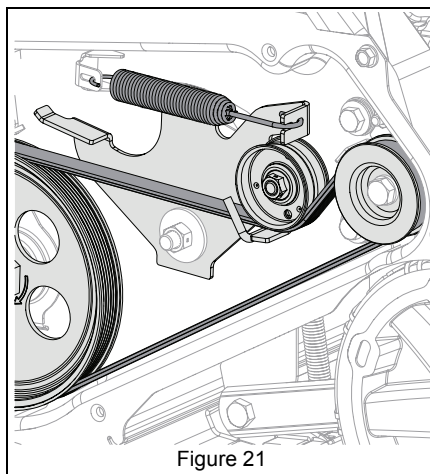


Figure 21

3. Reinstall belt cover and secure with original hardware.
4. Reconnect spark plug wire.

REPLACE SCRAPER BLADE

Replace scraper blade if damaged, completely worn through, or with every paddle replacement.


Remove Scraper Blade

1. Stop engine and wait for all moving parts to stop and for hot parts to cool.
2. Tip unit back onto handlebar bend. See Figure 14.


NOTICE: DO NOT tip beyond bend or oil may leak from engine.

See Figure 22.

3. Disconnect spring hooks from scraper blade, remove from unit and discard.
4. Using a wrench, hold pivot rod stationary and remove hardware retaining pivot rod and blade. Retain hardware.

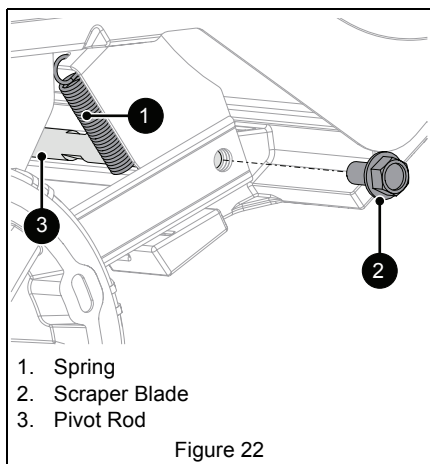


5. Remove pivot rod from scraper blade and discard blade. See Figure 23.

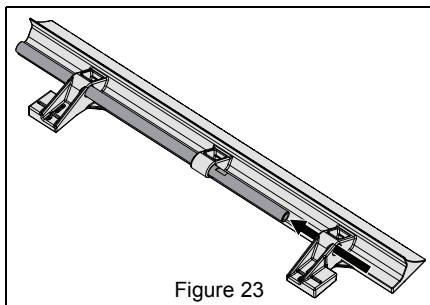

Install Scraper Blade


1. Insert pivot rod through new scraper blade.

IMPORTANT: Reinstall pivot rod so wrench flats are positioned toward the right side of unit. See Figure 24.

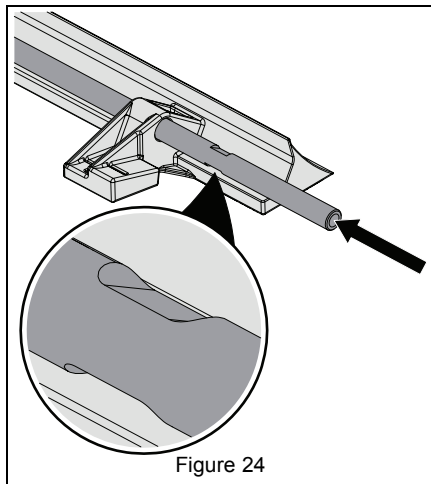

See Figure 25.

2. Secure scraper blade assembly to housing with original hardware.
3. Install spring hooks to frame and around scraper blade. Make sure blade has tension.

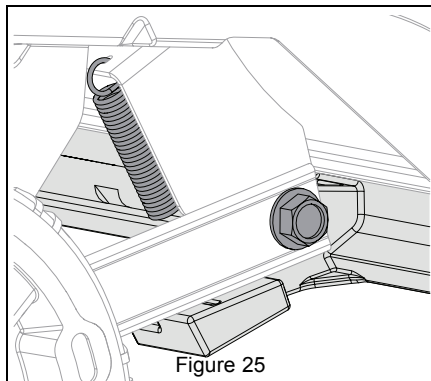

STORAGE



WARNING: AVOID INJURY. Read and understand the *Safety* section before proceeding.

SHORT TERM STORAGE

1. Engage auger momentarily to remove loose or melting snow to prevent auger shaft from freezing.
2. Tighten all hardware to correct specifications.
3. Inspect unit for visible signs of wear or damage. Repair as needed.
4. Apply a light layer of oil or anti-rust compound on bare metal areas.
5. Prepare fuel system for storage.

NOTICE: Ariens recommends using a quality fuel stabilizer in all fuel. Gasoline left in the fuel system without a stabilizer, even for short periods of time, deteriorates and leaves gummy deposits in the system that may damage the carburetor and fuel hoses, filter and tank. For the best effectiveness, add stabilizer to all fuel containers whenever purchasing fuel. Add the stabilizer to the container before adding fuel.

- a. Add Ariens fuel stabilizer (see *Service Parts* on page 13) or equivalent according to manufacturer's instructions to the fuel tank and any fuel containers with remaining fuel.
 - b. Run engine outdoors for at least 5 minutes to allow stabilizer to reach the carburetor.
6. Turn fuel valve to the off position and allow engine to stop on its own.
 7. Push engine switch into the stop position.
 8. Store unit in a cool, dry, protected area. Do not store unit outdoors.

LONG TERM STORAGE

1. Perform all short-term storage items.
2. Wash salt and other corrosive ice-melting agent residue from unit with mild soap and low-pressure water.

IMPORTANT: Never spray unit with high-pressure water.

3. Touch up all scratched painted surfaces.
4. Store unit in a cool, dry, protected area. Do not store unit outdoors.

START-OF-SEASON FUEL PREPARATION

Before opening the fuel valve for the first time after long-term storage, add fresh, stabilizer-treated fuel to the fuel tank and any fuel containers with remaining fuel.

ACCESSORIES

See your Ariens dealer for a complete list of compatible accessories and attachments for your unit.

Description	Part No.
Sno-Thro Cover Kit	73801100
Protective Floor Mat	70707600
Maintenance Kit*	73801000
*Includes 16 oz. 5W-30 engine oil, spark plug, fuel stabilizer and non-stick spray (Snow-Jet).	

TROUBLESHOOTING

Problem	Probable Cause	Correction
Engine will not start.	Engine switch in stop position.	Push engine switch to run position. See <i>Engine Switch</i> on page 9.
	Fuel valve is closed.	Turn fuel valve to on position. See <i>Fuel Valve</i> on page 9.
	Fuel tank is empty.	Fill fuel tank with fuel. See <i>Before Operation</i> on page 10.
	Engine not primed.	Press the primer bulb twice. See <i>Primer Bulb</i> on page 9.
	Spark plug wire is disconnected.	Connect spark plug. Refer to engine manual.
	Choke is off.	Turn choke control knob to on position. See <i>Choke Control Knob</i> on page 9.
	Excessive fuel in engine cylinder (flooded).	Turn choke control knob to off position and reattempt starting. See <i>Start The Engine</i> on page 11.
	Faulty spark plug.	Replace spark plug.
	Engine is faulty.	See your Ariens Dealer.
Engine starts hard or runs poorly.	Fuel mixture too rich.	Turn choke control knob to off position. See <i>Choke Control Knob</i> on page 9.
	Spark plug is faulty, fouled or incorrectly gapped.	Clean and correctly set spark plug gap (refer to engine manual) or see your Ariens Dealer.
	Fuel cap vent is blocked.	Install new fuel cap.
Excessive vibration.	Loose parts or damaged auger paddles.	Check for loose or missing hardware or replace auger paddles. See <i>Replace Auger Paddles</i> on page 14.
Excessive snow left behind.	Scraper blade is worn.	Replace scraper blade. See <i>Replace Scraper Blade</i> on page 17.
Snow does not discharge.	Auger drive belt is loose or damaged.	Replace belt or adjust auger control cable. See <i>Replace Drive Belt</i> on page 16 and <i>Adjust Auger Cable</i> on Page 15.
	Discharge chute is clogged with snow.	Stop engine and close fuel valve. Clean discharge chute and auger housing with a tool. DO NOT use your hands to clean discharge chute.
	Auger paddles are worn or damaged.	Replace auger paddles. See <i>Replace Auger Paddles</i> on page 14.

SPECIFICATIONS

Model Number	938024	938025
Description	Professional 21 SSR	Professional 21 SSRC
Engine		
Engine Model	AX 208	
Displacement – cm ³ (in ³)	208 (12.7)	
Maximum RPM – No load	3600 ± 50	
Oil Capacity – L (Pt.)	0.47 (1.0)	
Fuel Tank Capacity – L (Qt.)	1.4 (1.5)	
Fuel Octane Rating	See Engine Manual	
Starter	Recoil	
Size and Weight		
Length – cm (in)	129.0 (50.8)	
Width – cm (in)	53.8 (21.2)	
Height – cm (in)	105.9 (41.7)	
Weight – kg (lb)	39.5 (87.0)	40.5 (89.2)



ARIENS®

Outdoor Power Equipment Limited Warranty

AriensCo warrants to the **original purchaser** that Ariens brand products purchased on or after 3/16/2018 will be free from defects in material and workmanship for the time period noted in the chart below. Equipment put to personal use around a single household or residence is considered "Residential Use." Equipment put to any business use (agricultural, commercial, or industrial) or used at multiple locations is considered "Commercial Use." If any product is rented or leased, then the duration of these warranties shall be 90 days after the date of purchase.

An authorized Ariens dealer will repair any defect in material or workmanship, and repair or replace any defective part, subject to the conditions, limitations and exclusions set forth herein. Such repair or replacement will be free of charge (labor and parts) to the original purchaser; except as noted below. Pick-up and delivery are at the owner's expense.

The warranty code is found on the model and serial number identification label on the unit.

Warranty Code	Product Group	Warranty Period
AA	Serialized Attachments	1 Year.
CQ	Zenith Mowers	2 Years.
HA	Zoom, Zoom-XL, IKON-X, and IKON-XL Mowers	3 Years Residential Use. 90 Days Commercial Use.
HB	Apex Mowers	3 Years Residential Use. 1 Year Commercial Use.
HD	LM-Series Walk-Behind Mowers	3 Years Residential Use. 90 Days Commercial Use.
PA	Log Splitters and 921-Series Brushes	3 Years Residential Use. 90 Days Commercial Use.
PB	926-Series Brushes	3 Years Residential Use. 1 Year Commercial Use.
SA	Professional Sno-Thro	3 Years Residential Use. 1 Year Commercial Use.
SB	Compact, Deluxe and Platinum Sno-Thro and Path-Pro	3 Years Residential Use. 90 Days Commercial Use.
SC	Sno-Tek	2 Years Residential Use. 90 Days Commercial Use.
SD	Deluxe and Platinum EFI Sno-Thro	3 Years Residential Use. 90 Days Commercial Use.
SE	920-Series Classic Sno-Thro	3 Years Residential Use. 90 Days Commercial Use.

* Whichever comes first.

Special Extensions

The chart below details special **extensions** to warranty terms. Warranty terms are total time periods covered. If any product is rented or leased, there are no extensions to the 90-day warranty.

Warranty Code	Warranty Term Extension	Warranty Period	Detail
HA, HB	Mower Deck Shell and Main Frame	5 Years Limited Residential Use. No Commercial Warranty.	Years 1 – 3 parts and labor. Years 4 – 5 parts only.
SA	Cast Iron Auger Gear Case	5 Years Residential and Commercial Use.	
SB, SD	Cast Iron Auger Gear Case	5 Years Residential Use. 1 Year Commercial Use.	
SE	Aluminum Auger Gear Case	3 Years Residential Use. 90 Days Year Commercial Use.	



Exclusions and Limitations

The charts below detail special **exclusions and limitations** to this warranty.

Warranty Term Exclusions	Warranty Period
Air filters, auger paddles, brake arms, brake linings, brake shoes, brushes, cutters, fuel filters, headlights, knives, light bulbs, lubricants, mower blades, oil, oil filters, spark plugs, scraper blades, shear bolts and skid shoes.	Components are not covered under warranty.

Hydro-Gear Transaxle Limitation
See Hydro-Gear warranty. The warranty is administrated by AriensCo.

Warranty Term Limitations	Warranty Period
Cloth, Plastic and Rubber Components. Mufflers, Tires, Belts and Cables.	2 Years Residential Use. No Commercial Warranty. Components are covered for manufacturer's defect only, not wear.

Exclusions – Items Not Covered by This Warranty

- Parts that are not genuine Ariens service parts are not covered by this warranty and may void the warranty if the parts result in premature wear or damage to the product.
- Damages resulting from the installation or use of any part, accessory, or attachment which is not approved by AriensCo for use with product(s) identified herein are not covered by this warranty.
- Any misuse, alteration, improper assembly, improper adjustment, neglect, or accident which requires repair is not covered by this warranty.
- Repairs or adjustments required due to failure to use fresh fuel or failure to properly prepare the unit for periods of non-use.
- **Use of gasoline blends exceeding 10% ethanol voids any and all warranties.**
- Products are designed to the specifications in the area that the product was originally distributed. Different areas may have significantly different legal and design requirements. This warranty is limited to the requirements in the area in which the unit was originally distributed. AriensCo does not warrant this product to the requirements of any other area. Warranty service is limited to service within the area originally distributed.
- In countries other than the United States and Canada, contact the AriensCo dealer for warranty policies that govern within your country. Rights may vary from country to country and within any one country.

Evaporative Emissions Control Warranty Exception

As required by the California Air Resources Board (CARB) and the US Environmental Protection Agency (EPA) the evaporative emissions control system is warranted to the ultimate purchaser, and any subsequent owner, for two years.

The CARB and EPA evaporative emissions control system warranty is described in a separate evaporative emission control warranty statement.

Pro-Rated Battery Warranty

Battery warranty is pro rated for one year and is based on the total cost for battery replacement. Units used for rental or lease have no exceptions to the 90-day warranty. Total battery reimbursement will not exceed 45.00 USD.

Months	% Coverage	Months	% Coverage	Months	% Coverage
1 – 3	100	6	58.3	9	33.3
4	75	7	50.0	10	25.0
5	66.6	8	41.6	11	16.6
				12	8.3

Engines

The chart below details engine warranty information. Engine warranty terms may vary from the specific terms of this warranty. If inconsistent, the terms of the engine warranty shall apply to the engine and its component parts.

Engine Manufacturer	Detail
Ariens AX	Ariens- and Yamaha-branded engines are warranted by the manufacturer and the warranty is administered by AriensCo. Refer to the engine manual for warranty statements.
Yamaha	
Briggs & Stratton, Kawasaki, Kohler, Subaru	Covered by the engine manufacturer's warranty. Refer to the engine manufacturer's warranty statements.

Parts and Accessories

Service replacement parts and non-serialized accessories are warranted for 90 days from date of purchase. Parts and accessories must be installed by an authorized Ariens dealer to be covered. Labor is not included.

Customer Responsibilities

Register the product immediately at the time of sale. If the dealer does not register the product, the customer must register the unit on-line at www.ariens.com.

To obtain warranty service, the **original purchaser** must:

- Ensure that the maintenance and adjustments explained in the Operator's Manual are routinely completed.
- Promptly notify AriensCo or an authorized Ariens service representative of the need for warranty service.
- Transport the product to and from the place of warranty service at owner's expense.
- Have the warranty service performed by an authorized Ariens service representative.

To find an authorized dealer use the dealer locator on our websites, or contact us by mail or phone.

Globally except Australia or New Zealand:	Australia:	New Zealand
AriensCo 655 W. Ryan Street Brillion, WI 54110 Phone: (920) 756 - 4688 www.ariensco.com	Masport Australia Pty Ltd 27 Commercial Drive Dandenong South Victoria 3175 Australia Phone: 1300 366 225 www.masport.com.au	Masport Ltd 1-37 Mt. Wellington Highway, Panmure, Auckland 1060 New Zealand Phone: 0800 627 7678 www.masport.co.nz

Disclaimer

AriensCo may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating the AriensCo to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

Limitation of Remedy and Damages

AriensCo liability under this warranty, and under any implied warranty that may exist, is limited to repair of any defect in workmanship, and repair or replacement of any defective part. AriensCo shall not be liable for incidental, special, or consequential damages (including lost profits). Some states do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Australian Consumer Law

The following applies solely to warranties subject to Subsection 102(1) of the Australian Consumer Law: Our goods come with guarantees that cannot be excluded by the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

Disclaimer of Further Warranty

AriensCo makes no warranty, express or implied, other than what is expressly made in this warranty. If the law of your state provides that an implied warranty of merchantability, or an implied warranty of fitness for particular purpose, or any other implied warranty, applies to AriensCo, then any such implied warranty is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.


This warranty gives you specific legal rights, and you may also have other rights which vary from region to region.



ARIENS
THE KING OF SNOW

655 West Ryan Street
Brillion, WI 54110

www.ariens.com

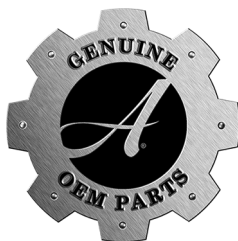

parts.ariens.com

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects and other reproductive harm.

ARIENS|CO

