

**AMD AM5
Series
(Text mode)**

BIOS Manual



Motherboard

E27689
First Edition
March 2026

Copyright© 2026 ASUSTeK COMPUTER INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS provides this manual "as is" without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASUS, its directors, officers, employees or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of use or data, interruption of business and the like), even if ASUS has been advised of the possibility of such damages arising from any defect or error in this manual or product.

Specifications and information contained in this manual are furnished for informational use only, and are subject to change at any time without notice, and should not be construed as a commitment by ASUS. ASUS assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual, including the products and software described in it.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Contents

1.	Knowing BIOS	5
2.	BIOS setup program	6
3.	Managing and updating your BIOS	7
3.1	ASUS CrashFree BIOS 3 utility	7
3.2	ASUS EzFlash Utility	8
4.	BIOS menu screen	9
4.1	Menu bar	9
4.2	Menu items	10
4.3	Submenu items	10
4.4	Navigation keys	10
4.5	General help	10
4.6	Configuration fields	10
4.7	Pop-up window	10
4.8	Scroll bar	10
5.	Main menu	11
6.	Ai Tweaker menu	14
7.	Advanced menu	38
7.1	Trusted Computing	38
7.2	AMD fTPM configuration	39
7.3	Redfish Host Interface Settings	40
7.4	UEFI Variables Protection	40
7.5	Serial Port Console Redirection	40
7.6	CPU Configuration	43
7.7	PCI Subsystem Settings	43
7.8	USB Configuration	44
7.9	Network Stack Configuration	44
7.10	NVMe Configuration	45
7.11	HDD/SSD SMART Information	45
7.12	SATA Configuration	45
7.13	APM Configuration	46
7.14	Onboard Devices Configuration	47
7.15	NB Configuration	49
7.16	AMD CBS	49
7.17	AMD PBS	69
7.18	AMD Overclocking	72
8.	Monitor menu	97
9.	Boot menu	99
10.	Tool menu	104

10.1	ASUS User Profile	105
10.2	ASUS SPD Information	105
10.3	ASUS MyHotkey	105
10.4	Auto Install ASUS Utilities	106
11.	Save & Exit menu	107
12.	Server Mgmt menu	108
12.1	System Event Log	109
12.2	BMC network configuration	109
12.3	View System Event Log	110

BIOS Setup

1. Knowing BIOS

BIOS (Basic Input and Output System) stores system hardware settings such as storage device configuration, overclocking settings, advanced power management, and boot device configuration that are needed for system startup in the motherboard CMOS. In normal circumstances, the default BIOS settings apply to most conditions to ensure optimal performance. **DO NOT change the default BIOS settings** except in the following circumstances:

- An error message appears on the screen during the system bootup and requests you to run the BIOS Setup.
- You have installed a new system component that requires further BIOS settings or update.

CAUTION! Inappropriate BIOS settings may result to instability or boot failure. **We strongly recommend that you change the BIOS settings only with the help of a trained service personnel.**

NOTE:

- When downloading or updating the BIOS file for your motherboard, rename it as **XXXXX.CAP** or launch the **BIOSRenamer.exe** application to automatically rename the file. The name of the CAP file varies depending on models. Refer to the user manual that came with your motherboard for the name.
 - The screenshots in this manual are for reference only, please refer to the latest BIOS version for settings and options.
 - BIOS settings and options may vary due to different BIOS release versions or CPU installed. Please refer to the latest BIOS version for settings and options.
-

2. BIOS setup program

Use the BIOS Setup to update the BIOS or configure its parameters. The BIOS screen include navigation keys and brief onscreen help to guide you in using the BIOS Setup program.

Entering BIOS at startup

To enter BIOS Setup at startup, press <Delete> or <F2> during the Power-On Self Test (POST). If you do not press <Delete> or <F2>, POST continues with its routines.

Entering BIOS Setup after POST

To enter BIOS Setup after POST:

- Press <Ctrl>+<Alt>+<Delete> simultaneously.
- Press the reset button on the system chassis.
- Press the power button to turn the system off then back on. Do this option only if you failed to enter BIOS Setup using the first two options.

After doing either of the three options, press <Delete> key to enter BIOS.

IMPORTANT!

- The BIOS setup screens shown in this section are for reference purposes only, and may not exactly match what you see on your screen.
 - If the system becomes unstable after changing any BIOS setting, load the default settings to ensure system compatibility and stability. Select the **Load Optimized Defaults** item under the **Exit** menu or press hotkey <F5>. See section **Exit menu** for details.
 - If the system fails to boot after changing any BIOS setting, try to clear the CMOS and reset the motherboard to the default value. See your motherboard manual for information on how to erase the RTC RAM.
 - The BIOS setup program does not support Bluetooth devices.
-

3. Managing and updating your BIOS

The following utilities allow you to manage and update the motherboard Basic Input/Output System (BIOS) setup:

1. ASUS CrashFree BIOS 3

To recover the BIOS using a bootable USB flash disk drive when the BIOS file fails or gets corrupted.

2. ASUS EzFlash

Updates the BIOS using a USB flash disk.

3.1 ASUS CrashFree BIOS 3 utility

The ASUS CrashFree BIOS 3 is an auto recovery tool that allows you to restore the BIOS file when it fails or gets corrupted during the updating process. You can update a corrupted BIOS file using a USB flash drive that contains the updated BIOS file.

IMPORTANT! Prepare a USB flash drive containing the updated motherboard BIOS before using this utility.

Recovering the BIOS from a USB flash drive

To recover the BIOS from a USB flash drive:

1. Insert the USB flash drive with the original or updated BIOS file to one USB port on the system.
2. The utility will automatically recover the BIOS. It resets the system when the BIOS recovery finished.

CAUTION! DO NOT shut down or reset the system while recovering the BIOS! Doing so would cause system boot failure!

NOTE: The recovered BIOS may not be the latest BIOS version for this motherboard. Visit the ASUS website at www.asus.com to download the latest BIOS file.

3.2 ASUS EzFlash Utility


The ASUS EzFlash Utility feature allows you to update the BIOS using a USB flash disk without having to use a DOS-based utility.

IMPORTANT! Download the latest BIOS from the ASUS website at www.asus.com before using this utility.

NOTE: The succeeding BIOS screens are for reference only. The actual BIOS screen displays may not be the same as shown.

To update the BIOS using EzFlash Utility:


1. Insert the USB flash disk that contains the latest BIOS file to the USB port.
2. Enter the BIOS setup program. Go to the **Tool** menu to select **Start ASUS Ez Flash** and press <Enter> to enable it.

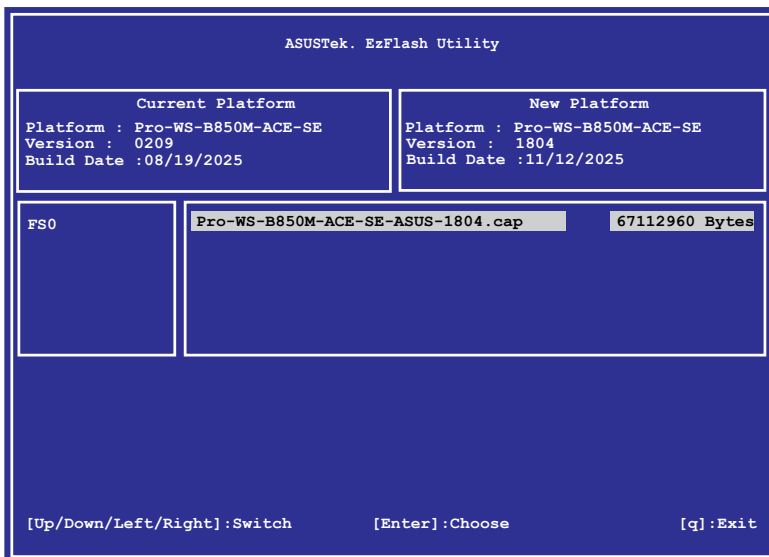

3. Press the Left arrow key to switch to the **Drive** field.
4. Press the Up/Down arrow keys to find the USB flash disk that contains the latest BIOS then press <Enter>.
5. Press the Right arrow key to switch to the **Folder Info** field.
6. Press the Up/Down arrow keys to find the BIOS file then press <Enter>.
7. Reboot the system when the update process is done.

4. BIOS menu screen

NOTE: The screenshot for this section is for reference only, and may vary between motherboards. Please refer to the actual BIOS of your motherboard.

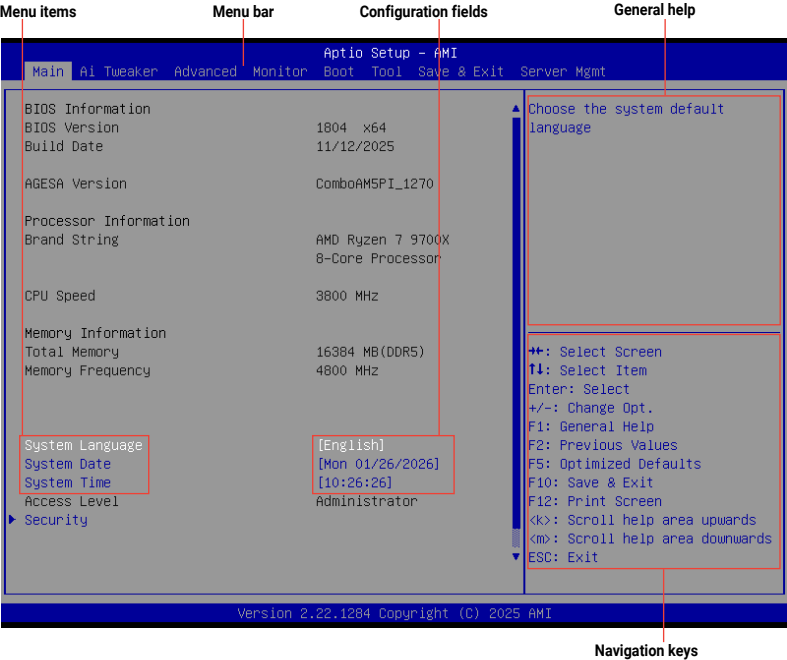

4.1 Menu bar

The menu bar on top of the screen has the following main items:

- Main** For changing the basic system configuration
- Ai Tweaker** For changing the overclocking settings
- Advanced** For changing the advanced system settings
- Monitor** For displaying the system temperature, power status, and changing the fan settings
- Boot** For changing the system boot configuration
- Tool** For configuring options for special functions
- Save & Exit** For selecting the save & exit options
- Server Mgmt** For configuring IPMI options


To select an item on the menu bar, press the right or left arrow key on the keyboard until the desired item is highlighted.

4.2 Menu items

The highlighted item on the menu bar displays the specific items for that menu. For example, selecting Main shows the Main menu items. The other items on the menu bar have their respective menu items.

4.3 Submenu items

A solid triangle before each item on any menu screen means that the item has a submenu. To display the submenu, select the item and press <Enter>.

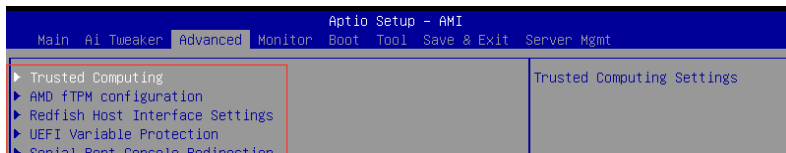

4.4 Navigation keys

At the bottom right corner of a menu screen are the navigation keys for the BIOS setup program. Use the navigation keys to select items in the menu and change the settings.

4.5 General help

At the top right corner of the menu screen is a brief description of the selected item.

4.6 Configuration fields

These fields show the values for the menu items. If an item is user-configurable, you can change the value of the field opposite the item. You cannot select an item that is not user-configurable. A configurable field is enclosed in brackets, and is highlighted when selected. To change the value of a field, select it and press <Enter> to display a list of options.

4.7 Pop-up window


Select a menu item and press <Enter> to display a pop-up window with the configuration options for that item.

4.8 Scroll bar

A scroll bar appears on the right side of a menu screen when there are items that do not fit on the screen. Press the Up/Down arrow keys or <Page Up> /<Page Down> keys to display the other items on the screen.

5. Main menu

The Main menu screen appears when you enter the Advanced Mode of the BIOS Setup program. The Main menu provides you an overview of the basic system information, and allows you to set the system date, time, language, and security settings.

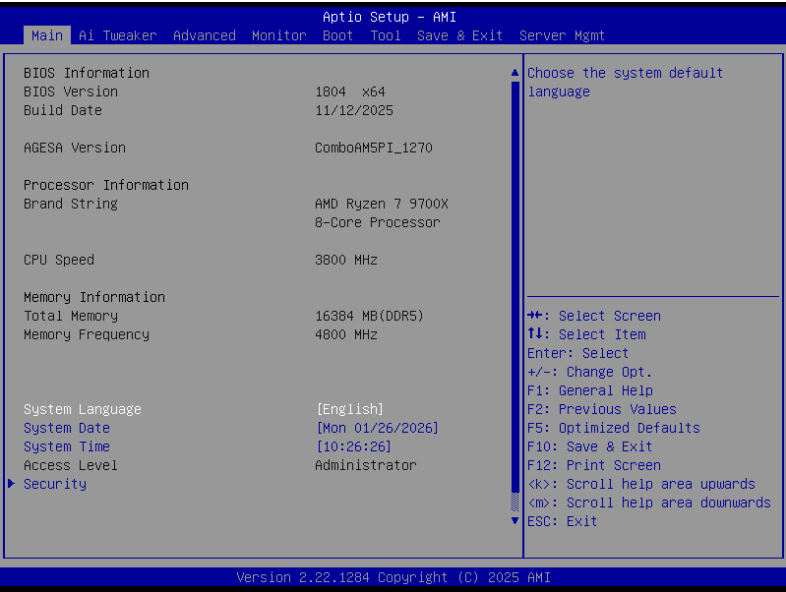

System Language

Allows you to set the system default language.

System Date

Allows you to set the system date. Use <Tab> to switch between Date elements.

System Time

Allows you to set the system time. Use <Tab> to switch between Time elements.

Security

The Security menu items allow you to change the system security settings.

NOTE:

- If you have forgotten your BIOS password, erase the CMOS Real Time Clock (RTC) RAM to clear the BIOS password. See the motherboard for information on how to erase the RTC RAM via the Clear CMOS jumper.
 - The Administrator or User Password items on top of the screen show the default **[Not Installed]**. After you set a password, these items show **[Installed]**.
-

Administrator Password

If you have set an administrator password, we recommend that you enter the administrator password for accessing the system. Otherwise, you might be able to see or change only selected fields in the BIOS setup program.

To set an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. Re-type to confirm the password then select **OK**.

To change an administrator password:

1. Select the **Administrator Password** item and press <Enter>.
2. From the **Enter Current Password** box, key in the current password, then press <Enter>.
3. From the **Create New Password** box, key in a new password, then press <Enter>.
4. Re-type to confirm the password then select **OK**.

To clear the administrator password, follow the same steps as in changing an administrator password, but leave other fields blank then select **OK** to continue. After you clear the password, the **Administrator Password** item on top of the screen shows **[Not Installed]**.

User Password

If you have set a user password, you must enter the user password for accessing the system. The User Password item on top of the screen shows the default **[Not Installed]**. After you set a password, this item shows **[Installed]**.

To set a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Create New Password** box, key in a password, then press <Enter>.
3. Re-type to confirm the password then select **OK**.

To change a user password:

1. Select the **User Password** item and press <Enter>.
2. From the **Enter Current Password** box, key in the current password, then press <Enter>.
3. From the **Create New Password** box, key in a new password, then press <Enter>.
4. Re-type to confirm the password then select **OK**.

To clear the user password, follow the same steps as in changing a user password, but leave other fields blank then select **OK** to continue. After you clear the password, the **User Password** item on top of the screen shows **[Not Installed]**.

6. Ai Tweaker menu


The Ai Tweaker menu items allow you to configure overclocking-related items.

CAUTION!

- Be cautious when changing the settings of the Ai Tweaker menu items. Incorrect field values can cause the system to malfunction.
- Overclocking may affect the warranty coverage declared by AMD. For more details please refer to the official AMD website.

NOTE: The configuration options for this section vary depending on the CPU and DIMM model you installed on the motherboard.

Scroll down to display other BIOS items.

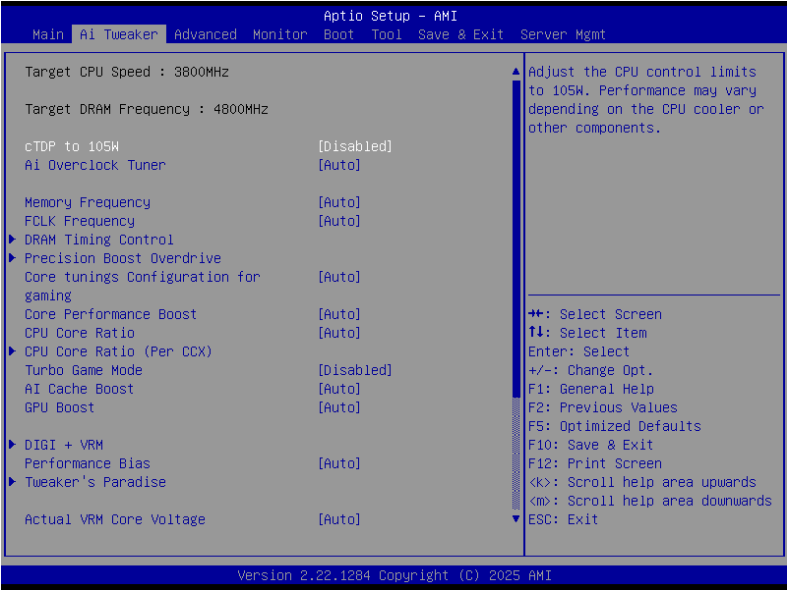

cTDP to 105W

Allows you to adjust the CPU control limits to 105W. Performance may vary depending on the CPU cooler and other components.

Configuration options: [Disabled] [Enabled]

NOTE: This item appears depending on the CPU installed.

Ai Overclock Tuner

[Auto]	Loads the optimal settings for the system.
[Manual]	When the manual mode is selected, the BCLK (base clock) frequency can be assigned manually.
[DOCP I]	Load the DIMM's default DOCP memory timings (CL, TRCD, TRP, TRAS) and other memory parameters optimized by ASUS.
[DOCP II]	Load the DIMM's complete default DOCP profile.
[DOCP Tweaked]	Load DOCP profile with tweaks for improved performance if config matches.
[EXPO I]	Load the DIMM's default EXPO memory timings (CL, TRCD, TRP, TRAS) and other memory parameters optimized by ASUS.
[EXPO II]	Load the DIMM's complete default EXPO profile.
[EXPO Tweaked]	Load EXPO profile with tweaks for improved performance if config matches.
[EXPO on the fly]	On the fly for dynamic control.
[AEMP]	Load the memory parameters profile optimized by ASUS if no DIMM profiles detected.

NOTE:

- The configuration options for this item depends on the DIMM installed.
 - The following items appear only when **Ai Overclock Tuner** is set to **[Manual]**, **[DOCP I]**, **[DOCP II]**, **[DOCP Tweaked]**, **[EXPO I]**, **[EXPO II]**, **[EXPO Tweaked]**, **[EXPO on the fly]**, or **[AEMP]**.
-

BCLK Frequency

Adjusts Base Clock Frequency for CPU and also PCIE. Default is 100. Please note that changing the BCLK will affect stability of devices, in particular SATA devices.

NOTE: The following item appears only when **Ai Overclock Tuner** is set to **[DOCP I]**, **[DOCP II]**, or **[DOCP Tweaked]**.

DOCP

Each profile has its own DRAM frequency, timing and voltage.

NOTE: The following item appears only when **Ai Overclock Tuner** is set to **[EXPO I]**, **[EXPO II]**, or **[EXPO Tweaked]**, or **[EXPO on the fly]**.

EXPO

Each profile has its own DRAM frequency, timing and voltage.

NOTE: The following item appears only when **Ai Overclock Tuner** is set to **[AEMP]**.

AEMP

Each profile has its own DRAM frequency, timing and voltage.

Memory Frequency

Forces a DDR5 frequency slower than the common tCK detected via SPD.
Configuration options: [Auto] [DDR5-2000MHz] ~ [DDR5-12000MHz]

NOTE: The configuration options for this item vary depending on the DIMM model you installed on the motherboard.

FCLK Frequency

Specifies the FCLK frequency.

Configuration options: [Auto] [800MHz] ~ [3000MHz]

DRAM Timing Control

The sub-items in this menu allow you to set the DRAM timing control features. Use the <+> and <-> keys to adjust the value. To restore the default setting, type **[Auto]** using the keyboard and press the <Enter> key. You can also select various Memory Presets to load settings suitably tuned for some memory modules.

CAUTION! Changing the values in this menu may cause the system to become unstable! If this happens, revert to the default settings.

DDR Training Runtime Reduction

[Disabled] Force Disable DDR Training Runtime Reduction.

[Enabled] Force Enable DDR Training Runtime Reduction.

[Auto] Default code behavior. If OC is ENABLE, DDR Training Runtime Reduction will be DISABLE by DEFAULT.

Memory Context Restore

Allows you to configure the memory context restore mode. When enabled, DRAM re-training is avoided when possible and the POST latency is minimized.

Configuration options: [Auto] [Enabled] [Disabled]

Mem Over Clock Fail Count

Mem Over Clock Fail Count.

Power Down Enable

Configuration options: [Disabled] [Enabled] [Auto]

UCLK DIV1 MODE

Configuration options: [Auto] [UCLK=MEMCLK] [UCLK=MEMCLK/2]

Gear Down Mode

Configuration options: [Auto] [Disabled] [Enabled]

Primary Timings

Tcl

DRAM CAS# Latency, the value stepping is 2.

Trcd Wr

DRAM RAS# to CAS# Delay of Write.

Trcd Rd

DRAM RAS# to CAS# Delay of Read.

Trp

DRAM RAS# PRE Time.

Tras

DRAM RAS# ACT Time.

Secondary Timings

Trc

DRAM Row Cycle Time.

Twr

DRAM WRITE to READ Delay, the value stepping is 6.

Refresh Interval

Allows you to set Refresh Interval.

Trfc1

DRAM REF Cycle Time.

Trfc2

Allows you to set Trfc2.

Trfcsb

Allows you to set Trfcsb.

Trtp

DRAM READ to PRE Time.

TrrdL

DRAM RAS# to RAS# Delay(tRRDL).

TrrdS

DRAM RAS# to RAS# Delay(tRRDS).

Tfaw

Allows you to set Tfaw.

TwtrL

DRAM WRITE to READ Delay(tWTR_L).

TwtrS

DRAM WRITE to READ Delay(tWTR_S).

TrdrdScl

Allows you to set TrdrdScl.

TrdrdSc

Allows you to set TrdrdSc.

TrdrdSd

Allows you to set TrdrdSd.

Trdrddd

Allows you to set Trdrddd.

TwrwrScl

Allows you to set TwrwrScl.

TwrwrSc

Allows you to set TwrwrSc.

TwrwrSd

Allows you to set TwrwrSd.

TwrwrDd

Allows you to set TwrwrDd.

Twrrd

Allows you to set Twrrd.

Trdwr

Allows you to set Trdwr.

Additional Timings**IBUF_LPWR_MODE**

Configuration options: [Auto] [Enabled] [Disabled]

M_ORDERING

Configuration options: [Auto] [NORM] [STRICT] [RELAXED]

S_COL_WIDTH

Allows you to set S_COL_WIDTH.

MC_SVA_TRIM0

Allows you to set MC_SVA_TRIM0.

MC_SVA_TRIM1

Allows you to set MC_SVA_TRIM1.

MC_SVA_TRIM2

Allows you to set MC_SVA_TRIM2.

MMCM_MULT_F

Configuration options: [Auto] [Enabled] [Disabled]

DRAM Signal Control**DDR Turnaround Times****Read Drift Adjustment P0**

AUTO - Read Drift Adjustment 0.

Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

Write Drift Adjustment P0

AUTO - Write Drift Adjustment 0.

Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

DDR PMU Training**Read Preamble P0**

Specifies the Read Preamble P0.

Configuration options: [Auto] [1 tCK - 10 Pattern] [2 tCK - 0010 Pattern] [2 tCK - 1110 Pattern (DDR4 Style)] [3 tCK - 000010 Pattern] [4 tCK - 00001010 Pattern]

Write Preamble P0

Specifies the Write Preamble P0.

Configuration options: [Auto] [2 tCK - 0010 Pattern] [3 tCK - 000010 Pattern] [4 tCK - 00001010 Pattern]

PHY VrefDAC0 P0 Control

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **PHY VrefDAC0 P0 Control** is set to **[Manual]**.

PHY VrefDAC0 P0

VrefDAC0 control for DQ Receiver in P0 State Negative Values are represented by Two's complement.

PHY VrefDAC1 P0 Control

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **PHY VrefDAC1 P0 Control** is set to **[Manual]**.

PHY VrefDAC1 P0

VrefDAC1 control for DQ Receiver in P0 State Negative Values are represented by Two's complement.

PMU DQ Vref P0 Control

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **PMU DQ Vref P0 Control** is set to **[Manual]**.

PMU DQ Vref P0

PMU message block for DQ Vref control in P0 State Negative values are represented by Two's complement.

ARdPtrInitVal P0 Control

[Auto] Follow default setting.

[Manual] Manually specify ARdPtrInitValMP0.

NOTE: The following item appears only when **ARdPtrInitVal P0 Control** is set to **[Manual]**.

ARdPtrInitVal P0

Controls the Write/Read pointer

Processor ODT P0-P3 Page

CA ODT GroupA

Specifies the CA ODT.

Configuration options: [Auto] [RTT_OFF] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CK ODT GroupA

Specifies the CK ODT.

Configuration options: [Auto] [RTT_OFF] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CS ODT GroupA

Specifies the CS ODT.

Configuration options: [Auto] [RTT_OFF] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CA ODT GroupB

Specifies the CA ODT.

Configuration options: [Auto] [RTT_OFF] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CK ODT GroupB

Specifies the CK ODT.

Configuration options: [Auto] [RTT_OFF] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CS ODT GroupB

Specifies the CS ODT.

Configuration options: [Auto] [RTT_OFF] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

Processor ODT P state mode

Processor ODT P state mode.

Configuration options: [Sync all P-states] [By per P-states]

Processor ODT P0 Page

Processor ODT Impedance Pull Up P0

Specifies the Processor ODT Impedance Pull Up P0.

Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68 ohm] [60 ohm] [53 ohm] [48 ohm] [43 ohm] [40 ohm] [36 ohm] [34 ohm] [32 ohm] [30 ohm] [28 ohm] [26 ohm] [25 ohm]

Processor ODT Impedance Pull Down P0

Specifies the Processor ODT Impedance Pull Down P0.

Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68 ohm] [60 ohm] [53 ohm] [48 ohm] [43 ohm] [40 ohm] [36 ohm] [34 ohm] [32 ohm] [30 ohm] [28 ohm] [26 ohm] [25 ohm]

Processor DQ drive strengths Pull Up P0

Processor DQ drive strengths Pull Up P0.

Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

Processor DQ drive strengths Pull Down P0

Processor DQ drive strengths Pull Down P0.

Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

Dram ODT Impedance RTT_NOM_WR P0

Dram ODT Impedance RTT_NOM_WR P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT impedance RTT_NOM_RD P0

Dram ODT impedance RTT_NOM_RD P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT impedance RTT_WR P0

Dram ODT impedance RTT_WR P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT impedance RTT_PARK P0

Dram ODT impedance RTT_PARK P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT impedance DQS_RTT_PARK P0

Dram ODT impedance DQS_RTT_PARK P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram DQ drive strengths Pull Up P0

Dram DQ drive strengths Pull Up P0.

Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

Dram DQ drive strengths Pull Down P0

Dram DQ drive strengths Pull Down P0.

Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

Proc CS Drive Strength

Proc CS Drive Strength.

Configuration options: [Auto] [120 ohm] [60 ohm] [40 ohm] [30 ohm]

Proc CK Drive Strength

Proc CK Drive Strength.

Configuration options: [Auto] [120 ohm] [60 ohm] [40 ohm] [30 ohm]

Proc CA Drive Strength

Proc CA Drive Strength.

Configuration options: [Auto] [120 ohm] [60 ohm] [40 ohm] [30 ohm]

Proc Data Drive Strength

Proc Data Drive Strength.

Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

CPU On-Die Termination

CPU On-Die Termination(ProcODT).

Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68.6 ohm] [60 ohm] [53.3 ohm] [48 ohm] [43.6 ohm] [40 ohm] [36.9 ohm] [34.3 ohm] [32 ohm] [30 ohm] [28.2 ohm] [26.7 ohm] [25.3 ohm]

DRAM Data Drive Strength

DRAM Data Drive Strength.

Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

Rtt Nom Wr

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Rtt Nom Rd

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Rtt Wr

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Rtt Park

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Rtt Park Dqs

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

CA Tx Phase Shift Clk

Configuration options: [Auto] [0] ~ [7]

CS Tx Phase Shift Clk

Configuration options: [Auto] [0] ~ [7]

CK Tx Phase Shift Clk

Configuration options: [Auto] [0] ~ [7]

CA Rx Phase Shift Clk

Configuration options: [Auto] [0] ~ [7]

CS Rx Phase Shift Clk

Configuration options: [Auto] [0] ~ [7]

CK Rx Phase Shift Clk

Configuration options: [Auto] [0] ~ [7]

FIFO Wr En Fine Delay

Configuration options: [Auto] [0] [1]

POC Sample PD

Configuration options: [Auto] [Enabled] [Disabled]

Bank Swap Mode

Bank Swap Mode.

Configuration options: [Auto] [Disabled] [Swap CPU] [Swap APU]

Memory P-state

Configuration options: [Auto] [Disabled] [Enabled]

Precision Boost Overdrive**Prochot VRM Throttling**

Disabling Prochot will disable the VRMs ability to throttle the CPU when the voltage regulator is approaching its thermal limits.

Configuration options: [Auto] [Disable] [Enable]

Peak Current Control

Enable or Disable PCC Feature. Only need to Disable during extreme overclocking.

Configuration options: [Auto] [Disable] [Enable]

Medium Load Boostit

Enabling may help improve performance under medium loads.

Configuration options: [Auto] [Disabled] [Enabled]

Precision Boost Overdrive

When this item is enabled, it allows the processor to run beyond defined values for PPT, VDD_CPU EDC, VDD_CPU TDC, VDD_SOC EDC, VDD_SOC TDC to the limits of the board, and allows it to boost at higher voltages for longer durations than default operation.

Configuration options: [Auto] [Disabled] [Enabled] [Enhancement] [Manual] [AMD ECO Mode]

Disable Current Limiter

Enabling will disable current limiting. Use at your own risk.

Configuration options: [Auto] [Disabled] [Enabled]

Precision Boost Overdrive Scalar

[Auto] Part runs with a scalar of 1X, i.e. normal operation.

[Manual] Part runs with a scalar of customized value.

NOTE: The following item appears only when **Precision Boost Overdrive Scalar** is set to **[Manual]**.

Customized Precision Boost Overdrive Scalar

Precision Boost Overdrive increases the maximum boost voltage used (runs above parts specified maximum) and the amount of time spent at that voltage. The larger the value entered the larger the boost voltage used and the longer that voltage will be maintained.

Configuration options: [1X] ~ [10X]

CPU Boost Clock Override

Allows you to increase (positive) or decrease (negative) the maximum CPU frequency that may be automatically achieved by the CPU Boost Algorithm.

Configuration options: [Auto] [Disabled] [Enabled (Positive)] [Enabled (Negative)]

Per-Core Boost Clock Limit

Per-Core Boost Clock Limit

Set specific limits to each core in MHz unit. This will still be capped by the global CPU Boost clock but limiting down from this for each core will restrain it's frequency.

Limiting a weaker core may improve it's curve optimizer margin.

Configuration options: [Auto] [Disabled] [Enabled]

NOTE: The following items appear only when **Per-Core Boost Clock Limit** is set to **[Enabled]**.

Core 0~7

The recommended value is based on parameters of your setup with the current settings of Extreme Tweaker Menu.

Platform Thermal Throttle Limit

Allows the user to decrease the maximum allowed processor temperature (celsius).

Configuration options: [Manual] [Auto]

NOTE: The following items appear only when **Per-Core Boost Clock Limit** is set to **[Manual]**.

Platform Thermal Throttle Limit

Allows the user to decrease the maximum allowed processor temperature (celsius).

Curve Optimizer

Curve Optimizer

Allows the user to shift the Voltage / Frequency (AVFS) curve to include higher voltages (positive values) or lower voltages (negative values). The larger the value entered the larger the magnitude of the voltage limit.

Configuration options: [Auto] [All Cores] [Per Core] [Per CCD]

NOTE: The following items appear only when **Curve Optimizer** is set to **[All Cores]**.

All Core Curve Optimizer Sign

Determines the direction of the curve shift on all cores. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

All Core Curve Optimizer Magnitude

Determines the magnitude of the curve shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

NOTE: The following items appear only when **Curve Optimizer** is set to **[Per Core]**.

Core 0-7 Curve Optimizer Sign

Determines the direction of the curve shift on this core. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Core 0-7 Curve Optimizer Magnitude

Determines the magnitude of the curve shift to be made to this core (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

NOTE: The following items appear only when **Curve Optimizer** is set to **[Per CCD]**.

CCD 0 Curve Optimizer Sign

Determines the direction of the curve shift on all cores. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

CCD 0 Curve Optimizer Magnitude

Determines the magnitude of the curve shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

GFX Curve Optimizer

GFX Curve Optimizer

Allows the user to shift the GFX Voltage / Frequency (AVFS) curve to include higher voltages (positive values) or lower voltages (negative values). The larger the value entered the larger the magnitude of the voltage shift.

Configuration options: [Auto] [GFX Curve Optimizer]

NOTE: The following items appear only when **GFX Curve Optimizer** is set to **[GFX Curve Optimizer]**.

GFX Curve Optimizer Sign

Determines the direction of the curve shift for GFX. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

GFX Curve Optimizer Magnitude

Determines the magnitude of the GFX curve shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift. Field defaults to 0 and the user can enter whole integer numbers. Value entered, combined with the sign above, is used to send the SMU a GFX Curve Optimizer command.

Curve Shaper

Min Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Min Frequency - Low Temperature** is set to **[Enable]**.

Min Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Min Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Min Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Min Frequency - Med Temperature** is set to **[Enable]**.

Min Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Min Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Min Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Min Frequency - High Temperature** is set to **[Enable]**.

Min Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Min Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Low Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Min Frequency - High Temperature** is set to **[Enable]**.

Low Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Low Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Low Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Low Frequency - Med Temperature** is set to **[Enable]**.

Low Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Low Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Low Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Min Frequency - High Temperature** is set to **[Enable]**.

Low Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Low Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Med Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Med Frequency - Low Temperature** is set to **[Enable]**.

Med Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Med Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Med Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Med Frequency - Med Temperature** is set to **[Enable]**.

Med Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Med Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Med Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Med Frequency - High Temperature** is set to **[Enable]**.

Med Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Med Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

High Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **High Frequency - Low Temperature** is set to **[Enable]**.

High Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

High Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

High Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **High Frequency - Med Temperature** is set to **[Enable]**.

High Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

High Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

High Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **High Frequency - High Temperature** is set to **[Enable]**.

High Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

High Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Max Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Max Frequency - Low Temperature** is set to **[Enable]**.

Max Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Max Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Max Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Max Frequency - Med Temperature** is set to **[Enable]**.

Max Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Max Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Max Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Max Frequency - High Temperature** is set to **[Enable]**.

Max Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Max Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Core tunings Configuration for gaming

Configuration options: **[Auto]** **[Legacy]** **[Level 1]** **[Level 2]**

Core Performance Boost

Automatically overclocks the CPU and DRAM to enhance system performance.

Configuration options: **[Auto]** **[Enabled]** **[Disabled]**

CPU Core Ratio

Configuration options: **[Auto]** **[CPU Core Ratio]**

NOTE: The following item appears only when **CPU Core Ratio** is set to **[CPU Core Ratio]**.

CPU Core Ratio

Allows you to set the CPU core ratio. Use the <+> or <-> to adjust the value.

CPU Core Ratio (Per CCX)

The sub-items in this menu allow you to adjust Core Ratios for each CCX.

CCD 0

CCX0 Ratio [Auto]

Allows you to specify a custom Core Ratio for this CCX. Use the <+> or <-> to adjust the value.

Turbo Game Mode

When this item is enabled, the mode optimizes gaming performance by disabling the second CCD (Core Complex Die) and SMT (Simultaneous Multithreading), allowing for a more focused and efficient use of processing power in certain games.

Configuration options: [Disabled] [Enabled]

NOTE:

- The optimized gaming performance may vary depending on the game.
 - Disabling the second CCD and SMT may impact the performance of other applications, particularly those related to productivity. Use this mode selectively based on your specific needs.
 - The item appears depending on your CPU installed.
-

AI Cache Boost

Enable AI Cache Boost on AMD compatible processors to enhance performance and compute power when using AI-based tools.

Configuration options: [Auto] [Disabled] [Enabled]

GPU Boost

Set to [Manual] if you want to select the desired value in frequency range.

Configuration options: [Auto] [Manual Mode]

NOTE: The following item appears only when **GPU Boost** is set to **[Manual Mode]**.

GPU clock frequency

Allows you to set the GPU clock frequency.

Digi+ VRM

Voltage training

Configuration options: [Auto] [Disabled] [Enabled]

CPU Load-line Calibration

CPU Load-Line Calibration is defined by AMD VRM spec and affects CPU voltage. The CPU working voltage will decrease proportionally to CPU loading. Higher value could get higher voltage and good overclocking performance but increase the CPU and VRM thermal.

Configuration options [Auto] [Level 1] [Level 2] [Level 3] [Level 4]

CAUTION! DO NOT remove the thermal module. The thermal conditions should be monitored.

CPU Current Capability

A higher value brings a wider total power range and extends the overclocking frequency range simultaneously.

Configuration options: [Auto] [100%] ~ [140%]

NOTE: Configure higher values when overclocking or under a high loading for extra power support.

CPU VRM Switching Frequency

Sets the VRM switching frequency. VRM switching frequency affects transient response and VRM component temperatures. Setting a higher switching frequency will result in better transient response at the expense of higher VRM temperatures. Active cooling of the VRM heatsink is recommended when running high CPU voltage and high load-line calibration values.

Configuration options: [Auto] [Manual]

CAUTION! Do not remove the VRM heatsink.

NOTE: The following item appears only when **CPU VRM Switching Frequency** is set to [Manual].

Fixed CPU VRM Switching Frequency(KHz)

Allows you to set a higher frequency for a quicker transient response speed. The values range from 300 KHz to 450 KHz with an interval of 50 KHz.

CPU Power Duty Control

CPU power duty control adjusts the duty cycle of each VRM phase based upon current and/or temperature.

[T. Probe] Select to maintain VRM thermal balance

[Extreme] Select to maintain VRM current balance.

CAUTION! DO NOT remove the thermal module when setting this item to [Extreme]. The thermal conditions should be monitored.

CPU Power Phase Control

Allows you to set the power phase control of the CPU.

[Auto] Automatically selects the power phase control.

[Optimized] Set to the ASUS optimized phase tuning profile.

[Extreme] Sets full phase mode.

[Manual] Manually select the power phase response speed.

CAUTION! DO NOT remove the thermal module when setting this item to [Extreme]. The thermal conditions should be monitored.

NOTE: The following item appears only when **CPU Power Phase Control** is set to [Manual].

Power Phase Response

Select the ultra fast mode for a faster power phase response. The reaction time will be longer when the regular mode is selected.

Configuration options: [Ultra Fast] [Fast] [Medium] [Regular]

VDDSOC Current Capability

Configuration options: [100%] [110%] [120%] [130%]

VDDSOC Switching Frequency

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **VDDSOC Switching Frequency** is set to **[Manual]**.

Fixed VDDSOC VRM Switching Frequency(KHz)

The switching frequency will affect the VDDSOC transient response speed and the component thermal production. Configure a higher frequency for a quicker transient response speed. The values range from 350 KHz to 650 KHz with an interval of 100 KHz.

Performance Bias [Auto]

Different Values may help different Software's performance.

Configuration options: [Auto] [None] [CB R23] [GB3]

Tweaker's Paradise

Clock Spread Spectrum

Allows you to enable or disable Clock Spread Spectrum.

Configuration options: [Auto] [Enabled] [Disabled]

Stretch mode for L3 DFLL

Configuration options: [Auto] [Enabled] [Disabled]

1.8V PLL Voltage

Use the <+> or <-> to adjust the value. The values range from 1.500V to 2.500V with an interval of 0.010V.

1.8V Standby Voltage

Use the <+> or <-> to adjust the value. The values range from 1.500V to 2.500V with an interval of 0.010V.

Misc_ALW

Use the <+> or <-> to adjust the value. The values range from 0.600V to 1.500V with an interval of 0.010V.

Chipset 1.05V

Use the <+> or <-> to adjust the value. The values range from 1.050V to 1.200V with an interval of 0.005V.

Actual VRM Core Input Voltage

Configure the VRM output rail for Core Voltage. Manual mode allows user-defined values. Offset mode modifies values by SVI3. Increase to help CPU Core Frequency overclock. The reading shown on the right is the Core Voltage Reading from the remote ADC Sensing. The reading shown below is the true Core Voltage sensed from the Processor's sensor.

Configuration options: [Auto] [Manual Mode] [Offset Mode]

NOTE: The following items appear only when **Actual VRM Core Input Voltage** is set to **[Manual Mode]**.

CPU Core Voltage Override

Use the <+> or <-> to adjust the value. The values range from 0.800V to 1.550V with an interval of 0.005V.

NOTE: The following items appear only when **Actual VRM Core Input Voltage** is set to **[Offset Mode]**.

Offset Mode Sign

[+] To offset the CPU core voltage by a positive value.

[-] To offset the CPU core voltage by a negative value.

CPU Core Voltage Offset

Use the <+> or <-> to adjust the value. The values range from 0.005V to 0.500V with an interval of 0.005V.

Core VID

Allows you to specify a custom CPU core VID. Power saving features for idle cores (e.g. cc6 sleep) remain active.

CPU SOC Voltage

Allows you to increase to help Memory Frequency overclock. The reading shown on the right is the SOC Voltage Reading from the remote ADC Sensing. The reading shown below is the true SOC Voltage sensed from the processor's sensor.

Configuration options: [Auto] [Manual Mode] [Offset Mode]

NOTE: The following item appears only when **CPU SOC Voltage** is set to **[Manual Mode]**.

VDDSOC Voltage Override

Use the <+> and <-> keys to adjust the value. The values range from 0.800V to 1.300V with an interval of 0.005V.

NOTE: The following items appear only when **CPU SOC Voltage** is set to **[Offset Mode]**.

VDDSOC Offset Mode Sign

[+] To offset the CPU SOC voltage by a positive value.

[-] To offset the CPU SOC voltage by a negative value.

VDDSOC Voltage Offset

Use the <+> or <-> to adjust the value. The values range from 0.005V to 0.500V with an interval of 0.005V.

CPU VDDIO / MC Voltage

Use the <+> and <-> keys to adjust the value. The values range from 1.100V to 2.000V with an interval of 0.010V.

VDDP Voltage

Use the <+> and <-> keys to adjust the value. The values range from 0.700V to 1.800V with an interval of 0.001V.

High DRAM Voltage Mode

If disabled, the upper range for DRAM Voltage will be 1.435V. If enabled, the upper range will be 2.070V. If enabled on non-supported DRAM, the voltage will be lower than requested. Configuration options: [Auto] [Disabled] [Enabled]

DRAM VDD Voltage

Allows you to set the power for the DRAM IC's VDD portion.

DRAM VDDQ Voltage

Allows you to set the power for the DRAM IC's Data portion.

VDDG CCD Voltage

VDDG CCD represents voltage for the data portion of the Infinity Fabric. Range is 650mV ~ 1650mV with a stepping of 10mV.

Configuration options: [Auto] 650 mV] ~ [1650 mV]

VDDG IOD Voltage

VDDG IOD represents voltage for the data portion of the Infinity Fabric. Range is 650mV ~ 1650mV with a stepping of 10mV.

Configuration options: [Auto] 650 mV] ~ [1650 mV]

Advanced Memory Voltages

PMIC Force Continuous Current Mode

Configuration options: [Auto] [Enabled] [Disabled]

PMIC Voltages

Configuration options: [Auto] [Sync All PMICs]

NOTE: The following items appear only when **PMIC Voltages** is set to **[Sync All PMICs]**.

SPD HUB VLDO (1.8V)

Allows you to set the main power for the SPD Hub Logic. Default set to 1.8V.

SPD HUB VDDIO (1.0V)

Allows you to set the main power for the SPD Hub side-band interface. Default set to 1.0V.

Memory VDD Voltage

Allows you to set the power for the DRAM IC's VDD portion.

Memory VDDQ Voltage

Allows you to set the power for the DRAM IC's Data portion.

Memory VPP Voltage

Allows you to set the power for the DRAM Activating Power Supply.

Memory Voltage Switching Frequency

Allows you to set the switching frequency of memory voltage regulator in MHz.

Memory Current Capability


Allows you to set the current capability for the Switching Regulators in Amps.

7. Advanced menu

The Advanced menu items allow you to change the settings for the CPU and other system devices. Scroll down to display other BIOS items.

CAUTION!

- Be cautious when changing the settings of the Advanced menu items. Incorrect field values can cause the system to malfunction.
- Overclocking may affect the warranty coverage declared by AMD. For more details please refer to the official AMD website.

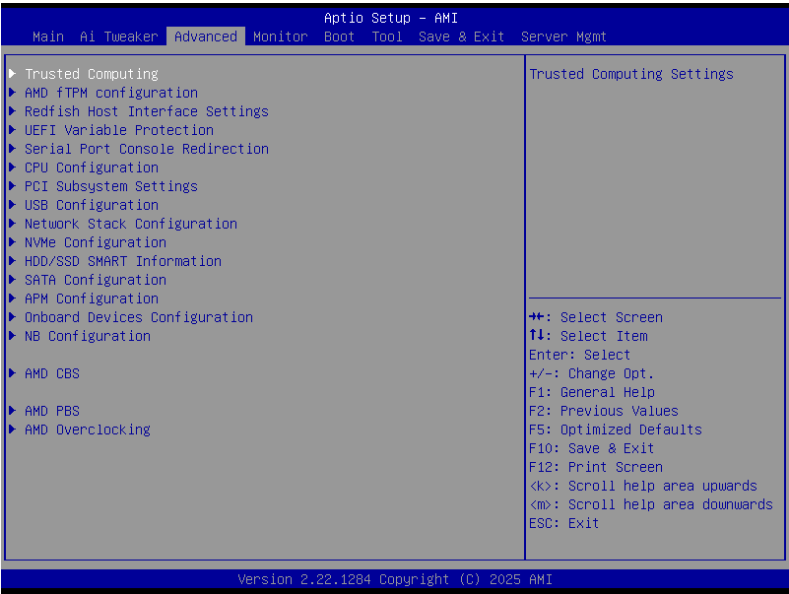

7.1 Trusted Computing

The items in this menu allow you to configure the Trusted Computing settings.

Security Device Support

Allows you to enable or disable the BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Configuration options: [Disabled] [Enabled]

NOTE: The following items appear only when **Security Device Support** is set to [Enabled].

SHA256 PCR Bank

Enable or disable SHA256 PCR Bank.

Configuration options: [Disabled] [Enabled]

Pending operation

Schedule an Operation for the Security Device.
Configuration options: [None] [TPM Clear]

NOTE: Your computer will reboot during restart in order to change the State of the Security Device.

Platform Hierarchy

Enable or Disable Platform Hierarchy.
Configuration options: [Disabled] [Enabled]

Storage Hierarchy

Enable or disable Storage Hierarchy.
Configuration options: [Disabled] [Enabled]

Endorsement Hierarchy

Enable or disable Endorsement Hierarchy.
Configuration options: [Disabled] [Enabled]

Physical Presence Spec Version

Allows you to select to Tell O.S. to support PPI Version 1.2 or 1.3.
Configuration options: [1.2] [1.3]

NOTE: Some HCK tests might not support 1.3.

7.2 AMD fTPM configuration

The items in this menu show the AMD fTPM configuration options.

Selects TPM device

Allows you to select between Firmware TPM or Discrete TPM.

[Enable Firmware TPM]	Enables platform Firmware TPM, disable Discrete TPM.
[Enable Discrete TPM]	Enables Discrete TPM, disable platform Firmware TPM.

NOTE: If you plug in a Discrete TPM card on your motherboard, please select the **[Enable Discrete TPM]** option.

Erase fTPM NV for factory reset

Allows you to enable or disable fTPM reset for newly installed CPUs.

[Disabled]	Keep previous fTPM records and continue system boot, fTPM will not be enabled with the new CPU unless fTPM is reset (reinitialized). Swapping back to the old CPU may allow you to recover TPM related keys and data.
[Enabled]	Reset fTPM, if you have Bitlocker or encryption-enabled system, the system will not boot without a recovery key.

7.3 Redfish Host Interface Settings

The items in this menu allow you to configure Redfish Host Interface Settings.

Redfish

Allows you to enable or disable AMI Redfish.

Configuration options: [Disabled] [Enabled]

NOTE: The following items appear only when **Redfish** is set to [Enabled].

Authentication mode

Allows you to select the authentication mode.

Configuration options: [Authentication None] [Basic Authentication] [Session Authentication]

Redfish Server Settings

IP address

Enter Redfish Server IP address.

IP Mask address

Enter Redfish Server IP Mask address.

IP Port

Enter Redfish Server IP Port number.

7.4 UEFI Variables Protection

Password protection of Runtime Variables

Control the NVRAM Runtime Variable protection through System Admin Password.

Configuration options: [Enable] [Disable]

7.5 Serial Port Console Redirection

The items in this menu allow you to configure serial port console redirection settings.

COM1 / COM2(SOL)

Console Redirection

Allows you to enable or disable the console redirection feature.

Configuration options: [Disabled] [Enabled]

NOTE: The following item appears only when **Console Redirection** is set to [Enabled].

Console Redirection Settings

These items become configurable only when you enable the Console Redirection item. The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Terminal Type [ANSI]

Allows you to set the terminal type.

[VT100]	ASCII char set.
[VT100Plus]	Extends VT100 to support color, function keys, etc.
[VT-UTF8]	Uses UTF8 encoding to map Unicode chars onto 1 or more bytes.
[ANSI]	Extended ASCII char set.

Bits per second

Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

Configuration options: [9600] [19200] [38400] [57600] [115200] [230400] [460800] [921600]

Data Bits

Configuration options: [7] [8]

Parity

A parity bit can be sent with the data bits to detect some transmission errors. [Mark] and [Space] parity do not allow for error detection. They can be used as an additional data bit.

[None]	None
[Even]	Parity bit is 0 if the num of 1's in the data bits is even.
[Odd]	Parity bit is 0 if num of 1's in the data bits is odd.
[Mark]	Parity bit is always 1.
[Space]	Parity bit is always 0.

Stop Bits

Stop bits indicate the end of a serial data packet. (A start bit indicates the beginning.) The standard setting is 1 stop bit. Communication with slow devices may require more than 1 stop bit.

Configuration options: [1] [2]

Flow Control

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

Configuration options: [None] [Hardware RTS/CTS]

VT -UTF8 Combo Key Support

This allows you to enable the VT -UTF8 Combination Key Support for ANSI/VT100 terminals.

Configuration options: [Disabled] [Enabled]

Recorder Mode

With this mode enabled only text will be sent. This is to capture Terminal data.

Configuration options: [Disabled] [Enabled]

Resolution 100x31

This allows you enable or disable extended terminal solution.

Configuration options: [Disabled] [Enabled]

Putty Keypad

This allows you to select the FunctionKey and Keypad on Putty.

Configuration options: [VT100] [LINUX] [XTERM6] [SCO] [ESCNC] [VT400]

Legacy Console Redirection Settings

Redirection COM Port

Allows you to select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

Configuration options: [COM1] [COM2(SOL)]

Resolution

This allows you to set the number of rows and columns supported on the Legacy OS.

Configuration options: [80x24] [80x25]

Redirection After POST

The default setting for this option is set to **[Always Enable]**.

[Bootloader] The legacy Console Redirection is disabled before booting to legacy OS.

[Always Enable] Legacy Console Redirection is enabled for legacy OS.

Serial Port for Out-of-Band Management/ Windows Emergency Management Services (EMS)

Console Redirection EMS

Allows you to enable or disable the console redirection feature.

Configuration options: [Disabled] [Enabled]

NOTE: The following item appears only when **Console Redirection EMS** is set to **[Enabled]**.

Console Redirection Settings

The settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allow for remote management of a Windows Server OS through a serial port.

Configuration options: [COM1] [COM2]

Terminal Type EMS

VT-UTF8 is the preferred terminal type for out-of-band management. The next best choice is VT100+, and then VT100. See above, in Console Redirection Settings page for more help with Terminal Type/Emulation.

Configuration options: [VT100] [VT100Plus] [VT-UTF8] [ANSI]

Bits per second EMS

Selects serial port transmission speed. The speed must be matched on the other side. Long or noisy lines may require lower speeds.

Configuration options: [9600] [19200] [38400] [57600] [115200] [230400] [460800] [921600]

Flow Control EMS

Flow control can prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a “stop” signal can be sent to stop the data flow. Once the buffers are empty, a “start” signal can be sent to re-start the flow. Hardware flow control uses two wires to send start/stop signals.

Configuration options: [None] [Hardware RTS/CTS] [Software Xon/Xoff]

7.6 CPU Configuration

The items in this menu show the CPU-related information that the BIOS automatically detects. Scroll down to display other BIOS items.

NOTE: The items in this menu may vary based on the CPU installed.

PSS Support

Allows you to enable or disable the generation of ACPI_PPC, and _PCT objects.

Configuration options: [Disabled] [Enabled]

NX Mode

Allows you enable or disable No-execute page protection Function.

Configuration options: [Disabled] [Enabled]

SVM Mode

Allows you enable or disable CPU Virtualization.

Configuration options: [Disabled] [Enabled]

7.7 PCI Subsystem Settings

The items in this menu allow you to configure PCI, PCI-X, and PCI Express settings.

Above 4G Decoding

Allows you to enable or disable 64bit capable Devices to be Decoded in Above 4G Address Space (Only if System supports 64 bit PCI Decoding).

Configuration options: [Disabled] [Enabled]

NOTE:

- Only enabled under 64bit operating system.
 - The following item appears only when **Above 4G Decoding** is set to **[Enabled]**.
-

Re-Size BAR Support

If the system has Resizable BAR capable PCIe Devices, this option enables or disables Resizable BAR Support (Only if System supports 64 bit PCI Decoding).

Configuration options: [Disabled] [Enabled]

NOTE: To enable Re-Size BAR Support for harnessing full GPU memory, please go to the **Boot** section and set **CSM(Compatibility Support Module)** to **[Disabled]**.

SR-IOV Support

Allows you to enable or disable Single Root IO Virtualization Support if the system has SR-IOV capable PCIe devices.

Configuration options: [Disabled] [Enabled]

7.8 USB Configuration

The items in this menu allow you to change the USB-related features.

NOTE: The **Mass Storage Devices** item shows the auto-detected values. If no USB device is detected, the item shows **None**.

Legacy USB Support

[Enabled] Enables the Legacy USB support.

[Disabled] USB devices are available only for EFI applications.

[Auto] Automatically disables the Legacy USB support if USB devices are not connected.

XHCI Hand-off

This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

[Disabled] Support XHCI by XHCI drivers for operating systems with XHCI support.

[Enabled] Support XHCI by BIOS for operating systems without XHCI support.

USB Mass Storage Driver Support

Allows you to enable or disable USB Mass Storage Driver Support

Configuration options: [Disabled] [Enabled]

Mass Storage Devices:

Allows you to select the mass storage device emulation type for devices connected. **[Auto]** enumerates devices according to their media format. Optical drives are emulated as **[CD-ROM]**, drives with no media will be emulated according to a drive type.

Configuration options: [Auto] [Floppy] [Forced FDD] [Hard Disk] [CD-ROM]

USB Single Port Control

Allows you to enable or disable the individual USB ports.

NOTE: Refer to section **Motherboard layout** and **Rear I/O connection** in your motherboard's user guide for the location of the USB ports.

7.9 Network Stack Configuration

The items in this menu allow you to change the Network Stack Configuration.

Network stack

Allows you to disable or enable the UEFI network stack.

Configuration options: [Disabled] [Enabled]

NOTE: The following items appear only when **Network Stack** is set to **[Enabled]**.

Ipv4 PXE Support

Allows you to enable or disable the Ipv4 PXE boot support.

Configuration options: [Disabled] [Enabled]

Ipv6 PXE Support [Enabled]

Allows you to enable or disable the Ipv6 PXE boot support.

Configuration options: [Disabled] [Enabled]

7.10 NVMe Configuration

This menu displays the NVMe controller and Drive information of the connected devices. You may press <Enter> on a connected NVMe device which appears in this menu to view more information on the NVMe device.

NOTE: The options displayed in this menu may vary depending on the devices connected to your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

7.11 HDD/SSD SMART Information

The items in this menu allow you to view the SMART information for connected storage devices.

NOTE:

- The options displayed in this menu may vary depending on the devices connected to your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.
 - NVMe Express devices do not support SMART information.
-

7.12 SATA Configuration

While entering Setup, the BIOS automatically detects the presence of SATA devices. The SATA Port items show **Empty** if no SATA device is installed to the corresponding SATA port. Scroll down to display the other BIOS items.

NOTE: The settings and options of this menu may vary depending on your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

SATA Controller(s)

Allows you to enable or disable the SATA Device.

Configuration options: [Disabled] [Enabled]

NOTE: The following items appear only when **SATA Controller(s)** is set to **[Enabled]**.

SATA Mode

This item allows you to set the SATA configuration.

- [AHCI] Set to [AHCI] when you want the SATA hard disk drives to use the AHCI (Advanced Host Controller Interface). The AHCI allows the onboard storage driver to enable advanced Serial ATA features that increases storage performance on random workloads by allowing the drive to internally optimize the order of commands.
- [RAID] Set to [RAID] when you want to create a RAID configuration from the SATA hard disk drives.

NVMe RAID Mode

This item allows you to enable or disable the NVMe RAID mode.

Configuration options: [Disabled] [Enabled]

SMART Self Test

S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) is a monitoring system that shows a warning message during POST (Power-on Self Test) when an error occurs in the hard disks.

Configuration options: [Disabled] [Enabled]

SATA6G

Allows you to enable or disable the selected SATA port.

Configuration options: [Disabled] [Enabled]

SATA6G Hot Plug

Designates this port as Hot Pluggable.

Configuration options: [Disabled] [Enabled]

M.2

Allows you to enable or disable the selected SATA port.

Configuration options: [Disabled] [Enabled]

7.13 APM Configuration

The items in this menu allow you to change the advanced power management settings.

Restore AC Power Loss

Allows your system to go to ON state, OFF state, or both states after an AC power loss.

When setting your system to **[Last State]**, it goes to the previous state before the AC power loss.

Configuration options: [Power Off] [Power On] [Last State]

ErP Ready

Allows you to switch off some power at S4+S5 or S5 to get the system ready for ErP requirement. When set to **[Enabled]**, all other PME options are switched off. RGB LEDs and RGB/Addressable RGB Headers will also be disabled.

Configuration options: [Disabled] [Enabled (S4+S5)] [Enabled (S5)]

NOTE: The **[Enabled (S4+S5)]** configuration option is not available for AMD EPYC™ 4005 series CPUs.

Max Power Saving

Configuration options: [Disabled] [Enabled]

Power On By PCI-E

Allows you to enable or disable the Wake-on-LAN function of the onboard LAN controller or other installed PCI-E LAN cards.

Configuration options: [Disabled] [Enabled]

Power On By RTC

Allows you to enable or disable the RTC (Real-Time Clock) to generate a wake event and configure the RTC alarm date. When enabled, you can set the days, hours, minutes, or seconds to schedule an RTC alarm date.

Configuration options: [Disabled] [Enabled]

7.14 Onboard Devices Configuration

The items in this menu allow you to change the onboard devices settings. Scroll down to view the other BIOS items.

NOTE: The settings and options of this menu may vary depending on your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

Native ASPM

[Auto]	Default setting
[Enabled]	OS Controlled ASPM
[Disabled]	BIOS Controlled ASPM

CPU PCIe ASPM Mode Control

Configuration options: [Disabled] [L0s Entry] [L1 Entry] [L0s And L1 Entry] [Auto]

PCIEX16(G5) Bandwidth Bifurcation Configuration

[Auto Mode]	Auto detect and switch.
[PCIEX16 Mode]	PCIe slot runs at x16.
[PCIEX16 RAID Mode]	Up to 4 SSDs installed onto the Hyper M.2 X16 Series card can be detected.
[GPU with M.2 storage]	PCIEX16(G5) slot will support a graphics card running at x8 and a NVMe M.2 SSD running at x4.

NOTE: Use **[PCIEX16 RAID Mode]** when installing the Hyper M.2 X16 series card or other M.2 adapter cards. Installing other devices may result in a boot-up failure. The number of SSDs supported varies with the PCIe bifurcation abilities enabled by each processor.

SATA or U.2 Switch

SATA ports and the U.2 connector share bandwidth. When U.2 is enabled (only supporting NVMe devices at PCIe 3.0 x4), SATA ports are disabled. Enabling SATA disables U.2.

Configuration options: [SATA] [U.2]

HD Audio Controller

Allows you to enable or disable Azalia HD Audio.

Configuration options: [Disabled] [Enabled]

NOTE: The **HD Audio Controller** option is not available for AMD EPYC™ 4005 series CPUs.

Realtek LAN Controller

Allows you to enable or disable Realtek LAN Controller.

Configuration options: [Disabled] [Enabled]

Intel LAN Controller

Allows you to enable or disable Intel LAN Controller.

Configuration options: [Disabled] [Enabled]

Onboard LED

This switch enables you to turn on/off the HDD and PLED LEDs.

Configuration options: [Disabled] [Enabled]

Q-Code LED Function

[Disabled] Turn off Q-Code LED.

[POST Code Only] Show POST (Power-On Self-Test) code on Q-Code LED.

[Auto] The Q-Code LED, by default, displays the POST code. To show the CPU temperature after the system boots into the OS, set the BMC_SW header to Disabled.

USB power delivery in Soft Off state (S5)

Allows you to enable or disable USB power when your PC is in the S5 state.

Configuration options: [Disabled] [Enabled]

Serial Port Configuration / Serial Port 2 Configuration

This submenu allows you to set parameters for Serial Port.

NOTE: This item will only function if there is a serial port (COM) connector on your motherboard.

Serial Port

Allows you to enable or disable the Serial port.

Configuration options: [Enabled] [Disabled]

NOTE: The following item appears only when **Serial Port** is set to **[Enabled]**.

Change settings

Allows you to select an optimal setting for super IO device.

Configuration options: [IO=3F8h; IRQ=4] [IO=2F8h; IRQ=3] [IO=3E8h; IRQ=4] [IO=2E8h; IRQ=3]

PCIe Link Speed

This submenu allows you to set parameters for PCIe Link Speed.

PCIEX16 Link Mode

Allows you to set the link speed for this PCIe slot.

Configuration options: [Auto] [GEN 1] [GEN 2] [GEN 3] [GEN 4] [GEN 5]

M.2 Link Mode

Allows you to set the link speed for M.2 Device.

Configuration options: [Auto] [GEN 1] [GEN 2] [GEN 3] [GEN 4] [GEN 5]

Chipset Link Mode

Allows you to set the link speed between CPU and Chipset.

Configuration options: [Auto] [GEN 1] [GEN 2] [GEN 3] [GEN 4]

SLIMSAS Link Mode

Allows you to set the link speed for SLIMSAS Device.

Configuration options: [Auto] [GEN 1] [GEN 2] [GEN 3] [GEN 4]

Chipset PCIe(G1) CTLE Optimization

CTLE (Continuous-Time Linear Equalizer) is commonly used in PCIe receivers to compensate for frequency-dependent signal loss in transmission lines.

[Auto] CTLE Optimization enabled.

[Enabled] CTLE Optimization enabled.

[Disabled] CTLE Optimization disabled.

7.15 NB Configuration

The items in this menu allow you to change the NB Configurations.

Primary Video Device

Allows you to select Primary Video Device BIOS will use for output.

Configuration options: [IGFX Video] [PCIe Video]

Integrated Graphics

Allows you to enable Integrated Graphics Controller.

Configuration options: [Disabled] [Force] [Auto]

UMA Frame Buffer Size [Auto]

Allows you to set the UMA FB Size.

Configuration options: [Auto] [64M] [80M] [96M] [128M] [256M] [384M] [512M] [768M] [1G] [2G] [3G] [4G] [8G]

7.16 AMD CBS

The items in this menu shows the AMD Common BIOS Specifications.

NOTE: The configuration options for this section vary depending on the motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

Global C-state Control

Allows you to control IO based C-state generation and DF C-states.

Configuration options: [Disabled] [Enabled] [Auto]

IOMMU

Allows you to enable or disable IOMMU.

Configuration options: [Disabled] [Enabled] [Auto]

ECC

Allows you to enable or disable ECC. Setting this item to **[Auto]** will set ECC to enable.

Configuration options: [Disabled] [Enabled] [Auto]

SMT Control

Can be used to disable symmetric multithreading. To re-enable SMT, a POWER CYCLE is needed after setting this item to **[Auto]**.

Configuration options: [Disable] [Auto]

Core Performance Boost

Allows you to disable Core Performance Boost.

Configuration options: [Disabled] [Auto]

App Compatibility Database

Configuration options: [Disabled] [Enabled] [Auto]

CPU Common Options

Prefetcher settings

L1 Stream HW Prefetcher

Allows you to enable or disable L1 Stream HW Prefetcher.

Configuration options: [Disable] [Enable] [Auto]

L2 Stream HW Prefetcher

Allows you to enable or disable L2 Stream HW Prefetcher.

Configuration options: [Disable] [Enable] [Auto]

L1 Stride Prefetcher

Uses memory access history of individual instructions to fetch additional lines when each access is a constant distance from the previous.

Configuration options: [Disable] [Enable] [Auto]

L1 Region Prefetcher

Uses memory access history to fetch additional lines when the data access for a given instruction tends to be followed by other data accesses.

Configuration options: [Disable] [Enable] [Auto]

L1 Burst Prefetch Mode

Allows you to enable or disable L1 Burst Prefetch Mode.

Configuration options: [Disable] [Enable] [Auto]

L2 Up/Down Prefetcher

Uses memory access history to determine whether to fetch the next or previous line for all memory accesses.

Configuration options: [Disable] [Enable] [Auto]

Core Watchdog

Core Watchdog Timer Enable

Allows you to enable or disable CPU Watchdog Timer.

Configuration options: [Disabled] [Enabled] [Auto]

NOTE: The following items appear only when **Core Watchdog Timer Enable** is set to **[Enabled]**.

Core Watchdog Timer Interval

Allows you to select CPU Watchdog Timer interval.

Configuration options: [Auto] [39.68us] [80.64us] [162.56us] [326.4us] [654.08us] [1.309ms] [2.620ms] [5.241ms] [10.484ms] [20.970ms] [40.64ms] [82.53ms] [166.37ms] [334.05ms] [669.41ms] [1.340s] [2.681s] [5.364s] [10.730s] [21.461s]

Core Watchdog Timer Severity

Allows you to specify the CPU Watchdog Time severity (MSRC001_0074[CpuWdTmrCfgSeverity]).

Configuration options: [No Error] [Transparent] [Corrected] [Deferred] [Uncorrected] [Fatal] [Auto]

RedirectForReturnDis

From a workaround for GCC/C000005 issue for XV Core on CZ A0, setting MSRC001_1029 Decode Configuration (DE_CFG) bit 14 [DecfgNoRdrctForReturns] to 1.

Configuration options: [1] [0] [Auto]

Power Supply Idle Control

Configuration options: [Low Current Idle] [Typical Current Idle] [Auto]

Opcache Control

Allows you to enable or disable the Opcache.

Configuration options: [Disabled] [Enabled] [Auto]

Streaming Stores Control

Allows you to enable or disable the Streaming Stores functionality.

Configuration options: [Disabled] [Enabled] [Auto]

Local APIC Mode

Allows you to select local APIC operation modes.

Configuration options: [Compatibility] [xAPIC] [x2APIC] [Auto]

ACPI_CST C1 Declaration

Determines whether or not to declare the C1 state to the OS.

Configuration options: [Disabled] [Enabled] [Auto]

Platform First Error Handling

Allows you to enable or disable PFEH, cloak individual banks, and mask deferred error interrupts from each bank.

Configuration options: [Enabled] [Disabled] [Auto]

MCA error thresh enable

Allows you to enable MCA error thresholding.

Configuration options: [False] [True] [Auto]

NOTE: The following item appears only when **MCA error thresh enable** is set to **[True]**.

MCA error thresh count

Effective error threshold count = 4095(0xFFFF) - <this value> (e.g. the default value of 0xFF5 results in a threshold of 10)

MCA FruText

Allows you to enable MCA FruText.

Configuration options: [False] [True]

SMU and PSP Debug Mode

When this item is set to **[Enabled]**, uncorrected errors detected by the PSP FW or SMU FW that should cause a cold reset, will hang and not restart the system.

Configuration options: [Disabled] [Enabled] [Auto]

PPIN Opt-in

Allows you to turn on PPIN feature.

Configuration options: [Disabled] [Enabled] [Auto]

REP-MOV/STOS Streaming

Allow REP-MOV/STOS to use non-caching streaming store for large sizes.

Configuration options: [Disabled] [Enabled] [Auto]

Enhanced REP MOVSB/STOSB

This item is set to 1 by default, but can be set to zero for analysis purposes as long as OS supports it.

Configuration options: [Disabled] [Enabled] [Auto]

Fast Short REP MOVSB (FSRM)

This item is set to 1 by default, but can be set to zero for analysis purposes as long as OS supports it.

Configuration options: [Disabled] [Enabled] [Auto]

SNP Memory (RMP Table) Coverage

When this item is set to **[Enabled]**, the ENTIRE system memory is covered.

Configuration options: [Disabled] [Enabled] [Custom] [Auto]

NOTE: The following item appears only when **SNP Memory (RMP Table) Coverage** is set to **[Custom]**.

Amount of Memory to Cover

Specify MB of System Memory to be covered in Hex.

SMEE

Control secure memory encryption enable.

Configuration options: [Disable] [Enable] [Auto]

Action on BIST Failure

Allows you to set the action to take when a CCD BIST failure is detected.

Configuration options: [Do nothing] [Down-CCD] [Auto]

Log Transparent Errors

Log transparent errors in MCA in addition to debug registers.

Configuration options: [Disabled] [Enabled] [Auto]

AVX512

Configuration options: [Disabled] [Enabled] [Auto]

MONITOR and MWAIT Disable

When this option is enabled, MONITOR, MWAIT, MONITORX, and MWAITX opcodes become invalid.

Configuration options: [Disabled] [Enabled] [Auto]

Corrector Branch Predictor

Enabling for branch heavy codes may reduce conditional branch mispredicts.

Configuration options: [Disabled] [Enabled] [Auto]

PAUSE Delay

Number of cycles thread will be idle after a PAUSE instruction.

Configuration options: [Auto] [Disabled] [16 cycles] [32 cycles] [64 cycles] [128 cycles]

CPU Speculative Store Modes

[Balanced]	Store instructions may delay sending out their invalidations to remote cacheline copies when the cacheline is present but not in a writable state in the local cache.
[More Speculative]	Store instructions will send out invalidations to remote cacheline copies as soon as possible.
[Less Speculative]	Store instructions may delay sending out their invalidations to remote cacheline copies when the cacheline is not present in the local cache or not in a writable state in the local cache.
[Auto]	Default setting is applied.

SVM Lock

Allows you to enable or disable VM_CR[Lock].

Configuration options: [Enabled] [Disabled] [Auto]

SVM Enable

Allows you to enable or disable VM_CR[SvmeDisable].

Configuration options: [Enabled] [Disabled] [Auto]

Latency Under Load (LUL)

Enabling may improve latency between heavy BW scenarios. May slightly reduce peak CCD BW.

Configuration options: [Enabled] [Disabled] [Auto]

DF Common Options

Memory Addressing

Memory interleaving

Allows for disabling memory channel interleaving.

Configuration options: [Disabled] [Enabled] [Auto]

Memory interleaving size

Controls the memory interleaving size. The valid values are AUTO, 256 bytes, 512 bytes, 1 Kbytes, or 2 Kbytes. This determines the starting address of the interleave (bit 8, 9, 10 or 11).

Configuration options: [256 Bytes] [512 Bytes] [1KB] [2KB] [Auto]

DRAM map inversion

Inverting the map will cause the highest memory channels to get assigned the lowest addresses in the system.

Configuration options: [Disable] [Enable] [Auto]

Location of private memory regions

Controls whether or not the private memory regions (PSP, SMU and CC6) are at the top of DRAM pair or distributed. Note that distributed requires memory on all dies. Note that it will always be at the top of DRAM if some dies don't have memory regardless of this option's setting.

Configuration options: [Distributed] [Consolidated] [Consolidated to 1st DRAM pair] [Auto]

ACPI

ACPI SRAT L3 Cache as NUMA Domain

[Disabled] Memory Addressing \ NUMA nodes per socket will be declared.

[Enabled] Each CCX in the system will be declared as a separate NUMA domain.

[Auto] Sets to the default option.

Disable DF to external downstream IP Sync Flood Propagation

Disables Error propagation to UMC or any downstream slaves eg. FCH. Use this to avoid reset in failure scenario.

Configuration options: [Sync flood disabled] [Sync flood enabled] [Auto]

Disable DF sync flood propagation

Disables propagation from PIE to other DF components and eventually to SDP ports.

Configuration options: [Sync flood disabled] [Sync flood enabled] [Auto]

Freeze DF module queues on error

This item allows you to enable or disable freezing of all DF queues on error and also forces a sync flood on HWA even if MCAs are disabled.

Configuration options: [Disabled] [Enabled] [Auto]

DF Cstates

When DF Cstate feature is set to **[Enabled]**, FW programs the registers required to enable this feature is the DF HW. (For **[Auto]** option, it means this option will synchronize with Global C State).

Configuration options: [Disabled] [Enabled] [Auto]

PSP error injection support

Configuration options: [False] [True]

UMC Common Options

DDR Options

DDR Timing Configuration

CAUTION! Damage caused by use of your AMD processor outside of specification or in excess of factory settings are not covered by your system manufacturers warranty.

NOTE: The following items appear only when **[Accept]** is selected for **DRAM Timing Configuration**.

Active Memory Timing Settings

Configuration options: [Auto] [Enabled]

NOTE: The following items appear only when **[Enabled]** is selected for **Active Memory Timing Settings**.

Memory Target Speed

Specifies the memory target speed in MT/s. The valid input is 2000 MT/s, 2400 MT/s, and range of 3200 MT/s ~ 12000 MT/s (stepping of 200 MT/s). The value is in decimal. The user input value will be rounded down to align with the stepping of 200 MT/s. The maximum speed defined in the JEDEC spec is 8400 MT/s, any input value that is greater than 8400 MT/s will be limited to 8400 MT/s.

DDR SPD Timing [Auto]

Tcl Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Tcl Ctrl** is set to **[Manual]**.

Tcl

Specifies the CAS Latency. Valid values: 22 ~ 64, with a stepping of 2.

Trcd Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trcd Ctrl** is set to **[Manual]**.

Trcd

Specifies the RAS# Active to CAS# Read Delay Time. Valid values: 8 ~ 62.

Trp Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trp Ctrl** is set to **[Manual]**.

Trp

Specifies Row Precharge Delay Time. Valid values: 8 ~ 62.

Tras Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Tras Ctrl** is set to **[Manual]**.

Tras

Specifies Active to Precharge Delay Time. Valid values: 30 ~ 126.

Trc Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trc Ctrl** is set to **[Manual]**.

Trc
Specifies Active to Active/Refresh Delay Time. Valid values:
32 ~ 255.

Trw Ctrl
[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trw Ctrl** is set to **[Manual]**.

Twr
Specifies the Minimum Write Recovery Time. Valid values: 48
~ 138, with a stepping of 6.

Trfc1 Ctrl
[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trfc1 Ctrl** is set to **[Manual]**.

Trfc1
Specifies the Refresh Recovery Delay Time (tRFC1). Valid
values: 50 ~ 4095.

Trfc2 Ctrl
[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trfc2 Ctrl** is set to **[Manual]**.

Trfc2
Specifies the Refresh Recovery Delay Time (tRFC2). Valid
values: 50 ~ 4095.

TrfcSb Ctrl
[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrfcSb Ctrl** is set to **[Manual]**.

TrfcSb
Specifies the Refresh Recovery Delay Time (tRFCSB). Valid
values: 50 ~ 2047.

DDR Non-SPD Timing

Trtp Ctrl
[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trtp Ctrl** is set to **[Manual]**.

Trtp

Specifies the Read CAS# to Precharge command delay time.
Valid values: 5 ~ 31.

TrrdL Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrrdL Ctrl** is set to **[Manual]**.

TrrdL

Specifies the Activate to Activate Delay Time, same bank group (tRRD_L). Valid values: 4 ~ 32.

TrrdS Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrrdS Ctrl** is set to **[Manual]**.

TrrdS

Specifies the Activate to Activate Delay Time, different bank group (tRRD_S). Valid values: 4 ~ 20.

Tfaw Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Tfaw Ctrl** is set to **[Manual]**.

Tfaw

Specifies the Four Activate Window Time. Valid values: 20 ~ 80.

TwtrL Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwtrL Ctrl** is set to **[Manual]**.

TwtrL

Specifies the Minimum Write to Read Time, the same bank group. Valid values: 8 ~ 48.

TwtrS Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwtrS Ctrl** is set to **[Manual]**.

TwtrS

Specifies the Minimum Write to Read Time, different bank group. Valid values: 2 ~ 16.

TrdrdScL Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdScL Ctrl** is set to **[Manual]**.

TrdrdScL

Specifies the CAS to CAS delay time, same bank group. Valid values: 1 ~ 15.

TrdrdSc Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdSc Ctrl** is set to **[Manual]**.

TrdrdSc

Specifies the Read to Read turnaround timing in the same chipselect. Valid values: 1 ~ 15.

TrdrdSd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdSd Ctrl** is set to **[Manual]**.

TrdrdSd

Specifies the Read to Read turnaround timing in the same DIMM. Valid values: 1 ~ 15.

TrdrdDd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdDd Ctrl** is set to **[Manual]**.

TrdrdDd

Specifies the Read to Read turnaround timing in a different DIMM. Valid values: 1 ~ 15.

TwrrwScL Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TwrrScL Ctrl** is set to **[Manual]**.

TwrrScL

Specifies the CAS to CAS Delay Time, same bank group. Valid values: 1 ~ 63.

TwrrSc Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TwrrSc Ctrl** is set to **[Manual]**.

TwrrSc

Specifies the Write to Write turnaround timing in the same chipselect. Valid values: 1 ~ 15.

TwrrSd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TwrrSd Ctrl** is set to **[Manual]**.

TwrrSd

Specifies the Write to Write turnaround timing in the same DIMM. Valid values: 1 ~ 15.

TwrrDd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TwrrDd Ctrl** is set to **[Manual]**.

TwrrDd

Specifies the Write to Write turnaround timing in a different DIMM. Valid values: 1 ~ 15.

Twrrd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **Twrrd Ctrl** is set to **[Manual]**.

Twrrd

Specifies the Write to Read turnaround timing. Valid values: 1 ~ 15.

Trdwr Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **Trdwr Ctrl** is set to **[Manual]**.

Trdwr

Specifies the Read to Write turnaround timing. Valid values: 1 ~ 31.

DDR BUS Configuration

Processor CK drive strengths

Specifies the Processor CK drive strengths.

Configuration options: [Auto] [120.0 Ohm] [60.0 Ohm] [40.0 Ohm] [30.0 Ohm]

Processor CA drive strengths

Specifies the Processor CA drive strengths.

Configuration options: [Auto] [120.0 Ohm] [60.0 Ohm] [40.0 Ohm] [30.0 Ohm]

Processor CS drive strengths

Specifies the Processor CS drive strengths.

Configuration options: [Auto] [120.0 Ohm] [60.0 Ohm] [40.0 Ohm] [30.0 Ohm]

CA ODT GroupA

Specifies the CA ODT.

Configuration options: [Auto] [RTT_OFF (Disable)] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CK ODT GroupA

Specifies the CK ODT.

Configuration options: [Auto] [RTT_OFF (Disable)] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CS ODT GroupA

Specifies the CS ODT.

Configuration options: [Auto] [RTT_OFF (Disable)] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CA ODT GroupB

Specifies the CS ODT.

Configuration options: [Auto] [RTT_OFF (Disable)] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CK ODT GroupB

Specifies the CK ODT.

Configuration options: [Auto] [RTT_OFF (Disable)] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

CS ODT GroupB

Specifies the CS ODT.

Configuration options: [Auto] [RTT_OFF (Disable)] [RZQ/0.5 (480)] [RZQ/1 (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RFU] [RZQ/6 (40)]

Processor ODT impedance Pull Up P0-3

Specifies the Processor ODT impedance Pull Up P0-3.
Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68 ohm] [60 ohm] [53 ohm] [48 ohm] [43 ohm] [40 ohm] [36 ohm] [34 ohm] [32 ohm] [30 ohm] [28 ohm] [26 ohm] [25 ohm]

Processor ODT impedance Pull Down P0-3

Specifies the Processor ODT impedance Pull Down P0-3.
Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68 ohm] [60 ohm] [53 ohm] [48 ohm] [43 ohm] [40 ohm] [36 ohm] [34 ohm] [32 ohm] [30 ohm] [28 ohm] [26 ohm] [25 ohm]

Processor DQ drive strengths Pull Up P0-3

Specifies the Processor DQ drive strengths Pull Up P0-3.
Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

Processor DQ drive strengths Pull Down P0-3

Specifies the Processor DQ drive strengths Pull Down P0-3.
Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

Dram ODT Impedance RTT_NOM_WR P0-3

Specifies the Dram ODT Impedance RTT_NOM_WR P0-3.
Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance RTT_NOM_RD P0-3

Specifies the Dram ODT Impedance RTT_NOM_RD P0-3.
Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance RTT_WR P0-3

Specifies the Dram ODT Impedance RTT_WR P0-3.
Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance RTT_PARK P0-3

Specifies the Dram ODT Impedance RTT_PARK P0-3.
Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance DQS_RTT_PARK P0-3

Specifies the Dram ODT Impedance DQS_RTT_PARK P0-3.
Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

DRAM DQ drive strengths Pull Up P0-3

Specifies the DRAM DQ drive strengths Pull Up P0-3.
Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

DRAM DQ drive strengths Pull Down P0-3

Specifies the DRAM DQ drive strengths Pull Up P0-3.
Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

DDR Controller Configuration

DDR Power Options

Power Down Enable

Allows you to enable or disable DDR power down mode.
Configuration options: [Disabled] [Enabled] [Auto]

Refresh Management (RFM)

Refresh Management

[Auto]	Uses default setting.
[Disable]	Disable RFM for all Ranks.
[Enable]	Enable RFM for Ranks which support RFM.
[Force Enable]	Enable RFM for all Ranks regardless of support. Selecting this option will cause REFpb/REFsb to be disabled if all ranks do not support RFM.

DDR RAS

Disable Memory Error Injection

Configuration options: [False] [True] [Auto]

DDR ECC Configuration

Allows you to configure DDR ECC configurations.

DDR Security

TSME

Configuration options: [Auto] [Enabled] [Disabled]

Data Scramble

Configuration options: [Enabled] [Disabled] [Auto]

DDR Addressing Options

Chipselect Interleaving

Interleave memory blocks across the DRAM chip selects for node 0.
Configuration options: [Disabled] [Auto]

Address Hash Bank

Allows you to enable or disable bank address hashing.
Configuration options: [Disabled] [Enabled] [Auto]

Address Hash CS

Enable or disable CS address hashing.
Configuration options: [Auto] [Enabled] [Disabled]

Address Hash Subchannel

Enable or disable sub-channel address hashing.
Configuration options: [Auto] [Enabled] [Disabled]

BankSwapMode

Configuration options: [Auto] [Disabled] [Swap CPU] [Swap APU]

DDR Training Options

DFE Read Training

Perform 2D Read Training with DFE on.
Configuration options: [Auto] [Enable] [Disable]

DRAM PDA Enumerate ID Programming Mode

Configuration options: [Auto] [Sequential PDA enumeration mode]
[Legacy PDA enumeration mode]

TX DFE Taps

Specifies the number of TX DFE taps.

Configuration options: [Auto] [1 Tap] [2 Taps] [3 Taps] [4 Taps]

PPT Control

Specifies the PPT Control.

Configuration options: [Auto] [Disabled] [Relock+Retrain only] [UMC Snoop PPT] [DFI Retrain PPT] [Relock Only] [Relock Only with DFI PPT]

DDR Training Runtime Reduction

[Disabled]	Force Disable DDR Training Runtime Reduction.
[Enabled]	Force Enable DDR Training Runtime Reduction.
[Auto]	Default code behavior. If OC is ENABLE, DDR Training Runtime Reduction will be DISABLE by DEFAULT.

RX Burst Length

Extended sequence for read training.

[Auto] Default code behavior.

[1 x] 1 x burst length.

[2 x] 2 x burst length.

[4 x] 4 x burst length.

[8 x] 8 x burst length.

TX Burst Length

Extended sequence for write training.

[Auto] Default code behavior.

[1 x] 1 x burst length.

[2 x] 2 x burst length.

[4 x] 4 x burst length.

[8 x] 8 x burst length.

RX2D_TrainOpt

Configuration options: [Auto] [Manual]

NOTE: The following items appear only when **RX2D_TrainOpt** is set to **[Manual]**.

RX2D_DFE

Used to force Rx DFE on or off.

Configuration options: [Auto] [Disabled] [Enabled]

RX2D Voltage Step Size (2^n)

0 = 1 DAC setting between checked values. 1 = 2 DAC settings between checked values. 2 = 4 DAC settings between checked values. 3 = 8 DAC settings between checked values.

RX2D Delay Step Size (2^n)

0 = 1 LCDL delays between checked values. 1 = 2 LCDL delays between checked values. 2 = 4 LCDL delays between checked values. 3 = 8 LCDL delays between checked values.

TX2D_TrainOpt

Configuration options: [Auto] [Manual]

NOTE: The following items appear only when **TX2D_TrainOpt** is set to **[Manual]**.

TX2D_DFE

Configuration options: [Auto] [Disabled] [Enabled]

TX2D Voltage Step Size (2^n)

0 = 1 DAC setting between checked values. 1 = 2 DAC settings between checked values. 2 = 4 DAC settings between checked values. 3 = 8 DAC settings between checked values.

TX2D Delay Step Size (2^n)

0 = 1 LCDL delays between checked values. 1 = 2 LCDL delays between checked values. 2 = 4 LCDL delays between checked values. 3 = 8 LCDL delays between checked values.

TX2D Voltage Step Multiplier

0 = Voltage Step Size is not modified. 1 = Voltage Step Size is multiplied by 16.

TX2D Delay Step Multiplier

0 = Delay Step Size is not modified. 1 = Delay Step Size is multiplied by 16.

Configuration options: [Auto] [Multiply DAC step size by 16] [No Multiplier]

RX DFE Taps

Specifies the number of RX DFE taps.

Configuration options: [Auto] [1 Tap] [2 Taps] [3 Taps] [4 Taps]

DDR MBIST Options

MBIST Enable

Allows you to enable or disable Memory MBIST.

Configuration options: [Disabled] [Enabled] [Auto]

NOTE: The following items appear only when **MBIST Enable** is set to **[Enabled]**.

MBIST Test Mode

Allows you to select the MBIST Test Mode - Interface Mode (Tests Single and Multiple CS transactions and Basic Connectivity) or Data Eye Mode (Measures Voltage vs. Timing).

Configuration options: [Interface Mode] [Data Eye Mode] [Both] [Auto]

MBIST Aggressors

Allows you to enable or disable Memory Aggressor test.

Configuration options: [Disabled] [Enabled] [Auto]

MBIST Per Bit Slave Die Reporting

Reports 2D Data Eye Results in ABL Log for each DQ, Chipselect, and Channel.

Configuration options: [Disabled] [Enabled] [Auto]

DDR Data Eye

Pattern Select

Configuration options: [Auto] [PRBS] [SSO] [Both]

Pattern Length Select

Configuration options: [Auto] [Manual]

NOTE: The following items appear only when **Pattern Length Select** is set to **[Manual]**.

Pattern Length

This token helps to determine the pattern length. The possible options are N=3...12.

Aggressor Channel

This helps read the aggressors channels. If set to **[Enabled]**, you can read from one or more than one aggressor channel. The default is set to **[Disabled]**.

Configuration options: [Auto] [Disabled] [1 Aggressor Channel] [3 Aggressor Channels] [7 Aggressor Channels]

DDR Memory Features

Memory Context Restore

Allows you to configure the memory context restore mode. When enabled, DRAM re-training is avoided when possible and the POST latency is minimized.

Configuration options: [Auto] [Enabled] [Disabled]

Memory P-state

Configuration options: [Auto] [Enabled] [Disabled]

DDR Turnaround Times

Read Drift Adjustment

AUTO - Read Drift Adjustment 0.

Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

Read Drift Adjustment PO-3

AUTO - Read Drift Adjustment 0.

Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

Write Drift Adjustment

AUTO - Write Drift Adjustment 0.

Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

Write Drift Adjustment PO-3

AUTO - Write Drift Adjustment 0.

Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

NBIO Common Options

PCIe ARI Support

Enables Alternative Routing-ID Interpretation.

Configuration options: [Disabled] [Enabled] [Auto]

PCIe All Port ECRC

Enable or disable PCIe all port ECRC.

Configuration options: [Disabled] [Enabled] [Auto]

Advanced Error Reporting (AER)

Enable or disable support for Advanced Error Reporting (AER).

Configuration options: [Not Supported] [Supported] [Auto]

PCIe ARI Enumeration

ARI Forwarding enabled for each downstream port.

Configuration options: [Disable] [Enable] [Auto]

GFX Configuration

UMA Version

[Legacy]	UMA Legacy Version
[Non-Legacy]	UMA Non-Legacy Version
[Auto]	Hybrid Secure

GPU Host Translation Cache

Allows you to enable or disable GPU Host Translation Cache.

Configuration options: [Disabled] [Enabled] [Auto]

Audio Configuration

NB Azalia

Allows you to enable or disable the integrated HD audio controller.

Configuration options: [Disabled] [Enabled] [Auto]

Audio IOs

Configuration options: [Auto] [HDA(3SDI) + PDM(2CH)(Default)] [HDA (1SDI) + PDM(6CH)] [HDA(1SDI) + SW0(1MDATA) + PDM(2CH)] [SW0(4MDATA) + PDM(6CH)] [SW0(4MDATA) + SW1(1MDATA) + PDM(2CH)]

PCIe loopback Mode

Allows you to enable or disable PcieLoopBackMode.

Configuration options: [Auto] [Disabled] [Enabled]

Persistence mode for legacy endpoints

Enable or disable persistence mode for legacy endpoints. Enable this option if some legacy PCIe devices are not detected.

Configuration options: [Auto] [Disabled] [Enabled]

Retimer margining support

[Auto]	Disabled. Root port receiver margining support is enabled by default.
[Enabled]	Enables support for margining a retimer.
[Disabled]	Retimer margining is not supported.

SMU Common Options

TDP Control

[Auto]	Use the default sustained power limit.
[Manual]	User can set customized sustained power limit.

NOTE: The following item appears only when **TDP Control** is set to **[Manual]**.

TDP

Allows you to set the sustained power limit [mW].

ECO Mode

Adjust the CPU control limits to manage operation within a specific thermal design power limit. Motherboard and Cooling solution support required for chosen power level.

[Enable]	Enables 65W processor power definition.
[Enable 105W]	Enables 105W processor power definition.
[Disable]	System uses default processor power definition.

PPT Control

Specifies the PPT Control.

Configuration options: [Manual] [Auto]

NOTE: The following item appears only when **PPT Control** is set to **[Manual]**.

PPT

Allows you to set the PPT [mW].

Thermal Control

[Auto]	Use the default TctlMax.
[Manual]	User can set customized TctlMax.

NOTE: The following item appears only when **Thermal Control** is set to **[Manual]**.

TjMax

Allows you to set the maximum operating temperature [°C] (IRM limit will be enforced).

TDC Control

[Auto]	Use the default TDC Limits.
[Manual]	User can set customized TDC Limits.

NOTE: The following item appears only when **TDC Control** is set to **[Manual]**.

TDC_VDDCR_VDD

Allows you to set the VDDCR_VDD TDC Limit [mA] (IRM limit will be enforced).

EDC Control

[Auto]	Use the default EDC Limits.
[Manual]	User can set customized EDC Limits.

NOTE: The following item appears only when **EDC Control** is set to **[Manual]**.

EDC_VDDCR_VDD

Allows you to set the VDDCR_VDD EDC Limit [mA] (IRM limit will be enforced).

Fan Control

[Auto]	Use the default fan controller settings.
[Manual]	User can set customized fan controller setting.

NOTE: The following item appears only when **Fan Control** is set to **[Manual]**.

Fan Table Control

[Auto]	Use the default fan table.
[Manual]	User can set customized fan table.

NOTE: The following items appear only when **Fan Table Control** is set to **[Manual]**.

Low Temperature

Allows you to set the low temperature [°C].

Medium Temperature

Allows you to set the medium temperature [°C].

High Temperature

Allows you to set the high temperature [°C].

Critical Temperature

Allows you to set the critical temperature [°C].

Low Pwm

Configuration options: [0] ~ [100]

Medium Pwm

Configuration options: [0] ~ [100]

High Pwm

Configuration options: [0] ~ [100]

Temperature Hysteresis

Allows you to set the temperature hysteresis [°C].

PWM Frequency

[Auto]	Sets to the default option
[1]	100Hz
[0]	25kHz

Fan Polarity

[Auto]	Sets to the default option
[1]	Positive
[0]	Negative

VDDP Voltage Control

[Auto]	Use the default VDDP Voltage.
[Manual]	User can set custom VDDP Voltage.

NOTE: The following items appear only when **VDDP Voltage Control** is set to **[Manual]**.

VDDP Voltage

Allows you to specify the target VDDP voltage [mV].

Infinity Fabric Frequency and Dividers

Configuration options: [Auto] [100 MHz] ~ [1066 MHz]

SyncFifo Mode Override

Configuration options: [Disable] [Enable] [Auto]

Sustained PowerLimit

PcdMsgSetSustainedPowerLimit.

Fast PPT Limit

PcdMsgSetFastPPTLimit.

Slow PPT Limit

PcdMsgSetSlowPPTLimit.

Slow PPT Time Constant

Slow PPT Time Constant [seconds].

GFXOFF

Configuration options: [Disable] [Enable] [Auto]

7.17 AMD PBS

The items in this menu shows the AMD PBS Setup page.

NOTE: The configuration options for this section vary depending on the motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

Graphics Features

This submenu allows you to configure Graphics Features - HG, DGPU Features and BOMACO configurations.

Special Display Features

Allows you to enable or disable HybridGraphics.

Configuration options: [Disabled] [HybridGraphics]

D3Cold Support

Allows you to enable or disable PCIe x8 Slot D3Cold.

Configuration options: [Disabled] [Enabled] [Dummy D3Cold]

Discrete CPU_DSM Function A

Allows you to enable or disable PCI-SIG ECN_DSM Function A for Discrete GPU's GPP Bridge.

Configuration options: [Disabled] [Enabled]

Discrete CPU_DSM Function B

Allows you to enable or disable PCI-SIG ECN_DSM Function B for Discrete GPU's GPP Bridge.

Configuration options: [Disabled] [Enabled]

NVIDIA DGPU Power Enable

For NVIDIA mobile DGPU card only. Output DGPU_EN# A19 pin and DGPU_SEL# B17 pin to high at every power on state.

Configuration options: [Disabled] [Enabled]

Non-Eval Discrete GPU Support

Set to **[Enabled]** to support Non-Eval Discrete GPU that doesn't have specific EVAL_PWRGD(B30), EVAL_PRESENT#(A5).

Configuration options: [Disabled] [Enabled]

Discrete GPU HPD Circuitry

Allows you to enable or disable Discrete GPU Display HPD Circuitry.

Configuration options: [OR Circuitry] [Pulse Circuitry]

Discrete GPU's USB Port

Allows you to disable Discrete GPU's USB Port or keep default setting.

Configuration options: [Keep Default Setting] [Disabled]

Discrete GPU's SSID/SVID

Program Discrete GPU's SSID/SVID depends on HybridGraphics setting.

Configuration options: [Keep Default Setting] [Program by Vendor]

Discrete GPU BOMACO Support

Allows you to enable or disable Discrete GPU BOMACO Support.

Configuration options: [Disabled] [Enabled]

USB4 configuration (ASM4242 Controller)**USB4 (ASM4242 Controller) Support**

Allows you to enable or disable USB4 (ASM4242 Controller) PCIe slot.

Configuration options: [Disabled] [Enabled]

NOTE: The following items appear only when **USB4 (ASM4242 Controller) Support** is set to **[Enabled]**.

PCIe Bus Number

Reserve USB4 (ASM4242 Controller) PCIe Bus number per port (16 ~ 56).

PCIe Non-Prefetchable MMIO (MB)

Reserve USB4 (ASM4242 Controller) PCIe Non-Prefetchable MMIO per port (256 ~ 4096 MB).

PCIe Prefetchable MMIO (GB)

Reserve USB4 (ASM4242 Controller) PCIe Prefetchable MMIO per port (1 ~ 512 GB).

ACPI D3 Support

Disable or enable USB4 (ASM4242 Controller) ACPI D3 Support.

Configuration options: [Disabled] [D3Hot]

XHCI Port0-1 Speed

Configures the USB4 (ASM4242 Controller) XHCI Port0-1 Speed.

Configuration options: [Gen1x1] [Gen1x2] [Gen2x1] [Gen2x2]

Thunderbolt/USB4 configuration (Intel® JHK8540 Controller)**Thunderbolt/USB4 (Intel® JHK8540 Controller) Support**

Allows you to enable or disable Thunderbolt/USB4 (Intel® JHK8540 Controller) support.

Configuration options: [Disabled] [Enabled]

NOTE: The following items appear only when **Thunderbolt/USB4 (Intel® JHK8540 Controller) Support** is set to **[Enabled]**.

Thunderbolt/USB4 (Intel® JHK8540 Controller) Security Level

Allows you to select Thunderbolt/USB4 (Intel® JHK8540 Controller) Security level.
Configuration options: [No Security] [USB4 Controller only]

Thunderbolt/USB4 (Intel® JHK8540 Controller) MMIO Resource

Allows you to select Thunderbolt/USB4 (Intel® JHK8540 Controller) PCIE MMIO Resource.
Configuration options: [Full Size] [Half Size] [Three Quarters]

Thunderbolt/USB4 (Intel® JHK8540 Controller) Wake Up Command

Allows you to select Thunderbolt/USB4 (Intel® JHK8540 Controller) Wake Up Command.
Configuration options: [G02SX Command] [G02SX_NO_WAKE Command]

AMD Variable Protection

Protect some AMD specific variables for CBS, PBS and AOD. If locked, some utilities like RU that modify variable at runtime do not work.
Configuration options: [Disabled] [Enabled]

Processor Aggregator Device

Enable or disable Processor Aggregator Device.
Configuration options: [Disabled] [Enabled]

NOTE: The following item appears only when **Processor Aggregator Device** is set to **[Enabled]**.

Core Count Control

Enable or disable Core Count Control.
Configuration options: [Disabled] [Enabled]

HDMI 3.0G Tx SLEW

Configuration options: [Disabled] [Enabled]

NOTE: The following item appears only when **HDMI 3.0G Tx SLEW** is set to **[Enabled]**.

HDMI 3.0G Tx Slew Control Value

HDMI 3.0G Tx Slew Control Value (0 ~ 255).

Delay After PCIe Reset

Delay After PCIe Reset, AUTO means 0. 25ms means 25ms delay after de-assert PCIe Reset.
Configuration options: [Auto] [25 ms]

7.18 AMD Overclocking

The items in this menu shows the AMD Overclocking Setup page.

NOTE: The configuration options for this section vary depending on the motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

CAUTION! Damage caused by use of your AMD processor outside of specification or in excess of factory settings are not covered by your system manufacturers warranty.

NOTE: The following items appear only when **[Accept]** is selected for **AMD Overclocking**.

Manual CPU Overclocking

CPU Frequency

Specifies a custom CPU core frequency. Should be combined with a custom CPU VOLTAGE that is REQUIRED to be set by the user. Power saving features for idle cores (e.g. cc6 sleep) remain active. Manual CPU OC overrides PBO settings. Please note that the frequency cannot drop below 1200MHz on AMD Ryzen 9000 series processors.

CPU Voltage

Specifies a custom CPU core voltage (mV). Should be combined with a custom CPU core frequency. Power saving features for idle cores (e.g. cc6 sleep) remain active. Stepping is 5mV. Voltage ranges allowed to be set will be limited outside of LN2. If in LN2 (and CPU temp is below -40C) the allowable range of settable voltages will be extended.

CPU Core Count Control

CCD 00 Bit Map Down Core Control

Setting this item to 1 means core is enabled, setting this item to 0 means core is software down.

Bit Map Down Core Discard Changes

Discard changes.

Bit Map Down Core Apply Changes

Check and apply changes, need to make sure core number is equaled in each CCD.

SMT Control

Can be used to disable symmetric multithreading. To re-enable SMT, a POWER CYCLE is needed after selecting the **[Auto]** option.

Configuration options: **[Auto]** **[Disable]**

CAUTION! S3 is NOT SUPPORTED on systems where SMT is disabled.

Prochot VRM Throttling

Disabling Prochot will disable the VRMs ability to throttle the CPU when the voltage regulator is approaching its thermal limits.

Configuration options: **[Auto]** **[Disable]** **[Enable]**

Peak Current Control

Enable or Disable PCC Feature. Only need to Disable during extreme overclocking.
Configuration options: [Auto] [Disable] [Enable]

DDR and Infinity Fabric Frequency/Timings

DDR Options

DDR Timing Configuration

Memory OC Mode

Enable will detect if a Memory OC Profile is present on the installed DIMMs and pretrain that profile / apply needed voltages to later set that profile if desired.

Configuration options: [Auto] [On the Fly] [Disable] [Enable]

NOTE: The following item appears only when **Memory OC Mode** is set to **[On the Fly]** or **[Enabled]**.

Memory OC Profile

Configures a performance optimized DDR5, memory controller, and fabric configuration based on the processor model when an appropriate memory kit is detected.

NOTE: This is an overclocking feature which will configure elevated memory voltages. This feature may not be compatible with all memory kits and configurations.

Active Memory Timing Settings

Configuration options: [Auto] [Enabled]

NOTE: The following item appears only when **Tras Ctrl** is set to **[Manual]**.

Tras

Specifies Active to Precharge Delay Time. Valid values: 30 ~ 126.

Trc Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Trc Ctrl** is set to **[Manual]**.

Trc

Specifies Active to Active/Refresh Delay Time. Valid values: 32 ~ 255.

Twr Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Twr Ctrl** is set to **[Manual]**.

Twr

Specifies the Minimum Write Recovery Time. Valid values: 48 ~ 96, stepping of 6.

Trfc1 Ctrl

[Auto]	Follow default setting.
[Manual]	Manually specify.

NOTE: The following item appears only when **Trfc1 Ctrl** is set to **[Manual]**.

Trfc1

Specifies the Refresh Recovery Delay Time (tRFC1). Valid values: 50 ~ 4095.

Trfc2 Ctrl

[Auto]	Follow default setting.
[Manual]	Manually specify.

NOTE: The following item appears only when **Trfc2 Ctrl** is set to **[Manual]**.

Trfc2

Specifies the Refresh Recovery Delay Time (tRFC2). Valid values: 50 ~ 4095.

TrfcSb Ctrl

[Auto]	Follow default setting.
[Manual]	Manually specify.

NOTE: The following item appears only when **TrfcSb Ctrl** is set to **[Manual]**.

TrfcSb

Specifies the Refresh Recovery Delay Time (tRFCSB). Valid values: 50 ~ 2047.

Trtp Ctrl

[Auto]	Follow default setting.
[Manual]	Manually specify.

NOTE: The following item appears only when **Trtp Ctrl** is set to **[Manual]**.

Trtp

Specifies the Read CAS# to Precharge command delay time. Valid values: 5 ~ 31.

TrrdL Ctrl

[Auto]	Follow default setting.
[Manual]	Manually specify.

NOTE: The following item appears only when **TrrdL Ctrl** is set to **[Manual]**.

TrrdL

Specifies the Activate to Activate Delay Time, same bank group (tRRD_L). Valid values: 4 ~ 32.

TrrdS Ctrl

[Auto]	Follow default setting.
[Manual]	Manually specify.

NOTE: The following item appears only when **TrrdS Ctrl** is set to **[Manual]**.

TrrdS

Specifies the Activate to Activate Delay Time, different bank group (tRRD_S). Valid values: 4 ~ 20.

Tfaw Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **Tfaw Ctrl** is set to **[Manual]**.

Tfaw

Specifies the Four Activate Window Time. Valid values: 20 ~ 80.

TwtrL Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwtrL Ctrl** is set to **[Manual]**.

TwtrL

Specifies the Minimum Write to Read Time, the same bank group. Valid values: 8 ~ 48.

TwtrS Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwtrS Ctrl** is set to **[Manual]**.

TwtrS

Specifies the Minimum Write to Read Time, different bank group. Valid values: 2 ~ 16.

DDR Non-SPD Timing

TrrdScL Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrrdScL Ctrl** is set to **[Manual]**.

TrrdScL

Specifies the CAS to CAS delay time, same bank group. Valid values: 1 ~ 15.

TrrdSc Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdSc Ctrl** is set to **[Manual]**.

TrdrdSc

Specifies the Read to Read turnaround timing in the same chipselect. Valid values: 1 ~ 15.

TrdrdSd Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdSd Ctrl** is set to **[Manual]**.

TrdrdSd

Specifies the Read to Read turnaround timing in the same DIMM. Valid values: 1 ~ 15.

TrdrdDd Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TrdrdDd Ctrl** is set to **[Manual]**.

TrdrdDd

Specifies the Read to Read turnaround timing in a different DIMM. Valid values: 1 ~ 15.

TwrrwrScL Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwrrwrScL Ctrl** is set to **[Manual]**.

TwrrwrScL

Specifies the CAS to CAS Delay Time, same bank group. Valid values: 1 ~ 63.

TwrrwrSc Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwrrwrSc Ctrl** is set to **[Manual]**.

TwrrwrSc

Specifies the Write to Write turnaround timing in the same chipselect. Valid values: 1 ~ 15.

TwrrwrSd Ctrl

[Auto] Follow default setting.
[Manual] Manually specify.

NOTE: The following item appears only when **TwrrSd Ctrl** is set to **[Manual]**.

TwrrrSd

Specifies the Write to Write turnaround timing in the same DIMM. Valid values: 1 ~ 15.

TwrrrDd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **TwrrrDd Ctrl** is set to **[Manual]**.

TwrrrDd

Specifies the Write to Write turnaround timing in a different DIMM. Valid values: 1 ~ 15.

Twrrd Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **Twrrd Ctrl** is set to **[Manual]**.

Twrrd

Specifies the Write to Read turnaround timing. Valid values: 1 ~ 15.

Trdwr Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **Trdwr Ctrl** is set to **[Manual]**.

Trdwr

Specifies the Read to Write turnaround timing. Valid values: 1 ~ 31.

Tref Ctrl

[Auto] Follow default setting.

[Manual] Manually specify.

NOTE: The following item appears only when **Tref Ctrl** is set to **[Manual]**.

Tref

Specifies the tRef time. Valid values: 0 ~ 0xFFFF.

DDR BUS Configuration

Processor CS drive strengths

Specifies the Processor CS drive strengths.

Configuration options: [Auto] [120.0 Ohm] [60.0 Ohm] [40.0 Ohm] [30.0 Ohm]

Processor CK drive strengths

Specifies the Processor CK drive strengths.

Configuration options: [Auto] [120.0 Ohm] [60.0 Ohm] [40.0 Ohm] [30.0 Ohm]

Processor CA drive strengths

Specifies the drive strength for all CA0-13 IOs.

Configuration options: [Auto] [120.0 Ohm] [60.0 Ohm] [40.0 Ohm] [30.0 Ohm]

Processor DQ drive strengths

Specifies the drive strength for all DQ and DMI IOs.

Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

Processor ODT impedance Pull Up P0

Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68.6 ohm] [60 ohm] [53.3 ohm] [48 ohm] [43.6 ohm] [40 ohm] [36.9 ohm] [34.3 ohm] [32 ohm] [30 ohm] [28.2 ohm] [26.7 ohm] [25.3 ohm]

Processor ODT impedance Pull Down P0

Configuration options: [Auto] [High Impedance] [480 ohm] [240 ohm] [160 ohm] [120 ohm] [96 ohm] [80 ohm] [68.6 ohm] [60 ohm] [53.3 ohm] [48 ohm] [43.6 ohm] [40 ohm] [36.9 ohm] [34.3 ohm] [32 ohm] [30 ohm] [28.2 ohm] [26.7 ohm] [25.3 ohm]

Processor DQ drive strengths Pull Up P0

Specifies the Processor DQ drive strengths Pull Up P0.

Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

Processor DQ drive strengths Pull Down P0

Specifies the Processor DQ drive strengths Pull Down P0.

Configuration options: [Auto] [High Impedance] [240 ohm] [120 ohm] [80 ohm] [60 ohm] [48 ohm] [40 ohm] [34.3 ohm]

DRAM DQ drive strengths Pull Up P0

Specifies the DRAM DQ drive strengths Pull Up P0.

Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

DRAM DQ drive strengths Pull Down P0

Specifies the DRAM DQ drive strengths Pull Up P0.

Configuration options: [Auto] [48 ohm] [40 ohm] [34 ohm]

Dram ODT Impedance RTT_NOM_WR P0

Specifies the Dram ODT Impedance RTT_NOM_WR P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance RTT_NOM_RD P0

Specifies the Dram ODT Impedance RTT_NOM_RD P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance RTT_WR P0

Specifies the Dram ODT Impedance RTT_WR P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance RTT_PARK P0

Specifies the Dram ODT Impedance RTT_PARK P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

Dram ODT Impedance DQS_RTT_PARK P0

Specifies the Dram ODT Impedance DQS_RTT_PARK P0.

Configuration options: [Auto] [RTT_OFF] [RZQ (240)] [RZQ/2 (120)] [RZQ/3 (80)] [RZQ/4 (60)] [RZQ/5 (48)] [RZQ/6 (40)] [RZQ/7 (34)]

DDR PMU Training

Read Preamble P0

Specifies the Read Preamble P0.

Configuration options: [Auto] [1 tCK - 10 Pattern] [2 tCK - 0010 Pattern] [2 tCK - 1110 Pattern (DDR4 Style)] [3 tCK - 000010 Pattern] [4 tCK - 00001010 Pattern]

Write Preamble P0

Specifies the Write Preamble P0.

Configuration options: [Auto] [2 tCK - 0010 Pattern] [3 tCK - 000010 Pattern] [4 tCK - 00001010 Pattern]

PHY VrefDAC0 P0 Control

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **PHY VrefDAC0 P0 Control** is set to **[Manual]**.

PHY VrefDAC0 P0

VrefDAC0 control for DQ Receiver in P0 State Negative Values are represented by Two's complement.

PHY VrefDAC1 P0 Control

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **PHY VrefDAC1 P0 Control** is set to **[Manual]**.

PHY VrefDAC1 P0

VrefDAC1 control for DQ Receiver in P0 State Negative Values are represented by Two's complement.

PMU DQ Vref P0 Control

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **PMU DQ Vref P0 Control** is set to **[Manual]**.

PMU DQ Vref P0

PMU message block for DQ Vref control in P0 State Negative values are represented by Two's complement.

ARdPtrInitVal P0 Control

[Auto] Follow default setting.

[Manual] Manually specify ARdPtrInitValMP0.

NOTE: The following item appears only when **ARdPtrInitVal P0 Control** is set to **[Manual]**.

ARdPtrInitVal P0

Controls the Write/Read pointer

DDR Controller Configuration

DDR Power Options

Power Down Enable

Allows you to enable or disable DDR power down mode.
Configuration options: [Disabled] [Enabled] [Auto]

Additional Memory Tweaks

RX2D_TrainOpt

Configuration options: [Auto] [Manual]

NOTE: The following items appear only when **RX2D_TrainOpt** is set to **[Manual]**.

RX2D_DFE

Used to force Rx DFE on or off. This is always enabled when Runtime Reduction is disabled.
Configuration options: [Auto] [Disable] [Enable]

RX2D Voltage Step Size (2ⁿ)

0 = 1 DAC setting between checked values. 1 = 2 DAC settings between checked values. 2 = 4 DAC settings between checked values. 3 = 8 DAC settings between checked values.
Configuration options: [Auto] [1 DAC steps per loop] [2 DAC steps per loop] [4 DAC steps per loop] [8 DAC steps per loop]

RX2D Delay Step Size (2ⁿ)

0 = 1 LCDL delays between checked values. 1 = 2 LCDL delays between checked values. 2 = 4 LCDL delays between checked values. 3 = 8 LCDL delays between checked values.
Configuration options: [Auto] [1 DAC steps per loop] [2 DAC steps per loop] [4 DAC steps per loop] [8 DAC steps per loop]

TX2D_TrainOpt

Configuration options: [Auto] [Manual]

NOTE: The following items appear only when **TX2D_TrainOpt** is set to **[Manual]**.

TX2D_DFE

Configuration options: [Auto] [Disable] [Enable]

TX2D Voltage Step Size (2ⁿ)

0 = 1 DAC setting between checked values. 1 = 2 DAC settings between checked values. 2 = 4 DAC settings between checked values. 3 = 8 DAC settings between checked values.
Configuration options: [Auto] [1 DAC steps per loop] [2 DAC steps per loop] [4 DAC steps per loop] [8 DAC steps per loop]

TX2D Delay Step Size (2^n)

0 = 1 LCDL delays between checked values. 1 = 2 LCDL delays between checked values. 2 = 4 LCDL delays between checked values. 3 = 8 LCDL delays between checked values.
Configuration options: [Auto] [1 DAC steps per loop] [2 DAC steps per loop] [4 DAC steps per loop] [8 DAC steps per loop]

TX2D Voltage Step Multiplier

0 = Voltage Step Size is not modified. 1 = Voltage Step Size is multiplied by 16.
Configuration options: [Multiply DAC step size by 16] [No Multiply]

TX2D Delay Step Multiplier

0 = Delay Step Size is not modified. 1 = Delay Step Size is multiplied by 16.
Configuration options: [Multiply DAC step size by 16] [No Multiply]

RX DFE Taps

Allows you to specify the number of RX DFE taps, Value only applies when RX2D_DFE is enabled.
Configuration options: [Auto] [1 Tap] [2 Tap] [3 Tap] [4 Tap]

TX DFE Taps

Allows you to specify the number of TX DFE taps, Value only applies when TX2D_DFE is enabled.
Configuration options: [Auto] [1 Tap] [2 Tap] [3 Tap] [4 Tap]

DDR Turnaround Times**Read Drift Adjustment P0**

AUTO - Read Drift Adjustment 0.
Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

Write Drift Adjustment P0

AUTO - Write Drift Adjustment 0.
Configuration options: [Auto] [minus 4] [minus 3] [minus 2] [minus 1] [plus 1] [plus 2] [plus 3] [plus 4]

DDR5 Nitro Mode

Can improve overclocked memory support for modules over 6000Mt/s with potential boot time and/or latency tradeoffs.
Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **DDR Nitro Mode** is set to **[Enable]**.

DDR5 Robust Training Mode

A more comprehensive memory training algorithm that increases boot time but can result in improved stability at overclocked memory settings.
Configuration options: [Auto] [Enable] [Disable]

Nitro RX Data

Configures the RX Timing between memory controller and PHY. Higher value may enable increased memory frequency at the expense of increased latency.
Configuration options: [Auto] [1] [2] [Disabled]

Nitro TX Data

Configures the TX Timing between memory controller and PHY. Higher value may enable increased memory frequency at the expense of increased latency. Configuration options: [Auto] [0] [1] [2] [3] [Disabled]

Nitro Control Line

Configures the command timing latency between the memory controller and PHY. Higher value may enable increased memory frequency at the expense of increased latency.

Configuration options: [Auto] [0] [1] [Disabled]

Nitro RX Burst Length

DQ Training Pattern Length - Higher number results in more robust training and longer runtime. Lower number results in less robust training and shorter runtime, but potentially less stability.

Configuration options: [Auto] [1x] [2x] [4x] [8x]

Nitro TX Burst Length

DQ Training Pattern Length - Higher number results in more robust training and longer runtime. Lower number results in less robust training and shorter runtime, but potentially less stability.

Configuration options: [Auto] [1x] [2x] [4x] [8x]

Nitro DFE Vref Offset Limits

Disabling the TxDFE/RxDEF Vref offset limit to give them more margin for those edge cases where the guardband is not sufficient.

Configuration options: [Auto] [Disable]

Nitro TxDFE Gain Bias P0

Controls the amplification of the TxDFE TAP step size of P0 State, larger allows more range, smaller allows more precision.

Configuration options: [Auto] [DFE Gain Bias Step 0] [DFE Gain Bias Step 1] [DFE Gain Bias Step 2] [DFE Gain Bias Step 3] [DFE Gain Bias Negative Step 1] [DFE Gain Bias Negative Step 2] [DFE Gain Bias Negative Step 3]

Nitro TxDFE Gain Bias

Controls the amplification of the RxDFE TAP step size, larger allows more range, smaller allows more precision.

Configuration options: [Auto] [DFE Gain Bias Step 1] [DFE Gain Bias Step 2] [DFE Gain Bias Step 3]

Infinity Fabric Frequency and Dividers

Infinity Fabric Frequency and Dividers

Allows you to set Infinity Fabric Frequency (FCLK). Auto = FCLK = MCLK. Manual = FCLK must be less than MCLK for best performance in most cases. Latency penalties are incurred if FCLK and MCLK are mismatched, but sufficiently high MCLK can negate or overcome this penalty.

Configuration options: [Auto] [100 MHz] ~ [3000 MHz]

UCLK DIV1 MODE

Allows you to set UCLK DIV mode.

Configuration options: [Auto] [UCLK=MEMCLK] [UCLK=MEMCLK/2]

Fclk VDCI Mode Pref

Allows you to set UCLK DIV mode.

[Auto] Allow SyncFifo and Bypass mode. Lower latency.

[Predictive] Force VDCI predictive mode. Higher latency, but better stability at higher voltages/frequencies.

Precision Boost Overdrive

Precision Boost Overdrive

When this item is enabled, it allows the processor to run beyond defined values for PPT, VDD_CPU EDC, VDD_CPU TDC, VDD_SOC EDC, VDD_SOC TDC to the limits of the board, and allows it to boost at higher voltages for longer durations than default operation.

Configuration options: [Auto] [Disable] [Enabled] [Advanced]

NOTE: The following items appear only when **Precision Boost Overdrive** is set to **[Advanced]**.

PBO Limits

- [Auto] Loads AMD default socket power (PPT), electrically-limited VRM current (EDC), and thermally-limited VRM current (TDC) limits.
- [Disable] Disabled PBO limits.
- [Motherboard] Allows the processor to run according to increased PPT, EDC, and TDC limits defined by your motherboard.
- [Manual] Allows the processor to ignore AMD default limits for PPT, EDC, and TDC and instead use manual values (up to the maximum capabilities of the motherboard).

NOTE: The following items appear only when **PBO Limits** is set to **[Manual]**.

PPT Limit [mW]

Adjust total CPU socket power delivery capability. Adjustable up to the limit supported by your motherboard.

TDC Limit [mA]

Adjust peak current from your motherboard's CPU core VRM phases in thermally-limited scenarios. Adjustable up to the limit supported by your motherboard.

EDC Limit [mA]

Adjust peak current from your motherboard's CPU core VRM phases in electrically-limited scenarios. Adjustable up to the limit supported by your motherboard.

Precision Boost Overdrive Scalar Ctrl

Configuration options: [Auto] [Manual]

NOTE: The following item appears only when **Precision Boost Overdrive Scalar Ctrl** is set to **[Manual]**.

Precision Boost Overdrive Scalar

Overrides the AMD default silicon health management to potentially achieve higher sustained frequencies under CPU load.

Configuration options: [1X] ~ [10X]

CPU Boost Clock Override

Increases (Positive) or Decreases (Negative) the maximum CPU frequency that may be automatically achieved by the CPU Boost Algorithm.

Configuration options: [Disabled] [Enabled (Positive)] [Enabled (Negative)]

NOTE: The following item appears only when **CPU Boost Clock Override** is set to **[Enabled (Positive)]**.

Max CPU Boost Clock Override(+)

Increases the maximum CPU frequency that may be automatically achieved by the Precision Boost 2 algorithm. Use the <+> or <-> to adjust the value.

NOTE: The following item appears only when **CPU Boost Clock Override** is set to **[Enabled (Negative)]**.

Max CPU Boost Clock Override(-)

Decreases the maximum CPU frequency that may be automatically achieved by the Precision Boost 2 algorithm. Use the <+> or <-> to adjust the value.

Platform Thermal Throttle Ctrl

Allows the user to decrease the maximum allowed processor temperature (celsius)
Configuration options: [Manual] [Auto]

NOTE: The following item appears only when **Platform Thermal Throttle Ctrl** is set to **[Manual]**.

Platform Thermal Throttle Limit

Allows the user to decrease the maximum allowed processor temperature (celsius)

GFX Curve Optimizer

GFX Curve Optimizer

Allows the user to shift the GFX Voltage / Frequency (AVFS) curve to include higher voltages (positive values) or lower voltages (negative values). The larger the value entered the larger the magnitude of the voltage shift.
Configuration options: [Disable] [GFX Curve Optimizer]

NOTE: The following items appear only when **GFX Curve Optimizer** is set to **[GFX Curve Optimizer]**.

GFX Curve Optimizer Sign

Determines the direction of the curve shift for GFX. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

GFX Curve Optimizer Magnitude

Determines the magnitude of the GFX curve shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift. Field defaults to 0 and the user can enter whole integer numbers. Value entered, combined with the sign above, is used to send the SMU and GFX Curve Optimizer.

Curve Optimizer

Curve Optimizer

Allows the user to shift the Voltage / Frequency (AVFS) curve to include higher voltages (positive values) or lower voltages (negative values). The larger the value entered the larger the magnitude of the voltage limit.

Configuration options: [Disable] [All Cores] [Per Core] [Per CCD]

NOTE: The following items appear only when **Curve Optimizer** is set to **[All Cores]**.

All Core Curve Optimizer Sign

Determines the direction of the curve shift on all cores. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

All Core Curve Optimizer Magnitude

Determines the magnitude of the curve shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

NOTE: The following items appear only when **Curve Optimizer** is set to **[Per Core]**.

Core 0-7 Curve Optimizer Sign

Determines the direction of the curve shift on this core. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Core 0-7 Curve Optimizer Magnitude

Determines the magnitude of the curve shift to be made to this core (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

NOTE: The following items appear only when **Curve Optimizer** is set to **[Per CCD]**.

CCD 0 Curve Optimizer Sign

Determines the direction of the curve shift on this core. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

CCD 0 Curve Optimizer Magnitude

Determines the magnitude of the curve shift to be made to this core (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Curve Shaper

Min Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Min Frequency - Low Temperature** is set to **[Enable]**.

Min Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Min Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Min Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Min Frequency - Med Temperature** is set to **[Enable]**.

Min Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Min Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Min Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Min Frequency - High Temperature** is set to **[Enable]**.

Min Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Min Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Low Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Min Frequency - High Temperature** is set to **[Enable]**.

Low Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Low Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Low Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Low Frequency - Med Temperature** is set to **[Enable]**.

Low Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Low Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Low Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Min Frequency - High Temperature** is set to **[Enable]**.

Low Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: [Positive] [Negative]

Low Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Med Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Med Frequency - Low Temperature** is set to **[Enable]**.

Med Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Med Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Med Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

\ **NOTE:** The following items appear only when **Med Frequency - Med Temperature** is set to **[Enable]**.

Med Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Med Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Med Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Med Frequency - High Temperature** is set to **[Enable]**.

Med Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Med Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

High Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **High Frequency - Low Temperature** is set to **[Enable]**.

High Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

High Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

High Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **High Frequency - Med Temperature** is set to **[Enable]**.

High Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

High Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

High Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **High Frequency - High Temperature** is set to **[Enable]**.

High Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

High Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Max Frequency - Low Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.

Configuration options: **[Auto]** **[Enable]** **[Disable]**

NOTE: The following items appear only when **Max Frequency - Low Temperature** is set to **[Enable]**.

Max Frequency - Low Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.
Configuration options: [Positive] [Negative]

Max Frequency - Low Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Max Frequency - Med Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.
Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Max Frequency - Med Temperature** is set to **[Enable]**.

Max Frequency - Med Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.
Configuration options: [Positive] [Negative]

Max Frequency - Med Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

Max Frequency - High Temperature

Curve Shaper is an advanced overclocking tuning suite utilizing the same "Curve optimizer" steps. It changes variable voltage across all cores for finite (overlapping) frequency and temperature regions. This can be used to more precisely tune the voltage required by your system. In general, Low temperature corresponds to idle temps, Med Temperature corresponds to 1T/ Gaming Workloads, and high temperature is for stress tests. Additionally, Min and Low frequencies are idle/background tasks, Medium is high core count workloads, and high and Max frequency are for gaming and 1T workloads. These settings work as "bands" so you may find that for particular cases several settings impact the behavior. Ex, A workload running at 65 Celsius will likely be influenced by Low temp and Med temp values. Workloads lower than 65C will be more impacted by Low. Workloads above 65C will be more impacted by Medium.
Configuration options: [Auto] [Enable] [Disable]

NOTE: The following items appear only when **Max Frequency - High Temperature** is set to **[Enable]**.

Max Frequency - High Temperature Sign

Determines the direction of the shift. Positive shifts the curve up to use higher voltages. Negative shifts the curve down to use lower voltages.

Configuration options: **[Positive]** **[Negative]**

Max Frequency - High Temperature Magnitude

Determines the magnitude of the shift to be made (entered in whole numbers) the larger the value entered the larger the magnitude of the shift.

VDDG Voltage Control

VDDG Voltage Control

VDDG represents voltage for the data portion of the Infinity Fabric. It is derived from the CPU SoC/Uncore Voltage (VDD_SOC). VDDG can approach but not exceed VDD_SOC.

Configuration options: **[Auto]** **[Global VDDG Voltage Control]** **[Per-CCD VDDG Voltage Control]**

NOTE: The following items appear only when **VDDG Voltage Control** is set to **[Global VDDG Voltage Control]**.

Global VDDG CCD Voltage

VDDG CCD represents voltage for the data portion of the Infinity Fabric. Range is 650mV ~ 1650mV. Stepping is 10mV.

Configuration options: **[Auto]** **[VDDG voltage 650mV]** ~ **[VDDG voltage 1650mV]**

Global VDDG IOD Voltage

VDDG IOD represents voltage for the data portion of the Infinity Fabric. . Range is 650mV - 1650mV. Stepping is 10mV.

Configuration options: **[Auto]** **[VDDG voltage 650mV]** ~ **[VDDG voltage 1650mV]**

NOTE: The following items appear only when **VDDG Voltage Control** is set to **[Per-CCD VDDG Voltage Control]**.

CCD0-CCD VDDG Voltage

VDDG CCD represents voltage for the data portion of the Infinity Fabric. Range is 650mV ~ 1650mV. Stepping is 10mV.

Configuration options: **[Auto]** **[VDDG voltage 650mV]** ~ **[VDDG voltage 1650mV]**

CCD0-IOD VDDG Voltage

VDDG IOD represents voltage for the data portion of the Infinity Fabric. . Range is 650mV - 1650mV. Stepping is 10mV.

Configuration options: **[Auto]** **[VDDG voltage 650mV]** ~ **[VDDG voltage 1650mV]**

VDDP Voltage Control

VDDP Voltage Control

Allows the user to adjust the VDDP voltage.

[Auto] VDDP is system default.

[Manual] Set voltage for the DDR bus signaling (PHY).

NOTE: The following items appear only when **VDDP Voltage Control** is set to **[Manual]**.

VDDP Voltage Adjust

VDDP is a voltage for the DDR bus signaling (PHY), and it is derived from your DRAM Voltage (VDDIO_Mem). As a result, VDDP voltage in mV can approach but not exceed your DRAM Voltage. Stepping is 5mv.

SoC/Uncore OC Mode

SoC/Uncore OC Mode

Forces CPU SoC/Uncore components (e.g. Infinity Fabric, memory, and integrated graphics) to run at their maximum specified frequency at all times. May improve performance at the expense of idle power savings.

Configuration options: [Auto] [Enabled] [Disabled]

SoC Voltage

SoC Voltage

Specifies the SoC/Uncore voltage (VDD_SOC) in mV to support memory and Infinity Fabric overclocking. VDD_SOC also determines the GPU voltage on processors with integrated graphics. Stepping is 5mv. Voltage ranges allowed to be set will be limited outside of] ~ [. If in] ~ [(and CPU temp is below -40c) the allowable range of settable voltages will be extended.

LN2 Mode

LN2 Mode

Enables settings that provide additional stability at extreme cold operating temperatures. Configuration options: [Auto] [Enabled] [Disabled]

VDD Misc

VDD Misc Control

Allows the user to adjust the VDD Misc Voltage.

[Auto] VDD MISC is set to system default.

[Manual] Set voltage for the GMI PHY.

NOTE: The following item appears only when **VDD Misc Control** is set to **[Manual]**.

VDD Misc Voltage

Specifies the VDD MISC Voltage in mV, definitely follow SVI3 type 2 Slave VID (500-5600mV, step 10mV). Note that the minimum voltage supported is based on the specific processor, such as Raphael OC require the voltage higher than 1100mv. Voltage ranges allowed to be set will be limited outside of] ~ [. If] ~ [(and CPU temp is below -40c) the allowable range of settable voltages will be extended.

LCLK Frequency Control

LCLK Frequency Control

[Auto] Use default settings.

[Manual] Manually configure LCLK frequency.

NOTE: The following item appears only when **LCLK Frequency Control** is set to **[Manual]**.

Minimum Frequency

Allows you to set the minimum LCLK frequency. Set minimum and maximum to the same value for fixed frequency operation. Range: 150MHz ~ 2500MHz.

Maximum Frequency

Allows you to set the maximum LCLK frequency. Range: 1029Hz ~ 2500MHz.

Onboard Voltage Control

VDDIO Voltage Control

VDDIO Ctrl

Allows the user to adjust the VDDIO voltage.

[Auto] Use the default VDDIO voltage.

[Manual] Set DIMM VDD/VDDQ to synchronize to APU VDDIO.

[Separate] Independent control of APU VDDIO, DIMM VDD/VDDQ.

IMPORTANT! Running VDDQ != VDD is non-standard and may cause memory stability issues. Take care that during ramp down and ramp up, the VDDQ-VDD voltage must be less than 200mV.

PMIC VDD Stepping Control

PMIC VDD Stepping Control by R2B, select 10mv will set PMIC R2B BIT5.

Configuration options: [Auto] [10 mv] [5 mv]

NOTE: The following item appears only when **VDDIO Ctrl** is set to **[Manual]** or **[Separate]**.

DIMM VDD Adjust

Adjust DIMM Power Supply, stepping is 10mV. Range is from 800mV to 1430mV. Take care that during ramp down and ramp up, the VDDQ-VDD voltage must be less than 200mV.

PMIC VDDQ Stepping Control

PMIC VDD Stepping Control by R2B, select 10mv will set PMIC R2B BIT4.

Configuration options: [Auto] [10 mv] [5 mv]

NOTE: The following items appear only when **VDDIO Ctrl** is set to **[Separate]**.

DIMM VDDQ Adjust

Adjust DIMM DQ Power Supply, stepping is 10mV. Range is from 800mV to 1430mV. Take care that during ramp down and ramp up, the VDDQ-VDD voltage must be less than 200mV, and Vpp must always be equal to or greater than VDDQ.

APU VDDIO Adjust

Adjust APU VDDIO, stepping is 10mV. Range is from 700mV to 1400mV.

Enable Platform PMIC Control

When Enable Platform PMIC Control is enabled, the DDR PMIC voltages are not adjusted by processor FW, and may be adjusted directly by EC or other platform based mechanism.

Configuration options: [Auto] [Enable] [Disable]

VPP Voltage Control

VPP Ctrl

[Auto]	Use the default setting.
[Manual]	Manually specify the memory VPP Voltage.

NOTE: The following item appears only when **VPP Ctrl** is set to **[Manual]**.

VPP Adjust

Adjust MEM VPP, stepping is 10mV. Range is from 1500mV to 2135mV.

ECO Mode

ECO Mode

Adjust CPU Control limits to manage operation within specific thermal design power limits. Motherboard and Cooling solution support required for chosen power level.

65W: PPT=88W/TDC=75A/EDC=150A


105W: PPT=142W/TDC=110A/EDC=170A

Configuration options: [Auto] [105W]

8. Monitor menu

The Monitor menu displays the system temperature/power status and fan speeds. Scroll down to display the other BIOS items.

NOTE: The settings and options of this menu may vary depending on your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

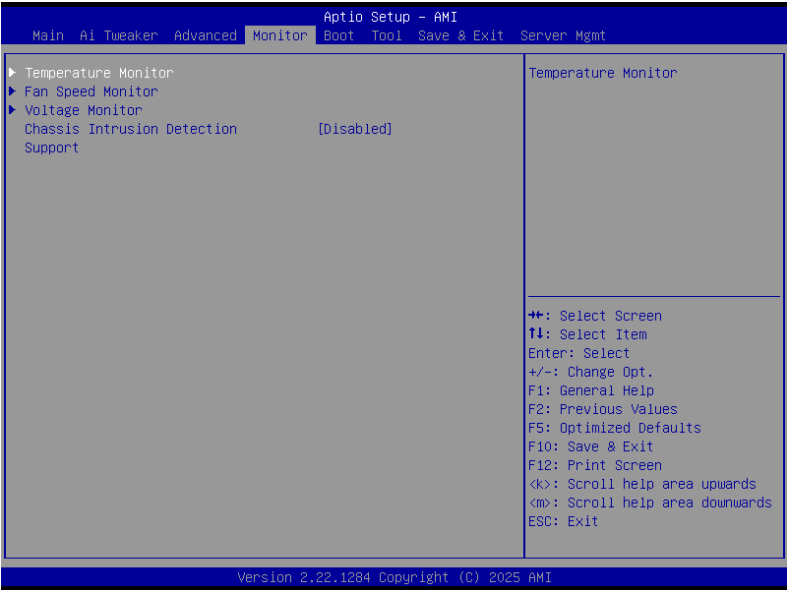

Temperature Monitor

MotherBoard Temperature, VRM Thermistor Temperature, Chipset Temperature, T_Sensor Temperature, DIMM Temperature [xxx°C/xxx°F]

The onboard hardware monitor automatically detects and displays the temperatures for the different components. Select **[Ignore]** if you do not wish to display the detected temperatures.

Fan Speed Monitor

CPU Fan Speed, CPU Optional Fan Speed, Chassis Fan Speed, Water Pump+ Speed [xxxx RPM]

The onboard hardware monitor automatically detects and displays the fan speeds in rotations per minute (RPM). If the fan is not connected to the motherboard, the field shows N/A. Select **[Ignore]** if you do not wish to display the detected speed.

Voltage Monitor

CPU Core Voltage, 12V Voltage, 5V Voltage, 3.3V Voltage, CPU VDDIO / MC Voltage, CHIPSET Standby Voltage [x.xxx V]

The onboard hardware monitor automatically detects the voltage output through the onboard voltage regulators. Select **[Ignore]** if you do not want to detect this item.


Chassis Intrusion Detection Support

Set this item to **[Enabled]** to enable the chassis intrusion detection function.

Configuration options: [Enabled] [Disabled]

9. Boot menu

The Boot menu items allow you to change the system boot options.

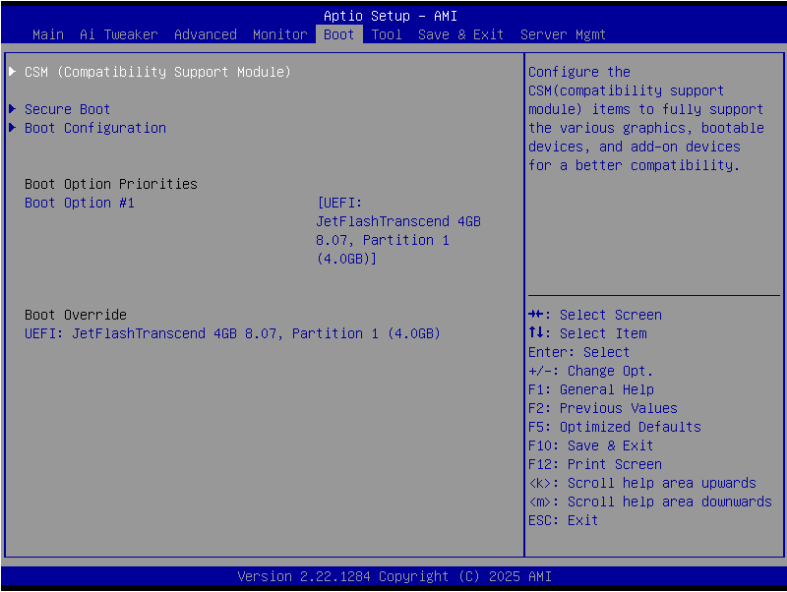

CSM (Compatibility Support Module)

Allows you to configure the CSM (Compatibility Support Module) items to fully support the various VGA, bootable devices and add-on devices for better compatibility.

IMPORTANT! Launch CSM will be set to **[Disabled]** and cannot be configured when using the integrated graphics.

Launch CSM

- | | |
|------------|---|
| [Enabled] | For better compatibility, enable the CSM to fully support the non-UEFI driver add-on devices or the Windows® UEFI mode. |
| [Disabled] | Disable the CSM to fully support the non-UEFI driver add-on devices or the Windows® UEFI mode. |

NOTE: The following items appear only when **Launch CSM** is set to **[Enabled]**.

Boot Device Control

Allows you to select the type of devices that you want to boot.
Configuration options: [UEFI and Legacy OPROM] [Legacy OPROM only] [UEFI only]

Boot from Network Devices

Allows you to select the type of network devices that you want to launch.
Configuration options: [Ignore] [Legacy only] [UEFI only]

Boot from Storage Devices

Allows you to select the type of storage devices that you want to launch.

Configuration options: [Ignore] [Legacy only] [UEFI only]

Boot from PCI-E/PCI Expansion Devices

Allows you to select the type of PCI-E/PCI expansion devices that you want to launch.

Configuration options: [Ignore] [Legacy only] [UEFI only]

Secure Boot

Allows you to configure the Windows® Secure Boot settings and manage its keys to protect the system from unauthorized access and malwares during POST.

OS Type

[Windows UEFI Mode] This item allows you to select your installed operating system. Execute the Microsoft® Secure Boot check. Only select this option when booting on Windows® UEFI mode or other Microsoft® Secure Boot compliant OS.

[Other OS] Get the optimized function when booting on Windows® non-UEFI mode. Microsoft® Secure Boot only supports Windows® UEFI mode.

NOTE: The Microsoft secure boot can only function properly on Windows UEFI mode.

Secure Boot Mode

This option allows you to select the Secure Boot mode from between Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.

Configuration options: [Standard] [Custom]

NOTE: The following item appears only when **Secure Boot Mode** is set to [Custom].

Key Management

Install Default Secure Boot keys

Allows you to immediately load the default Security Boot keys, Platform key (PK), Key-exchange Key (KEK), Signature database (db), and Revoked Signatures (dbx). When the default Secure boot keys are loaded, the PK state will change from Unloaded mode to loaded mode.

Clear Secure Boot keys

This item appears only when you load the default Secure Boot keys. Allows you to clear all default Secure Boot keys.

Save all Secure Boot variables

Allows you to save all secure boot keys to a USB storage device.

PK Management

The Platform Key (PK) locks and secures the firmware from any permissible changes. The system verifies the PK before your system enters the OS.

Save To File

Allows you to save the PK to a USB storage device.

Set New key

Allows you to load the downloaded PK from a USB storage device.

Delete key

Allows you to delete the PK from your system. Once the PK is deleted, all the system's Secure Boot keys will not be active.

Configuration options: [Yes] [No]

NOTE: The PK file must be formatted as a UEFI variable structure with time-based authenticated variable.

KEK Management

The KEK (Key-exchange Key or Key Enrollment Key) manages the Signature database (db) and Revoked Signature database (dbx).

NOTE: Key-exchange Key (KEK) refers to Microsoft® Secure Boot Key-Enrollment Key (KEK).

Save to file

Allows you to save the KEK to a USB storage device.

Set New key

Allows you to load the downloaded KEK from a USB storage device.

Append Key

Allows you to load the additional KEK from a storage device for an additional db and dbx loaded management.

Delete key

Allows you to delete the KEK from your system.

Configuration options: [Yes] [No]

NOTE: The KEK file must be formatted as a UEFI variable structure with time-based authenticated variable.

DB Management

The db (Authorized Signature database) lists the signers or images of UEFI applications, operating system loaders, and UEFI drivers that you can load on the single computer.

Save to file

Allows you to save the db to a USB storage device.

Set New key

Allows you to load the downloaded db from a USB storage device.

Append Key

Allows you to load the additional db from a storage device for an additional db and dbx loaded management.

Delete key

Allows you to delete the db file from your system.

Configuration options: [Yes] [No]

NOTE: The db file must be formatted as a UEFI variable structure with time-based authenticated variable.

DBX Management

The dbx (Revoked Signature database) lists the forbidden images of db items that are no longer trusted and cannot be loaded.

Save to file

Allows you to save the dbx to a USB storage device.

Set New key

Allows you to load the downloaded dbx from a USB storage device.

Append Key

Allows you to load the additional dbx from a storage device for an additional db and dbx loaded management.

Delete key

Allows you to delete the dbx file from your system.

Configuration options: [Yes] [No]

NOTE: The dbx file must be formatted as a UEFI variable structure with time-based authenticated variable.

Boot Configuration

Fast Boot

Allows you to enable or disable boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

Configuration options: [Disabled] [Enabled]

NOTE: The following item appears only when **Fast Boot** is set to **[Enabled]**.

Next Boot after AC Power Loss

[Normal Boot] Returns to normal boot on the next boot after an AC power loss.

[Fast Boot] Accelerates the boot speed on the next boot after an AC power loss.

Boot Logo Display

[Auto] Automatically adjust the boot logo size for Windows requirements.

[Full Screen] Maximize the boot logo size.

[Disabled] Hide the logo during POST.

NOTE: The following item appears only when **Boot Logo Display** is set to **[Auto]** or **[Full Screen]**.

Post Delay Time

Allows you to select a desired additional POST waiting time to easily enter the BIOS Setup. You can only execute the POST delay time during normal boot.

Configuration options: [0 sec] ~ [10 sec]

IMPORTANT! This feature only works when set under normal boot.

NOTE: The following item appears only when **Boot Logo Display** is set to **[Disabled]**.

Post Report

Allows you to select a desired POST report waiting time or until ESC is pressed.
Configuration options: [1 sec] ~ [10 sec] [Until Press ESC]

Bootup NumLock State

Allows you to select the keyboard NumLock state.
Configuration options: [On] [Off]

Wait For [F1] If Error

Allows your system to wait for the <F1> key to be pressed when error occurs.
Configuration options: [Disabled] [Enabled]

Option ROM Messages

[Force BIOS] The Option ROM Messages will be shown during the POST.
[Keep Current] Only the ASUS logo will be shown during the POST.

Interrupt 19 Capture

Enable this item to allow the option ROMs to trap the interrupt 19.
Configuration options: [Enabled] [Disabled]

AMI Native NVMe Driver Support

Allows you to enable or disable AMI Native NVMe driver.
Configuration options: [Disabled] [Enabled]

Boot Option Priorities

These items specify the boot device priority sequence from the available devices. The number of device items that appears on the screen depends on the number of devices installed in the system.

IMPORTANT!


- To access Windows® OS in Safe Mode, press <F8 > after POST (Windows® 8 not supported).
 - To select the boot device during system startup, press <F8> when ASUS Logo appears.
-

Boot Override

These item displays the available devices. The number of device items that appear on the screen depends on the number of devices installed in the system. Click an item to start booting from the selected device.

10. Tool menu

The Tool menu items allow you to configure options for special functions. Select an item then press <Enter> to display the submenu.

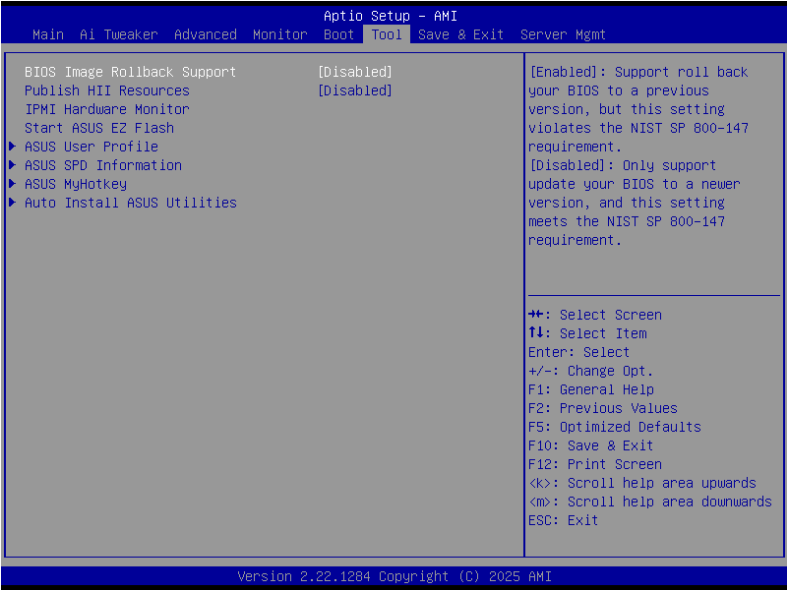

BIOS Image Rollback Support

- [Enabled] Support roll back your BIOS to a previous version, but this setting violates the NIST SP 800-147 requirement.
- [Disabled] Only support updating your BIOS to a newer version, and this setting meets the NIST SP 800-147 requirement.

Publish HII Resources

Configuration options: [Disabled] [Enabled]

IPMI Hardware Monitor

Allows you to view the IPMI Hardware Monitor when you press <Enter>.

Start ASUS EzFlash

Allows you to run ASUS EzFlash BIOS ROM Utility when you press <Enter>. Refer to the **ASUS EzFlash Utility** section for details.

10.1 ASUS User Profile

This item allows you to store or load multiple BIOS settings.

Load from Profile

Allows you to load the previous BIOS settings saved in the BIOS Flash. Key in the profile number that saved your BIOS settings, press <Enter>, and then select **Yes**.

NOTE:

- DO NOT shut down or reset the system while updating the BIOS to prevent the system boot failure!
 - We recommend that you update the BIOS file only coming from the same memory/CPU configuration and BIOS version.
-

Profile Name

Allows you to key in a profile name.

Save to Profile

Allows you to save the current BIOS settings to the BIOS Flash, and create a profile. Key in a profile number from one to eight, press <Enter>, and then select **Yes**.

10.2 ASUS SPD Information

This item allows you to view the DRAM SPD information.

10.3 ASUS MyHotkey

This menu allow you to configure Hotkeys.

NOTE: The availability of this menu, as well as the settings and options may vary depending on your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

Hotkey F3

Press <F3> to enter UEFI-USB or UEFI-HDD or UEFI-CDROM/DVDROM or UEFI-PXE or ASUS AZ Flash 3 in POST.

Configuration options: [Disabled] [Boot from UEFI USB] [Boot from UEFI HDD] [Boot from UEFI CDROM/DVDROM] [Boot from UEFI PXE] [Toggle ASUS EZ Flash]

NOTE: Please make sure Network is enabled before AsusMyHotkey is set to Boot From UEFI PXE. (Advanced -> Network Stack Configuration -> Network Stack)

Hotkey F4

Press F4 to enter UEFI-USB or UEFI-HDD or UEFI-CDROM/DVDROM or UEFI-PXE or ASUS EZ Flash 3 in POST.

Configuration options: [Disabled] [Boot from UEFI USB] [Boot from UEFI HDD] [Boot from UEFI CDROM/DVDROM] [Boot from UEFI PXE] [Toggle ASUS EZ Flash]

NOTE: Please make sure Network is enabled before AsusMyHotkey is set to Boot From UEFI PXE. (Advanced -> Network Stack Configuration -> Network Stack)

10.4 Auto Install ASUS Utilities

This menu allow you to download and install the ASUS Utilities.

NOTE: The availability of this menu, as well as the settings and options may vary depending on your motherboard. Please refer to the BIOS of your motherboard for the actual settings and options.

Auto Install ASUS Utilities

Enabling this allows for automatic download, installation, or configuration of ASUS recommended utilities.

Configuration options: [Disabled] [Enabled]

Download and Install ASUS DriverHub

When enabled and an internet connection is available, ASUS utilities such as ASUS DriverHub or Armoury Crate will be automatically downloaded and installed after Windows installation.


Configuration options: [Disabled] [Enabled]

Auto BitLocker

- | | |
|--------------------------|---|
| [Auto] | Enables BitLocker automatically based on Microsoft's recommended settings. (Default: Enabled) |
| [Block Auto BitLocker] | Prevents the automatic enabling of BitLocker, potentially improving PCIe/SATA SSD performance in some configurations. |
| [Restore Auto BitLocker] | Re-enables automatic BitLocker to ensure comprehensive data protection through full drive encryption. |

11. Save & Exit menu

The Exit menu items allow you to load the optimal default values for the BIOS items, and save or discard your changes to the BIOS items.

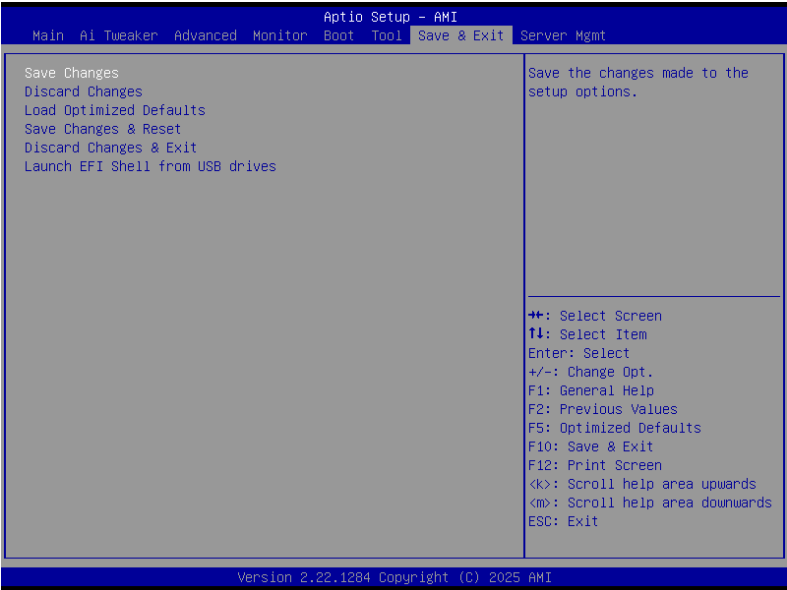

Save Changes

Save changes done so far to any of the setup options.

Discard Changes

Discard changes done so far to any of the setup options.

Load Optimized Defaults

Restores/loads the default values for all the setup options. When you select this option or if you press <F5>, a confirmation window appears. Select **OK** to load the default values.

Save Changes & Reset

Resets the system after saving the changes made. When you select this option or if you press <F10>, a confirmation window appears. Select **OK** to save changes and exit.

Discard Changes & Exit

This option allows you to exit the Setup program without saving your changes. When you select this option or if you press <Esc>, a confirmation window appears. Select **Yes** to discard changes and exit.

Launch EFI Shell from USB drives

This option allows you to attempt to launch the EFI Shell application (shellx64.efi) from one of the available filesystem devices.

12. Server Mgmt menu

The Server Mgmt menu items allow you to configure IPMI settings.



OS Watchdog Timer

When this option is set to **[Enabled]** it starts a BIOS timer which can only be shut off by Management Software after the OS loads. Helps determine if the OS successfully loaded or follows the OS Boot Watchdog Timer policy.
Configuration options: **[Enabled]** **[Disabled]**

NOTE: The following items appear only when **OS Watchdog Timer** is set to **[Enabled]**.

OS Wtd Timer Timeout

Enter a value between 1 and 30 min for OS Boot Watchdog Expiration, Not available if OS Boot Watchdog Timer is disabled.
Configuration options: **[1]** ~ **[30]**

OS Wtd Timer Policy

This item allows you to configure the how the system should respond if the OS Boot Watch Timer expires.
Configuration options: **[Do Nothing]** **[Reset]** **[Power Down]** **[Power Cycle]**

12.1 System Event Log

Allows you to change the SEL event log configuration.

NOTE: All values changed here do not take effect until computer is restarted.

SEL Components

Allows you to enable or disable event logging for error/progress codes during boot.

Configuration options: [Disabled] [Enabled]

NOTE: The following items are configurable only when **SEL Components** is set to **[Enabled]**.

Erase SEL

Allows you to choose options for erasing SEL.

Configuration options: [No] [Yes, On next reset] [Yes, On every reset]

When SEL is Full

Allows you to choose options for reactions to a full SEL.

Configuration options: [Do Nothing] [Erase Immediately] [Delete Oldest Record]

Log EFI Status Codes

Disable the logging of EFI Status Codes or log only error code or only progress code or both.

Configuration options: [Disabled] [Both] [Error code] [Progress code]

12.2 BMC network configuration

The sub-items in this configuration allow you to configure the BMC network parameters.

Configure IPV4 support

DM_LAN

Configuration Address source

This item allows you to configure LAN channel parameters statistically or dynamically (by BIOS or BMC). **[Unspecified]** option will not modify any BMC network parameters during BIOS phase.

Configuration options: [Unspecified] [Static] [DynamicBmcDhcp]

NOTE: The following items are available only when **Configuration Address source** is set to **[Static]**.

Station IP address

Allows you to set the station IP address.

Subnet mask

Allows you to set the subnet mask. We recommend that you use the same Subnet Mask you have specified on the operating system network for the used network card.

Router IP Address

Allows you to set the router IP address.

Router MAC Address

Allows you to set the router MAC address.

Configure IPV6 support

DM_LAN

IPV6 support

Allows you to enable or disable IPV6 support.

Configuration options: [Enabled] [Disabled]

NOTE: The following items appear only when **IPV6 support** is set to **[Enabled]**.

Configuration Address source

Allows you to set the LAN channel parameters statically or dynamically (by BIOS or by BMC).

[Unspecified] option will not modify any BMC network parameters during BIOS phase.

Configuration options: [Unspecified] [Static] [DynamicBmcDhcp]

NOTE: The following items are available only when **Configuration Address source** is set to [Static].

Station IPV6 address

Allows you to set the station IPV6 address.

Prefix Length

Allows you to set the prefix length (maximum of Prefix Length is 128).

Configuration Router Lan1 Address source

Allows you to set the LAN channel parameters statically or dynamically (by BIOS or by BMC). **[Unspecified]** option will not modify any BMC network parameters during BIOS phase.

Configuration options: [Unspecified] [Static] [DynamicBmcDhcp]

NOTE: The following items are available only when **Configuration Router Lan1 Address source** is set to **[Static]**.

IPV6 Router1 IP Address

Allows you to set the IPV6 Router IP address.

IPV6 Router1 Prefix Length Lan1

Allows you to set the IPV6 Router prefix length (maximum of Prefix Length is 128).

IPV6 Router1 Prefix Value Lan1

Allows you to set the IPV6 Router prefix value.

12.3 View System Event Log

This item allows you to view the system event log records.