

ProArt

PA278CGRV

USER GUIDE



Updating monitor firmware

You can update monitor firmware by yourself, when necessary.




When there is a newer version of firmware available on the ASUS website, follow the procedures below to update your monitor. Make sure that the power supply is stable.

1.1 Upgrade Scaler firmware by One Key Update



It is very important to keep the monitor active during the whole firmware update process.


1. Download the firmware updater “ASUS OKU_PA278CGRV_macOS.zip”.
2. Double click the zip file to install the app.
3. Connect the host (PC/NB) to the USB-C port of the monitor and make sure the video displays well.
4. Run “ASUS Firmware One Key Update” app in the /ASUS OKU_PA278CGRV_macOS/PA278CGRV/ folder.
5. Click “Allow” when you see the following message.

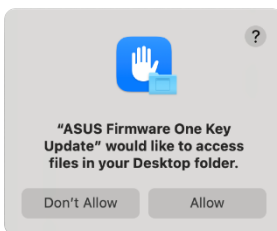


6. Click the Update button if you want to proceed.



7. It takes about 35 minutes or more to complete the process.

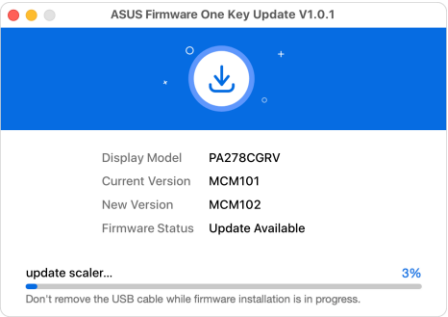

8. When the process completed, the following message appears.

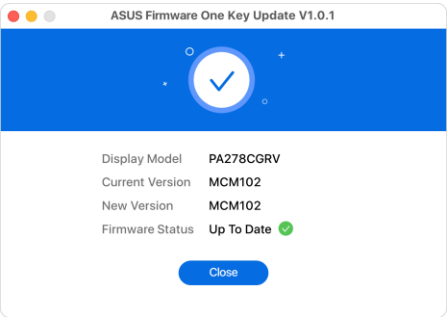

9. Switch AC power on/off once before using the monitor.

ASUS