



Service and Support



<https://www.asus.com/support>

Video Tutorials



https://qr.asus.com/wl_videotutorials

Specifications:

DC Power adapter	DC Output: +19.5V with 2.31A current +12V with 5A current		
Operating Temperature	0~40°C	Storage	0~70°C
Operating Humidity	50~90%	Storage	20~90%

Safety Notices

- Use this product in environments with ambient temperatures between 0°C (32°F) and 40°C (104°F).
- Refer to the rating label on the bottom of your product and ensure your power adapter complies with this rating.
- DO NOT place on uneven or unstable work surfaces. Seek servicing if the casing has been damaged.
- DO NOT place or drop objects on top and do not shove any foreign objects into the product.
- DO NOT expose to or use near liquids, rain, or moisture. DO NOT use the modem during electrical storms.
- DO NOT cover the vents on the product to prevent the system from getting overheated.
- DO NOT use damaged power cords, accessories, or other peripherals.
- If the Adapter is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer.
- To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.
- DO NOT mount this equipment higher than 2 meters.

Simplified Statement of Compliance - Cyber Security (Security Standards for Smart Devices) Rules 2025 (Australia)

ASUSTek Computer Inc. hereby declares that this device is in compliance with the security requirements and other relevant provisions of the Cyber Security (Security Standards for Smart Devices) Rules 2025 of Australia. The full text of the Statement of Compliance is available at <https://www.asus.com/support/>.

A27723

 


Quick Setup Guide

Dual Band WiFi Router

RT-BE88U

Router Overview

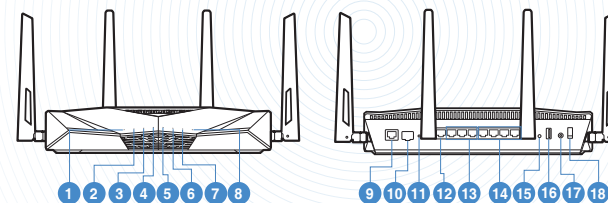


- | | |
|-------------------------------|-----------------------|
| 1 Power LED | 10 10G SFP+ port |
| 2 5GHz LED | 11 WPS button |
| 3 2.4GHz LED | 12 2.5G WAN/LAN1 port |
| 4 USB 3.2 Gen 1 LED | 13 2.5G LAN2-4 ports |
| 5 LAN LED | 14 1G LAN5-8 ports |
| 6 10G SFP+ LED | 15 Reset button |
| 7 10G LED | 16 USB 3.2 Gen 1 port |
| 8 WAN (Internet) LED | 17 DCIN port |
| 9 10G WAN/LAN (Internet) port | 18 Power switch |

* For detailed
information, please
refer to
[https://asus.click/
RT-BE88U_Manual](https://asus.click/RT-BE88U_Manual)




1

 Reboot modem and ensure its connection is ready
Notice: Unplug modem for 10 sec then plug back in

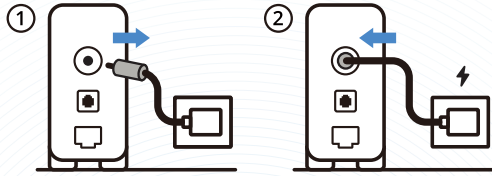

2

 Prepare your ASUS router and power it on
Once the status light is solid blue then it's ready for setup

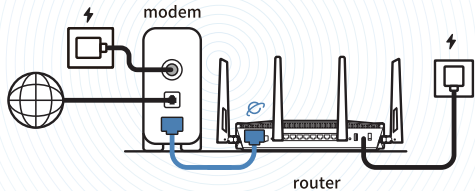

3

Scan the code and download ASUS Router app for setup
For more information, please scan the code on the cover



繁體中文

快速使用指南

- 1 請重新啟動數據機，並確保其已準備就緒，可以進行網路連線

注意：請拔下數據機的電源插頭 10 秒，然後再插回

- 2 準備好您的華碩路由器並開機

當狀態指示燈顯示為藍色恆亮時，可以準備開始安裝

- 3 掃描 code 並下載 ASUS Router App 以進行網路設定

* 如需瞭解更多詳細資訊，請掃描封面 Code

한국어

빠른 설치 안내서

- 1 모뎀을 재부팅하고 모뎀 연결이 준비되었는지 확인하십시오.
알림: 모뎀을 10초 동안 분리했다가 다시 연결하십시오.

- 2 ASUS 라우터를 준비한 후 전원을 켜십시오.
상태 표시등이 파란색으로 켜지면 설치할 준비가 된 것입니다.

- 3 코드를 스캔하여 ASUS 라우터 앱을 다운로드한 후 설치하십시오.

* 자세한 내용을 보려면 커버에 인쇄된 코드를 스캔하십시오

Bahasa Melayu

Rintasan Penghala

- 1 Reboot modem dan pastikan sambungannya sedia
Notis: Cabut palam modem selama 10 saat, kemudian palam masuk kembali

- 2 Sediakan penghala ASUS anda dan hidupkan kuasanya
Sebaik sahaja lampu status menyala biru terang, maka ia sedia untuk penyediaan

- 3 Imbas kod dan memuat turun aplikasi ASUS untuk penggunaan
* Untuk maklumat lanjut, sila imbas kod pada muka depan

Tiếng Việt

Hướng Dẫn Thiết Lập Nhanh

- 1 Khởi động lại modem và đảm bảo kết nối của nó đã sẵn sàng
Lưu ý: Rút cáp modem ra trong 10 giây rồi cắm trở lại

- 2 Chuẩn bị router ASUS rồi bật nguồn
Một khi đèn trạng thái có màu xanh cố định, thiết bị đã sẵn sàng thiết lập

- 3 Quét mã và tải xuống ứng dụng ASUS Router để thiết lập
* Để biết thêm thông tin, hãy quét mã trên nắp vỏ

Bahasa Indonesia

Panduan Konfigurasi Singkat

- 1 Boot ulang modem dan pastikan sambungannya telah siap
Catatan: Lepaskan modem selama 10 dtk, lalu pasang kembali

- 2 Siapkan router ASUS, lalu hidupkan
Setelah lampu status berwarna biru pekat, berarti perangkat siap dikonfigurasi

- 3 Pindai kode dan download aplikasi ASUS Router untuk dikonfigurasi
* Untuk informasi lebih lanjut, pindai kode pada penutup

ไทย

คู่มือการตั้งค่าอย่างรวดเร็ว

- 1 รีบูตโมเด็มและตรวจสอบให้แน่ใจว่าการเชื่อมต่อพร้อมใช้งาน
โปรดทราบ: ถอดปลั๊กโมเด็มเป็นเวลา 10 วินาทีแล้วเสียบกลับเข้าไปใหม่

- 2 เตรียมเราเตอร์ ASUS ของคุณและเปิดเครื่อง
เมื่อไฟสถานะเป็นสีน้ำเงินหยุดนิ่ง แสดงว่าพร้อมสำหรับการตั้งค่า

- 3 สแกนโค้ดและดาวน์โหลดแอป ASUS Router เพื่อทำการตั้งค่า
* สำหรับข้อมูลเพิ่มเติม กรุณาสแกนโค้ดบนฝาครอบ