



Service and Support



<https://www.asus.com/support>

Video Tutorials



https://qr.asus.com/wl_videotutorials

Specifications:

DC Power adapter	DC Output: +12V with 3A current		
Operating Temperature	0~40°C	Storage	0~70°C
Operating Humidity	50~90%	Storage	20~90%

Safety Notices

- Use this product in environments with ambient temperatures between 0°C (32°F) and 40°C (104°F).
- Refer to the rating label on the bottom of your product and ensure your power adapter complies with this rating.
- DO NOT place on uneven or unstable work surfaces. Seek servicing if the casing has been damaged.
- DO NOT place or drop objects on top and do not shove any foreign objects into the product.
- DO NOT expose to or use near liquids, rain, or moisture. DO NOT use the modem during electrical storms.
- DO NOT cover the vents on the product to prevent the system from getting overheated.
- DO NOT use damaged power cords, accessories, or other peripherals.
- If the Adapter is broken, do not try to fix it by yourself. Contact a qualified service technician or your retailer.
- To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.
- DO NOT mount this equipment higher than 2 meters.

Simplified Statement of Compliance - Cyber Security (Security Standards for Smart Devices) Rules 2025 (Australia)

ASUSTek Computer Inc. hereby declares that this device is in compliance with the security requirements and other relevant provisions of the Cyber Security (Security Standards for Smart Devices) Rules 2025 of Australia.

The full text of the Statement of Compliance is available at <https://www.asus.com/support/>.

A27724




Quick Setup Guide

BE9700 Tri-band WiFi 7 Router

RT-BE92U

Router Overview

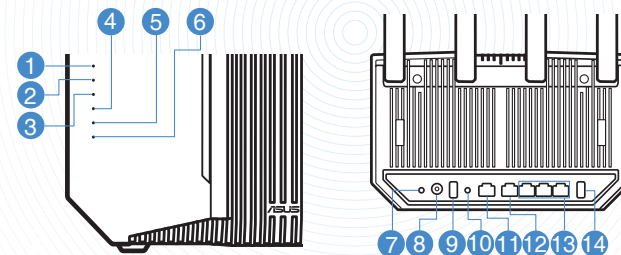

- | | |
|----------------------|---|
| 1 Power LED | 8 Power (DCIN) port |
| 2 2.4GHz LED | 9 Power switch |
| 3 5GHz LED | 10 Reset button |
| 4 6GHz LED | 11 10G WAN (Internet) port / LAN1 port |
| 5 WAN (Internet) LED | 12 2.5G WAN (Internet) port / LAN1 port |
| 6 LAN LED | 13 2.5G LAN2~4 ports |
| 7 WPS button | 14 USB 3.0 port |


* For detailed information, please refer to https://asus.click/RT-BE92U_Manual



1

Reboot modem and ensure its connection is ready


Notice: Unplug modem for 10 sec then plug back in

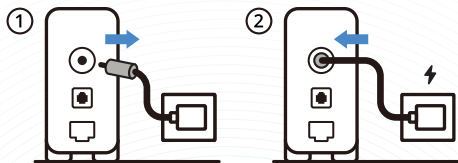

2

Wired up your ASUS router, and power it on
Once the WAN LED turns ON, it is ready for setup

* It's required to connect the modem to the 10GE WAN port under factory default settings

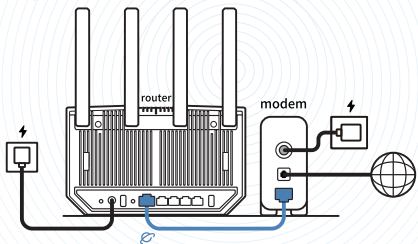

3

Scan the code and download ASUS Router app for setup



繁體中文

快速使用指南

- 請重新啟動數據機，並確保其已準備就緒，可以進行網路連線
注意：請拔下數據機的電源插頭 10 秒，然後再插回
- 準備好您的華碩路由器並開機
請待WAN LED 亮燈後，即可開始設定
* 在原廠預設設定下，需要將數據機連接至 10GE WAN 連接埠
- 掃描 code 並下載 ASUS Router App 以進行網路設定

한국어

빠른 설치 안내서

- 모뎀을 재부팅하고 모뎀 연결이 준비되었는지 확인하십시오.
알림: 모뎀을 10초 동안 분리했다가 다시 연결하십시오.
- ASUS 라우터를 준비한 후 전원을 켜십시오.
WAN LED 표시등이 켜지면, 셋업 준비가 된 것입니다.
* 공장 기본 설정에서 모뎀을 10GE WAN 포트에 연결해야 합니다.
- 코드를 스캔하여 ASUS 라우터 앱을 다운로드한 후 설치하십시오.

Bahasa Melayu

Rintasan Penghala

- Reboot modem dan pastikan sambungannya sedia
Notis: Cabut palam modem selama 10 saat, kemudian palam masuk kembali
- Menyediakan penghala ASUS anda dan menghidupkan kuasa penghala ASUS tersebut
Sebaik sahaja lampu status menyala berwarna putih, maka ia sedia untuk penyediaan di aplikasi anda
* Ia diperlukan untuk menyambungkan modem ke port WAN 10GE dalam tetapan lalai kilang
- Imbas kod dan memuat turun aplikasi ASUS untuk penggunaan

Tiếng Việt

Hướng Dẫn Thiết Lập Nhanh

- Khởi động lại modem và đảm bảo kết nối của nó đã sẵn sàng
Lưu ý: Rút cáp modem ra trong 10 giây rồi cắm trở lại
- Chuẩn bị router ASUS rồi bật nguồn
Khi đèn WAN hiển thị sáng, thiết bị đã sẵn sàng để cài đặt
* Bạn cần phải kết nối modem với cổng WAN 10GE theo cài đặt mặc định gốc
- Quét mã và tải xuống ứng dụng ASUS Router để thiết lập

Bahasa Indonesia

Panduan Konfigurasi Singkat

- Boot ulang modem dan pastikan sambungannya telah siap
Catatan: Lepaskan modem selama 10 dtk, lalu pasang kembali
- Siapkan router ASUS, lalu hidupkan
Ketika Lampu LED WAN menyala, maka tandanya router siap untuk di atur
* Anda harus menyambungkan modem ke port 10GE WAN dalam pengaturan default pabrik.
- Pindai kode dan download aplikasi ASUS Router untuk dikonfigurasi

ไทย

คู่มือการตั้งค่าอย่างรวดเร็ว

- รีบูตโมเด็มและตรวจสอบให้แน่ใจว่าการเชื่อมต่อพร้อมใช้งาน
โปรดทราบ: ถอดปลั๊กโมเด็มเป็นเวลา 10 วินาทีแล้วเสียบกลับเข้าไปใหม่
- เตรียมเราเตอร์ ASUS ของคุณและเปิดเครื่อง
เมื่อไฟ LED WAN เปิดขึ้น ก็พร้อมสำหรับการตั้งค่า
* จำเป็นต้องเชื่อมต่อโมเด็มเข้ากับพอร์ต 10GE WAN ภายใต้การตั้งค่าเริ่มต้นจากโรงงาน
- สแกนโค้ดและดาวน์โหลดแอป ASUS Router เพื่อทำการตั้งค่า