


ASUS MD200 Mouse

Mouse Model Name: MD200 / 滑鼠型號: MD200 / 鼠标型号: MD200 / Nome modello mouse: MD200 / Modèle de souris: MD200 / Modellname der Maus: MD200 / Модель мыши: MD200 / Назва моделі миші: MD200 / 마우스 모델 이름: MD200 / Nome de modelo do rato: MD200 / Denumire model mouse: MD200 / Әріптамалық атауы: MD200 / Nama model tetikus: MD200 / نام مدل موس: MD200 / Nazwa modelu myszy: MD200 / マウスモデル名: MD200 / Název modelu myši: MD200 / Egér típusnév: MD200 / Nombre del modelo de ratón: MD200 / Fare Model Adı: MD200 / Naam muismodel: MD200 / اسم الماوس: MD200 / Nama model tetikus: MD200 / English Benggolan bnggolan: MD200 / Nama Model Mouse: MD200 / Dongle Model Name: MD200-D / 接收器型號: MD200-D / 接收器型号: MD200-D / Nome modello dongle: MD200-D / Modèle de dongle: MD200-D / Modellname des Dongles: MD200-D / Модель приемника: MD200-D / Назва моделі ключа: MD200-D / 동글 모델 이름: MD200-D / Nome de modelo do adaptador: MD200-D / Denumire model dongle: MD200-D / Әріптамалық атауы: MD200-D / Nazwa modelu klucza sprzętowego: MD200-D / ドングルモデル名: MD200-D / Název modelu památového klúča: MD200-D / Dongle típusnév: MD200-D / Nombre del modelo de la llave: MD200-D / Donanım Adı: MD200-D / Naam dongle-model: MD200-D / اسم الماوس: MD200-D / Nama model dongle: MD200-D / English Benggolan bnggolan: MD200-D / Nama Model Dongle: MD200-D

ENGLISH	繁體中文
Your package includes: - MD200 Mouse - USB Dongle (stored inside the mouse) - Quick Start Guide - Warranty Card Dimensions Mouse: 114.5 (L) x 71 (W) x 42.3mm (H) Mouse Dongle: 18.9 (L) x 12 (W) x 4.5mm (H) Weight Mouse: 55g (without battery) Dongle: 1.6g Rating Mouse: 2.4GHz mode: 1.5V/50mA Bluetooth 5.0 mode: 1.5V/50mA Dongle: 5V/100mA Frequency Band 100~4200 DPI AA Battery Hardware Version Mouse: V10 Dongle: V10 Software Version Mouse: V1.6 Dongle: V23 System Requirements Windows 10 or above	包裝內含物: - MD200 滑鼠 - USB 接收器 (收納於滑鼠內) - 快速開始指南 - 保固卡 尺寸 鼠身: 114.5 (長) x 71 (寬) x 42.3mm (高) 接收器: 18.9 (長) x 12 (寬) x 4.5mm (高) 重量 鼠身: 55g (不含電池) 接收器: 1.6g 規格 鼠身: 2.4GHz 模式: 1.5V/50mA Bluetooth 5.0 模式: 1.5V/50mA 接收器: 5V/100mA 頻率範圍 100~4200 DPI 電池 (AA) 電池 硬體版本 滑鼠: V10 接收器: V10 軟體版本 滑鼠: V1.6 接收器: V23 系統需求 Windows® 10 作業系統及以上版本

Connecting to PC

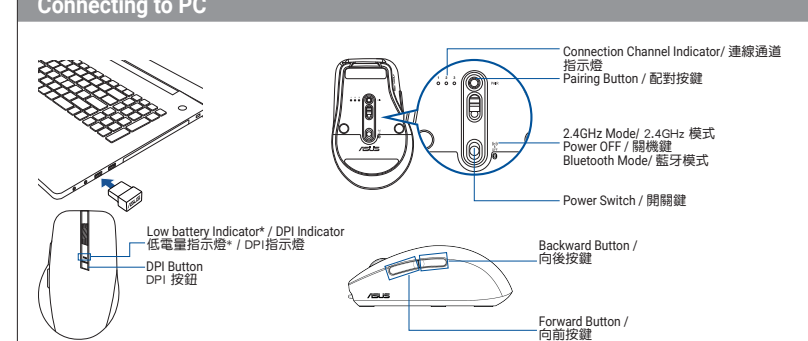

* You can check the battery percentage using Armory Crate or by going to the Bluetooth settings panel on the connect PC.

LED color	Duration	Description
White	Blinks once	DPI 1 (Default 1000 DPI)
White	Blinks twice	DPI 2 (Default 1600 DPI)
Red	Blinks every 1.5 seconds	Battery Power under 20%

Via 2.4GHz:

- Slide the power switch to 2.4GHz Mode.
- Insert the USB dongle into an available USB port on your PC.

Via Bluetooth:

- Slide the switch to Bluetooth Mode.
- Hold the pairing button for over 3 seconds till the indicator LED flashes white.
- On Windows, right-click the Bluetooth icon on the right of the taskbar (or double-click the Bluetooth icon in the Control Panel), then click **Add a device** > **ASUS MD200** > **Finish**.
- When successfully connected, the indicator will stop flashing and turn off. Once the mouse is set up on your PC, it will automatically connect to your PC the next time you turn Bluetooth mode.

NOTES:

- You may set up your mouse Bluetooth connection to up to three devices. After setting up the Bluetooth connection successfully, you may use the pairing button to switch between the three devices.
- The mouse supports Bluetooth 5.0.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

Replacing the battery

1. Remove the battery cover by sliding the cover latch.

2. Insert the new battery, ensuring the positive (+) and negative (-) terminals are correctly aligned.

3. Close the battery cover by sliding the cover latch.

4. The mouse is now ready for use.

Updating the firmware

- Connect MD200 mouse to your computer by inserting the USB dongle into an available USB port on your PC.
- Download and install the Armory Crate from http://www.asus.com/supportonly/ArmoryCrate/helpdesk_download/.
- Follow the software instructions to update your MD200 mouse and dongle's firmware.

Customizing MD200 mouse using Armory Crate

Armory Crate allows you to customize various functions including the buttons, forward and backward buttons, DPI switch button, polling rate, low power warning, and more.

Low battery indicator

Replace the battery when the indicator flashes red, indicating that the mouse is running low on power. You may customize the indicator to light up alert at the percentage you prefer using Armory Crate.

