



GC-HPWR Adapter

Installing the GC-HPWR adapter
(compatible with BTF motherboards)


1

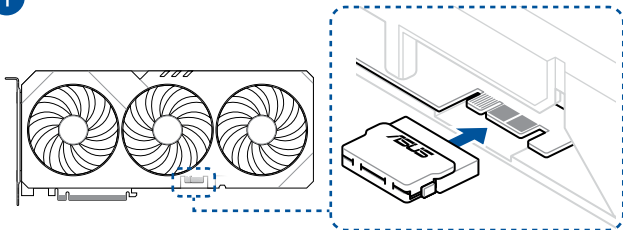

2

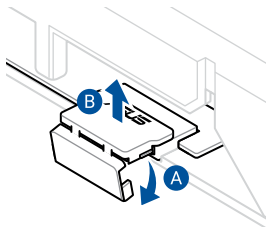


3

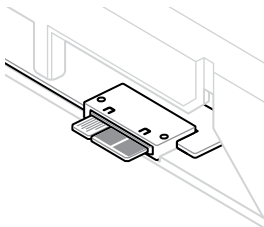


Removing the GC-HPWR adapter
(compatible with non-BTF motherboards)

1

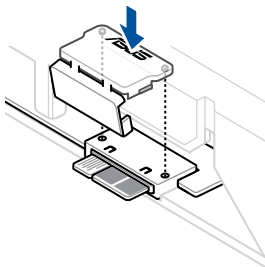

2

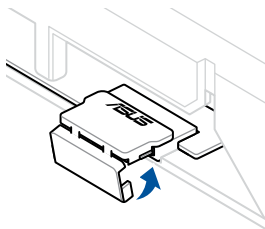

3

