

SET UP:


INITIAL CHARGING / RECHARGING

- Lift the charging port cover on the back of the warmer and plug in the USB cable.
- Plug the other end of the cable into a compatible USB-C power block (not included). We highly recommend using a 24W USB-C power block that you would use for your smartphone. To calculate watts, multiply volts (V) x amps (A) listed on the charging block.
- The battery life indicator will light up to show charge level. It will blink when charging and stop blinking when fully charged.**
- Charging/recharging can take up to 5 hours depending on the charging block you use. A 18W charging block will take 3 hours and a 10W charging block will take 5 hours.
- A full charge should warm 8 6oz bottles of liquid water, formula or breastmilk from Room Temp. to 98°F. If you select the milk storage bag setting or 99°F, a single charge will warm 2-3 6oz bottles or bags if the starting temperature is Cold/Refrigerated. Results will also vary based on starting temp., ambient temp, the number of oz and other factors.**

WASH AND RINSE THE INSIDE OF THE WARMER BEFORE FIRST USE

- Remove the lid by twisting counter clockwise.
- Rinse the stainless steel cup and lid with warm soapy water and rinse thoroughly. Use a bottle brush or sponge to clean completely.
- **DO NOT** immerse the bottle warmer in water or other liquids.
- You can wash the lid in the dishwasher (top-rack) but we recommend hand washing for best results.

CONTROLS & OPERATION

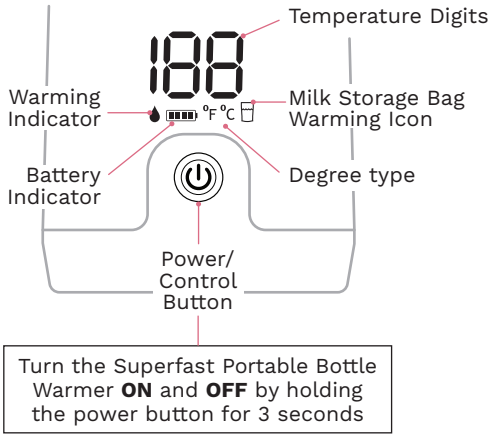


** The # of bottles warmed on a single charge may vary depending on type of bottle, starting temp. and other factors.

OTHER GREAT WAYS TO MAKE BABY FEEDING EASIER:

bottle washer pro

Automatically washes, sterilizes and dries bottles, pump parts, sippy cups and accessories at the push of a button. No more hand-washing!

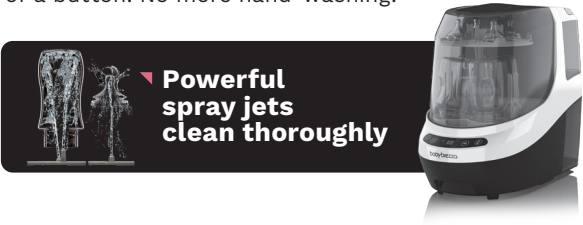

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza appliance that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza appliance will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza appliance should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at: 1-888-396-6552, visit babybrezza.com/contact or write to: Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

Customer Care

If you are experiencing problems with your Baby Brezza product, please call Baby Brezza Customer Service at 1-888-396-6552 or visit babybrezza.com/contact before returning the product to the store you purchased it at so that we can offer you our best service customized to your particular situation.

Learn more at babybrezza.com

ERROR CODES

NOTE: If the display shows “OH”, this means “Overheating” which can occur if you turn on the warmer without liquid inside. To clear the OH error code, turn off the warmer completely by holding the power button for 3 seconds until the display countdowns 3-2-1 and then shuts off. Remove the lid, pour cold water in the warmer, and let the warmer cool for 15-20 minutes before next use.

If **E2, E3** errors code appear on digital screen, please contact Baby Brezza Customer Service at 1-888-396-6552 or visit babybrezza.com/contact

babybrezza®
superfast®
portable bottle warmer



Instructions

for set-up, use and cleaning

ACTIVATE
YOUR WARRANTY
& get 2 extra months free



Scan here
Only takes 10 seconds!

babybrezza.com/register
Benefits: Faster customer support,
extended customer service hours & more

BisbeeBaby®
Technology Inside



8.5”

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all Instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse USB charging cord, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not charging and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged USB charging cord or plug or after the appliance malfunctions, or has been damaged in any manner. Contact Baby Brezza for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not let USB charging cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use appliance for other than intended use.
11. Scalding may occur if the lid is removed during the heating cycles.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. **CAUTION:** Risk of Fire and Burns. Do Not Open, Crush, Heat Above 176°F (80°C), or Incinerate. Follow Manufacturer's Instructions.
15. For charging, use only with Listed/Certified Information Technology (Computer) Equipment, Listed/Certified ITE Power Supply or Listed Class 2 Power Unit. Do not use unapproved sources.
16. If the warmer overheats, 'OH' will appear on the digital screen. Allow the warmer to cool down for at least 15 minutes before next use.

WARMING:

- Always use the warmer in an upright position. If the warmer is tilted, it may not warm to the selected temperature.
- Remove the lid and pour Water, Formula or Breast-milk into the warmer (do not turn on the warmer without liquid inside). To warm milk storage bags, place the bag in the warmer and fill with clean water to the same level as the milk in the bag.
- Select 80°F, 98°F, or 103°F to warm Water, Formula or Breastmilk not in a storage bag. Select 99°F to warm a milk storage bag*.
- The red droplet warming indicator will turn on and blink as the liquid inside warms. The actual temperature of the liquid inside the warmer will be shown on the display.
- When the liquid in the warmer reaches the selected temperature the heater will turn off and beep 3 times.
- Turn on the heater by holding the power button for 3 seconds.
- The display will show a 3-2-1 countdown and all icons on the display will light up.
- Press the button repeatedly to choose desired temperature.
- **DO NOT** attempt to warm milk storage bags without water in the warmer.
- Always test the temperature of the liquid before feeding your child.
- To turn off the warmer, press the "Power button" for 3 seconds. The display will countdown 3-2-1, then the LEDs will turn off.

POURING FROM THE LID:


- Press the center of the lid once to open the 360° pour spout, then tilt and pour.
- Press the center again to close the lid.

CLEANING:

- Always clean the Superfast Portable Bottle Warmer before and after use.
- Clean the inside stainless steel cup with warm soapy water and a brush to reach the bottom.
- Clean the lid by soaking in warm soapy water and wiping with a sponge or soft cloth.
- For best results, press the pour spout down and ensure the lid is fully immersed in water. The lid can be cleaned in a dishwasher (top rack) but cleaning in water is more effective.
- Wipe the outside of the Superfast Portable Bottle Warmer with a damp soft cloth.
- Never use abrasives or solvents.
- **DO NOT** immerse the bottle warmer in water or other liquids.
- For best results, we recommend not using a dishwasher to clean the Warmer's parts.

*Based on warming from Room temperature to Body temperature. Final liquid temperature may vary depending on starting temperature, bag material, number of ounces (or ml) and other factors.

SUPERFAST PORTABLE BOTTLE WARMER PARTS

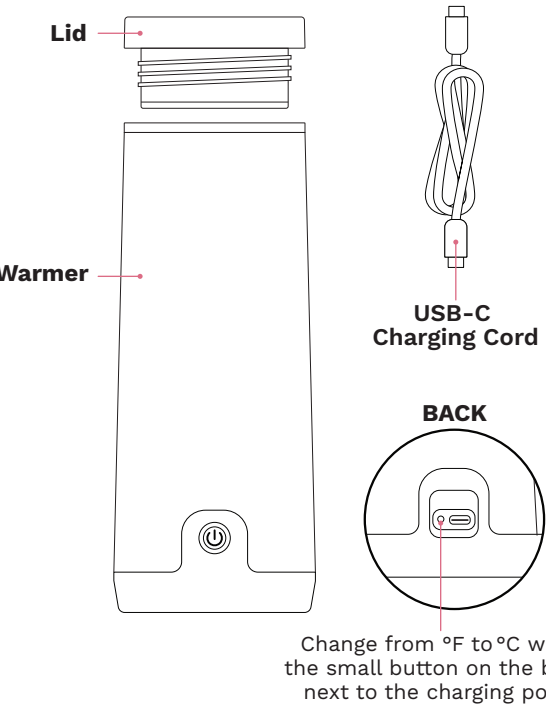

TECHNICAL DATA

Models: BRZ0176, BRZ0177, BRZ0178, BRZ0179, BRZ0192, BRZ0193, BRZ0194, BRZ0195, BRZ0256
Supply Voltage: 5-12V **Heater Power:** 100W
Current: 2A MAX
Lithium-Ion Battery: 37Wh (TSA Compliant for carry-on)



HOUSEHOLD USE ONLY

DISPOSAL INSTRUCTIONS

- The battery must be removed from the appliance before it is scrapped;
- The appliance must be disconnected from the supply mains when removing the battery;
- The battery is to be disposed of safely.