

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Customer Service

If you are experiencing problems with your Baby Brezza product, please call Baby Brezza Customer Service at 1-888-396-6552 or visit babybrezza.com/contact before returning the product to the store you purchased it at so that we can offer you our best service customized to your particular situation. To obtain warranty services, please call Customer Service at: 1-888-396-6552, visit babybrezza.com/contact or write to: Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States and Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza appliance that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza appliance will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza appliance should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at: 1-888-396-6552, visit babybrezza.com/contact or write to: Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

This product may be covered and/or protected by patent, patent application, or design registrations which are provided on the following webpage: babybrezza.com/pages/patents

babybrezza.com

©2026 Baby Brezza Enterprises LLC

babybrezza®

babybrezza®

superquick
10-minute
sterilizer dryer

Instructions

for set-up, use and cleaning

**ACTIVATE
YOUR WARRANTY**
& get 2 extra months free



Scan here
Only takes 10 seconds!

babybrezza.com/register

Benefits: Faster customer support,
extended customer service hours & more



PLEASE NOTE: It is extremely important to descale & clean the sterilizer dryer every 2 weeks or as necessary. All bottles, pump parts & accessories must be empty, clean and rinsed before use in the sterilizer dryer.


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions carefully before using your sterilizer dryer.
2. Ensure that the supply voltage marked on the appliance corresponds with your power supply.
3. If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
5. Do not allow children to touch or use the appliance. The appliance becomes very hot and the steam can cause severe scalding.
6. Do not move the appliance when it is in use or contains hot liquids.
7. Do not touch the hot surfaces.
8. Do not place the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
9. Unplug the appliance from the power supply before cleaning or storage.
10. Do not immerse the supply cord, plug or base unit in water or any other liquid.
11. This appliance does not contain any user serviceable parts inside. Do not dismantle.
12. This appliance is for indoor household use only. Do not use outdoors.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. a) Short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
b) Extension cords are available and may be used if care is exercised in their use.
c) If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
16. Children should be supervised to ensure that they do not play with the appliance.
17. Not for space heating purpose.
18. Always use on a level heat resistant surface.
19. Always keep the electric sterilizer and its plug out of reach of small children.
20. To disconnect, turn any control "off", then remove plug from wall outlet.
21. Ensure water has been added to the base unit before the sterilization cycle is switched on.
22. Always add 90ml/3oz of distilled water before use. If you put too little or too much water into the sterilizer, the sterilization efficiency may not be reached.
23. Always unplug from the electric outlet when not in use. Allow to cool before putting on or taking off any parts.
24. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
25. The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
26. This sterilizer is intended to be used in household and similar application such as a. staff kitchen areas in shops, offices and other working environments. b. farm houses. c. by clients in hotels, motels and other residential type of environments. d. bed and breakfast.
27. Do not open while in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid.
28. Allow at least 30 minutes interval between operations and make sure the unit has been cooled down before pressing the start button for sequential use.
29. Steam escaping from the unit can cause burns. Always allow 5 minutes to cool down after the cycle finishes before lifting the lid.
30. KEEP CHILDREN AWAY from this sterilizer at all times.
31. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
32. CAUTION: Risk of electric shock, disconnect electric power before servicing.
33. Use only distilled water, bottled water or fresh running water to sterilize.
34. Never use any additives.

SAVE THESE INSTRUCTIONS

 SUPERQUICK 10-MINUTE STERILIZER DRYER PARTS

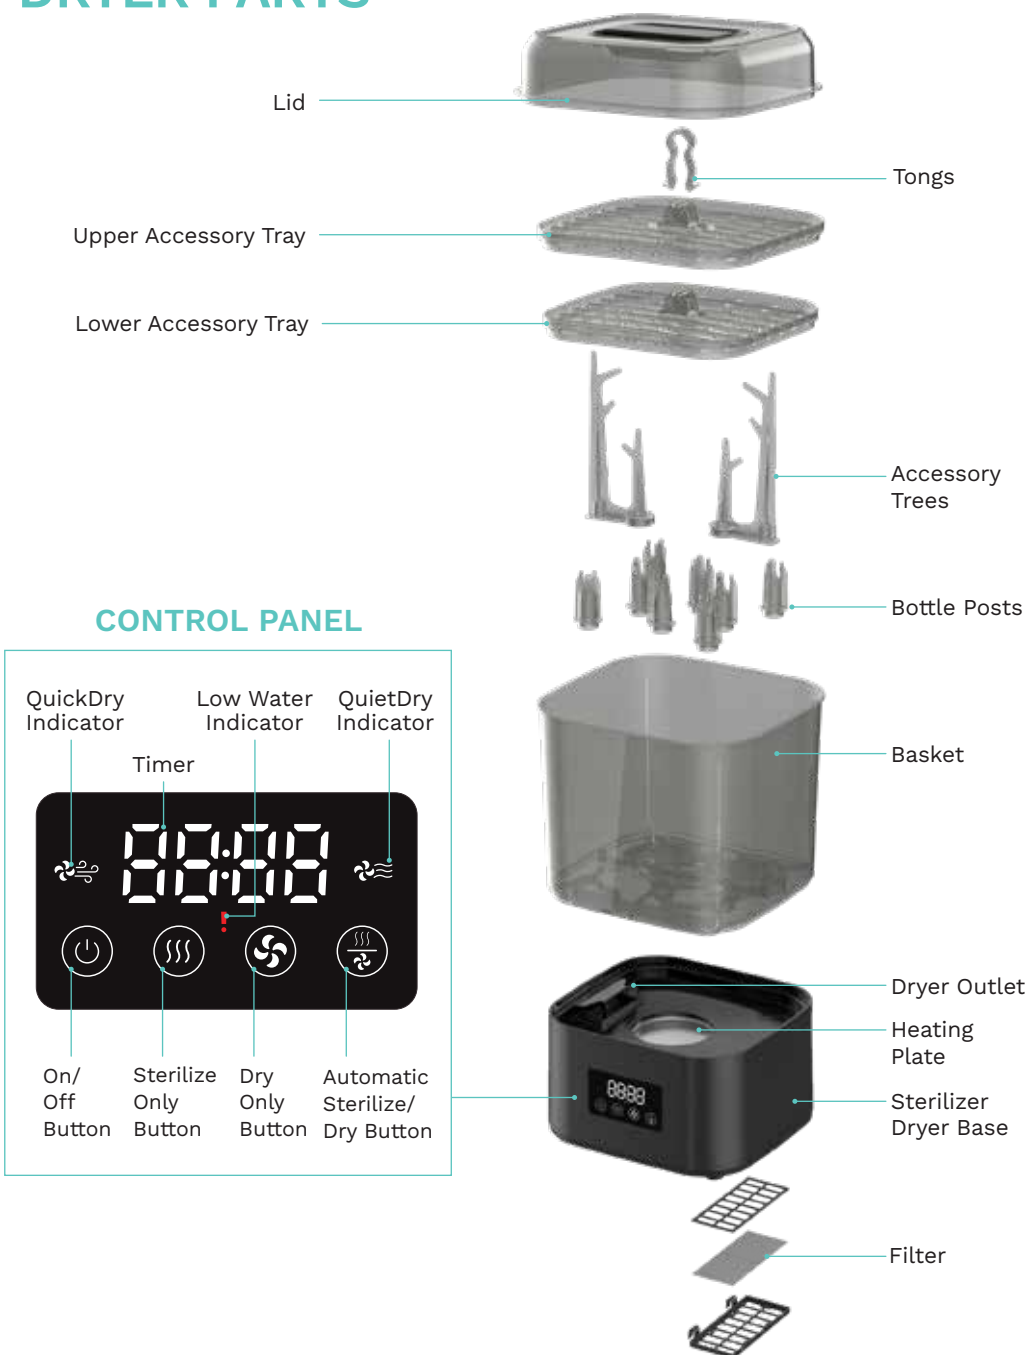

TECHNICAL DATA

Models: BRZ0209, BRZ0210, BRZ0211, BRZ0212, BRZ0213

Supply Voltage: 120V ~ 60Hz

Power: 1200W

SET-UP AND USE

Before placing items in the appliance, it is important that all bottles, pump parts and accessories must be **EMPTY, CLEAN & FULLY RINSED BEFORE USE** in this sterilizer dryer.

1. Place the appliance on a flat surface where it is out of reach of children and it will not be knocked or moved during operation.
2. Remove the Lid, Basket and Accessory Trays from the Sterilizer Base.
3. Fill with 3 oz/90 ml water to the Max Line which is the top of the heating plate area to ensure proper sterilization time. Do not fill over or under the MAX line which will result in too much or too little water for sterilization. We recommend using distilled water to avoid mineral scale build-up on the heating plate. However, you can use bottled water or tap water but you may need to descale more frequently.
4. Place the Basket on the base.
5. Place Bottle Posts and Accessory Trees in Basket.
6. Place clean bottles with their opening facing downward on the bottle posts.
7. Place the Accessory Tray(s) in the Basket (Lower Accessory Tray not for use with tall bottles).
8. Place bottle accessories, pump parts & other accessories on the Accessory Trays or Accessory Trees.
9. Place the Lid on the Basket.
10. Press the On/Off  button once and the function icons will light up. Choose your desired function following the instructions below. If there is no selection of function after pressing the on/off button, the appliance will automatically switch off.

Automatic Sterilize/Dry Function:

1. Choose your desired Sterilize & Dry cycle: Press the Sterilize/Dry button 
 - **1 time** for Superquick 10 minute sterilize & dry time
(4m 30s Sterilization & 5m 30s QuickDry)
 - **2 times** for Superquick 15 minute sterilize & dry time
(4m 30s Sterilization & 10m 30s QuickDry)
 - **3 times** for 30 minute sterilize & dry time
(4m 30s Sterilization & 25m 30s QuietDry)The sterilize/dry cycle will start **3 seconds** after the last button press.
Note: The QuickDry modes are louder because of the fast fan speeds required to dry so fast. For quieter drying, select the 30 minute sterilize and dry time that includes 25 min QuietDry
2. When the sterilization cycle starts, the timer will count down second-by-second for the duration of the sterilization cycle.
3. When the sterilization cycle is completed, the appliance will beep and begin the drying cycle for the amount of time selected in step 1. The timer on the timer will count down second-by-second until it reaches 00:00.
4. When the drying cycle is completed, the appliance will beep 3 times and switch off automatically.

Sterilize only function:

1. Press the Sterilize Only  button one time, the timer and steamer icons will turn on. The Sterilization Cycle (4 min 30 sec) will start 3 seconds after pressing the sterilize only button and the timer will count down second-by-second for the duration of the sterilization cycle.
2. When the sterilization cycle is complete, the appliance will beep 3 times and switch off automatically.

Dryer only function:

1. Press the Dry Only button 
 - **1 time** for 5 min QuickDry
 - **2 times** for 10 min QuickDry
 - **3 times** for 25 min QuietDry
2. When the drying cycle is completed, the appliance will beep 3 times and switch off automatically.

The drying cycle will start 3 seconds after the button is pressed and the timer on the timer will count down second-by-second until it reaches 00:00.

DESCALING:

Please descale the heating plate of the Sterilizer Dryer every 2 weeks to prevent mineral scale build-up that can cause overheating, malfunction or product failure.

- Mineral residue, particularly in hard water areas, may deposit on the heating plate after the sterilization cycle. To avoid scale build up, wipe the surfaces with a soft moist cloth after each operation.
- Mineral deposits can be removed with Baby Brezza Descaler (you can purchase on babybrezza.com) or by mixing your own descaling solution (30 ml / 1 oz distilled water & 30 ml / 1 oz white vinegar) and leaving on the heating plate for approximately 30 minutes. The plate should then be rinsed and wiped with a clean, dry cloth. Some harmless discoloration spots may remain after cleaning but they have no effect on performance.
- If you have hard water or use the Sterilizer Dryer multiple times a day, you should descale more frequently.

CLEANING:

- Always unplug your product before cleaning.
- Do not immerse the base, the supply cord or the plug in water or other liquids.
- Do not clean base under water tap.
- Use a soft damp cloth to clean the base and control console.
- Never use abrasive pads to clean the plastic parts of the machine.
- The lid, accessory rack can be cleaned in hot soapy water.
- Do not use abrasives or solvents for cleaning; they may damage the appliance and the surface of the heating plate.

 
CLEANING THE MESH FILTER

To maintain optimal drying performance, clean the mesh filter every 1-2 months.

Steps:

1. Unplug the machine.
2. Remove the mesh filter.
3. Rinse under running water to remove debris.
4. Scrub gently with a soft brush if needed.
5. Let it dry completely before reinserting.


Caution: If it is necessary to remove water from the base, always **POUR AWAY FROM FAN OPENING**. Note water pour direction icon on base, and pour in direction of arrow.

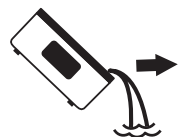

MODULAR SET-UP OPTIONS

Basket with tall bottles & Upper Accessory Tray

 For use with tall bottles, accessories and small pump parts.

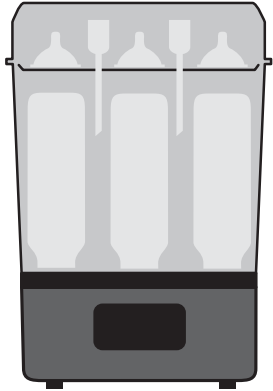


Basket with Upper & Lower Accessory Trays

For use with short bottles, accessories and small pump parts.



Basket with Lower Accessory Tray only

 For use with short bottles, accessories & large pump parts.

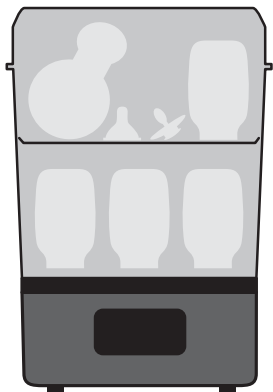

Basket with Accessory Trees

For use with pacifiers, nipples, cups, collars, pump parts & other small accessories.

NOTE: Accessory trees are placed inside basket instead of 2-3 bottles

 


Breast pump parts, bottle accessories and any other items safe for steam sterilization can be placed anywhere in the basket, on the accessory trays or accessory trees. Try different configurations to find what set-up works best for you.

TIP: For best drying performance, do not overload the Sterilizer Dryer.


Using the included tongs

The tongs can be inserted and stored in the accessory trays. When the tongs are clicked into place, they can be used to lift the basket or tray. Gently squeeze the tongs to remove them. They can also be used to grasp parts and bottle nipples in the sterilizer.

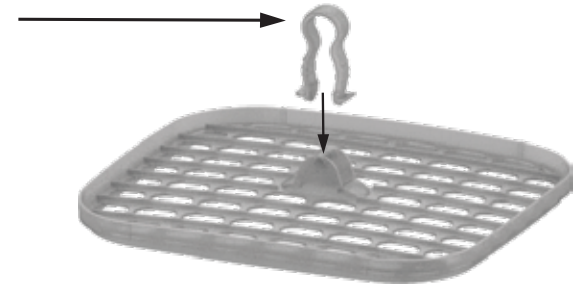

TROUBLESHOOTING

Condition	Possible Cause	Remedy
Appliance will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Press On/Off switch before choosing function.
	Insufficient water is in heater plate area.	Add water to heater plate area.
Timer stops during sterilize cycle. "No Water Indicator" on.	Not enough water added to heater plate area.	Make sure to fill water with 3 oz/ 90ml water to MAX line which is the top of the heating plate area.
Scaling on water tank heater plate.	Mineral rich water used persistently.	Clean heater plate after each use and use distilled water.
Items not dry after drying cycle.	Water is collecting on recessed or indented areas of items placed in sterilizer.	Make sure parts are placed so they do not collect water.
	Drying cycle selected not long enough to sufficiently dry items in sterilizer.	Select longer drying time.

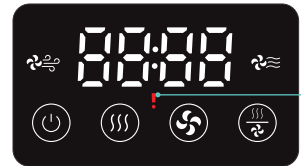 Error Code	Definition
Dry Boil (Lack of water warning)	 A red "exclamation mark" indicator will light up on the LCD
E1	Fan motor malfunction
E2	Fan motor open circuit
E3	Heating plate malfunction
E5	Heating plate's NTC open circuit
E6	Heating plate's NTC short circuit
E7	Drying power abnormality

If you can not remedy problems with the machine by using the troubleshooting chart above, please contact **Baby Brezza Customer Service at 1-888-396-6552 or visit babybrezza.com/contact**. Any other servicing should be performed by an authorized service representative.