 





MAJOR V3 MANUAL

LORENTZ MAJOR V3

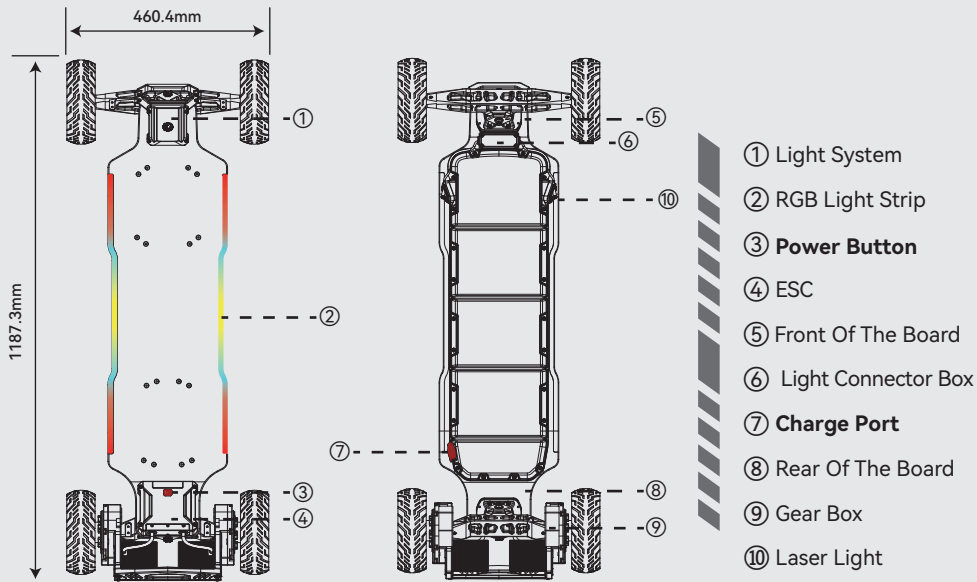

MAJOR REMOTE V3

 Touchscreen is locked during acceleration or braking. Double-tap to unlock when the board is stationary and throttle is centered. Vibration confirms successful unlock.

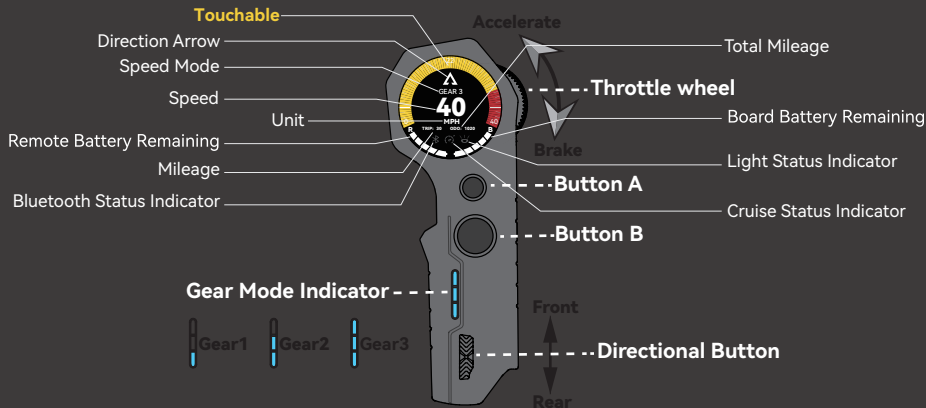

Remote / Board Battery Remaining:



Direction Arrow : ▲ Front ▼ Rear

Speed Mode: Gear 1 (0-24kph / 0-15mph) Gear 2 (0-40kph / 0-25mph) Gear 3 (0-65kph / 0-40mph)

Ready To Ride

Before Riding:

- Please carefully read & fully understand the manual;
- Always wear a helmet, plus other protective equipment, such as elbow & knee pads, which are highly recommended;
- Find a flat, dry, open & smooth surface, which is obstacle free, for your first ride.

Frist Ride:


Step 1: Charge the board for 5 minutes via the charger to activate the board;

Step 2: Long press the power button for 2S to turn the board on/off.


Step 3: Long press button B for 3s to turn the remote on/off;

Step 4: Gently roll the throttle wheel forward to accelerate, and roll the throttle back to brake;

Step 5: Short press button B to change speed modes.

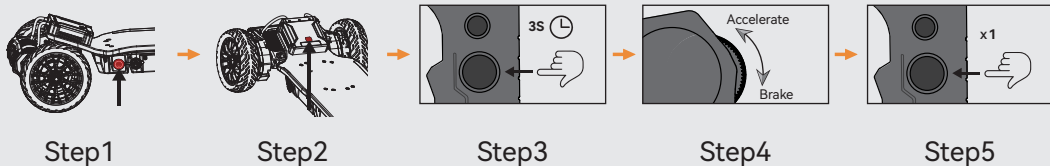


To Lock / Unlock The Board:

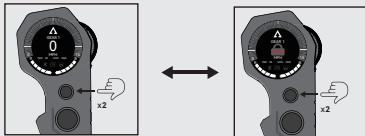


Short press button A twice, to lock/unlock the board;

Power On / Off Headlights:

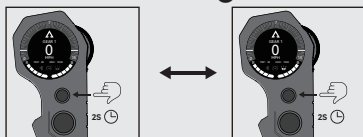


Long press button A for 2s to turn on/off the headlights;

Power On / Off Deck Lights and Lasers:

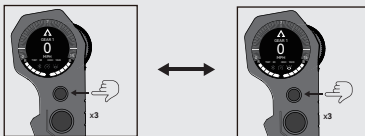

Short press button A 3 times, to turn on/off the Deck Lights and Lasers.

Cruise Control Mode:

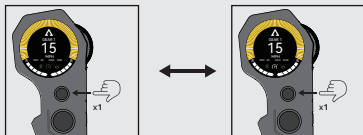

To activate cruise mode, press the A button while holding the throttle during normal riding. Release the throttle to maintain speed. Push the throttle again to exit. (Available in Gear 1 and Gear 2 only.)

Quick Brightness Adjustment:



Swipe up/down to enter the screen brightness adjustment page and push the throttle wheel to adjust it;


Touchable Swipe up and down

Switch Direction:




Select the direction button, to switch your direction IE: forward/backward. (Throttle should be at midpoint.)

Theme Switching:

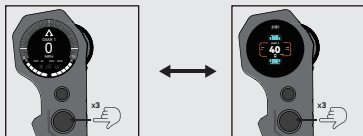

1.1 Short press button B three times , push the throttle wheel to select a theme, and press button B to confirm the selection;

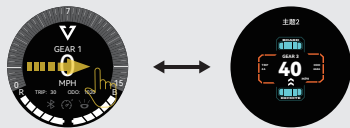


1.2 Swipe from left to right to enter theme settings, swipe left/right to select a theme, click screen to confirm.

Touchable Swipe from left to right




Switching to Minimal Mode extends the remote's range (remaining time) to its fullest

The Settings Menu

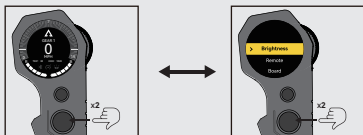

1.1 When the board is stationary and the throttle is in the neutral position, double-press the B button twice to enter the settings menu

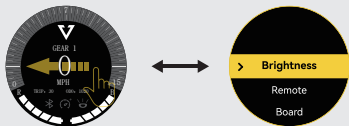


1.2 Swipe from right to left to enter the settings menu.

Touchable Swipe from right to left

More Info & Adjustment 1

Remote Functions In Settings Menu

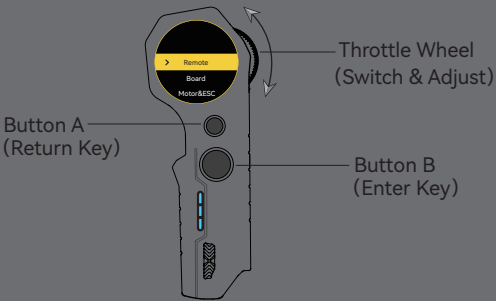


While the board is stationary, short press button B for twice (or swipe from right to left) to enter the settings menu.



Touchable Options on the first-level menu page can be selected by swiping

Remote Functions In Settings Menu

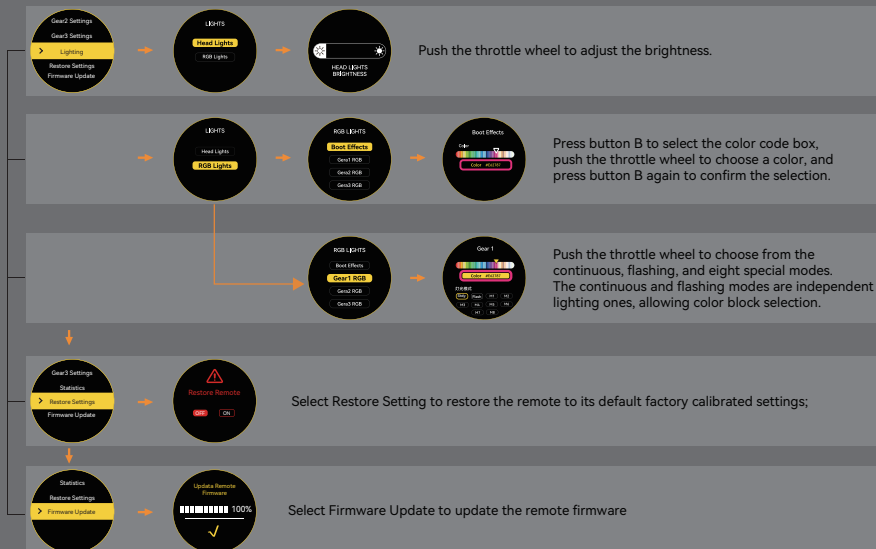

	Options
Touchable	Options on the first-level menu page can be selected by swiping

Charging

Whilst charging, the board's throttle is locked.



Board: Not Connected
Remote: Charging



Board: Not Charging
Remote: Charging



Board: Charging
Remote: Not Charging




Board: Charging
Remote: Charging



Board: Fully Charged
Remote: Fully Charged

Remote Pairing

With both the remote and board powered off, press and hold the remote's B button for 5 seconds until it enters pairing mode; Then press and hold the board's power button for 5 seconds until the indicator light flashes rapidly. The remote and board will pair automatically.

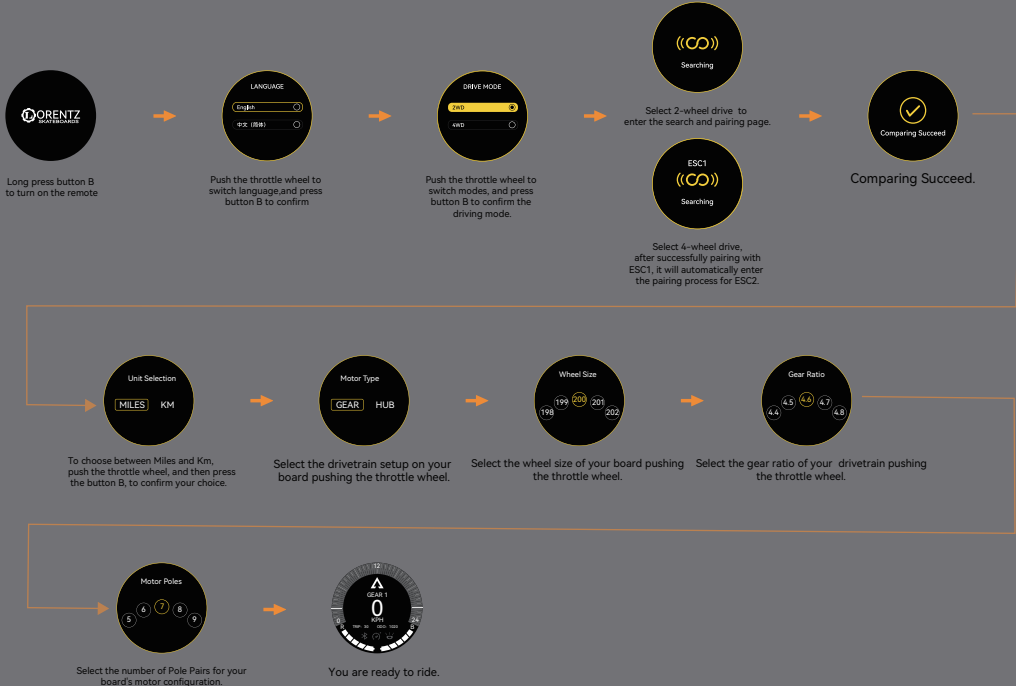

Warnings And Alerts



Remote Power
Under 25%



Remote Power
Under 10%



Remote Power
Under 5%



Board Power
Under 25%



Board Power
Under 10%



Board Power
Under 5%



Over-Current
Protection Active



High Temperature
Warning: Battery



High Temperature
Warning: Motor



High Temperature
Warning: ESC



Board Over-Voltage



Battery Cells out
of Balance



Board and Remote
are Disconnected



Motor Stalled



Set free the
throttle wheel



Notice

- **Avoid Water** : - Avoid Water: Riding in wet conditions or through puddles, can damage the board's electronics and cause the board to lose power, or stop suddenly. Damage to the board due to water exposure is not covered under warranty.
- **Danger** : Crashes & losing control, in downhill and high speed riding, may cause serious injury. Please be very careful !!!
- **Lose Power1**: Lorentz Major can lose connection with the remote. Please always ride within your ability to control the board in case power loss occurs. You must be prepared to lose your ability to brake at any time.
- **Lose Power2**: Please be aware that braking downhill with a full battery will cause the board to shut down.
- **Start At Gear1**: - Always begin to ride in the lowest speed mode. Roll the throttle wheel forwards in small increments to accelerate gently.

CONTACT US

<https://www.lorentzboards.com/>

