

POWERGLIDE[®] CORDLESS **USER GUIDE**

1534 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (one slot is wider than the other) for charging. Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Always connect to a polarized outlet (one slot is wider than the other) for charging. Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not charge with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or vacuum cleaner with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without filters in place.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not carry the vacuum cleaner while it is running, unless it is in Lift-Off® Canister mode.
- » Battery cell leaks can occur under extreme conditions. If battery cell contents comes in contact with the skin or eyes: immediately flush with water for 15 minutes. Seek medical attention if irritation persists.

WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

WARNING

Do turn on your vacuum cleaner until you are familiar with all instructions and operating procedures.

NOTICE

Some frieze carpets have long delicate fibers or threads that may be damaged by the rotating brush during vacuuming. It is recommended the rotating brush be turned OFF when cleaning this type of carpet.

NOTICE

While vacuuming, certain carpets and low humidity conditions may generate small static discharges. The discharges are entirely harmless and are not associated in any way with the main power supply.

SAVE THESE INSTRUCTIONS

This model is for household use only.

THIS CHARGER HAS A POLARIZED PLUG

To reduce the risk of electric shock, this charger has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

 
Thanks for buying a BISSELL vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited two-year guarantee. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us
at BISSELL.



Mark J. Bissell
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Assembly	5
Operations	6-7
Maintenance & Care	7-9
Replacement Parts	9
Troubleshooting	10
Warranty.....	11
Service.....	11
Consumer Care.....	12



Product View



- 1 Handle
- 2 Extension Wand
- 3 Brush On/Off
- 4 Power Hi/Lo
- 5 Dirt Tank Release Button
- 6 Power Button
- 7 Pre-Motor Filter
- 8 Dirt Tank
- 9 Battery
- 10 Power Brush



Assembly

Your vacuum comes in five easy-to-assemble components:

Handle and Hose
Extension Tube
Battery
Base Unit
Foot
+
Charging Base

1. Insert the handle into the extension wand and click into place.

2. Pull back the handle release button and slide the extension wand into the base unit.

3. Insert the hose end into the hose connector on the back of the base unit, making sure both tabs click into place.

4. The 2-in-1 accessory can be stored in the clip on the side of the base unit.

5. Slide base unit onto foot connector until you hear a click.

6. Push the battery into the housing until you feel it lock into place. Replace the battery housing cover.



Operations

PowerBrush switch

1. Press the button with brush bar icon to run the PowerBrush.
2. The PowerBrush will not run when vacuum is locked in upright position
3. If debris is keeping the vacuum from operating, turn off power switch, remove debris, and then turn power switch on to resume vacuuming.

NOTE: Turn off the PowerBrush when vacuuming hard surfaces, such as hard wood or tiled floors, as well as when cleaning smaller rugs that may be caught by the rotating brush (see section Operate PowerGlide® Cordless for additional details).


! WARNING

Before using your vacuum, make sure that the dirt container is in locked position and that the filter is in place. DO NOT operate your vacuum without the filter.

1. brush



- 2.

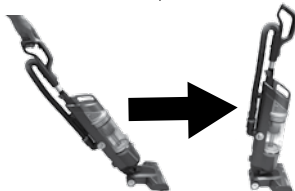

Power Mode Switch

1. Press the button with the double line icon to switch between high and low power modes.
2. High power mode is useful for cleaning high traffic areas.

Tip

» Before cleaning under low furniture, check area first for objects that might harm the unit or block the vacuum hose.

Above floor cleaning

1. Twist diverter switch to horizontal position to direct suction to the vacuum hose.
2. Push down on the handle release button and pull the handle and extension tube out of the body.
3. The 2-in-1 accessory can be attached to the end of the extension tube.
4. The extension wand can be removed by pressing the release button and pulling it off. The 2-in-1 accessory can also be attached to the handle end.
5. The portable canister vacuum can be released by pressing the button on the back of the body and pulling away from the foot.
6. The canister vacuum can be carried around for easy cleaning of hard to reach areas.

- 1.




- 2.



- 3.



- 4.

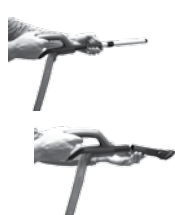

- 5.




- 6.



Operations

Charging the battery

1. Remove battery housing cover by pressing release button and pulling away.
2. Remove battery by pulling out of machine.
3. Place battery in charging base, ensuring it is plugged into the mains.
4. Charger light will flash red during charging and turn green when battery is full.
5. A full charge will take 2 hours.

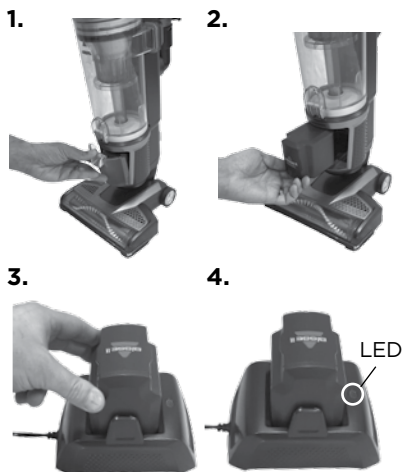

Maintenance & Care


Emptying the dirt container

1. Press the dirt tank release button and pull dirt tank away from body by the handle
2. Holding the Dirt Container over a trash bin, press the Release Button on back. Snap the bottom back into place.



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

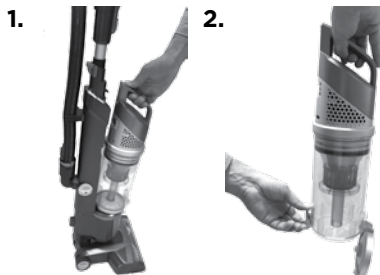

Maintenance & Care

Cleaning the dirt container

1. Release dirt tank as above, then twist the top right to separate.
2. Remove filter by pulling up on the fabric tab, then pull out the cyclone system.
3. Rinse and dry dirt container with a paper towel.
4. To reassemble, line cyclone system up with dirt container using the semi circular and square tabs then slide in. Place filter on top with fabric tab on the upper face, place lid last and twist left.



Cleaning the filter and cyclone

1. Release tank and remove lid as above, then remove Pre-motor Filter, clean with mild detergent and rinse.
2. Reinsert inside Dirt Container, once completely dried.
3. Remove cyclone system from dirt container as above.
4. The cyclone system can be broken down into three parts for easy cleaning. All pieces come apart with a simple twist. Rinse and dry with a paper towel.

⚠ WARNING

Do not operate cleaner with damp or wet filters or without vacuum bags and all filters in place.




Tip

» To maintain suction and good performance, it is recommended that you clean your filters every 4-5 uses and clean your cyclone system every other time you clean the filter.

Replacing the Brush

1. Turn power switch off, turn over and use a wcoin or a flathead screwdriver to open the 2 locking screws on either side of the brush bar.
2. Remove both brush plates to access brush bar.
3. Grasp the roller from the bottom, dislodge by pulling, and then thread it through the belt.
4. Replace roller and reverse the order to reassemble.

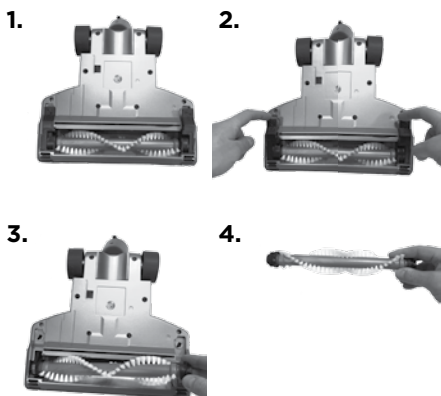

Maintenance & Care

Disposal of batteries

If your vacuum is to be disposed of, the batteries should be removed and disposed of properly.

1. Keep Battery Pack together – DO NOT disassemble the battery pack. For specific disposal instructions of batteries, please contact RBRC (Rechargeable Battery Recycling Corporation) 1-800-822-8837 or visit www.rbrc.com.

WARNING

This product contains Lithium Ion (Li-Ion) rechargeable batteries. According to Federal and State regulations, removal and proper disposal of Lithium Ion batteries is required. For removal of the batteries in your vacuum see instructions on this page.



Replacement Parts

These items are available for your BISSELL vacuum.
Call 1-800-237-7691 or visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
160-6691	Battery		160-6697	Hose and Handle	
160-6687	Battery Charger		160-6698	Extension Wand	
160-7058	2-in-1 Accessory Tool		160-6359	Filter	
160-6689	Brush Roll				

Troubleshooting

Is your vacuum plugged in?
Are all hoses connected?



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
PowerBrush doesn't rotate	The PowerBrush power switch is turned off	Make sure PowerBrush switch is on
	Vacuum is locked in upright position	Recline vacuum and switch on the PowerBrush
Vacuum won't pick up dirt	The Main Hose is not connected	Locate the Main Hose and reconnect by pushing the hose connection to secure the latch
	There is a crack or hole in the Main Hose	If there is a crack or hole, order a new Main Hose from the BISSELL website
	The Power Brush bristles are worn	Replace the PowerBrush
	There is a clog in the vacuum	Remove debris and any other entanglements that may be restricting its rotation
	The Dirt Container is not seated correctly	Press the Empty Button to release the Dirt Container and reseal properly
	Filter is dirty	Remove and rinse pre-motor filter. Allow enough time for it to dry properly before reinserting
Dirt is escaping from the vacuum	The Dirt Container is full	Empty the Dirt Container
	Filters are missing	Check to see if the pre-motor filter is in place
	The Dirt Container is not seated properly	Press the Empty Button and remove the Dirt Container. Insert the bottom first and pivot the Dirt Container towards the vacuum. Listen for a "click" sound, indicating that it snapped into place

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Two-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TWO YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

Other maintenance or service not included in the manual should be performed by an authorized service representative:

Visit BISSELL.com or contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website:

www.BISSELL.com

Or Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Please do not return this product to the store.



Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.
You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday	8 am - 10 pm ET
Saturday	9 am - 8 pm ET
Sunday	10am - 7pm ET

Email:

BISSELL.com/email-us

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.



©2015 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-5506 Rev 04/15
Visit our website at: www.BISSELL.com